# Lecture 5 - Dielectrics

## Lecture Summary

- Origin of ionic polarisation
- Capacitor operation and definitions
- Impedance spectroscopy
  - definitions
  - ideal responses
- piezoelectricity
- ferroelectricity

#### Introduction


- Ionic conduction is a long-range effect
  - Important in batteries, fuel cells etc.
- In some situations, a highly insulating material is preferred
- Remember, ions are not static with time (e.g. phonons)
  - Short-range atomic motion is important for electrical properties

#### Polarisation

Ionic solids are made up of cations and anions

- locally, this creates dipoles  $(\mu)$
- across a whole crystal at equilibrium, these dipoles normally cancel

Under an applied electric field (E), ions displace from equilibrium

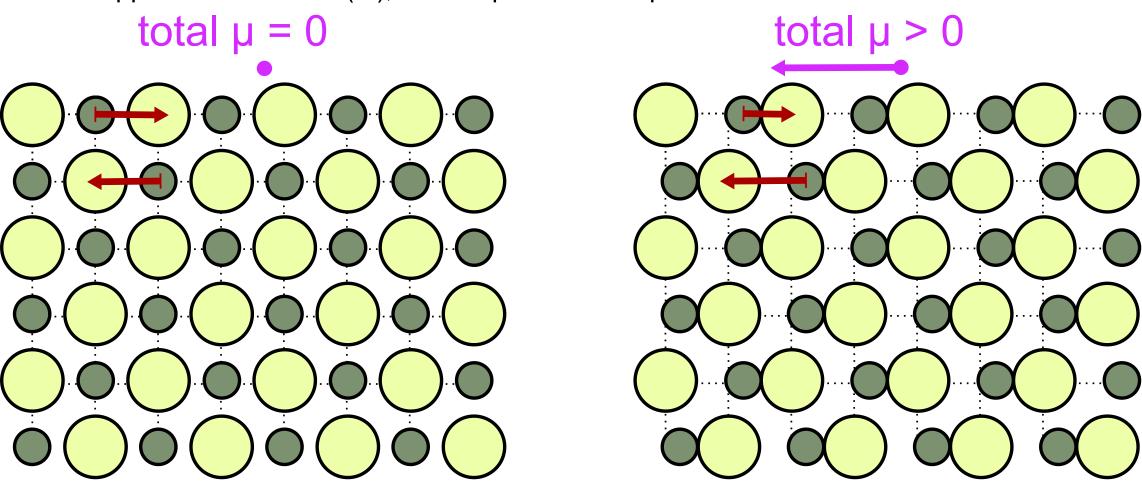

#### Is this useful?

If the dipoles do not cancel under an applied field, the crystal will develop an overall dipole moment

can occur if e.g. number of cations ≠ number of anions


Can use this to screen electric fields

 Useful in e.g. wireless communication filters, sensor devices, transformers, and capacitors

#### Capacitors

- Vital component of most electronic devices
  - Used to store charge, smooth signals, filter, etc...
  - \$20bn per year industry

Essentially, a capacitor is an arrangement of two electrodes of area A, separated by a distance d.

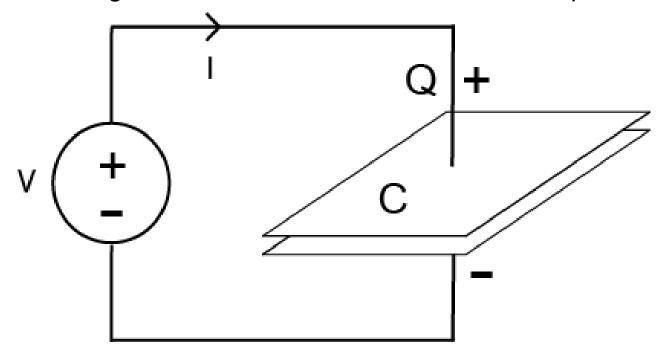

The maximum charge stored, Q = CV where C is the capacitance (in Farads).

### Capacitance

Two electrodes separated by vacuum have a capacitance C;

$$C=rac{\epsilon_0 A}{d}$$

where  $\epsilon_0$  is the permittivity of free space = 8.854 × 10<sup>-12</sup> C<sup>2</sup> J<sup>-1</sup> m<sup>-1</sup>

### Capacitance

Two electrodes separated by vacuum have a capacitance C;

$$C=rac{\epsilon_0 A}{d}$$

where  $\epsilon_0$  is the permittivity of free space = 8.854 × 10<sup>-12</sup> C<sup>2</sup> J<sup>-1</sup> m<sup>-1</sup> To increase C (and therefore Q):

- decrease d or increase A, but
- electrons will tunnel from one plate to the other if d gets too small.


### Improving charge stored


Alternatively, we can use a dielectric

opposing electric field stabilises charge on capacitor plates

$$C_{ ext{dielec}} = rac{\epsilon_r \epsilon_0 A}{d}$$

where  $\varepsilon_r$  is the relative permittivity of the dielectric ( $\varepsilon_r$ =  $\varepsilon$  /  $\varepsilon_0$ ) and  $\varepsilon_r$  >  $\varepsilon_0$ 

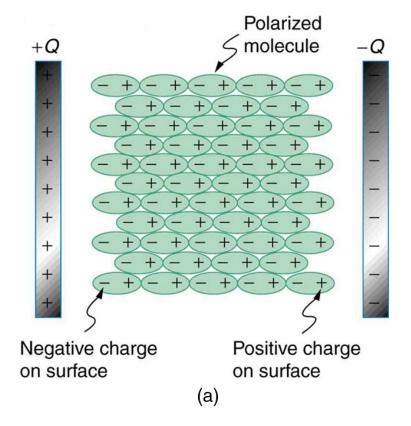

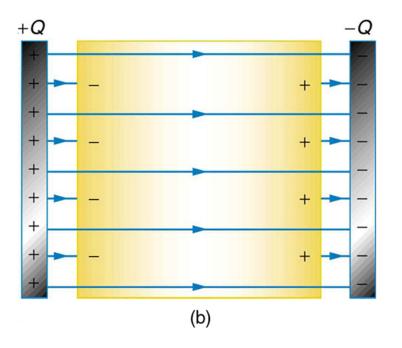

# Example permittivities

Material	Relative Permittivity, ε <sub>r</sub>
Vacuum	1
Paper	2.0 - 6.0
Polymers	2.0 - 6.0
Silicon oil	2.7 - 2.8
Quartz	3.8 - 4.4
Glass	4 - 15
$Al_2O_3$	10
Ta <sub>2</sub> O <sub>5</sub>	26
TiO <sub>2</sub>	100
CaTiO <sub>3</sub>	130
SrTiO <sub>3</sub>	285
BaTiO <sub>3</sub>	1000 - 10000

#### Characterising dielectrics


- Because dielectrics are insulating, conductivity measurements are not very useful
- Alternatively, oscillate between +ve and -ve potentials to change polarisation direction

#### Characterising dielectrics

- Because dielectrics are insulating, conductivity measurements are not very useful
- Alternatively, oscillate between +ve and -ve potentials to change polarisation direction

**Impedance spectroscopy** applies an alternating (sinusoidal) field at different frequencies f, and measures the resulting current

- Applied field,  $E_t = E_0 \sin(\omega t)$ , where  $\omega = 2\pi f$
- Response current,  $I_t = I_0 \sin(\omega t + \phi)$

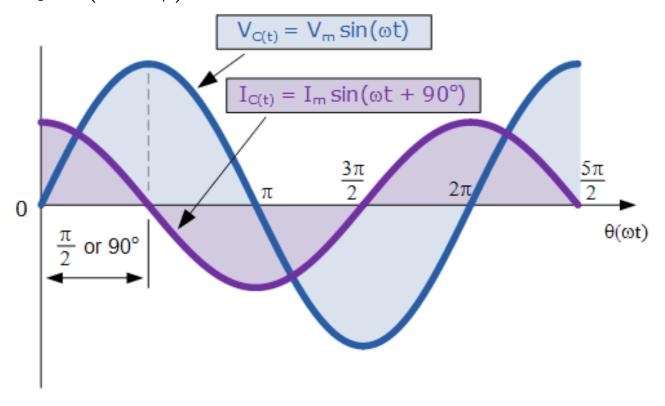

## Impedance

Similar to Ohm's law  $(R = \frac{V}{I})$  for constant voltages, we can define *impedance* as the 'resistance' to an alternating voltage

$$Z(\omega) = rac{E_t}{I_t}$$

## Impedance

Similar to Ohm's law  $(R=rac{V}{I})$  for constant voltages, we can define *impedance* as the 'resistance' to an alternating voltage

$$Z(\omega) = rac{E_t}{I_t}$$

The total impedance can be represented as a complex number:


$$Z(\omega)=Z_0e^{i\phi}=Z_0(\cos\phi+i\sin\phi)$$

•  $\phi$  is the 'phase-shift' between voltage and current.


#### Impedance analysis

 $\phi$ , Z and  $\omega$  (or f) are all important features of impedance. Two 'standard' ways to display data:

**Bode plot**: |Z| and  $\phi$  plotted vs frequency

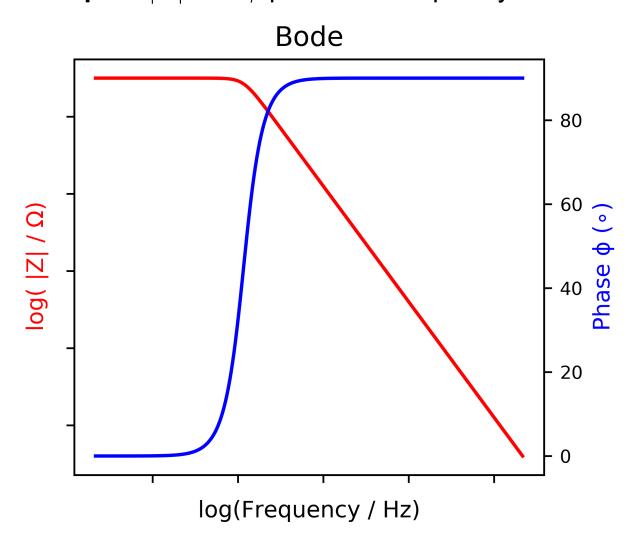

**Nyquist plot**: Z plotted in a 2D plane

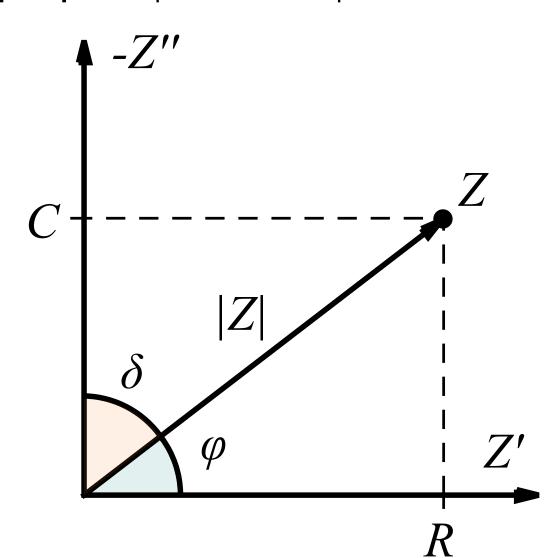


#### Impedance analysis

 $\phi$ , Z and  $\omega$  (or f) are all important features of impedance. Two 'standard' ways to display data:

**Bode plot**: |Z| and  $\phi$  plotted vs frequency

Bode 80 60 👴 log( |Z| /Ω) 20 - 0 log(Frequency / Hz)

In Nyquist plot: Z plotted in a 2D plane

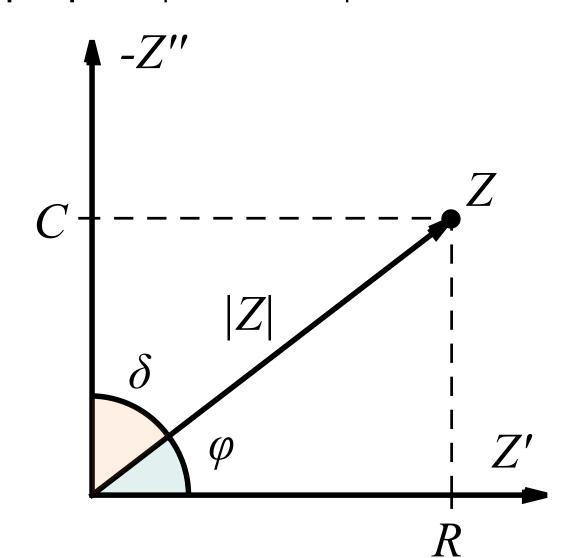


### Ideal resistor response



Ideal resistor has no dependence on  $\boldsymbol{\omega}$ 


- ullet Current is instantaneous on applying potential E
- e.g. ions moving with a constant "drag" due to interactions between them

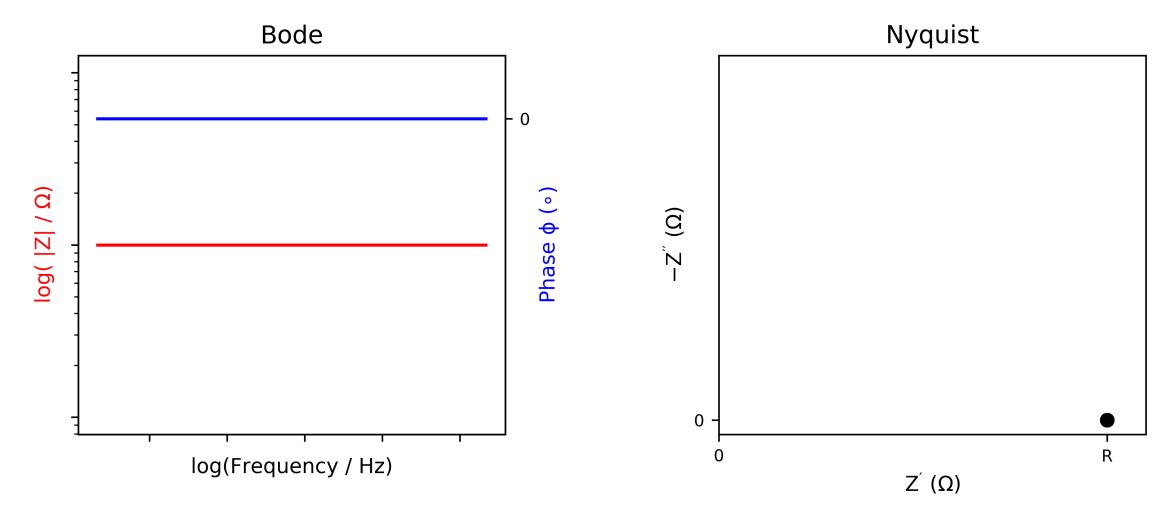

### 'Ideal' capacitor response


\_\_\_\_\_l


- Current I increases with  $\omega$ , approaching 0
- ullet I is always out-of-phase with E by  $\phi=90^\circ$ 
  - $\circ$  The maximum I(t) occurs when E(t)=0
- Represents stored charge building up, for instance ions accumulating on a surface

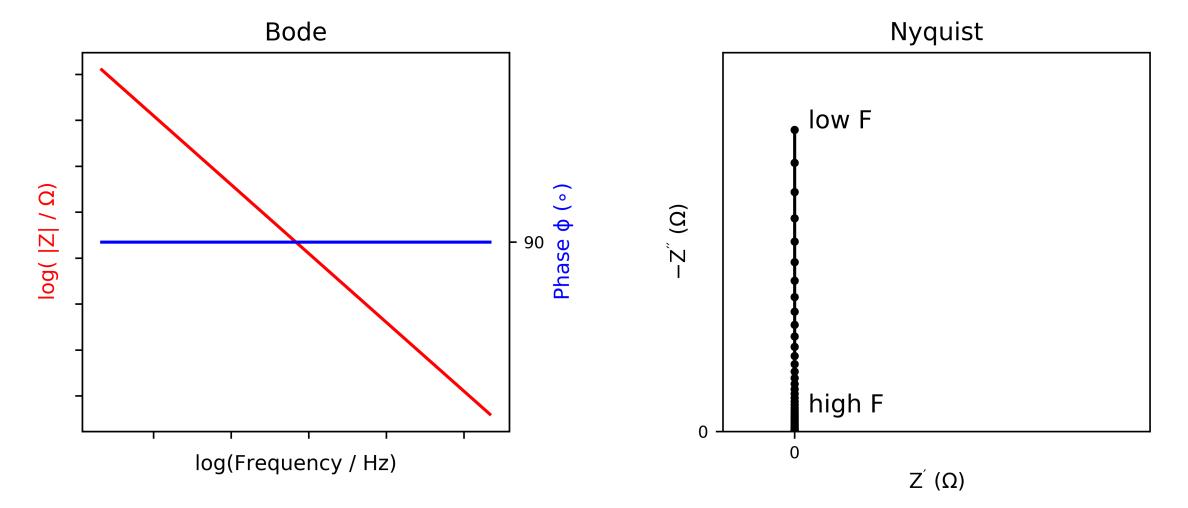


### 'Real' Impedance

- Many materials behave like a parallel RC circuit:
  - $\circ$  lons moving due to E, but motion is limited to a maximum displacement
  - o lonic conduction in a ceramic forming a charge gradient on the electrode surface

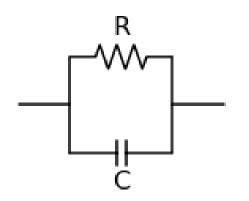

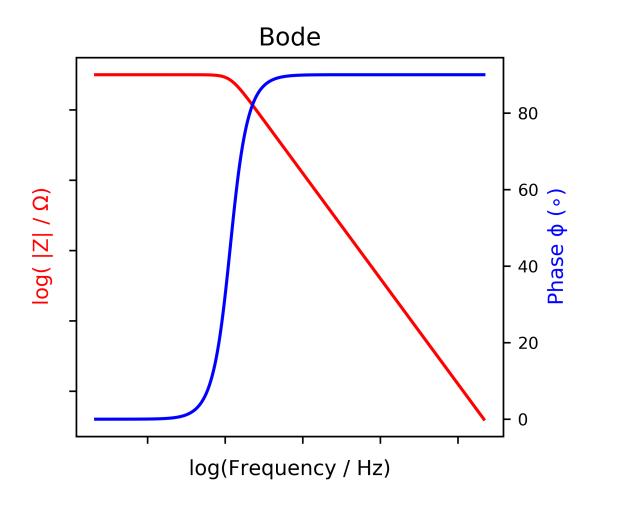


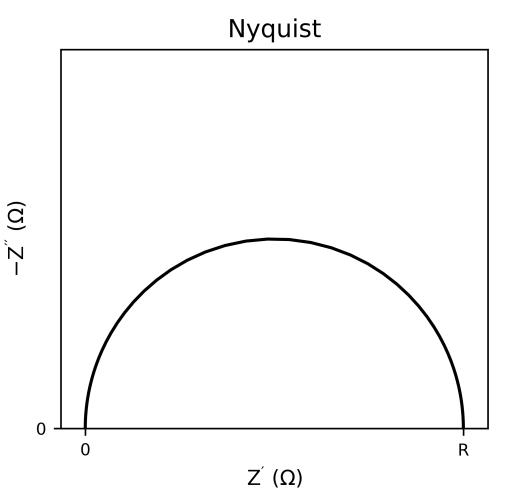



#### Real dielectric response

Dielectrics are not ideal-they leak!

- Ions have mass, so cannot move instantly
- At high  $\omega$ , some resistance remains
- peak in  $\phi$  vs  $\omega$  corresponds to the maximum energy loss.

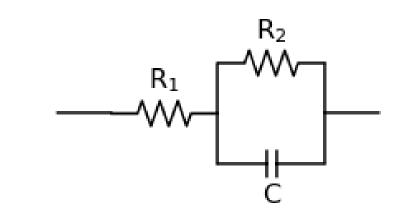

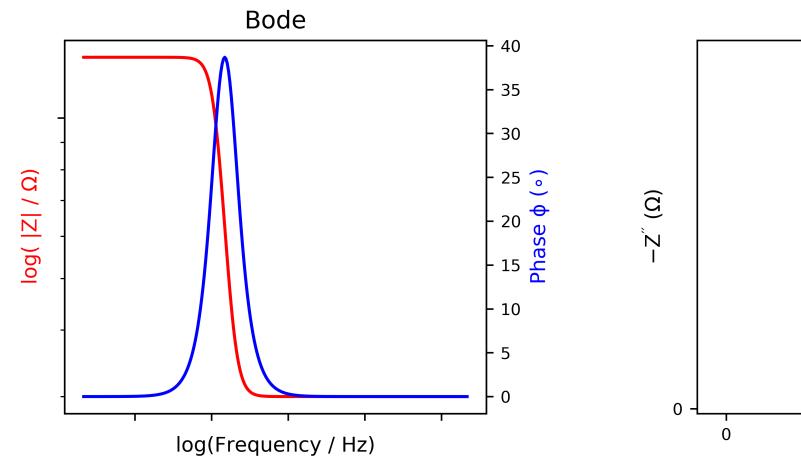


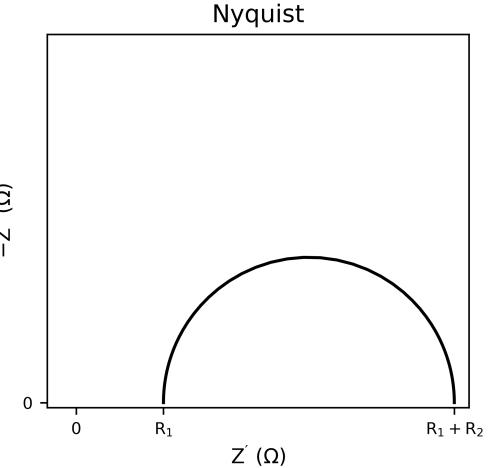


### Real dielectric response


Dielectrics are not ideal-they leak!

- Ions have mass, so cannot move instantly
- At high  $\omega$ , some resistance remains
- peak in  $\phi$  vs  $\omega$  corresponds to the maximum energy loss.

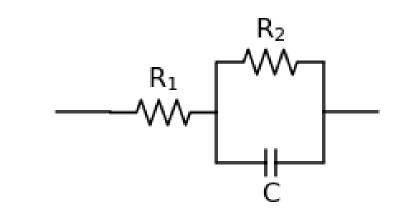

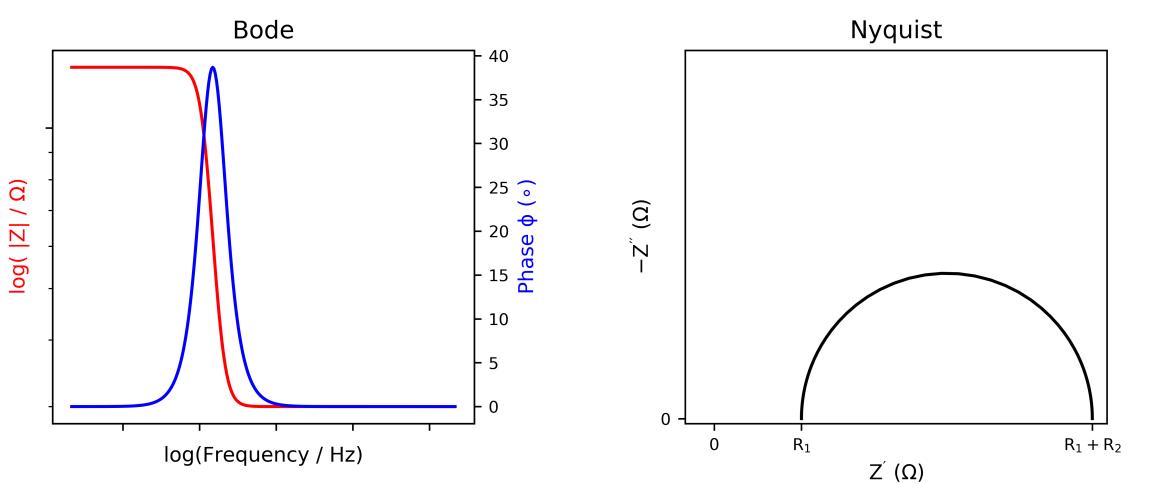

## Question

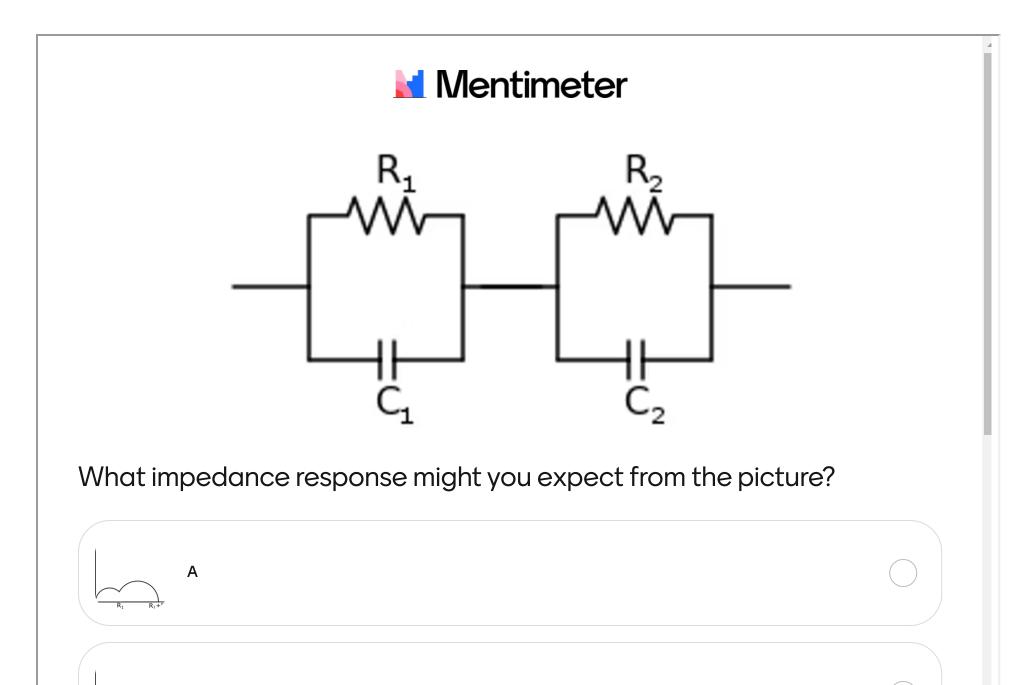


## Results


Join at menti.com | use code 8465 3647

### Piezoelectricity

In some dielectric materials, applying E can result in a mechanical stress (or *vice versa*)

• Stress = change in lattice parameters

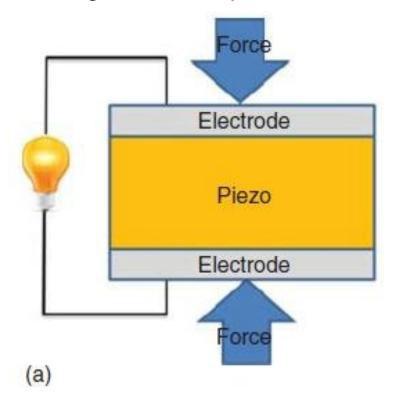

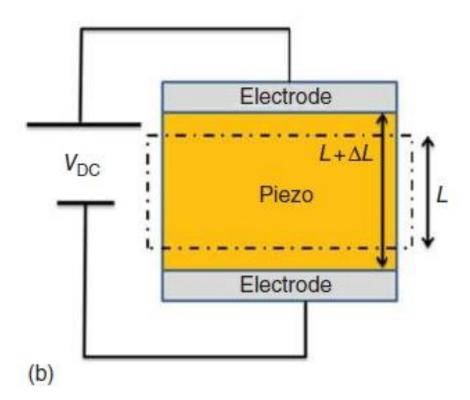

#### **Direct effect**

- pressure sensors
- ultrasonic imaging

#### **Converse effect**


- Actuators/motors
- crystal oscillator (watches)

### Structural Aspects

Stresses arise due to unbalanced dipoles


• Can only occur if the structure is **non-centrosymmetric** 

Example: Quartz (SiO<sub>2</sub>)

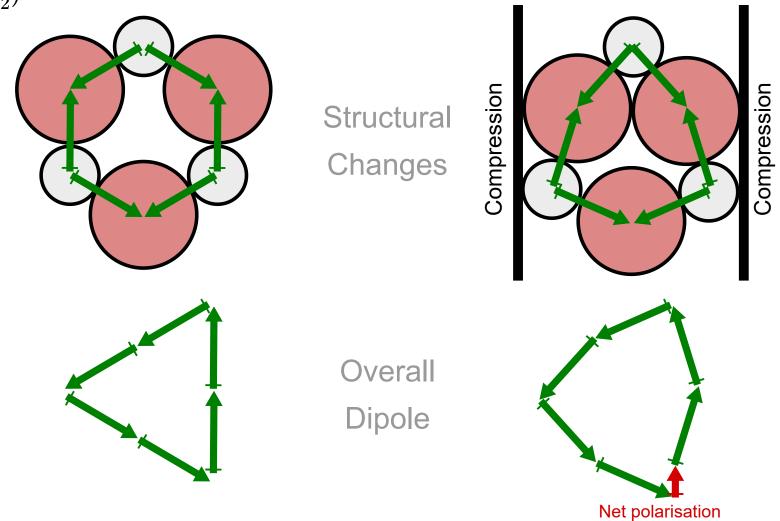

#### Spontaneous polarisation

Some materials exhibit a net dipole *without* an applied electric field (**pyroelectric**) If the polarisation can be switched with an electric field - **Ferroelectric** 

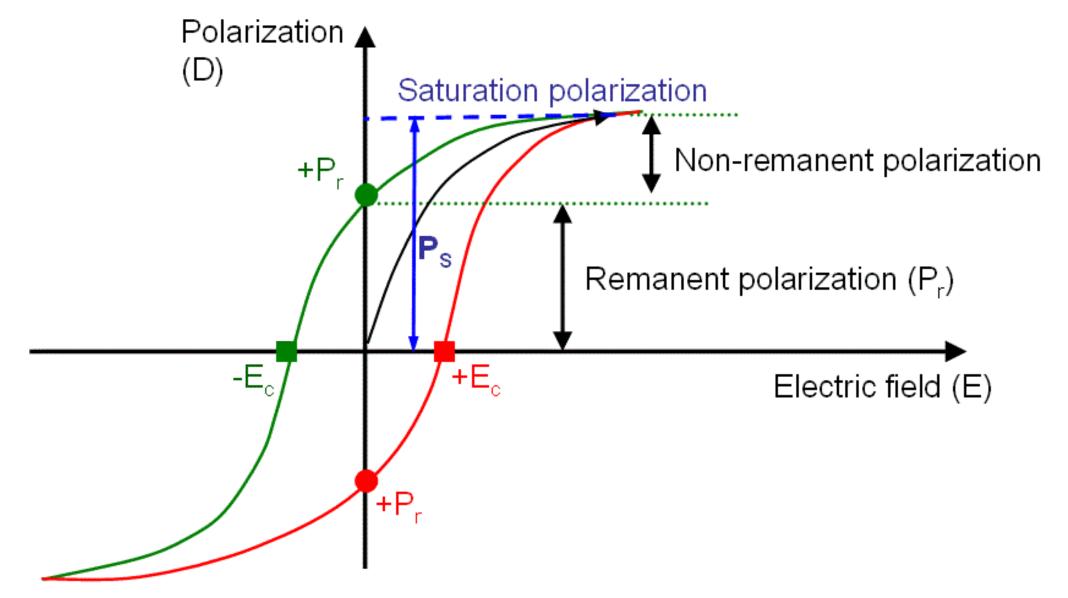



### Structural origin

Precise origin of ferroelectricity is unknown!

Often, displacement of small ion in a large 'cavity' is partly reponsible


- Driven by anharmonicity or pseudo-Jahn-Teller effects
- sometimes this results in long-range order of dipoles...
- Many perovskites are ferroelectric (e.g.  $\mathrm{BaTiO_3}$ )

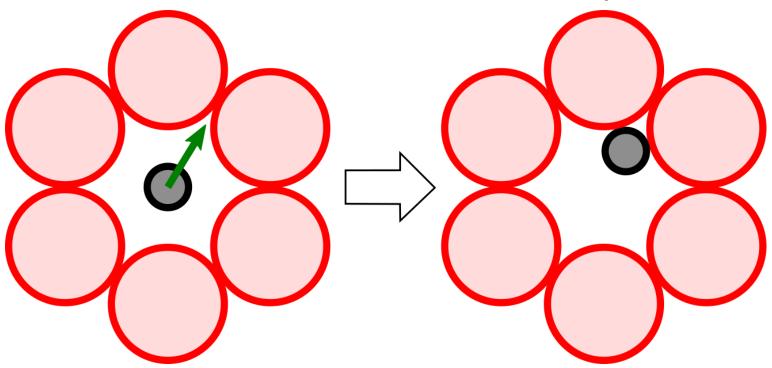

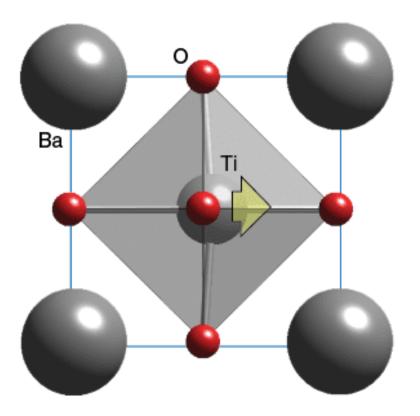

### **Applications**

- Ferroelectrics often have the largest  $\epsilon_r$ 
  - $\circ$  important for high-C capacitors
- Could be coupled with e.g. ferromagnetism
  - Multiferroics are currently popular for electrical control of magnetic fields (e.g. in hard drives)

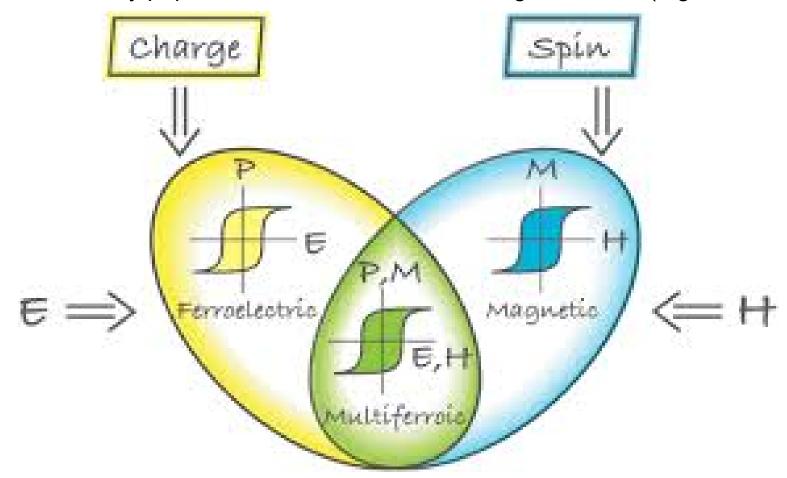

## Hierarchy of dielectrics

#### **Dielectric**

Insulators that may change polarisation under an applied electric field Polar or non-polar

#### **Piezoelectric**

Change in polarisation is proportional to mechanical stress Non-centrosymmetric, polar or non-polar

#### **Pyroelectric**

Show spontaneous polarisation

Polar material

#### **Ferroelectric**

Exhibit polarisation switchable by electric field

#### Lecture recap

- Polarisation arises from cation-anion dipoles
  - Can be modified by external electric field
- Important in capacitors
  - $\circ$  charge stored increased by high  $\epsilon_r$  dielectric
- Impedance spectroscopy can characterise ionic motion
  - Oscillating potential generates oscillating current
  - $\circ$  Impedance  $Z(\omega)$  has both phase  $(\phi)$  and magnitude (|Z|)
  - Many materials behave like parallel RC circuits
- Piezoelectricity is the linear relationship between polarisation and mechanical stress
  - requires non-centrosymmetric structures
- Pyro- and ferro-electrics exhibit spontaneous polarisation without applied electric fields
  - used where high permittivity is needed (e.g. capacitors)
  - current interest in multiferroics

### Feedback



What did you like or dislike about this lecture?

Short answers are recommended. You have 200 characters left.

200

You can submit multiple responses

Submit

Return to course contents 26