


Texecom power reset · rev A · bottom side (solder side)

Viewed from the BOTTOM: the board is flipped left-right, as you see it when soldering. Scale 2:1 (print at 100%, A4 landscape).

← SuperMini (U3): USB-C at this edge

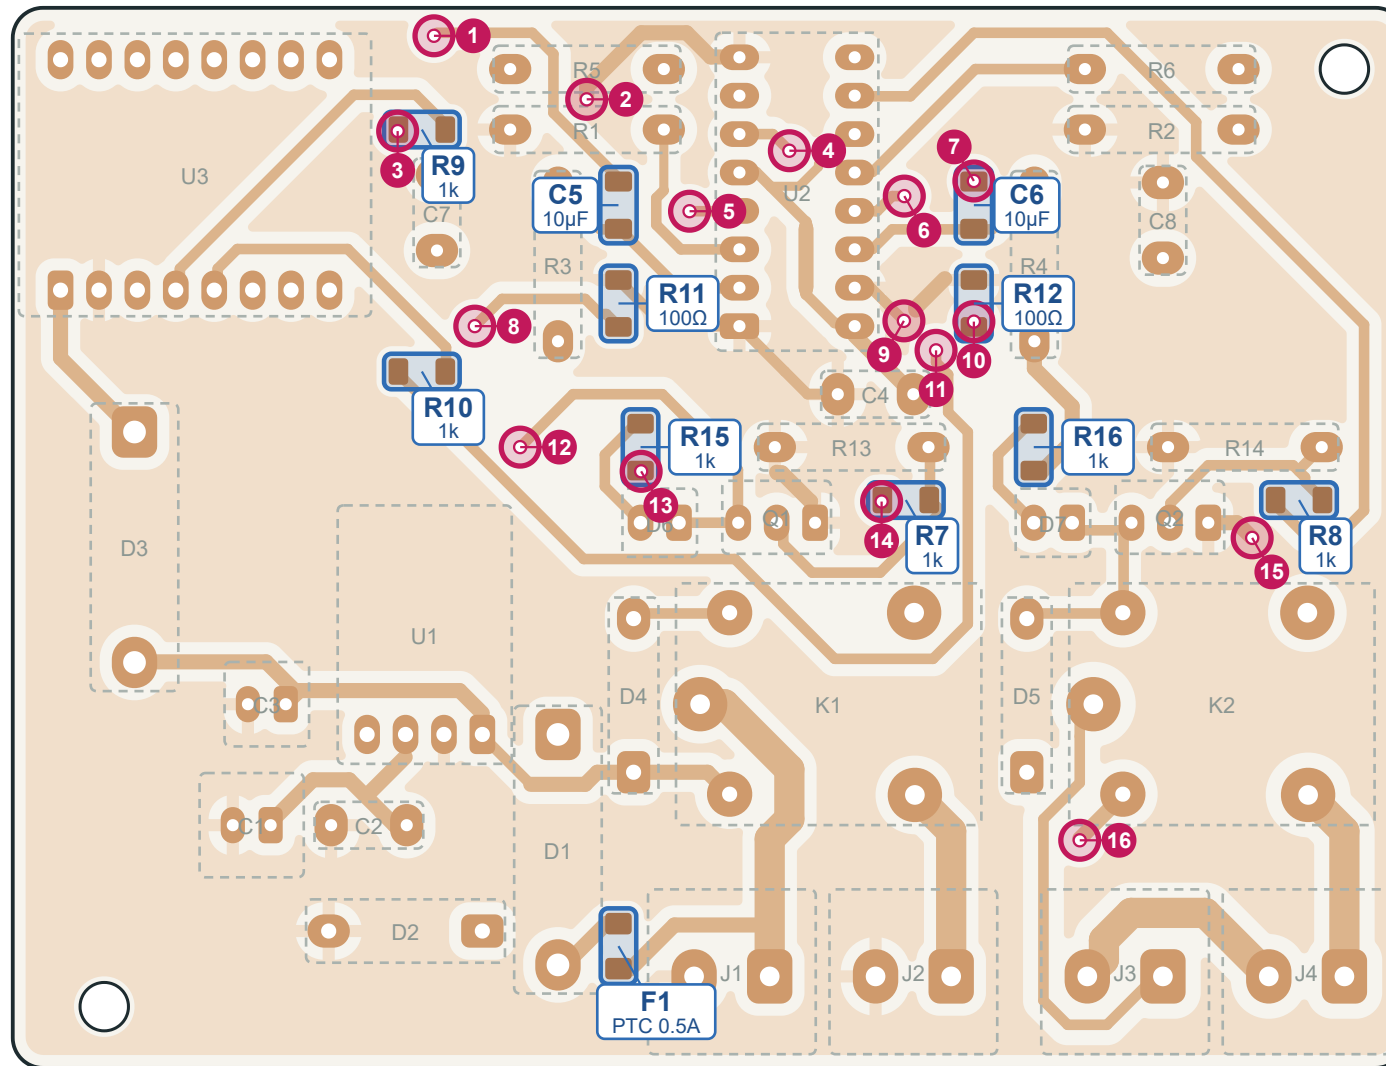

terminal edge (J1–J4)

Bottom-side SMD parts (1206)

	C5	10µF X5R, timer ch1 (CEXT)
	C6	10µF X5R, timer ch2 (CEXT)
	F1	PTC fuse 0.5A, battery feed
	R7	1k, Q1 base (ch1)
	R8	1k, Q2 base (ch2)
	R9	1k, GPIO4 series (ch1)
	R10	1k, GPIO3 series (ch2)
	R11	100Ω, C5 series
	R12	100Ω, C6 series
	R15	1k, K1 LED
	R16	1k, K2 LED

Vias (16): wire links

-  Push a short wire through each via, solder both sides, trim flush. Fit them first. Via 4 is under U2: keep it low.

Key

-  SMD pad (bottom part)
-  through-hole pad
-  through-hole part (body on top)
-  GND pour (bottom)

Solder the SMD parts first, then the through-hole parts. Everything is soldered on this side; pads marked with a ring on the top legend also need a top joint (see README §6c).