
START-UP GUIDE


Big Tex Trailers 35SA-12 utility trailer

Trailer 014 · TRAILER-014 · Northridge Rentals (demo)


Review draft
Not yet approved for use

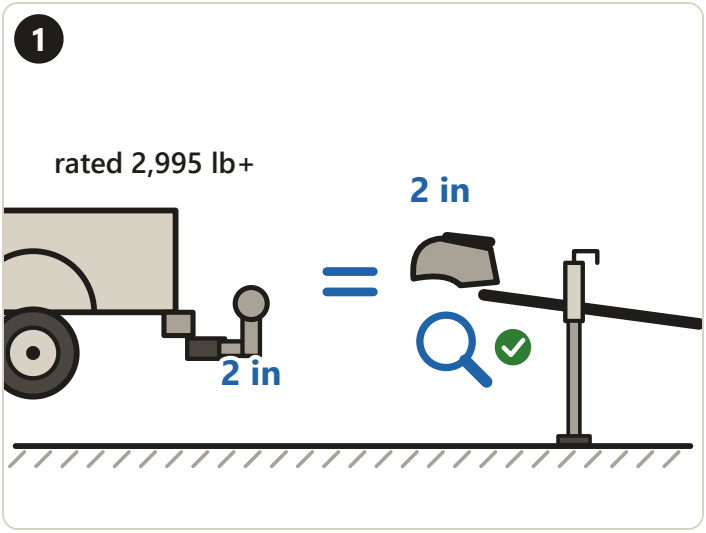


1 Match the ball
2-inch ball, rated 2,995 lb or more. No cracks, wear or looseness.

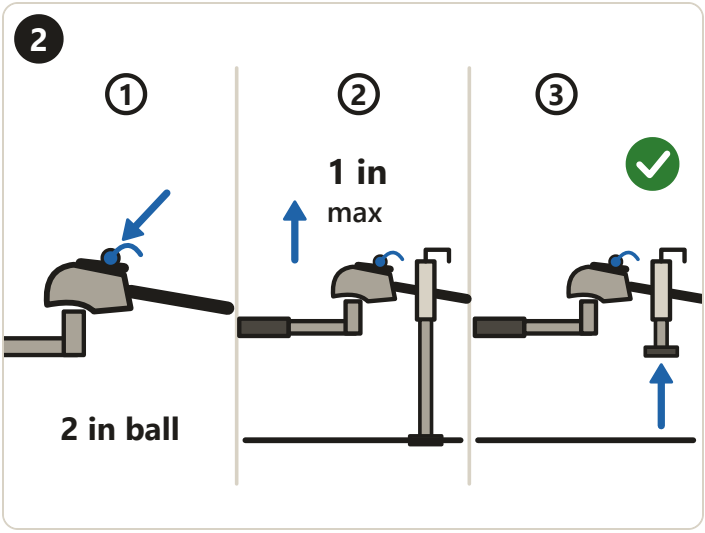


2 Seat, latch, pin, test
Seat it, latch it, pin it. Lift-test 1 inch, then raise the jack fully.

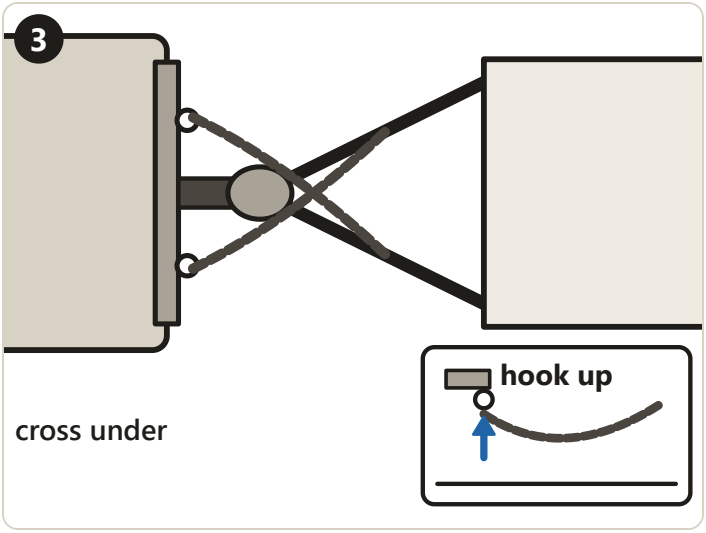


3 Cross the chains
Cross them under the coupler. Hook to the frame, S-hooks up from below. Slack, not dragging.

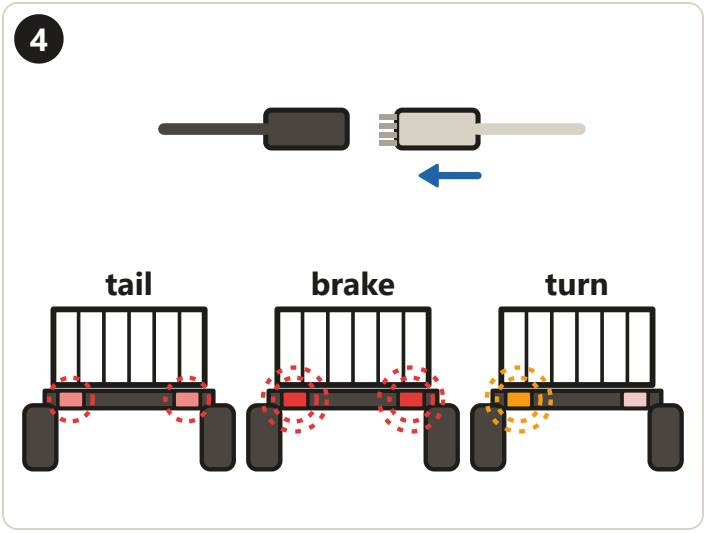


4 Plug in, check lights
Plug in the 4-way. Check tail, brake and turn lights.

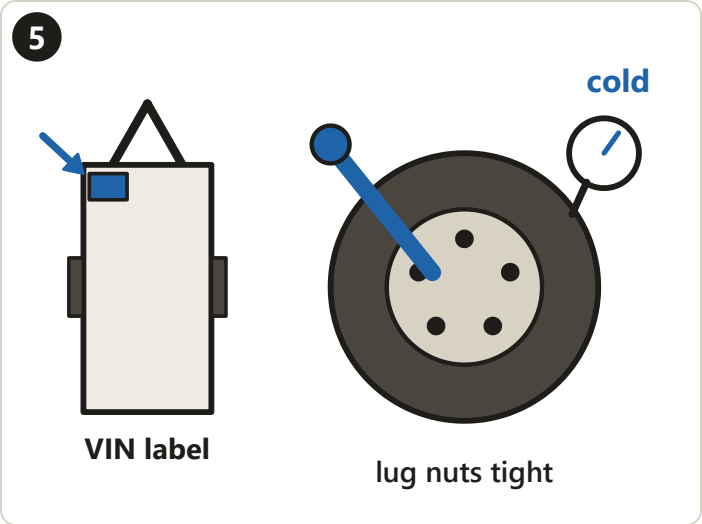


5 Tires and wheels
Pressure from the VIN label, tires cold. Lug nuts tight.

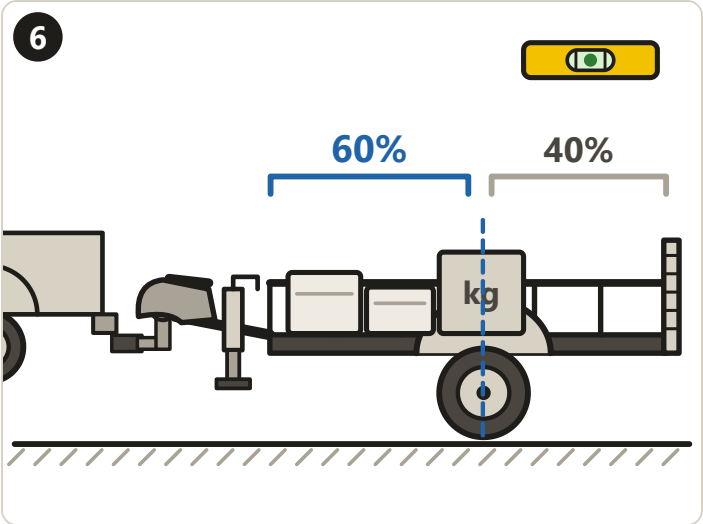

6 Load it right
Hitch up first, on level ground. About 60% of the load in the front half, heavy items low over the axle.

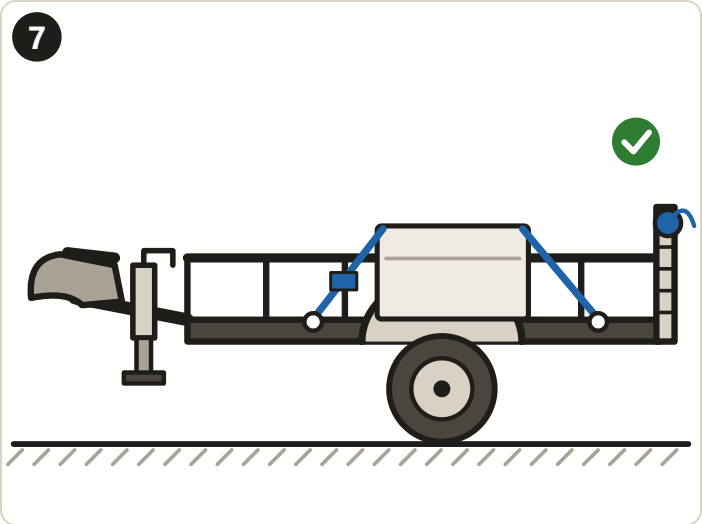

7 Strap and latch
Strap to the tie-down loops. Gate up and latched, pinned if there's a hole.

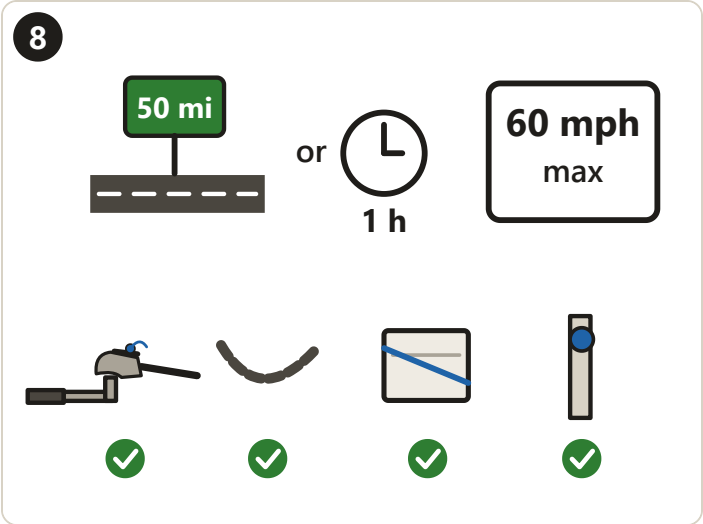

8 Check every 50 miles
Every 50 miles or hour: coupler, chains, load, latch. 60 mph maximum.

NEVER

- Do not move the trailer until the coupler is locked, the chains are attached and the jack is fully raised.
- Never carry people, or flammable, explosive or poisonous materials.
- 60 mph is the maximum recommended towing speed, and only in ideal conditions.
- If the trailer sways, ease off the accelerator and steer as little as possible. Do not brake the tow vehicle to correct it.

Full manual: Big Tex Trailer Manufacturing, LLC, Big Tex Trailers Owners Manual (https://www.bigtextrailers.com/wp-content/uploads/2023/11/Big-Tex-Trailers_Owners-Manual_2020.pdf).

This guide shows key steps from the manufacturer's documents (Big Tex Trailers Owners Manual; 35SA Single Axle Utility Trailer (product page)). It does not replace them. Original artwork by Mulemark. Questions: use Request Support on the equipment page.