

TPLink AC1200 Router

Setup Instructions




Your pathway to the world



TP-Link AC1200 Archer C5 Initial Setup

The Archer C5 is a dual band router that creates separate 2.4GHz & 5GHz WiFi signals.
You will have 2 WiFi SSID's after setup.

1. Connect a computer to the TP-Link router using the default WiFi info on the bottom of the router or using an ethernet cable.
2. Open a web browser like Chrome, Edge, or Safari
3. Enter the IP Address **192.168.0.1** – This should take you to a TP-Link page asking for a **Password**
4. Enter “**admin**” as the default password

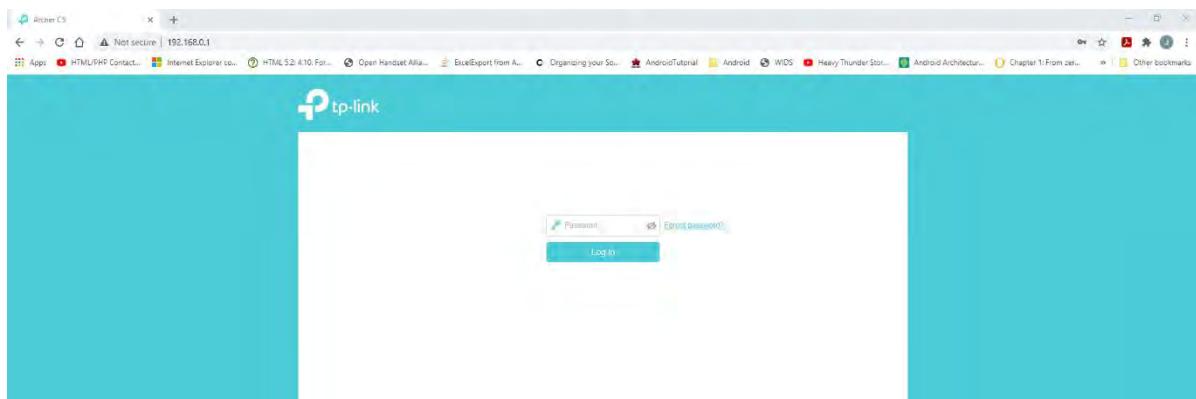

If the screen above is showing 2 spaces instead of one, you may choose your own admin password by filling in both blanks and selecting login.

Be sure to write down and keep this password safe for future use.

Once logged in, you should be on the Quick Setup tab.

5. Verify **Dynamic IP** is selected and click on **Next**



- Verify that **VLAN ID Enabled** is NOT checked. Click **Next**



If you want custom WiFi SSID (Name) and password, you may create this on the next screen. If you **DO NOT**, click **Next** to keep the default info on the bottom of the router.

- Verify that **2.4GHz Wireless Enable Wireless Radio** is checked.
- Network Name (SSID):** Change this to whatever you want your 2.4GHz network to be named. This is the name people will see when they connect to your WiFi
- Password:** Enter a new WiFi password
- Verify that **5GHz Wireless Enable Wireless Radio** is checked.
- Network Name (SSID):** Change this to same name you used with the 2.4GHz network but add _5G at the end.
Example: 2.4GHz Network Name Lake House
5GHz Network Name Lake House_5G
- Password:** Enter the **SAME WiFi password** as used with the 2.4GHz network
- Verify that the information entered is correctly spelt and click **Next**

Connection Type Internet Setup **Wireless Settings** Summary Connection Test

You can change the wireless network name and password.

2.4GHz Wireless: **Enable Wireless Radio**

Network Name (SSID):

Password:

5GHz Wireless: **Enable Wireless Radio**

Network Name (SSID):

Password:

Back **Next**


If you were connected to your TP-Link router wirelessly to begin with **AND** you added custom WiFi, you MUST reconnect using the new WiFi information you setup in the previous steps to continue setup.

14. Choose your current connection


If connected to the router wirelessly, after you have connected back to the router using the new custom WiFi, choose "**I have successfully reconnected to the router using the new wireless settings.**"

If you are wired to the router using an ethernet cable, choose "**I am using a wired connection.**"


Click **Next**

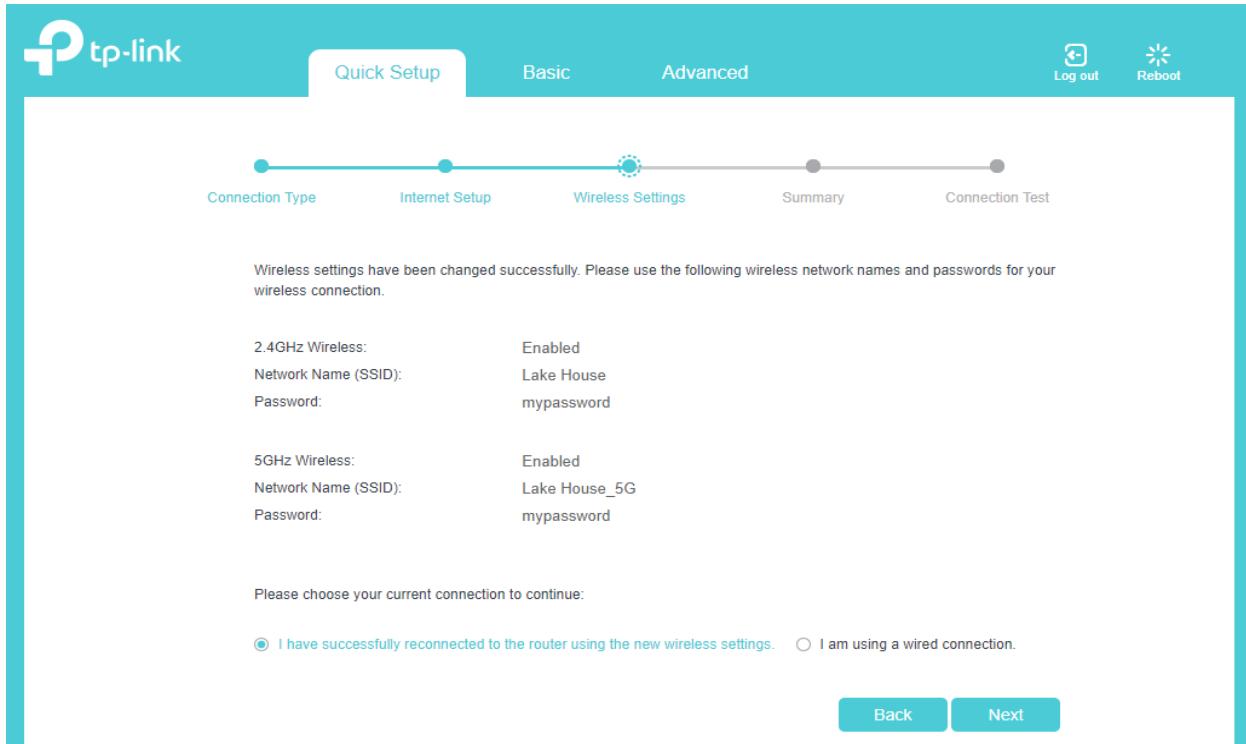


15. Verify custom WiFi info. Click **Back** to go to previous screen to make any changes. Click **Save** to continue.

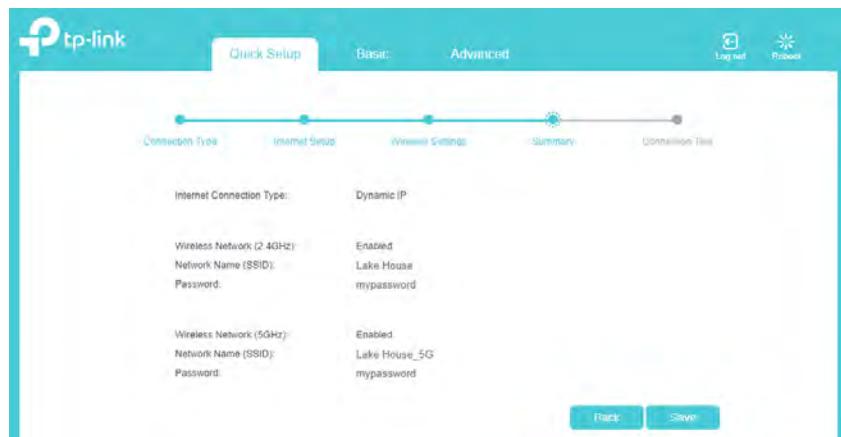


16. Click **Next** after setting have been changed successfully.

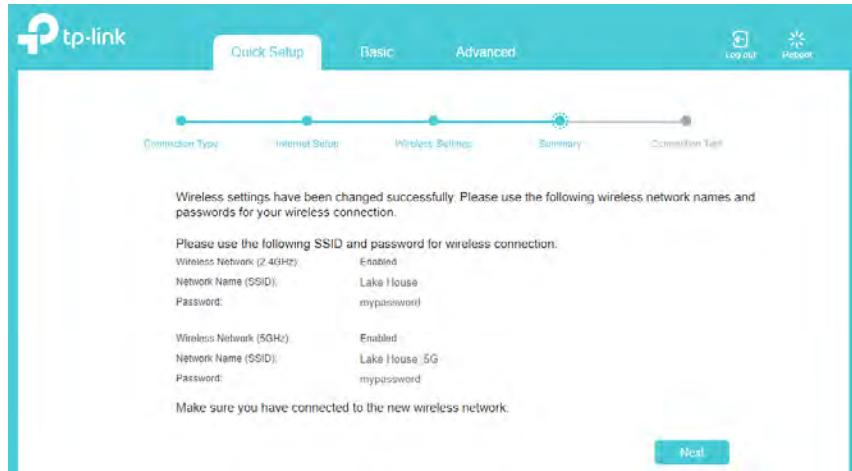

17. If you see a message that reads **Failed**, reconnect your device to the new WiFi network and click **Next** again.

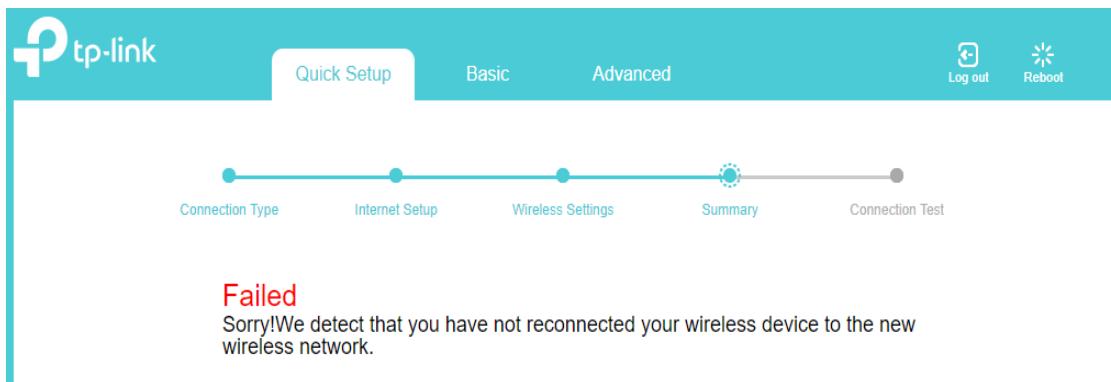

18. Click **Test Internet Connection** to test setup and verify internet or click **Finish** to end.

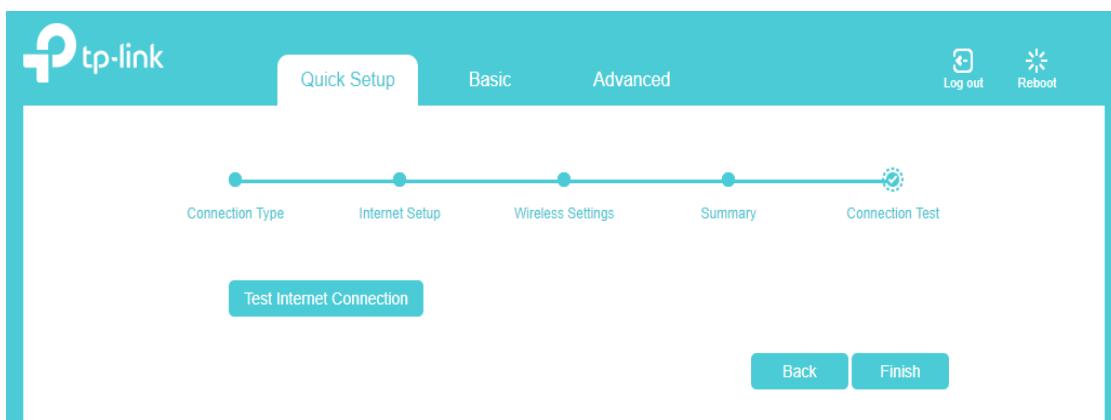

19. If done with any other changes, be sure to click **Log Out** in the upper right corner of your screen.