




CURTAIN INSTALLATION MANUAL

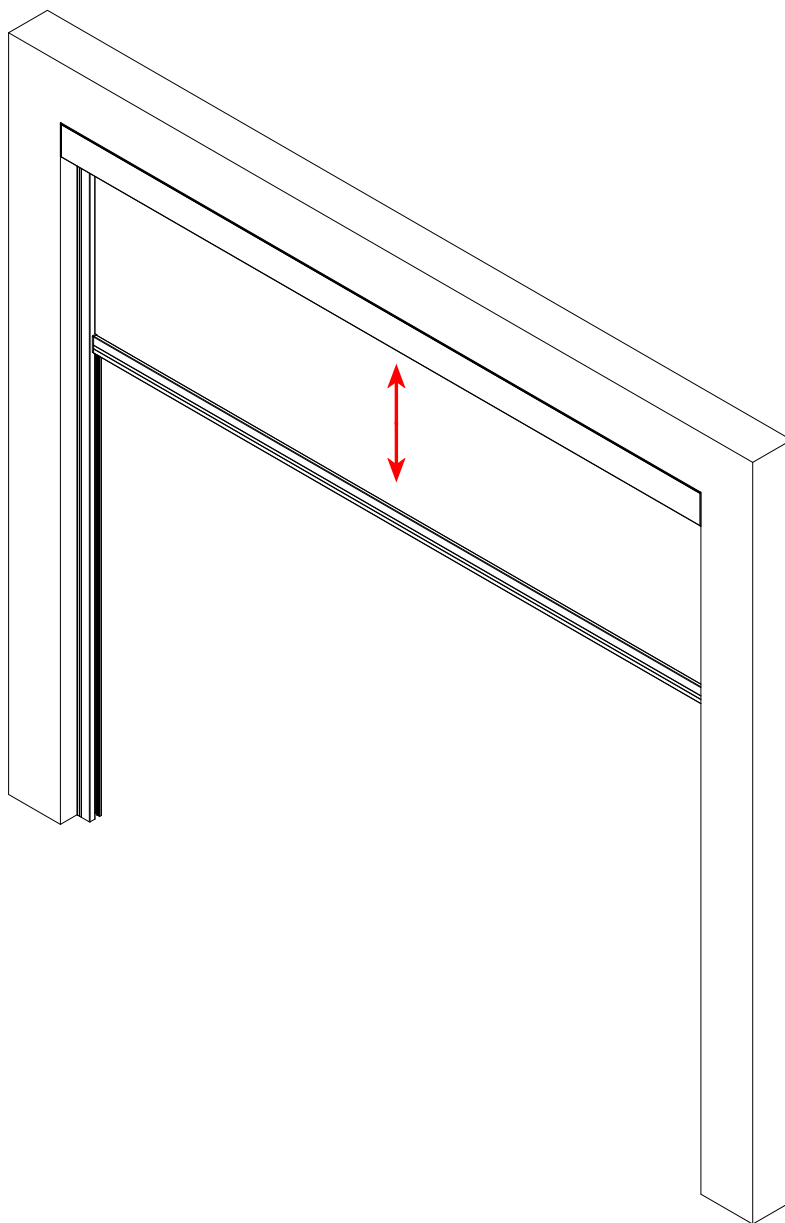

Please read this manual thoroughly before initial
curtain installation.

Retain this manual for future reference.

As shown, the width between two posts and a diagonal must be measured and levelled. This ensures that the interior dimensions for the curtain installation are accurate.

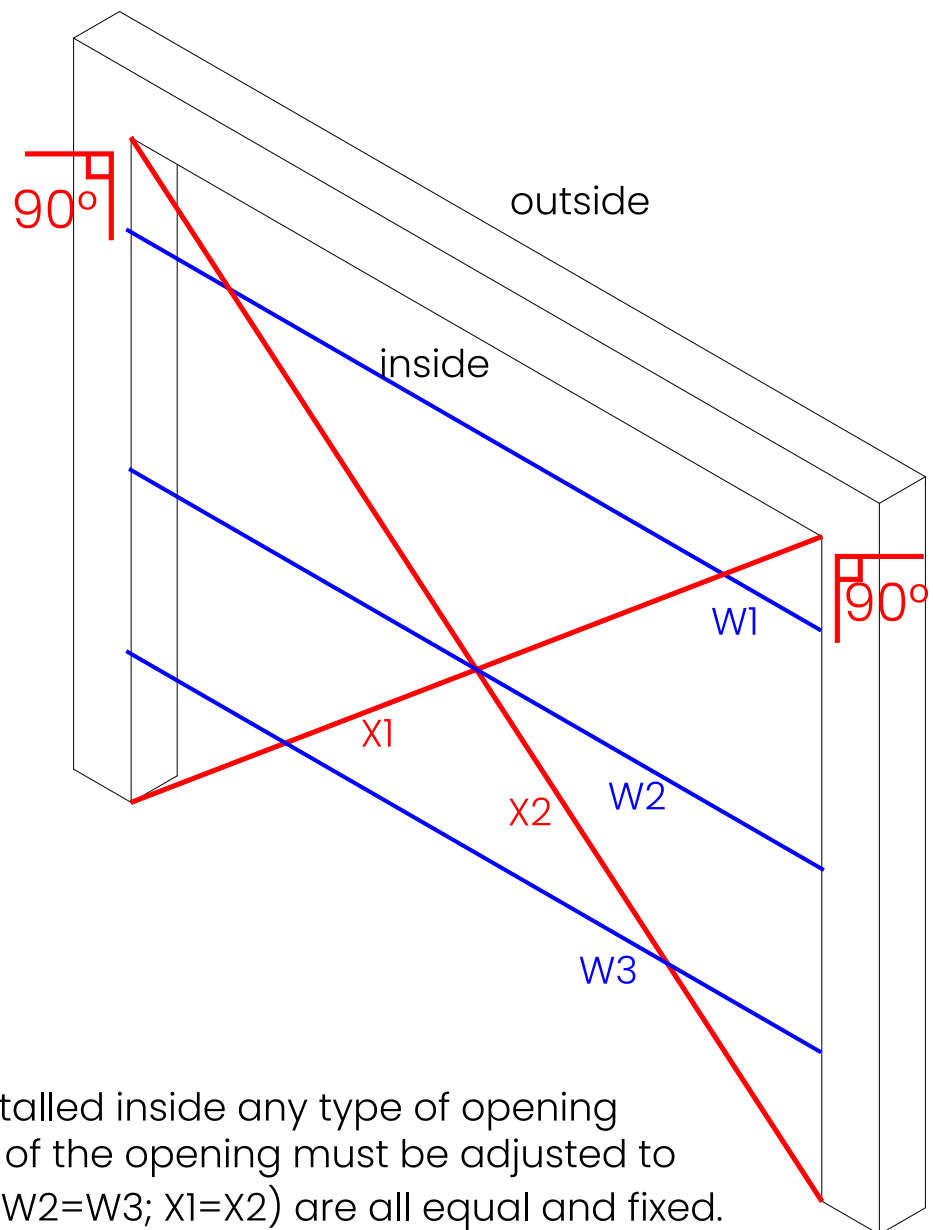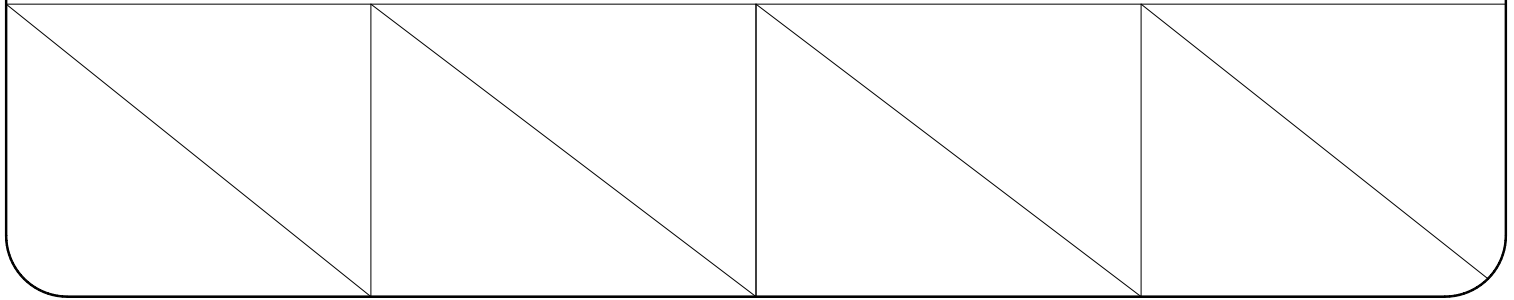

Note 1:


The curtain is installed inside any type of opening sidewall, the size of the opening must be adjusted to ensure that ($W1=W2=W3$; $X1=X2$) are all equal and fixed. Otherwise, it will affect the operation of the curtain.

Note 2:


W are the width, $W1=W2=W3$, X are diagonal, $X1=X2$, $\text{gap} \leq 3\text{mm}$.




$W1 \neq W2 \neq W3$

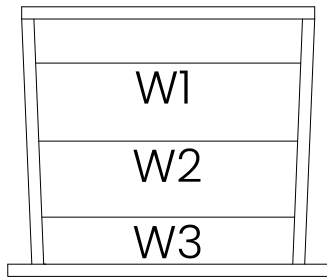


$X1 \neq X2$

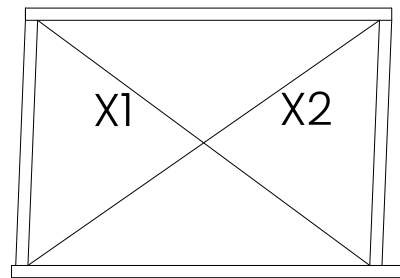


$W1 = W2 = W3$

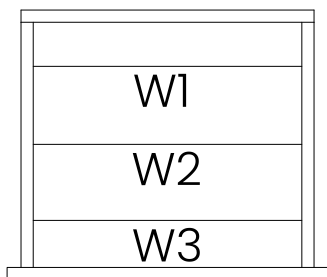

$X1 = X2$

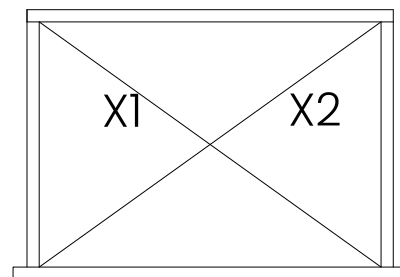


As shown, split the rails into 4 small parts: No.①、No.②、No.③、No.④.

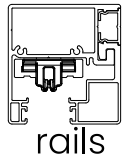


Note :

The plastic cover at the bottom of the "①"
does not affect the disassembly of the rail
and does not need to be removed.


Before Dis-assembly

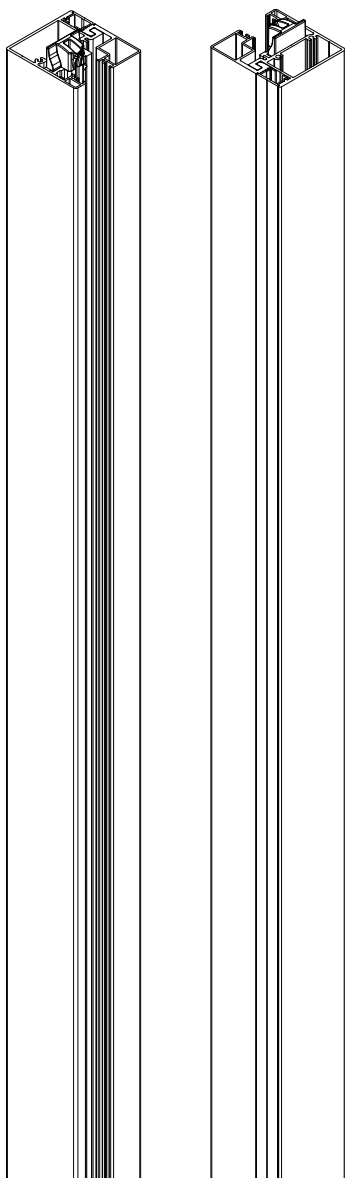

After Dis-assembly

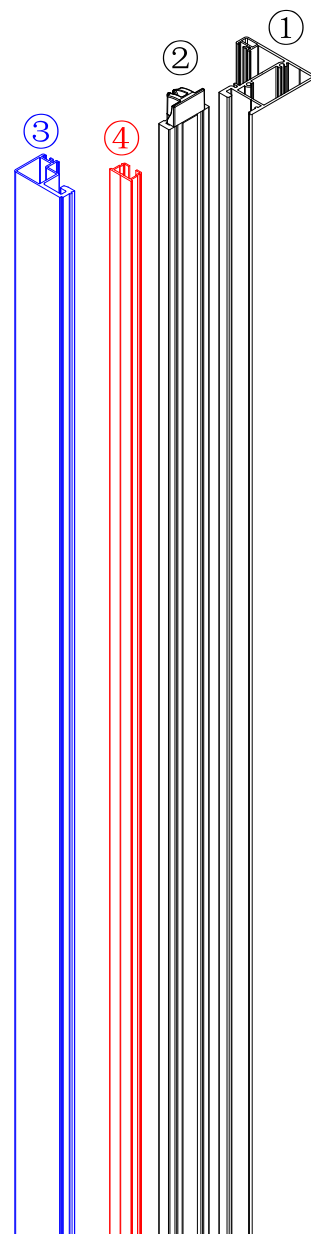


As shown, when the width of the curtains exceeds 4 metres and the blinds need to be dismantled, fix the "Top cover" to the top of the beam. Otherwise, "A" will sag and distort. Firstly, lay "A" flat on the floor. Then unscrew ⑤ "Bottom cover screws" at both ends and remove ⑥ "Bottom cover". Thirdly, hold ⑦ "End Mount" at each end of the fabric by hand. Lastly, lift up and pull out ⑧ "Fabric+Drag pole of Fabric".

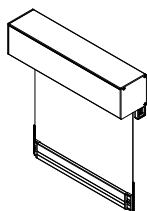


Curtain

Note:


If your curtains are not wider than 4 metres, please ignore this page and skip to page Nr.9.

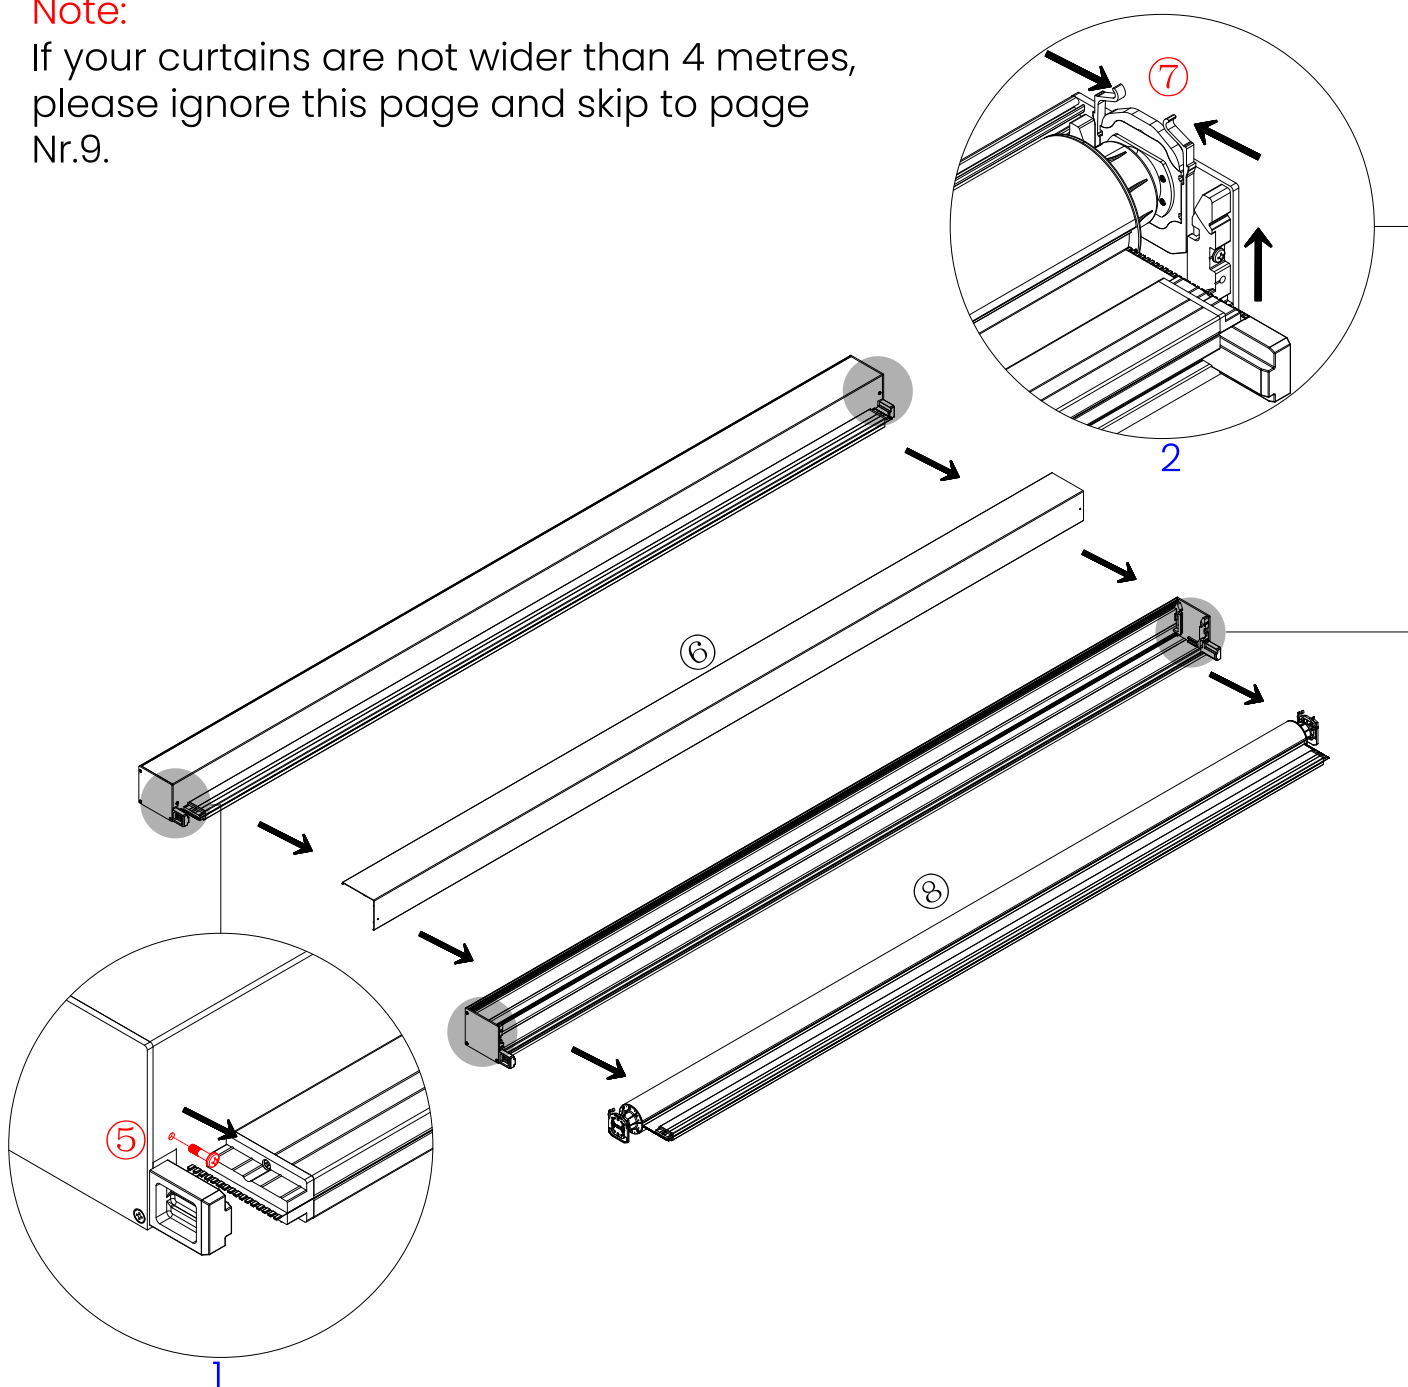



As shown, insert "①" into the "Cassette Box End Plates" at both ends of the Top cover.

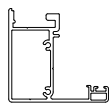


①

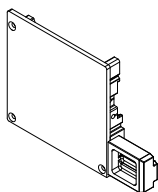

Cassette Box End Plates

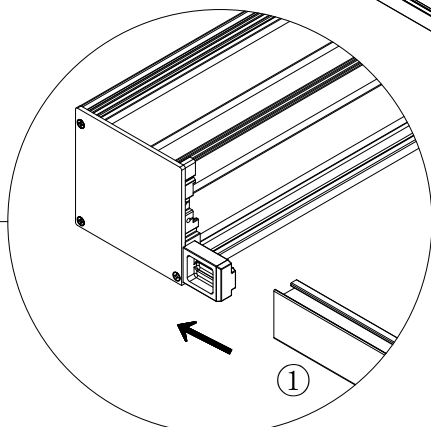
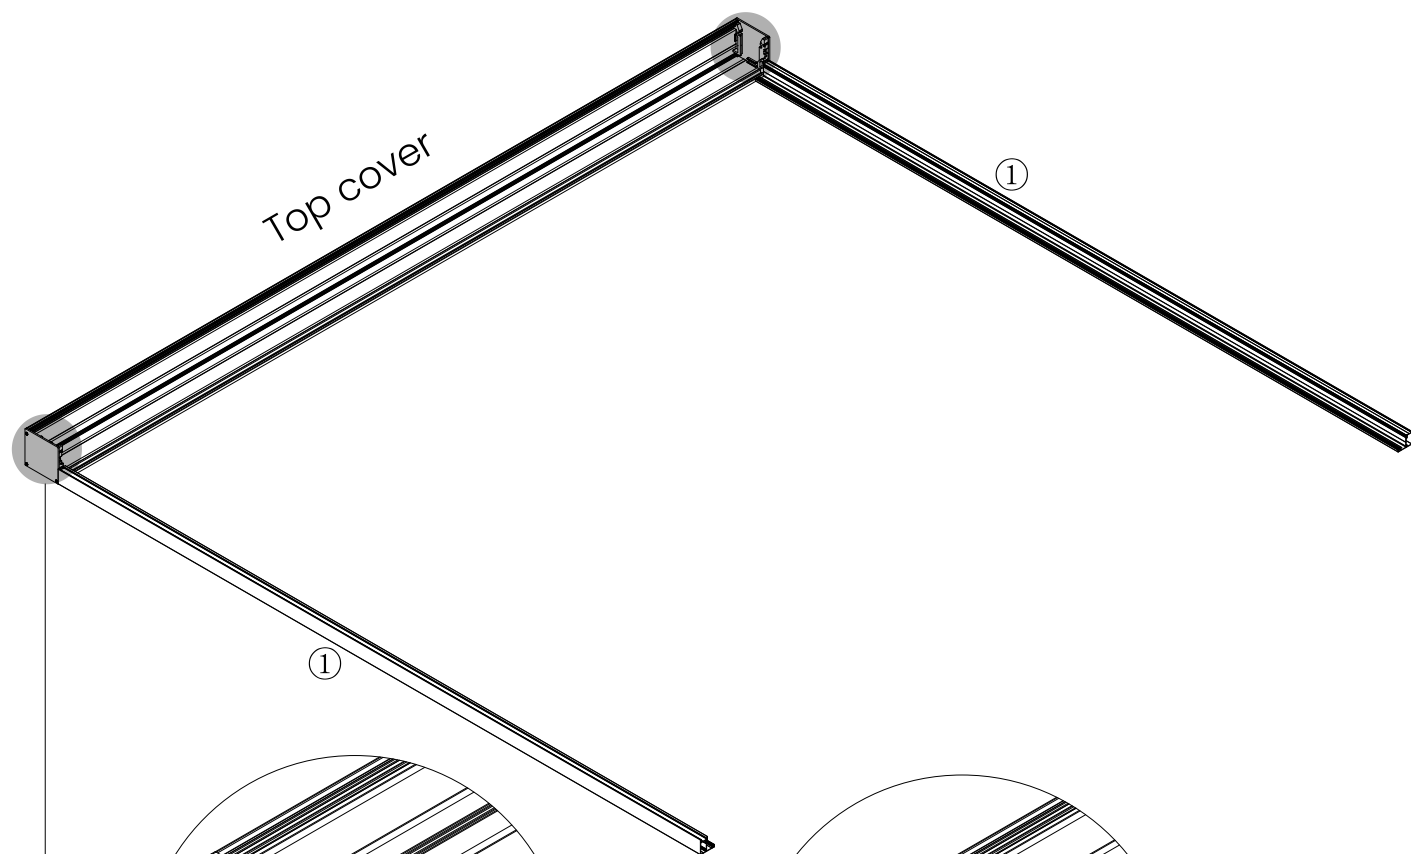


1


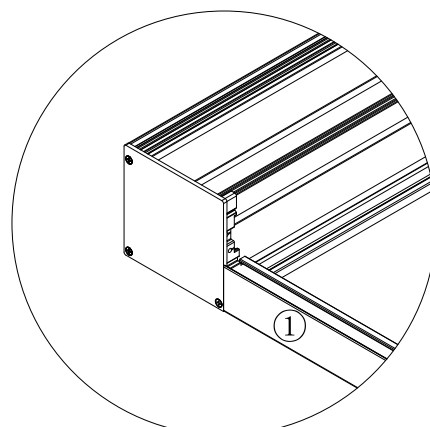


2


As shown, stand up the frame and move it to the installation position (The curtain frame should be flush with the outside of the beam and uprights). Measure the width and diagonal between the two uprights. This is to ensure that the interior dimensions are accurate when installing the curtain.

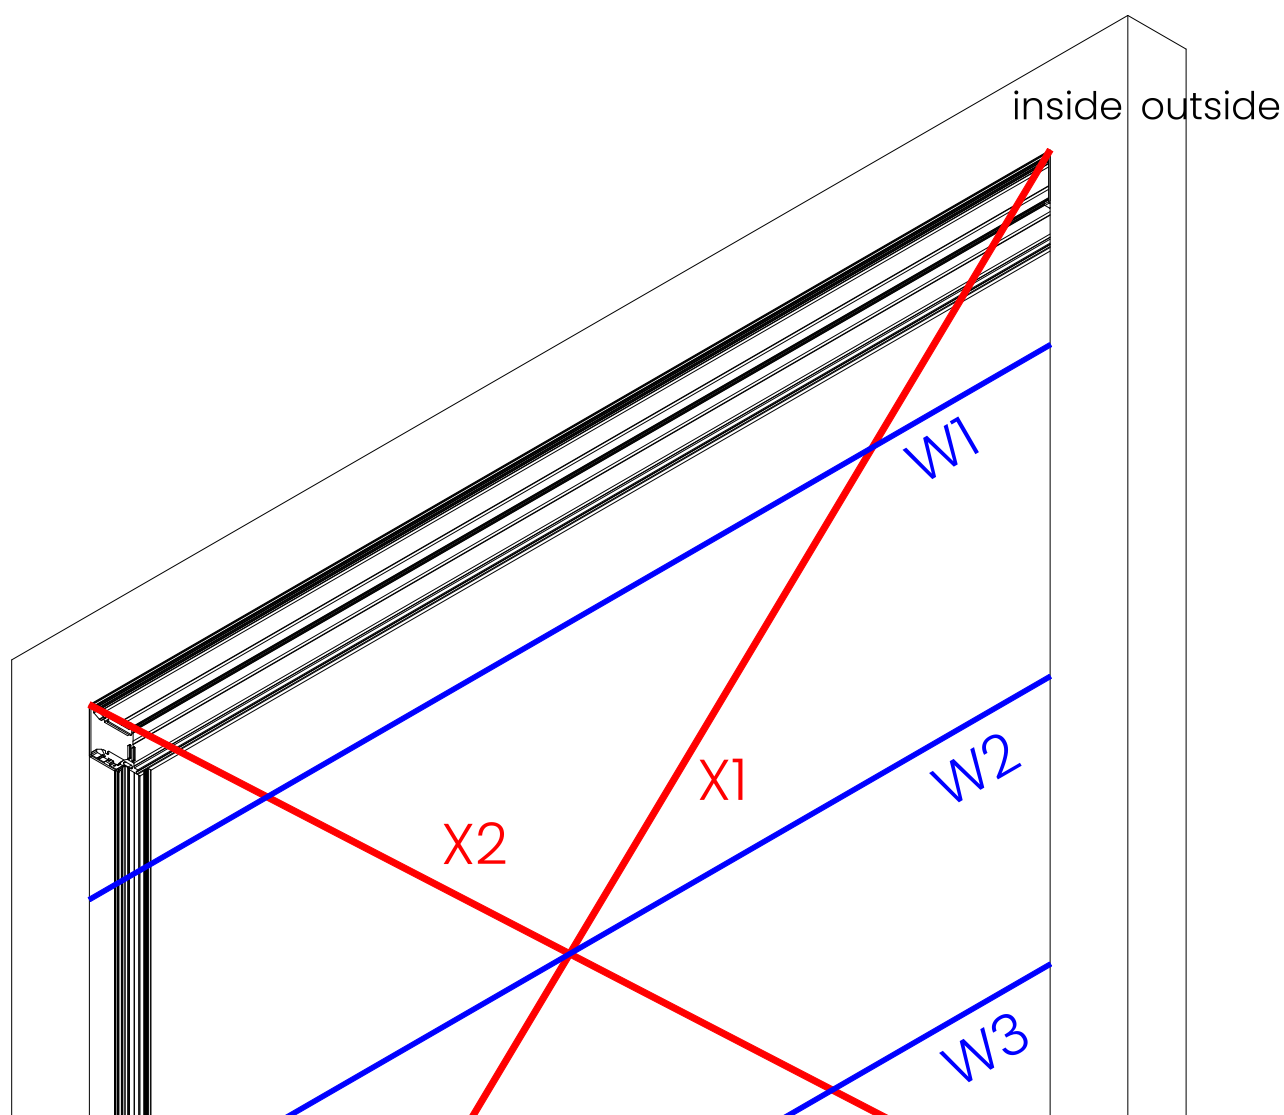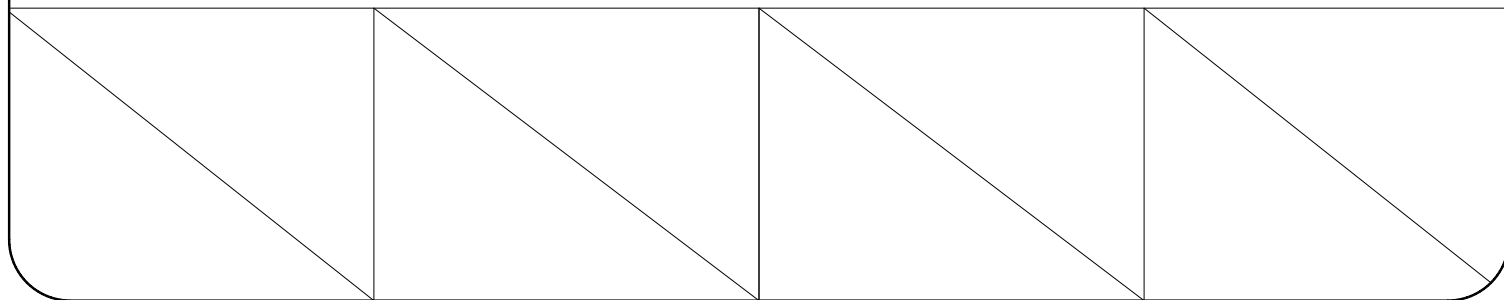


As shown, 4 meters need to drill 4 screw holes in the "Top cover" and beam (5 holes need to drill more than 5 meters), the first and last screw holes are 200mm from the corner of the beam, the spacing of the middle screw holes should be drilled according to your actual situation, and use "screws" to tighten the "Top cover" and beam.

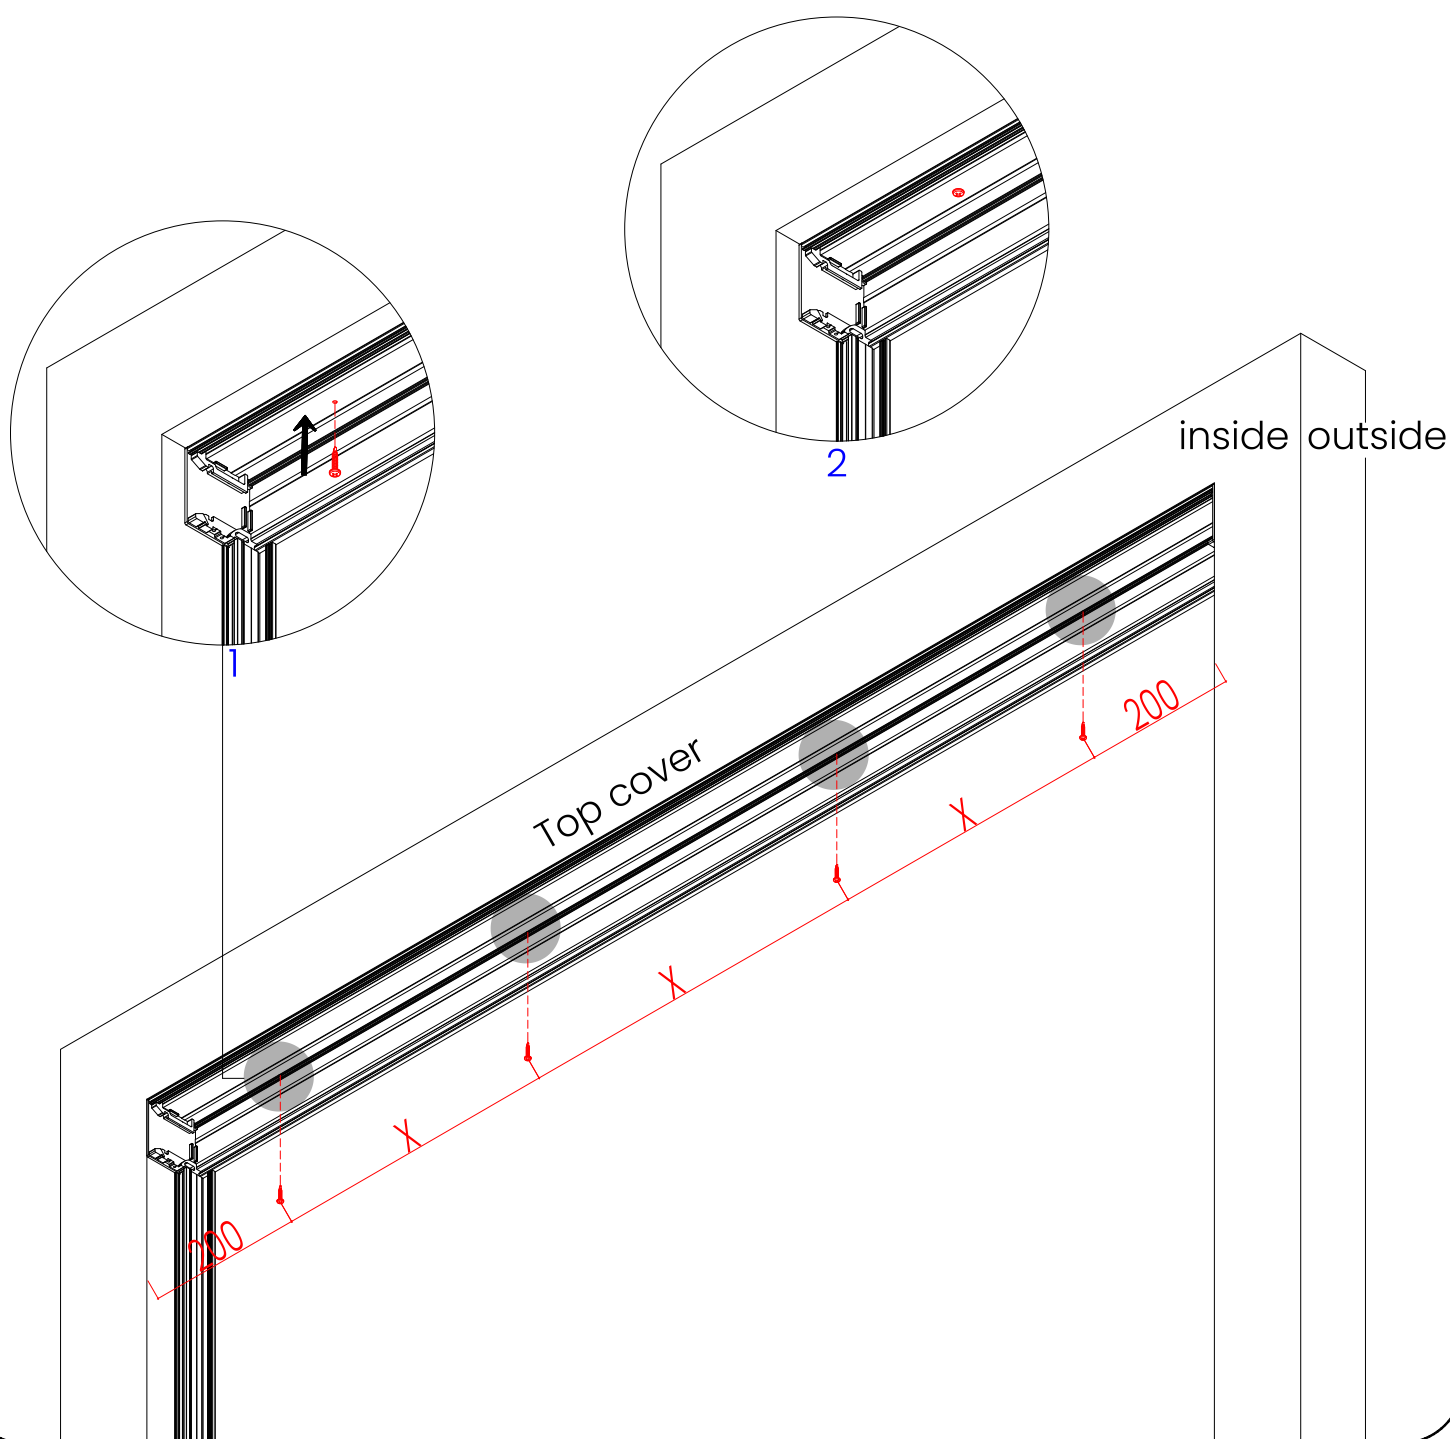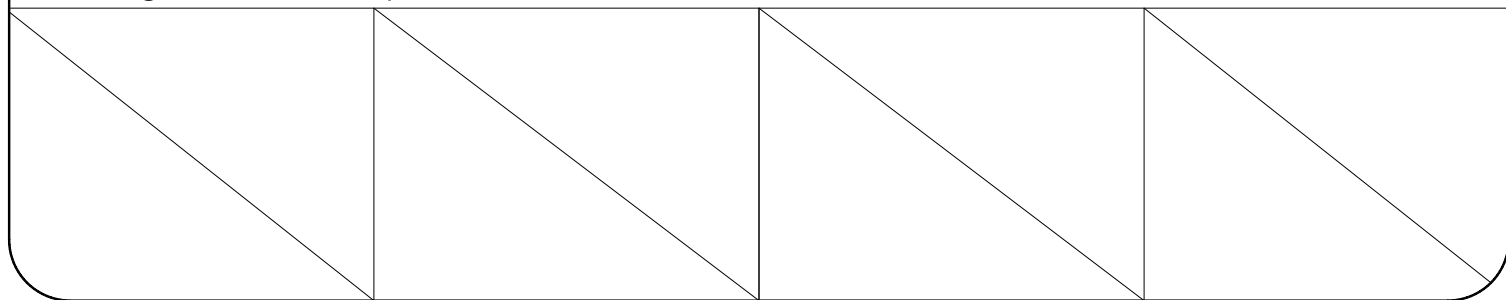


As shown, lift up ① "Fabric+Drag pole of Fabric" and insert ① "Fabric+Drag pole of Fabric" into "Cassette Box End Plates". Then install ② "Bottom cover" before fasten ③ "Bottom cover screw" in place.

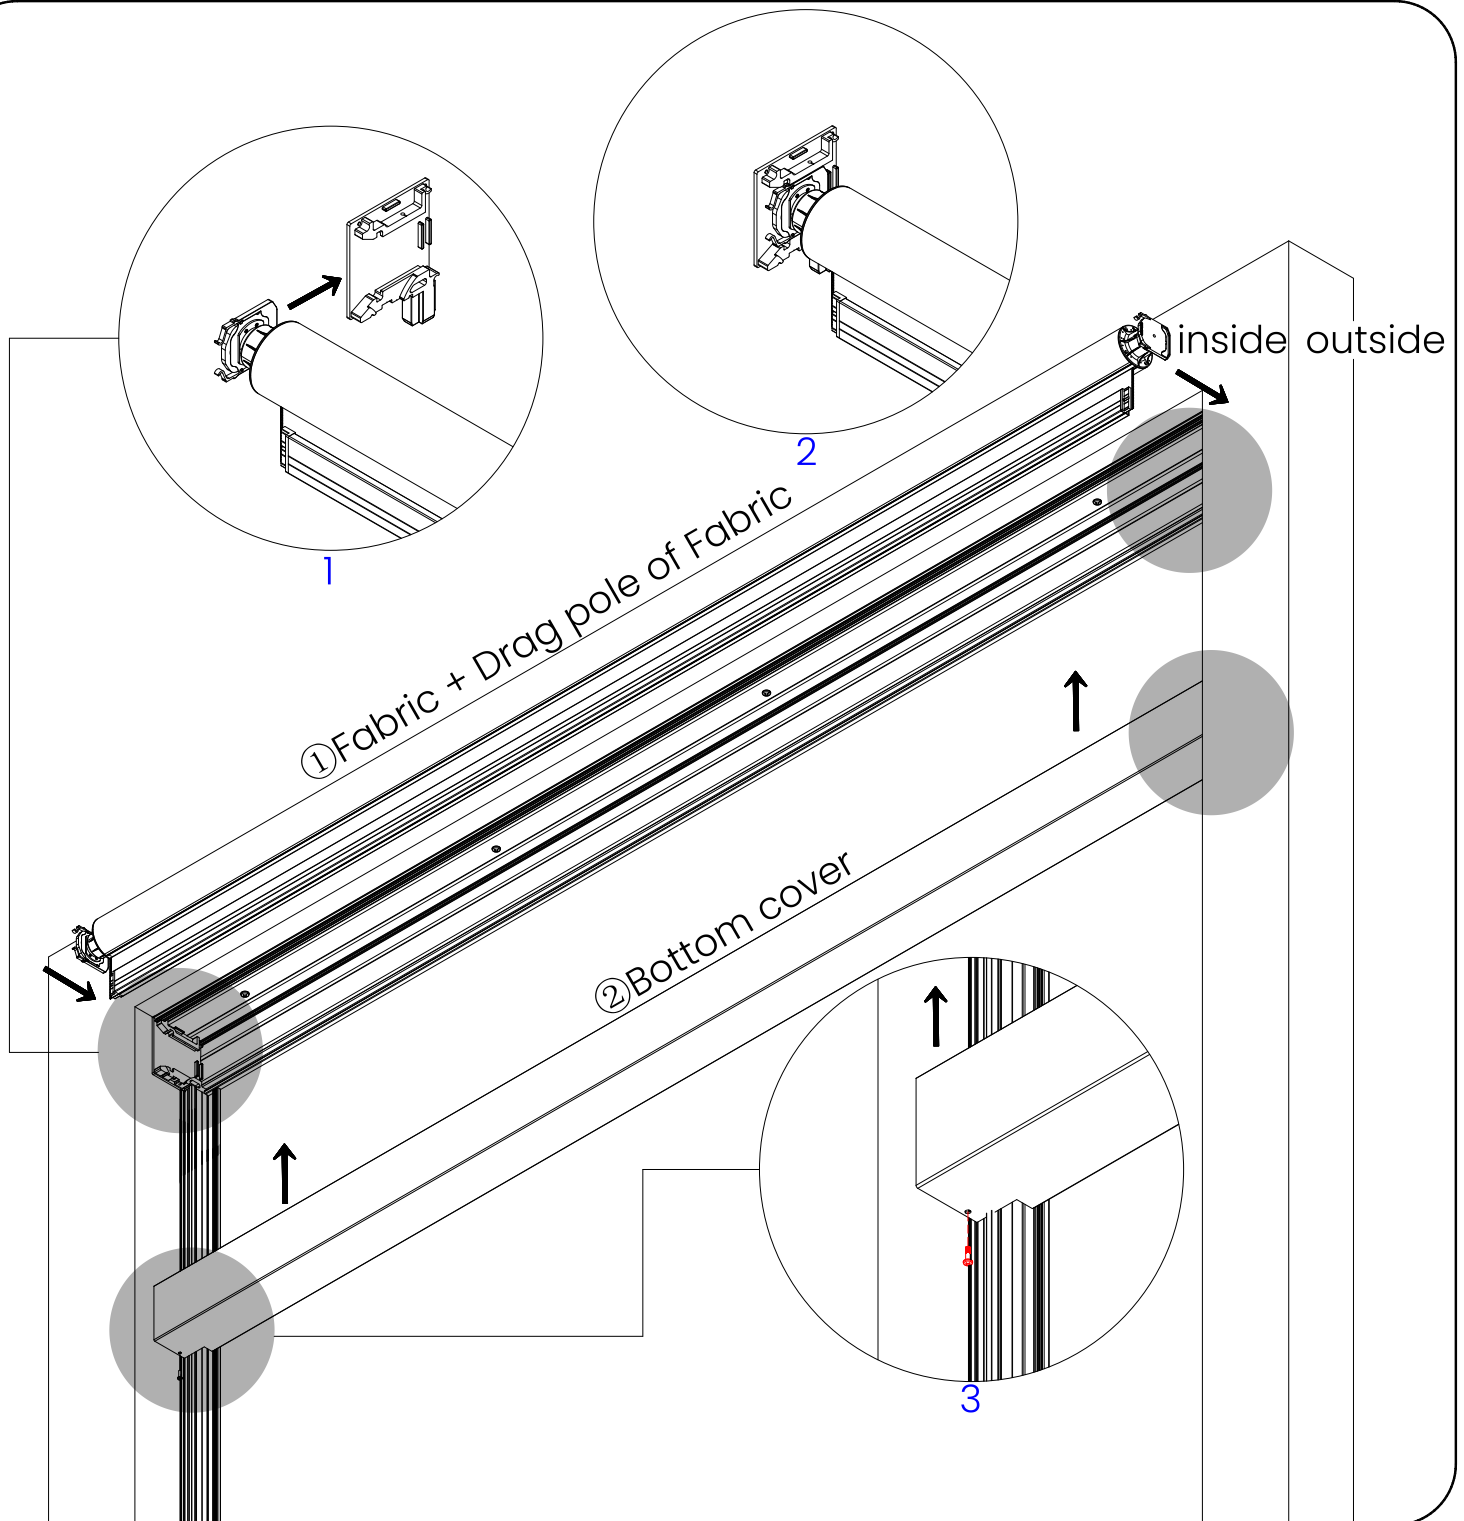


As shown, lay the curtain flat on the ground and insert "①" into the "Cassette Box End Plates" at both ends of the top cover.

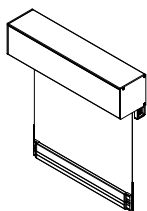




Curtain

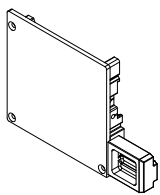



Cassette Box End Plates

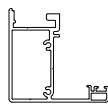

①

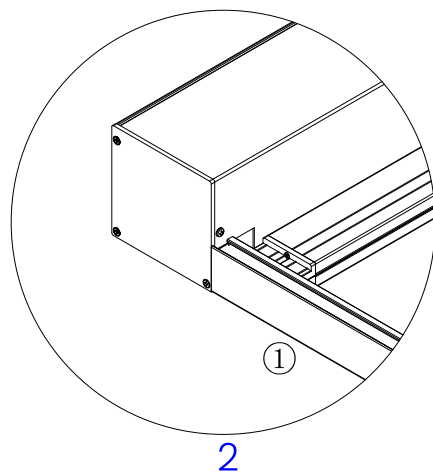
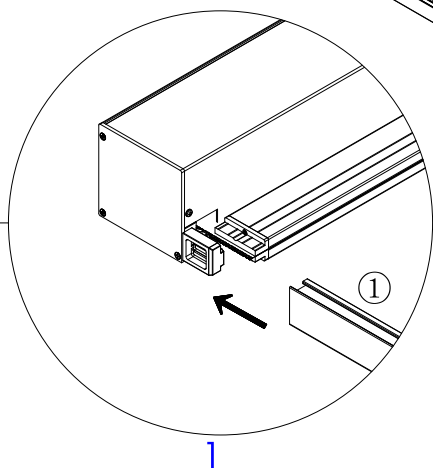
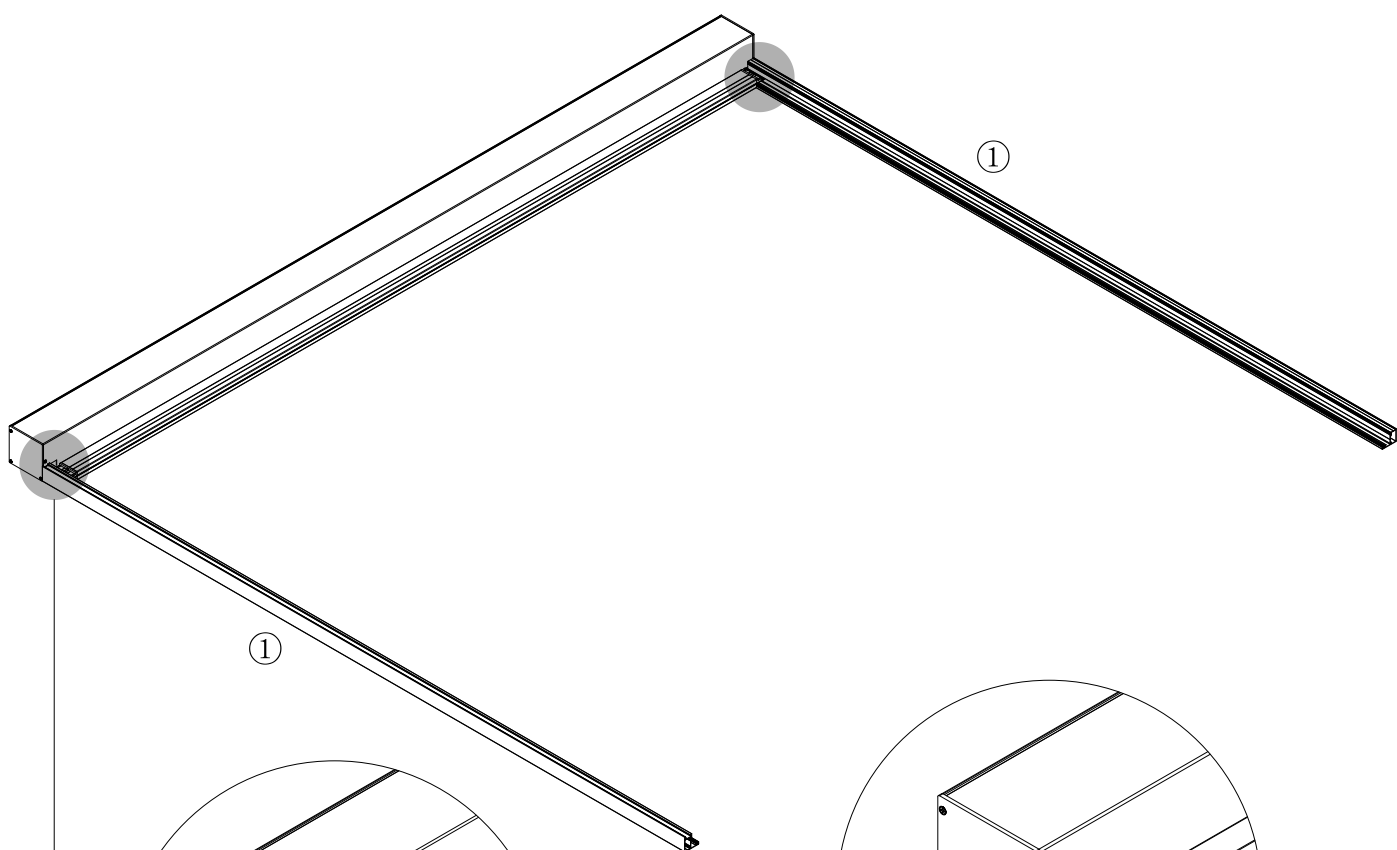


As shown, before placing the Curtain, you need to put the wire of the Curtain into the cord holes first.

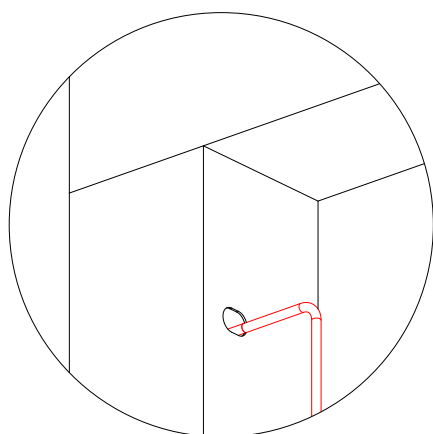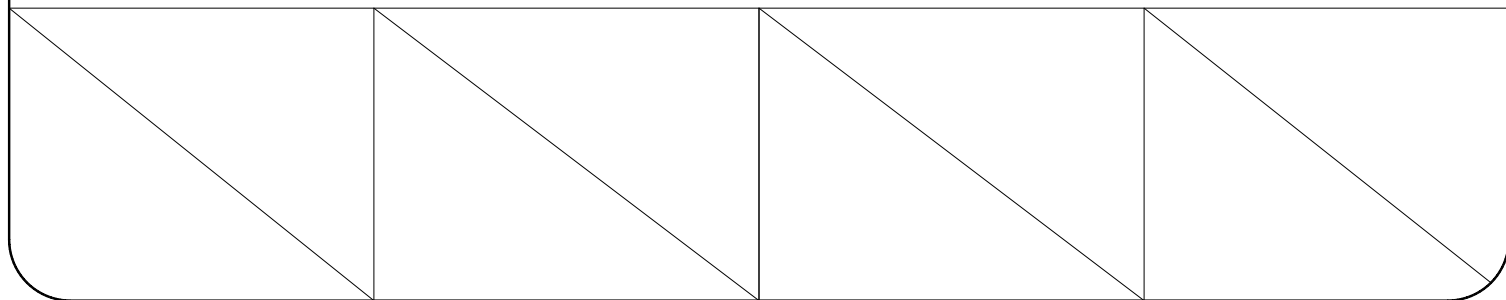


Zipped Blind Wire

or

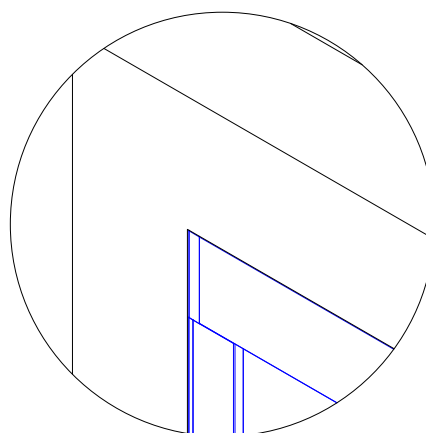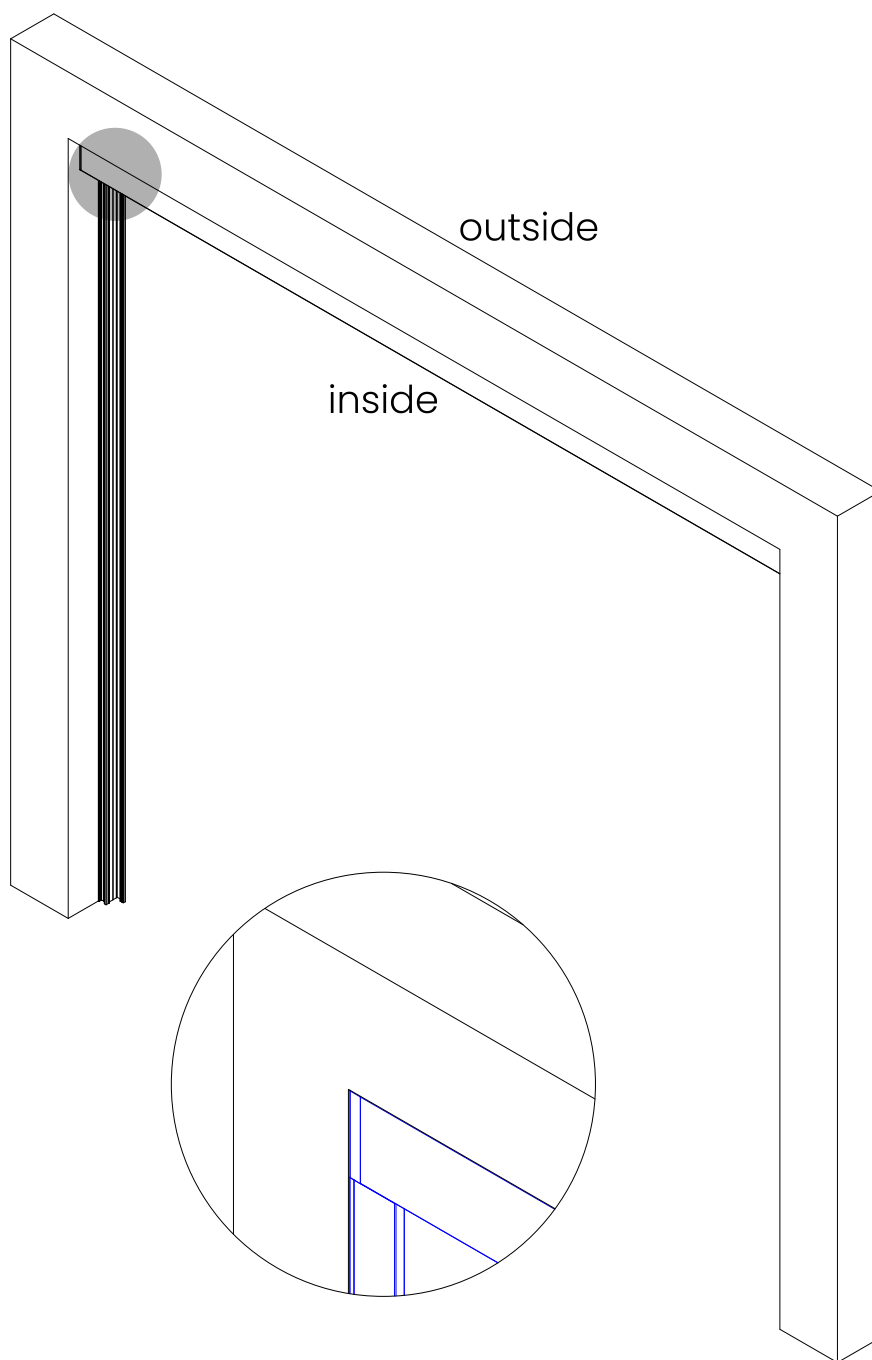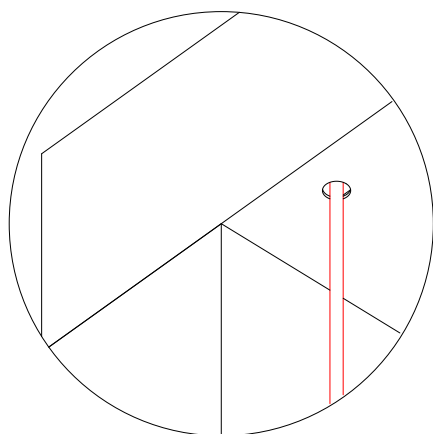


Install the plug. The Motorized Slide Screen has been adjusted for UP/DOWN limit position, customers only need to press the up and down keys to confirm the limit. Please check the motor manual if any questions.


230V

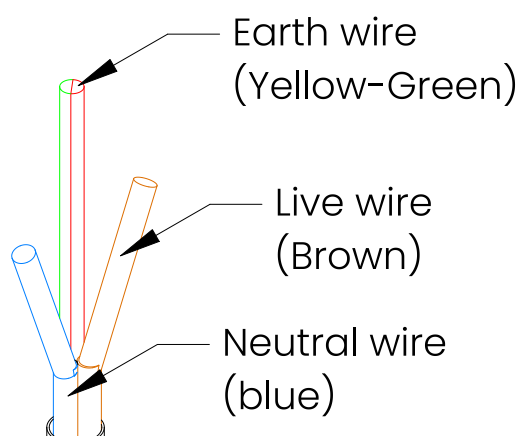


120V

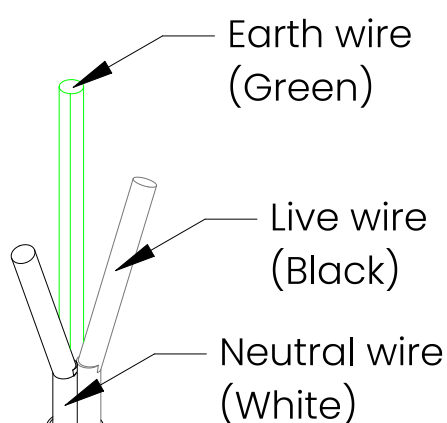



Fix ① to the post with screws.

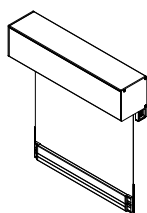



Curtain

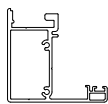




①

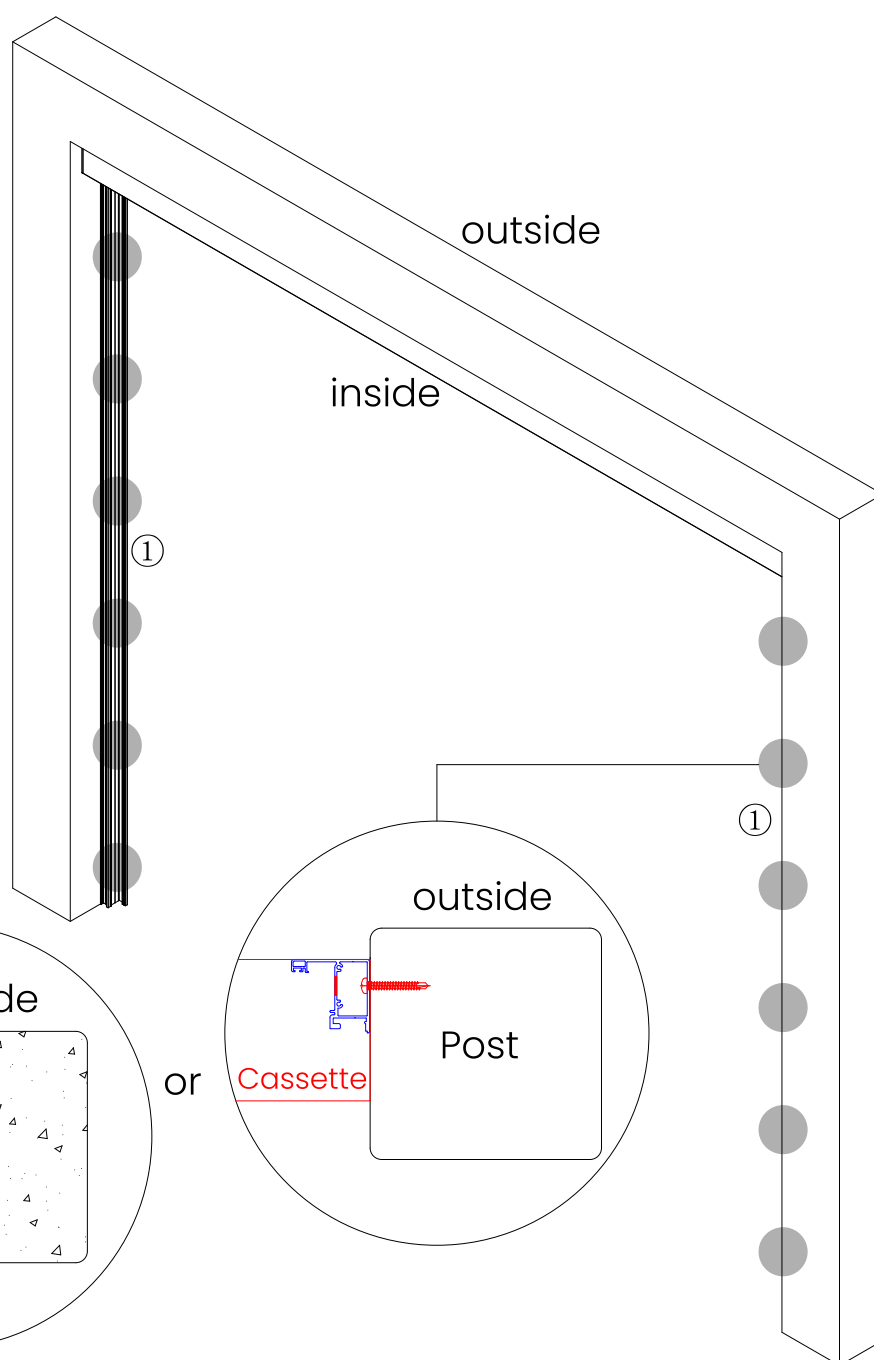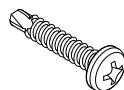

As shown, first insert the fabric zip into the side rail zip ②, then place the side rail ② against the side rail ①.

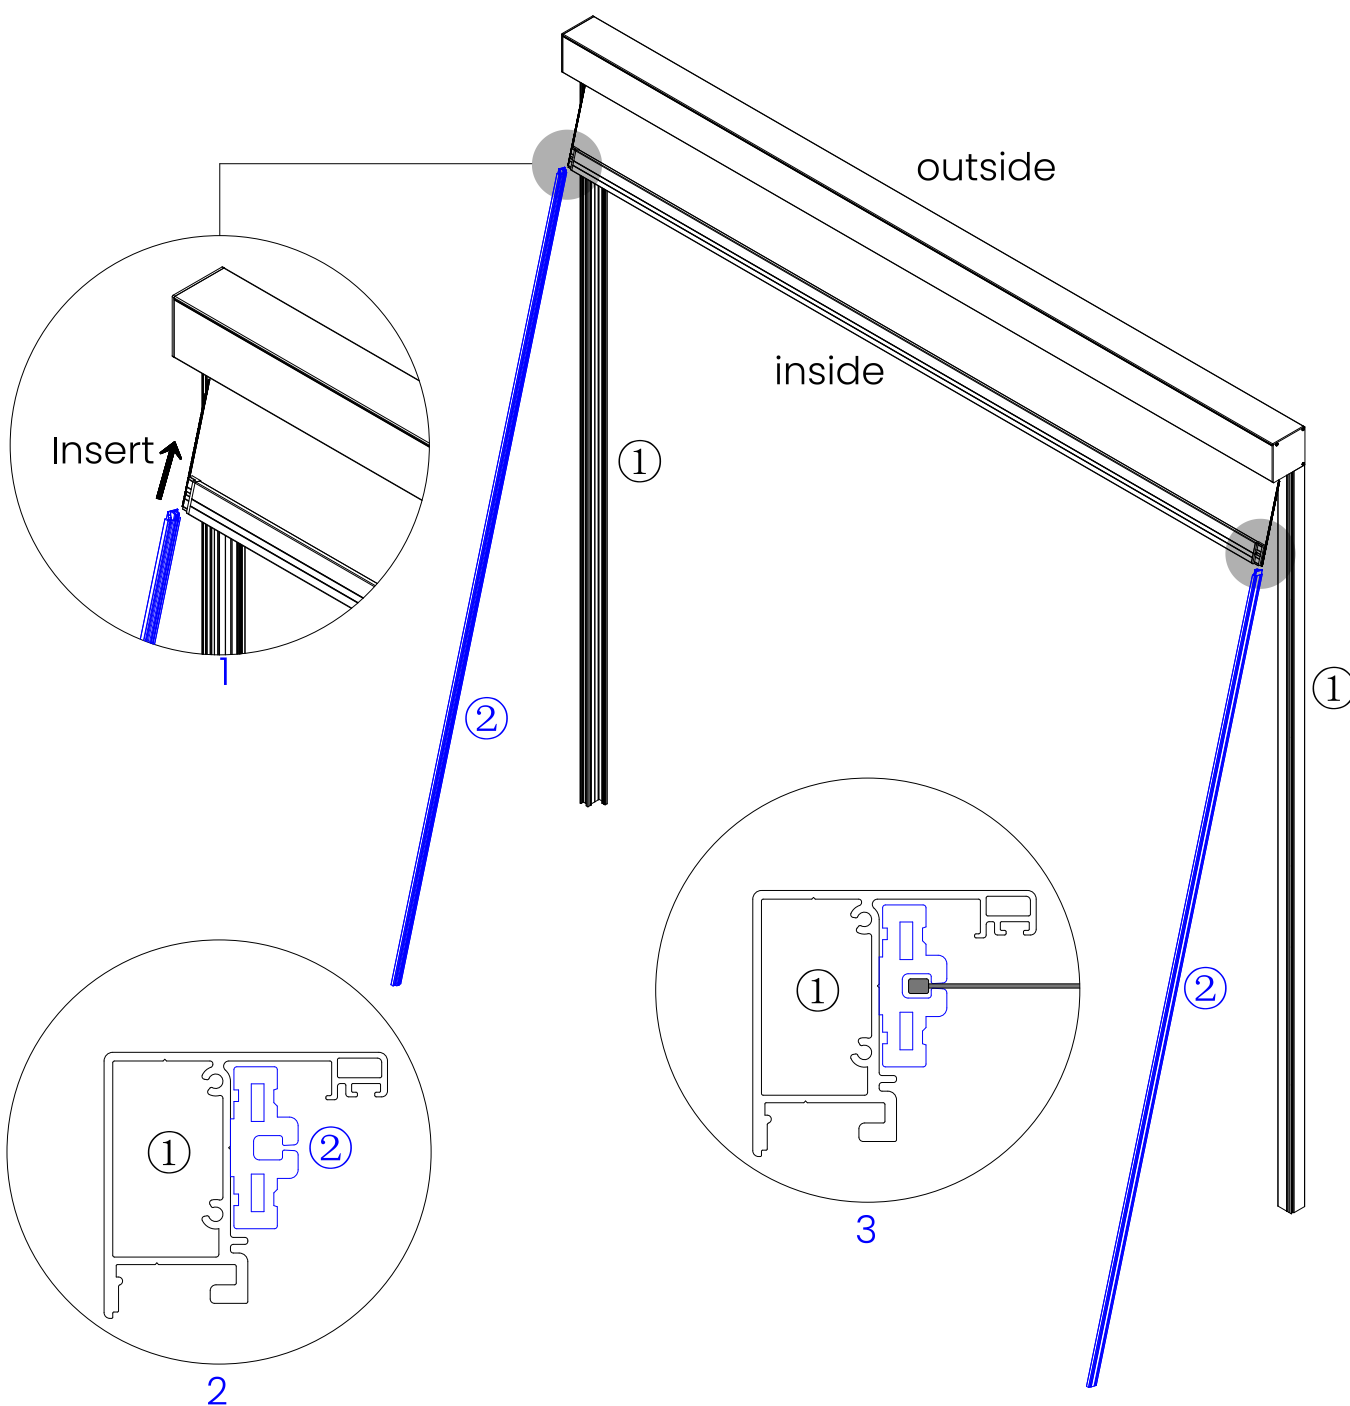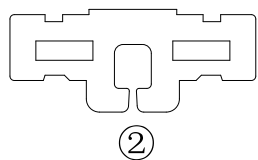

Attach ③ and ④ to ① as shown in the figure.

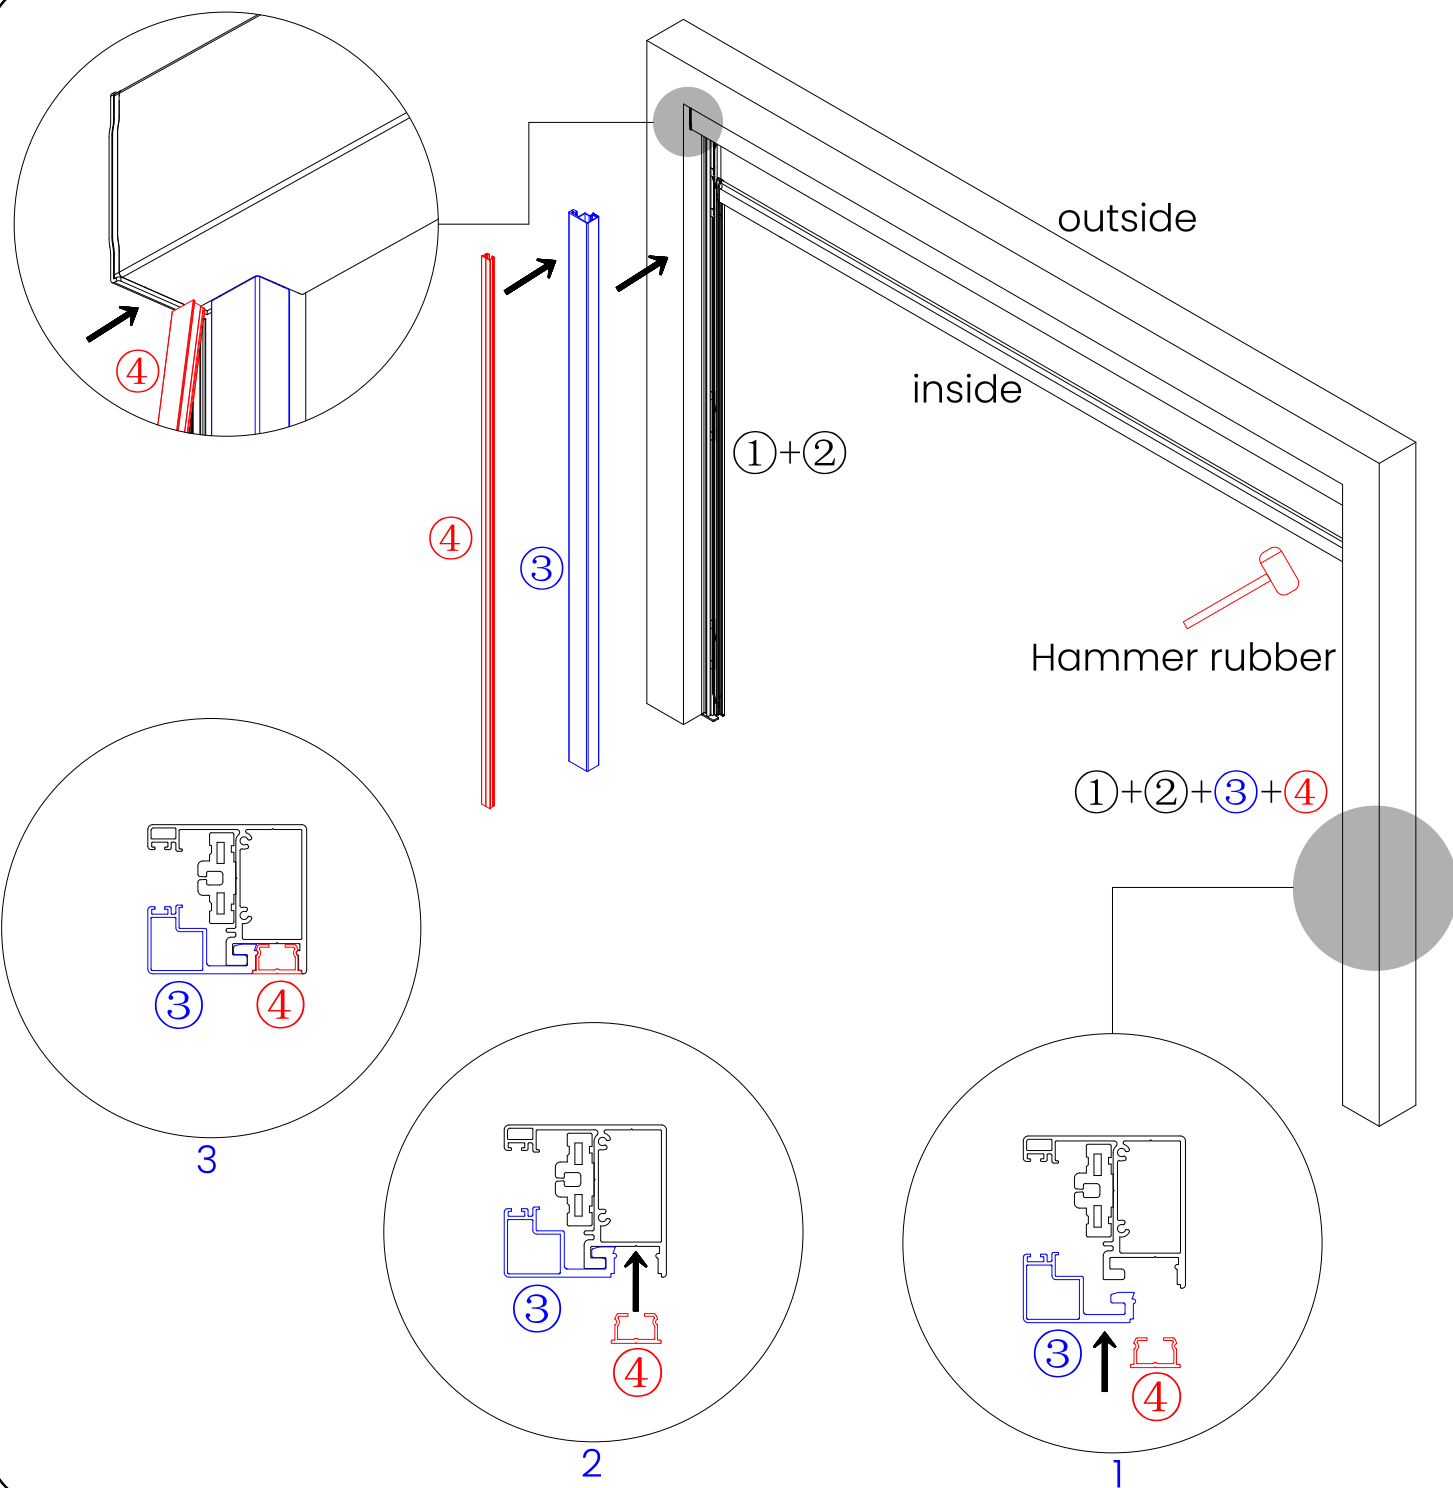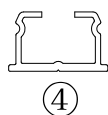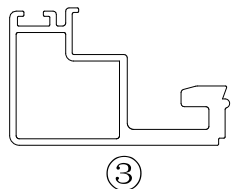

As intended, apply silicone sealant to all spaces between the curtain and the pergola to prevent water leakage.

