

MOTORISED LOUVERED ROOF SYSTEM

铝合金电动遮阳防水百叶

INSTALLATIONS INSTRUCTION

安装说明



客户 / Client: John Yam

单号 / Numbers: GL260531-01KA

设计 / Designer: Reed

日期 / Date: 08/19/2026

规格尺寸/ Dimension: 4908 x 6000mm

CONTENT

These instructions outline the steps involved in installation of motorized louvre roof structure.

Before installation:

- Make sure your installation area is clear of all the debris and obstruction and safe to working.*
- Unpack the plywood box and layout all of items on the ground and check them against the packaging list.*
- Before installation of part remove the protective film as it will be difficult to remove it all after installation.*
- You are wearing appropriate protective gear including closed toe shoes.*
- Recommended to install with minimum of 3 people.*


If you any questions about installation then feel free to contact our team.

The steps involved are:


(1) . <i>Install the posts and frame</i>	<i>Step 01-12</i>
(2) . <i>Install the louver blades</i>	<i>Step 13-20</i>
<i>Note</i>	<i>Step 21-22</i>

*** Please Pay Attention To Your Safety During Installation.**


(1). Install the B and A.

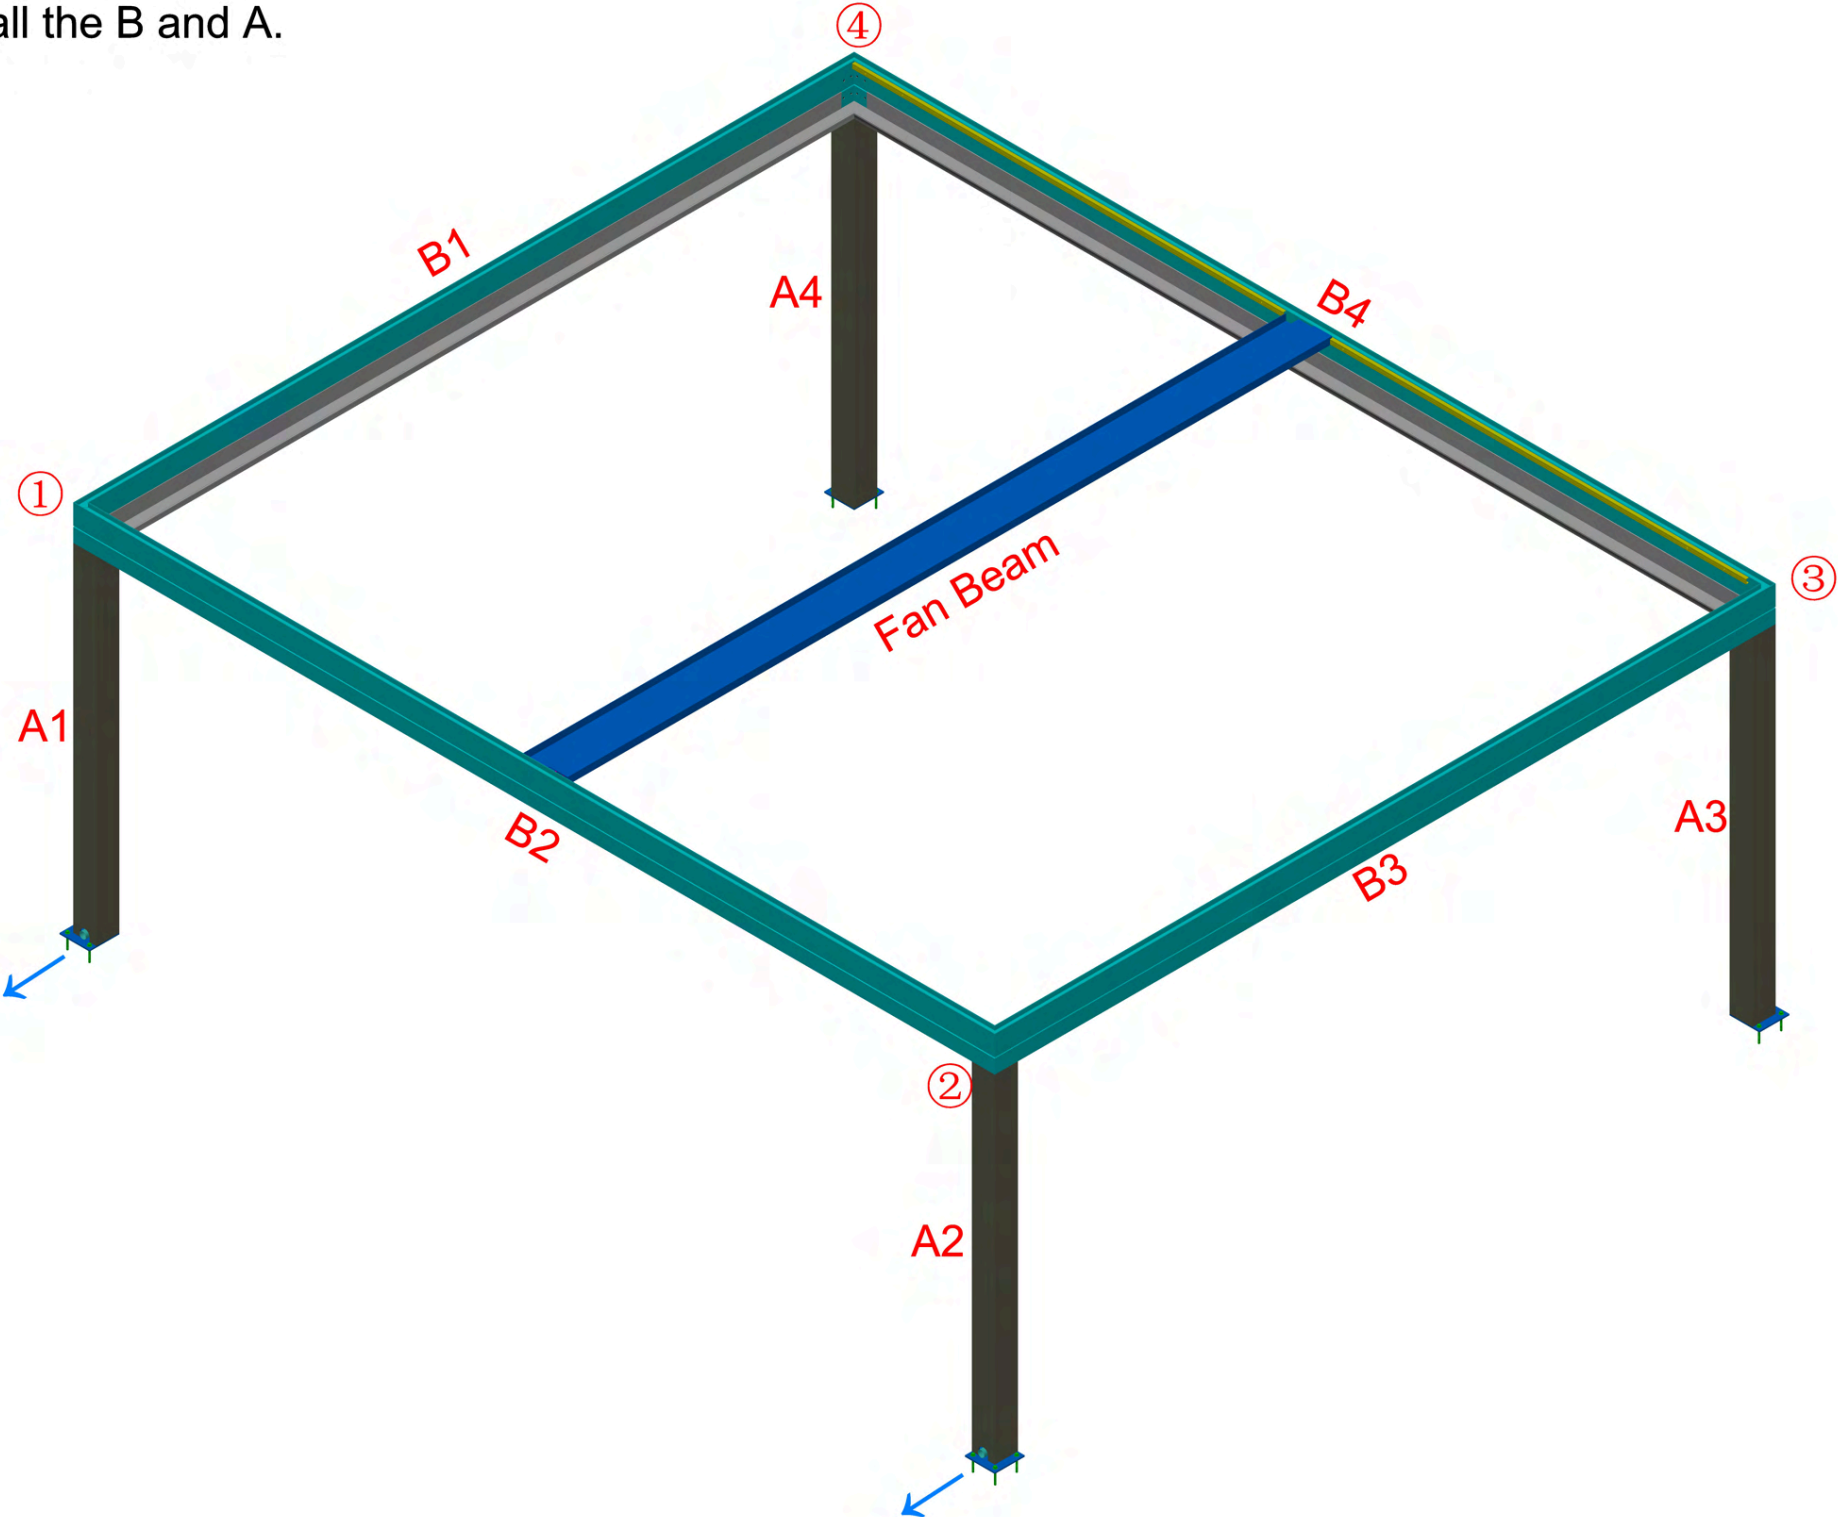


1. As shown , insert the water pipe into the Pipe Socket on the L-Connector.

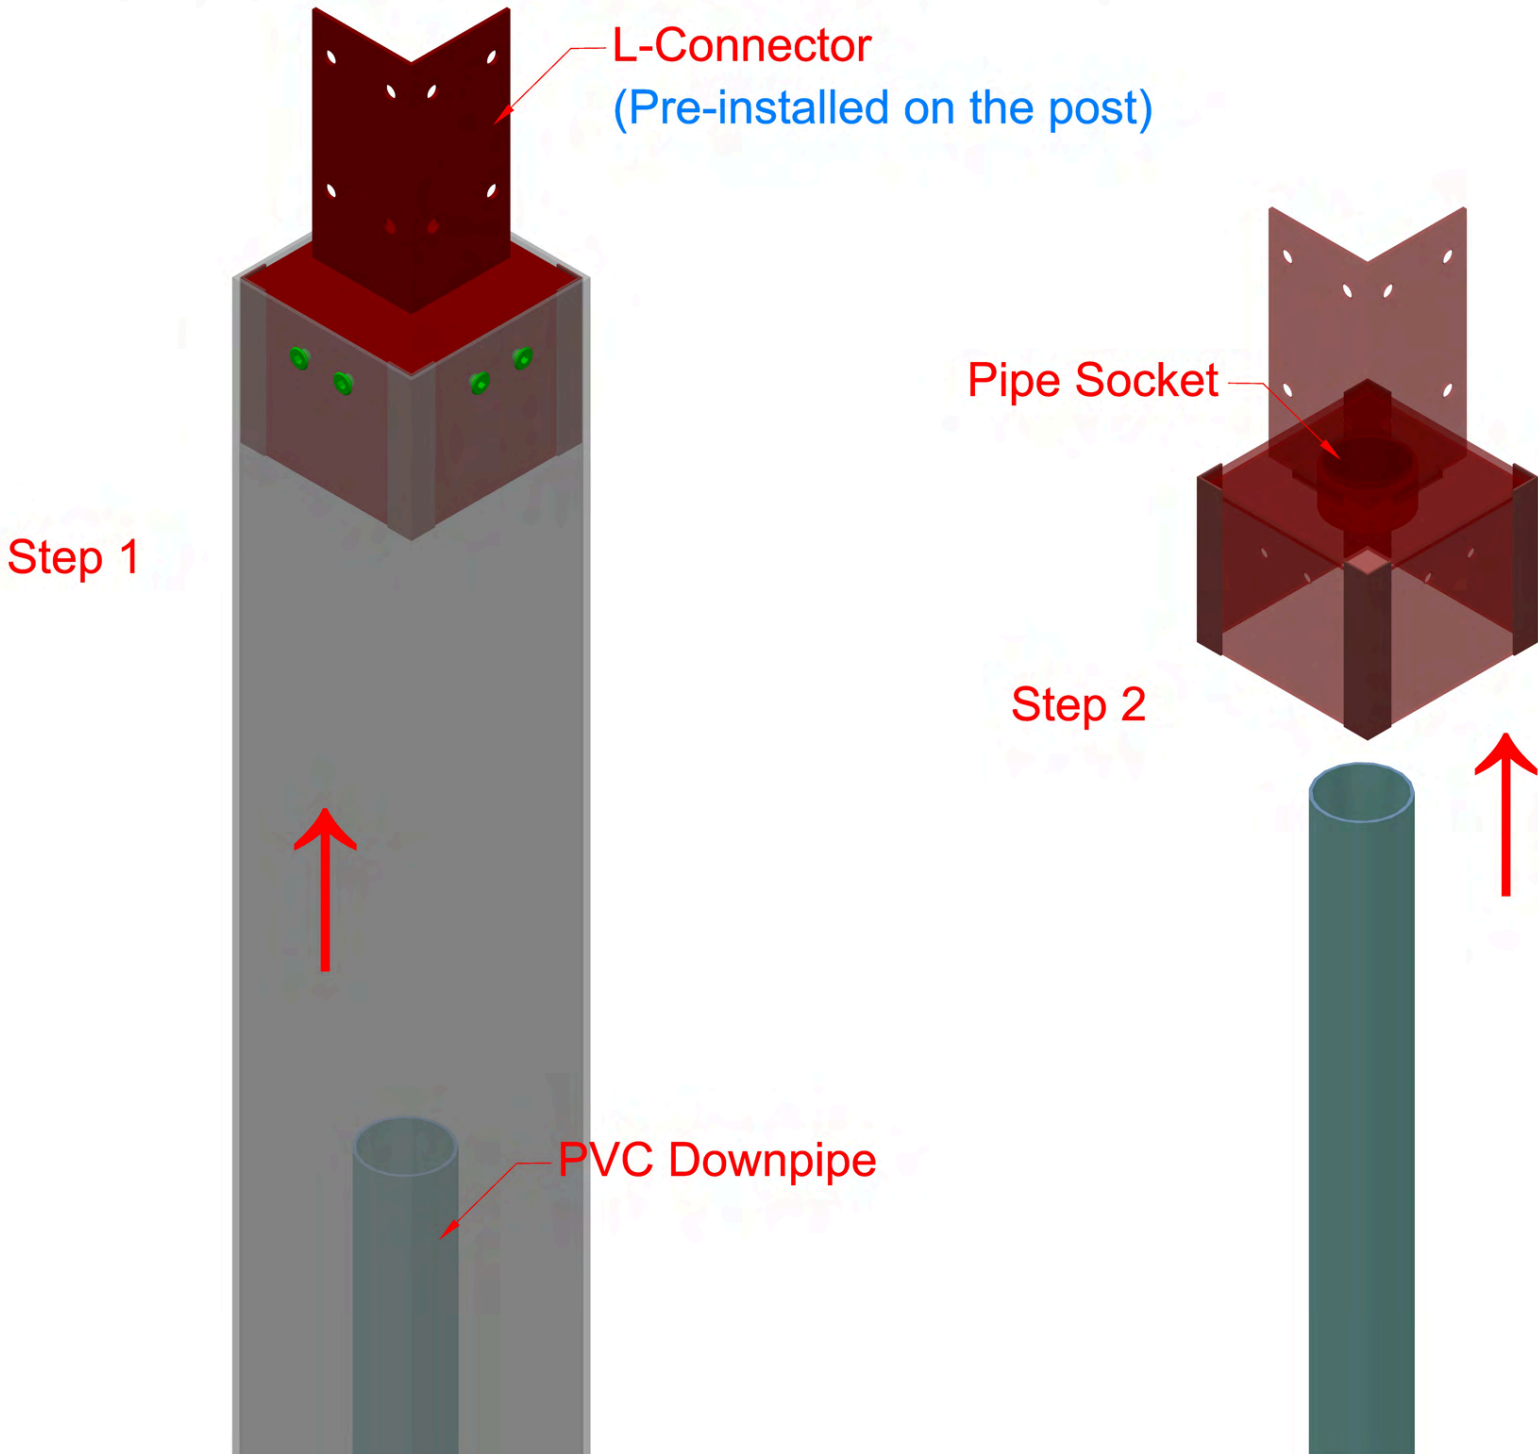


2. Install the post.

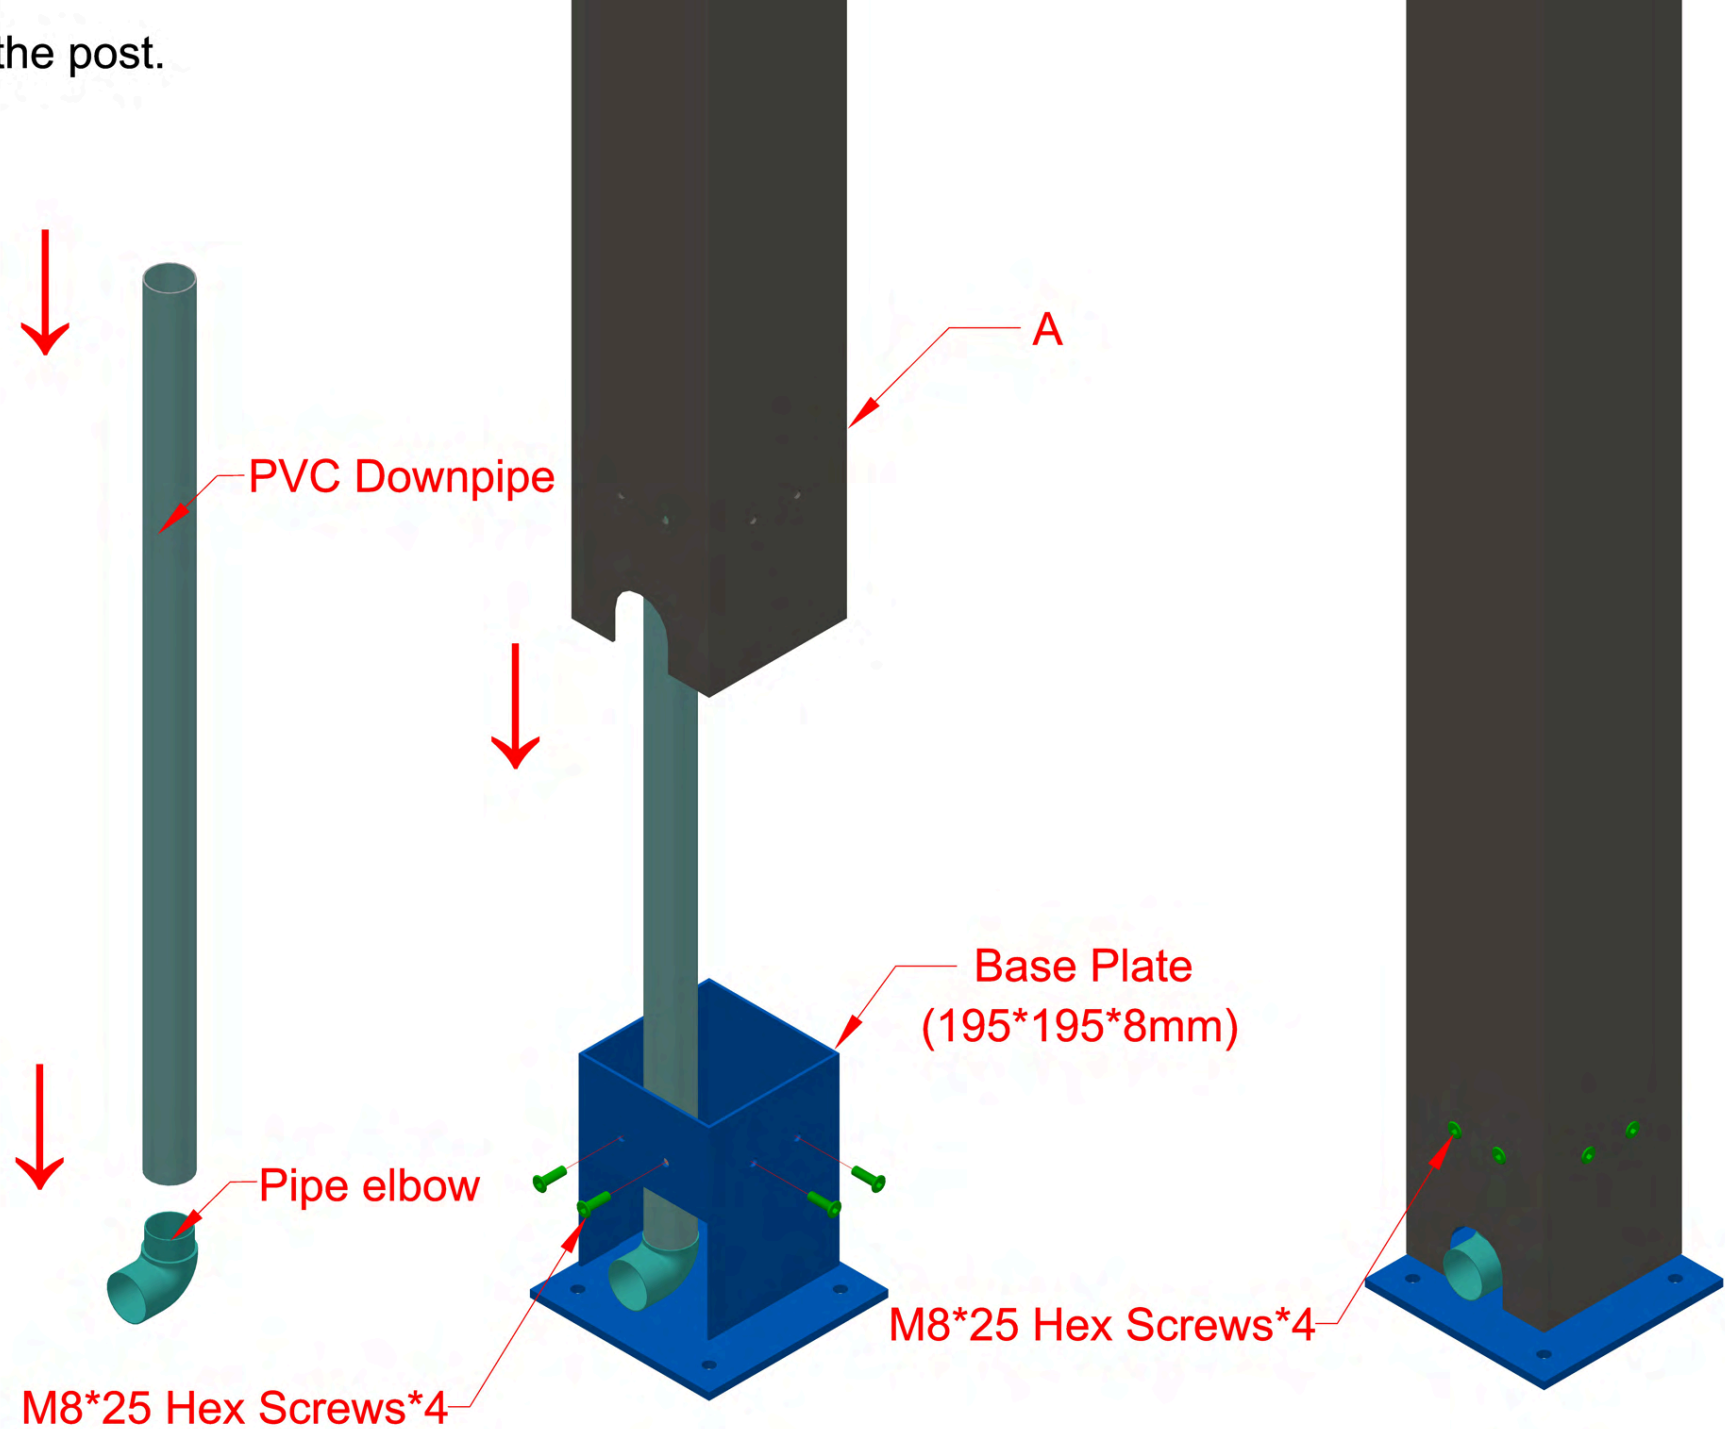

3. Connect the water groove with the adaptor by using M5x6 screws.
All four connections need to be fixed.

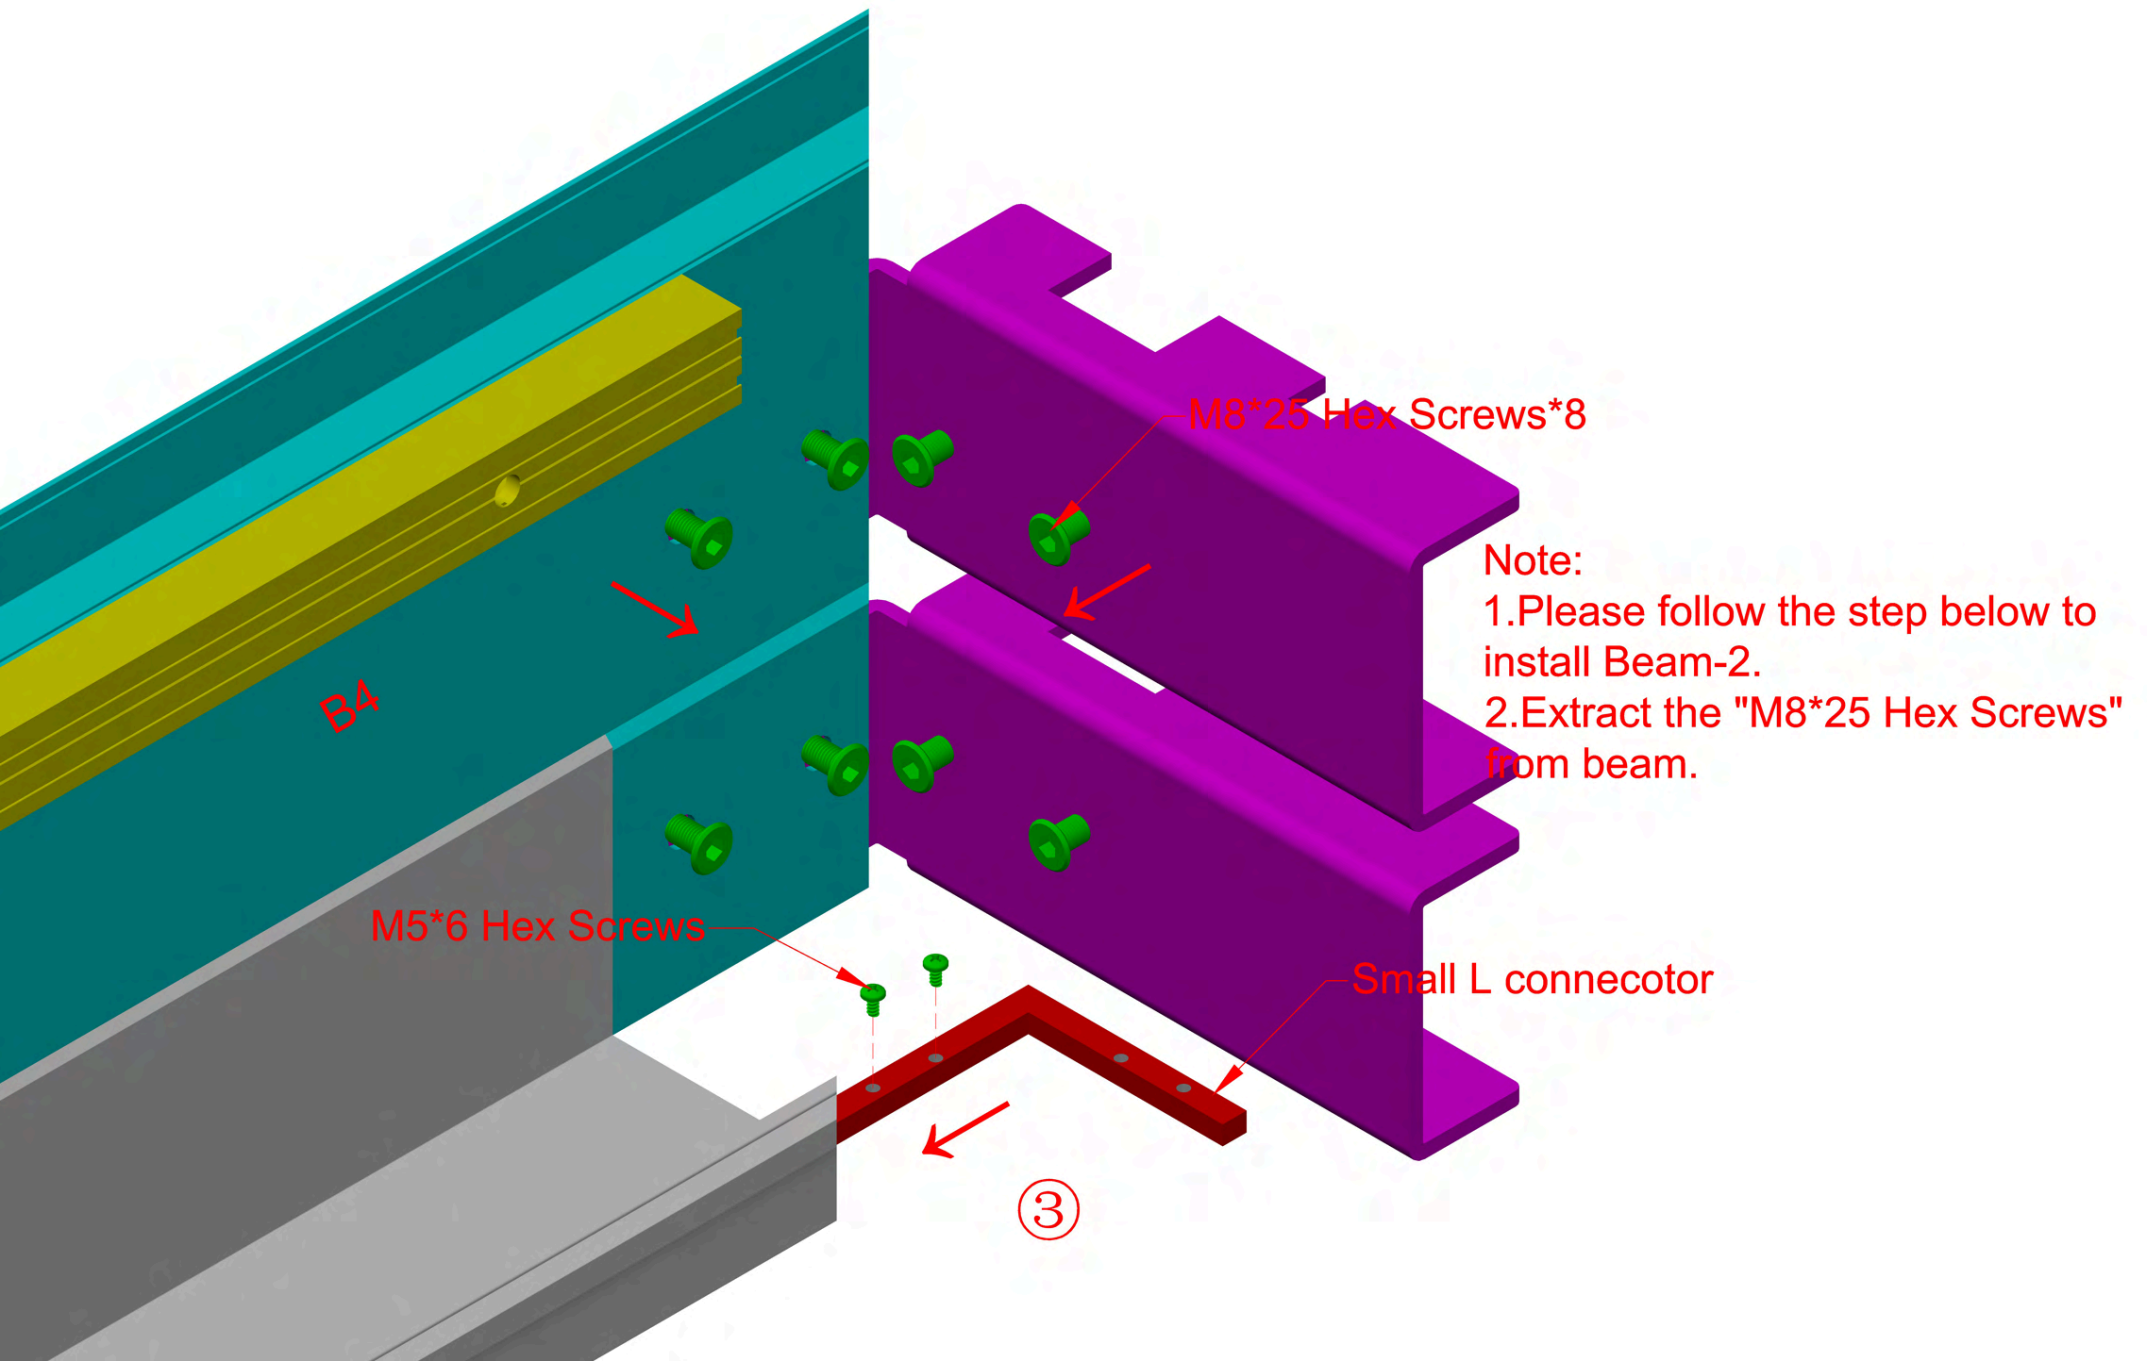


4. Connect "B4" with "A3" using "M8*25 Hex Screws".

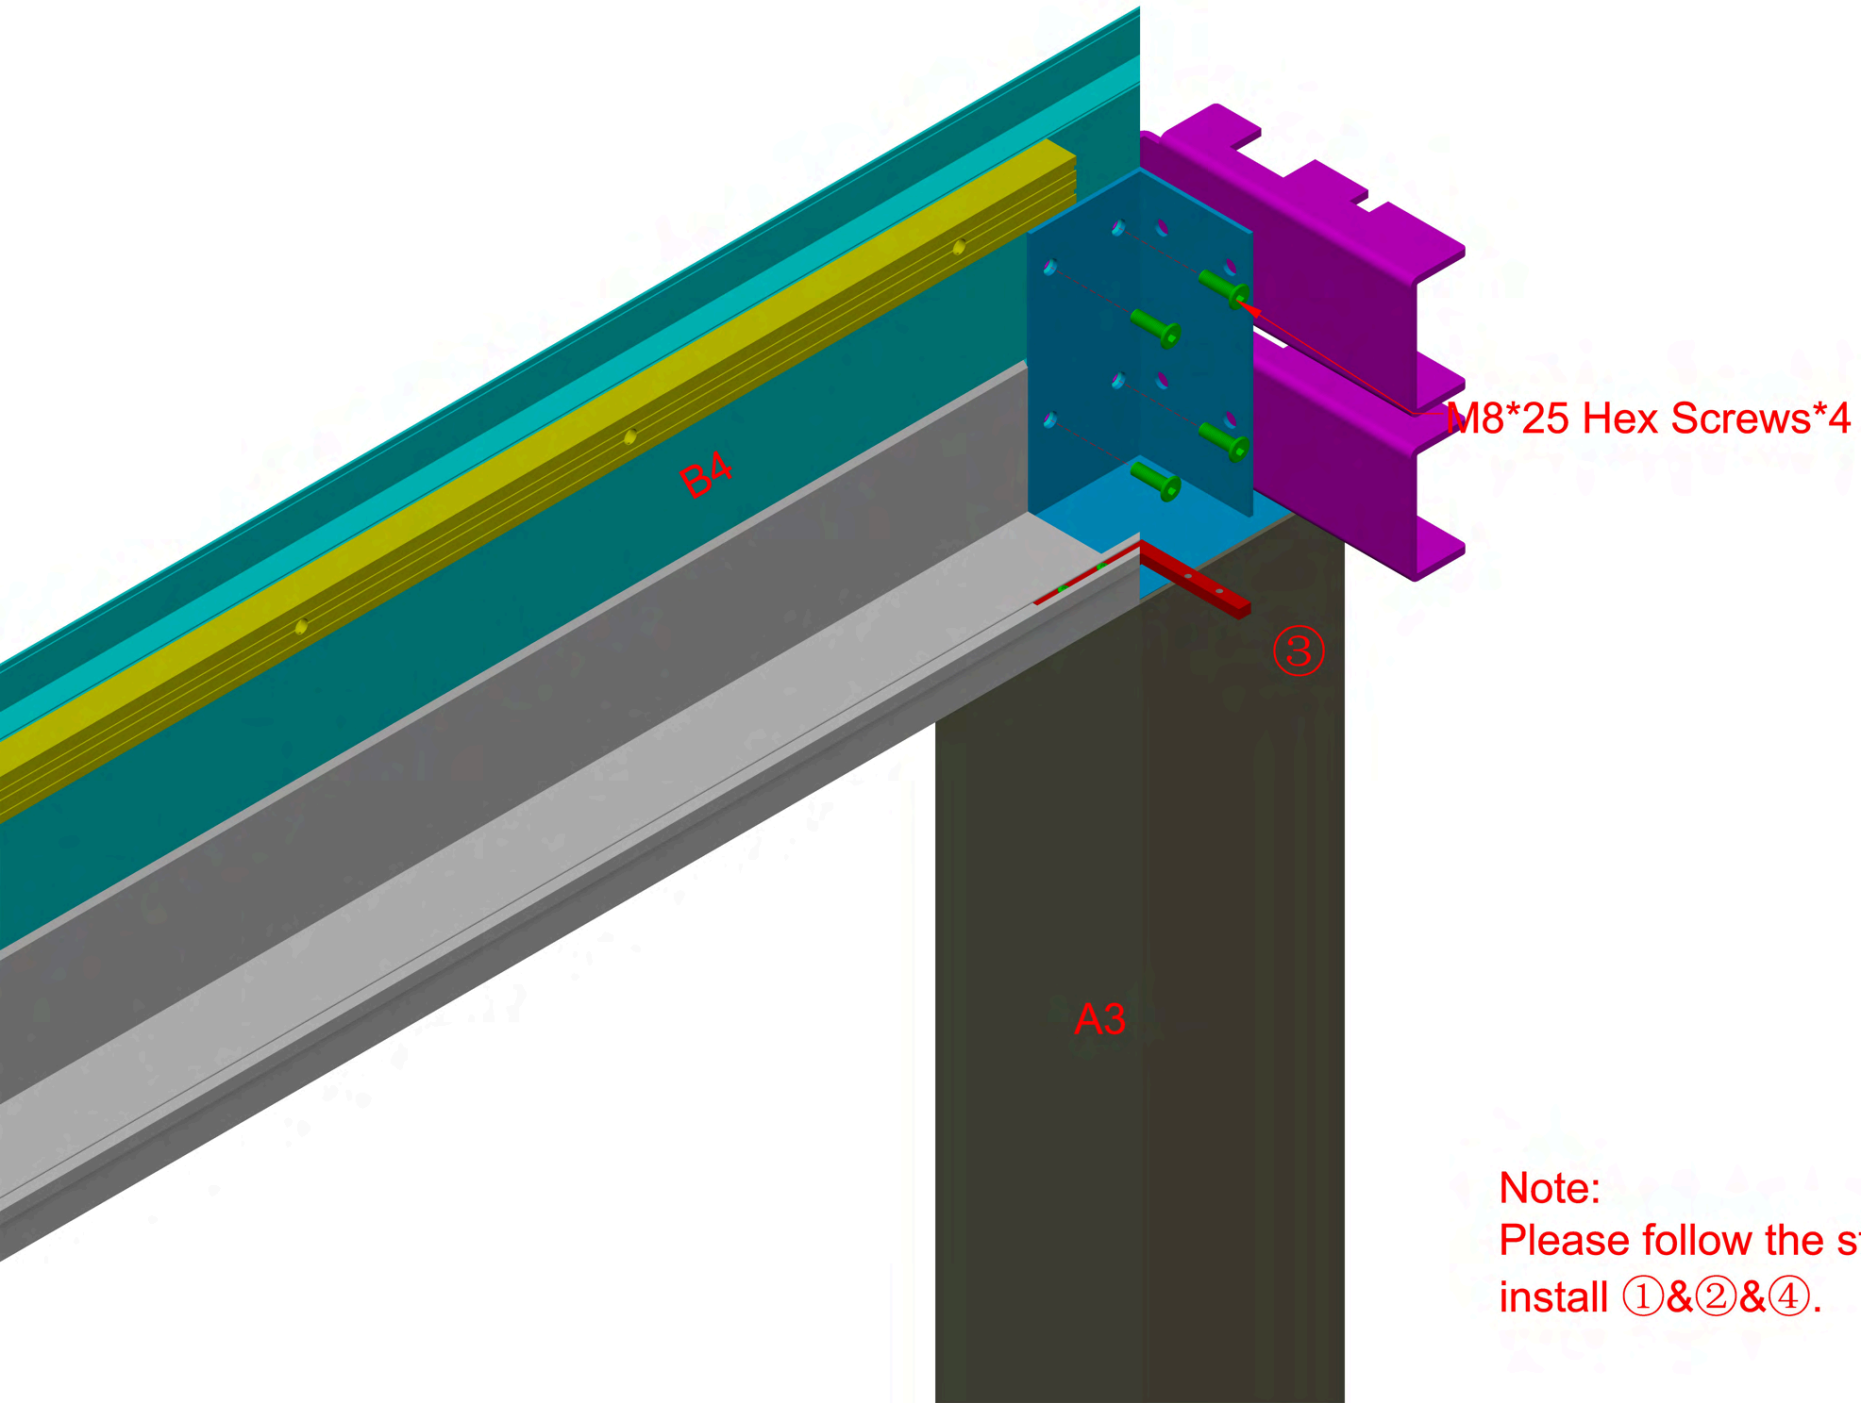


Note:
Please follow the step below to
install ①&②&④.

5.As shown in the diagram, connect all beams and posts together.

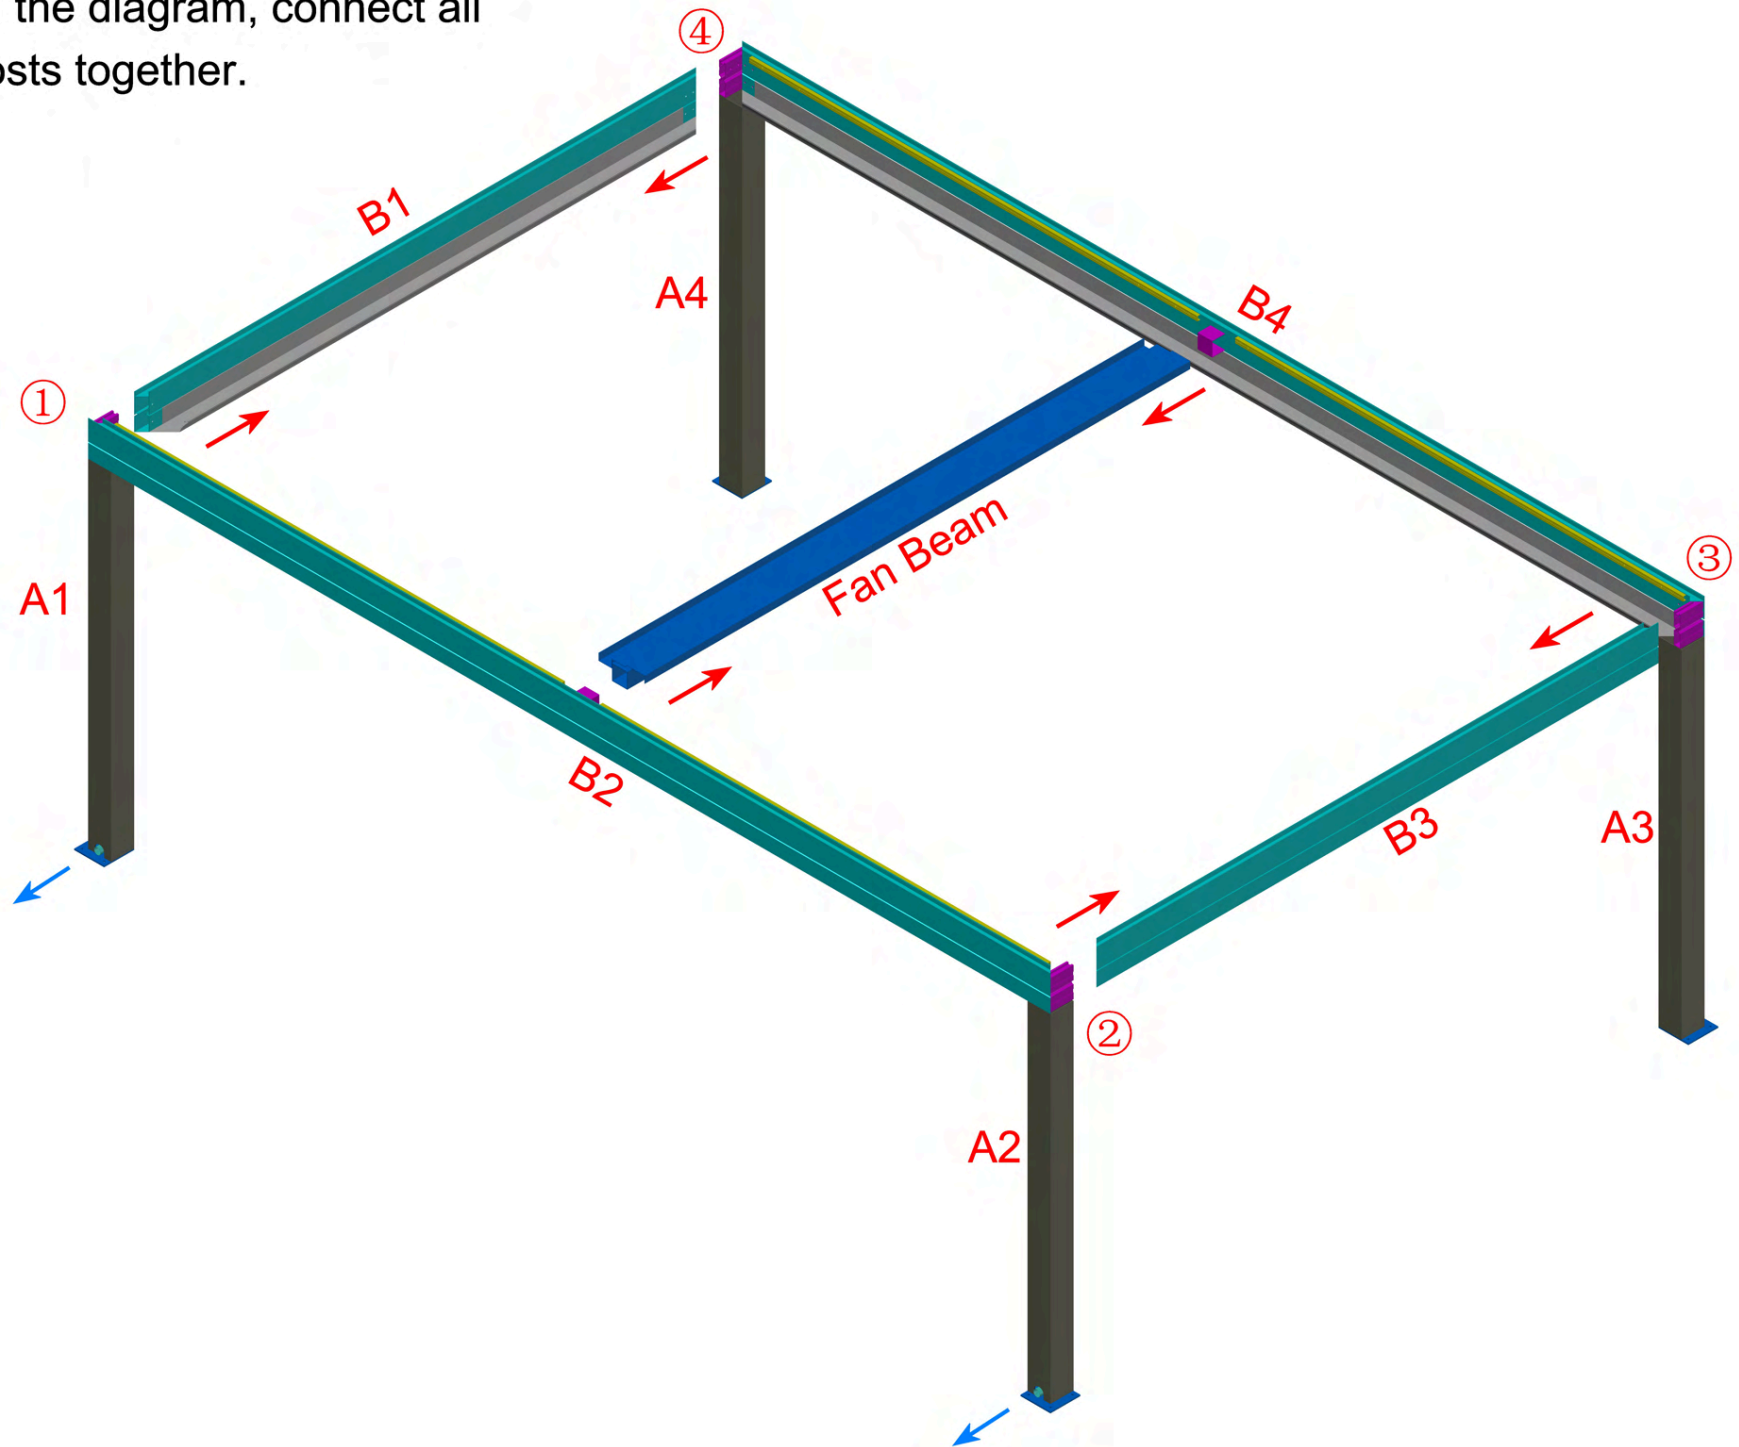

6. Connect "B4" and "B3" together.

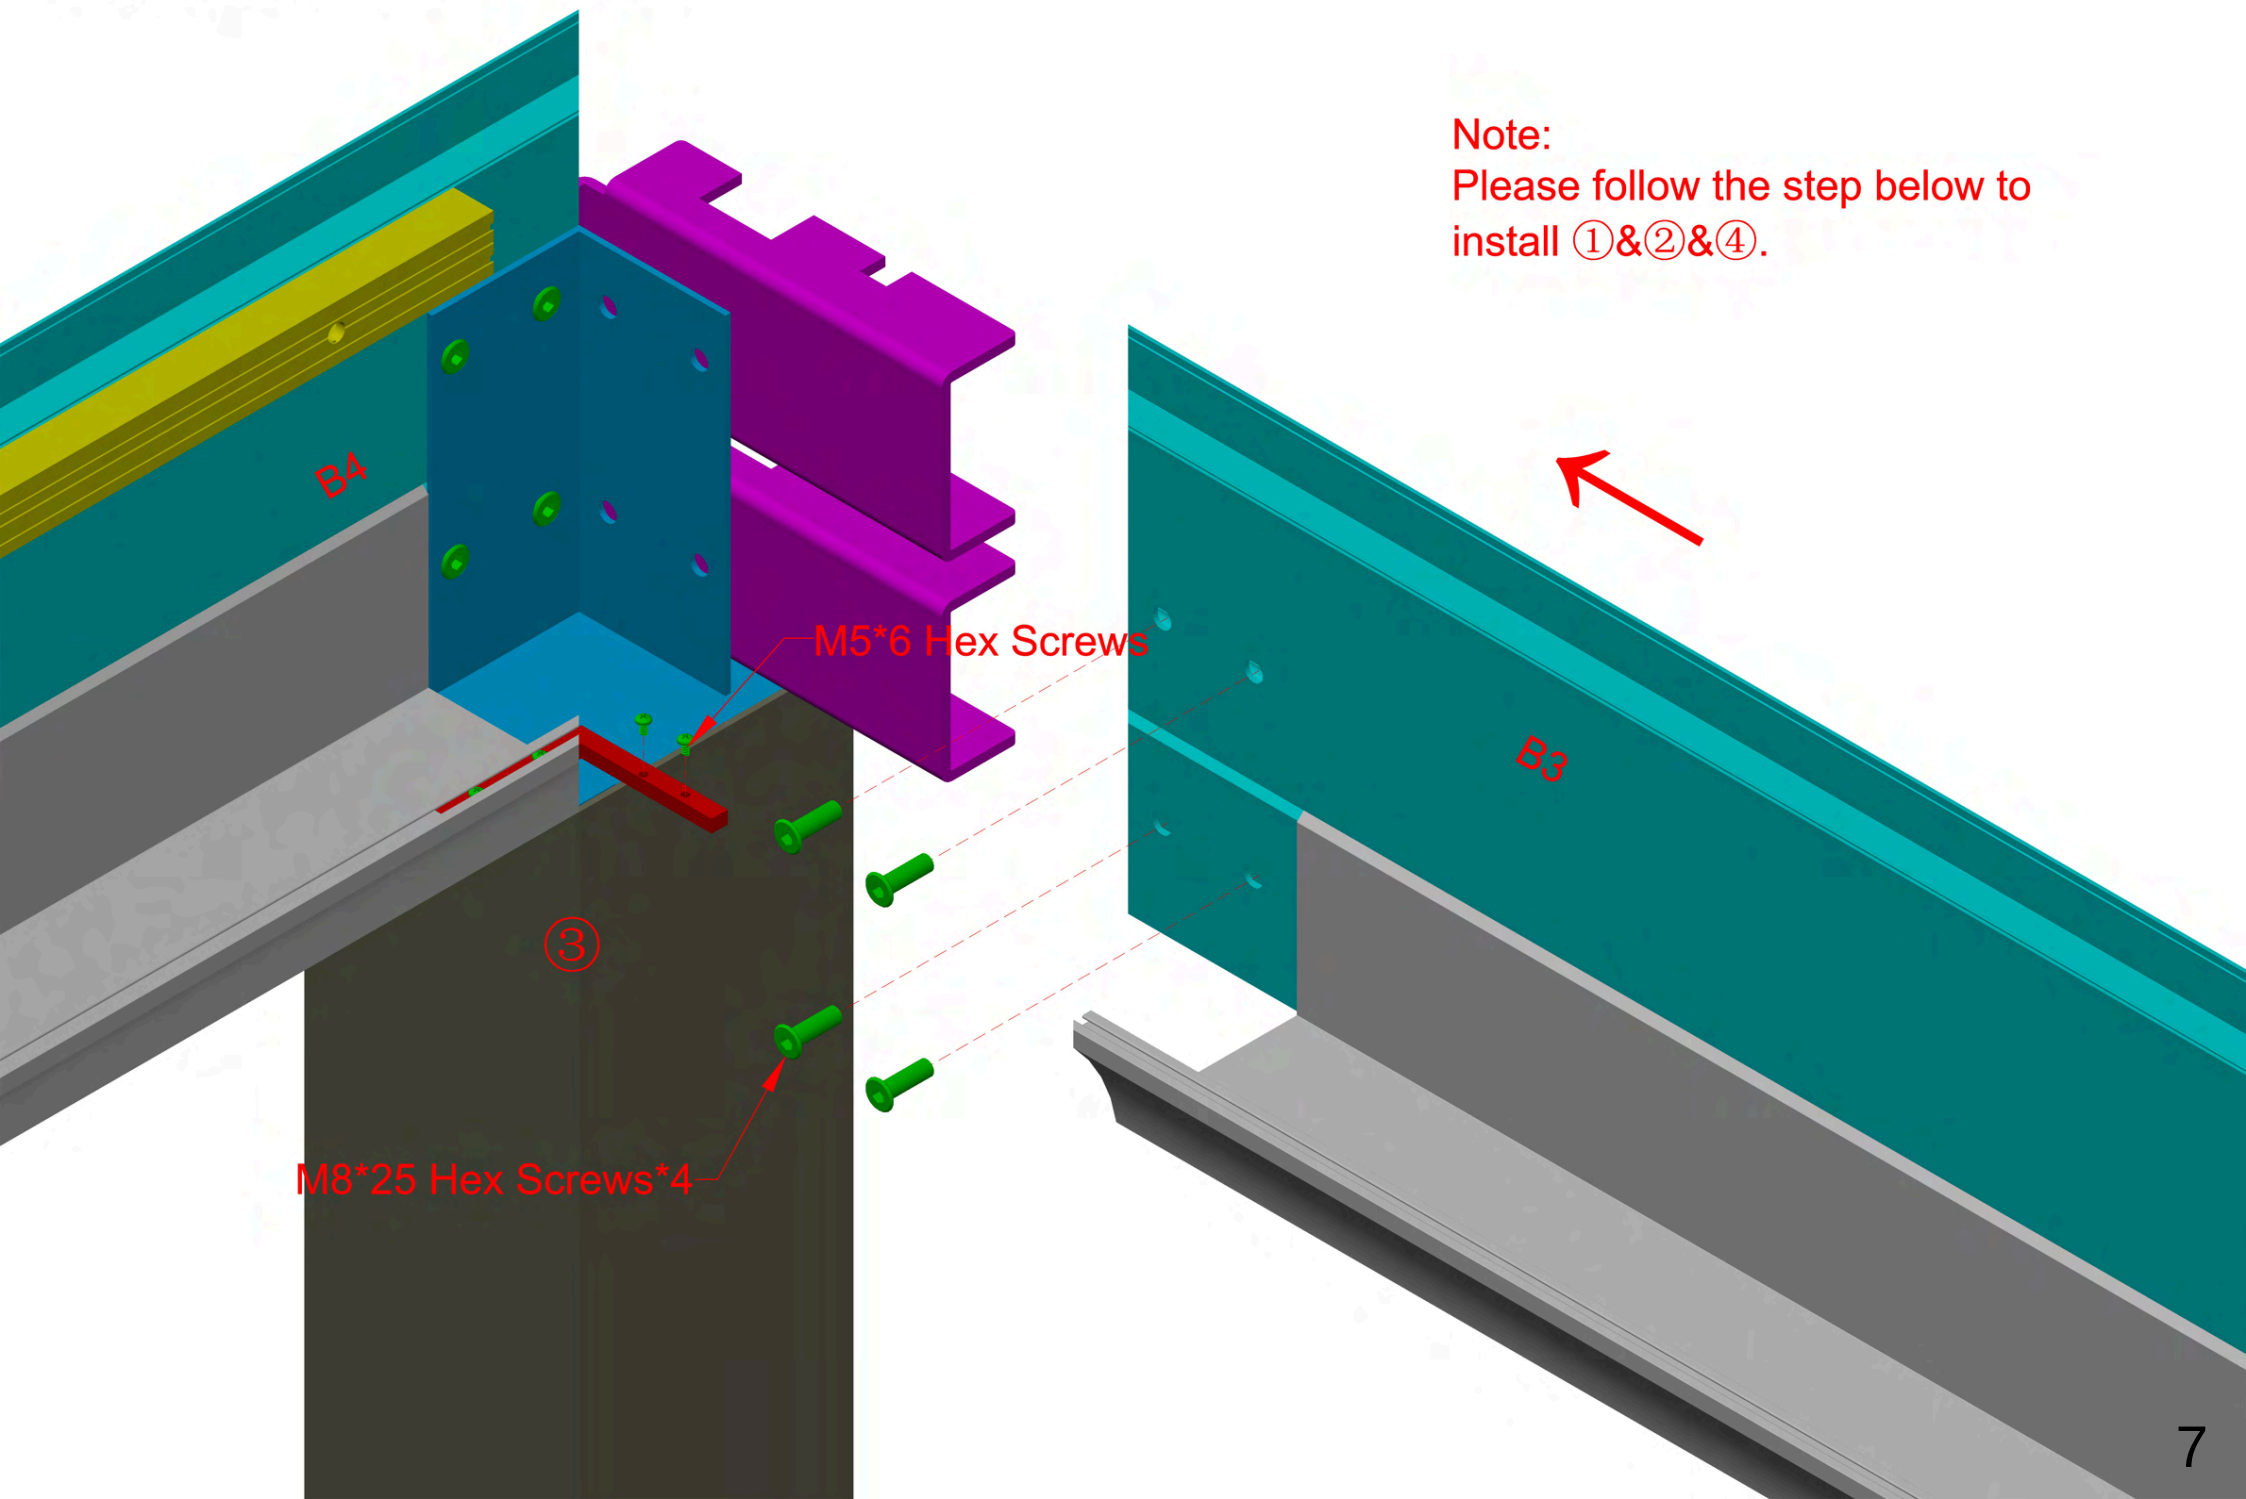

7. As shown, secure the "Fan Connector" to the "Fan Beam" using "M6*120 bolts".

Fan Beam

Nut

Washer

Aluminum Panel

After installing the fan, apply silicone sealant to the gaps around the screw holes for waterproofing.

Assembly View

M6*120 bolt


Fan Beam

Fan Connector

Fan Connector

M6*120 bolt


8. Slide the Fan Beam onto the U-connector until fully seated.
Secure the connection using M5*20 Screw.

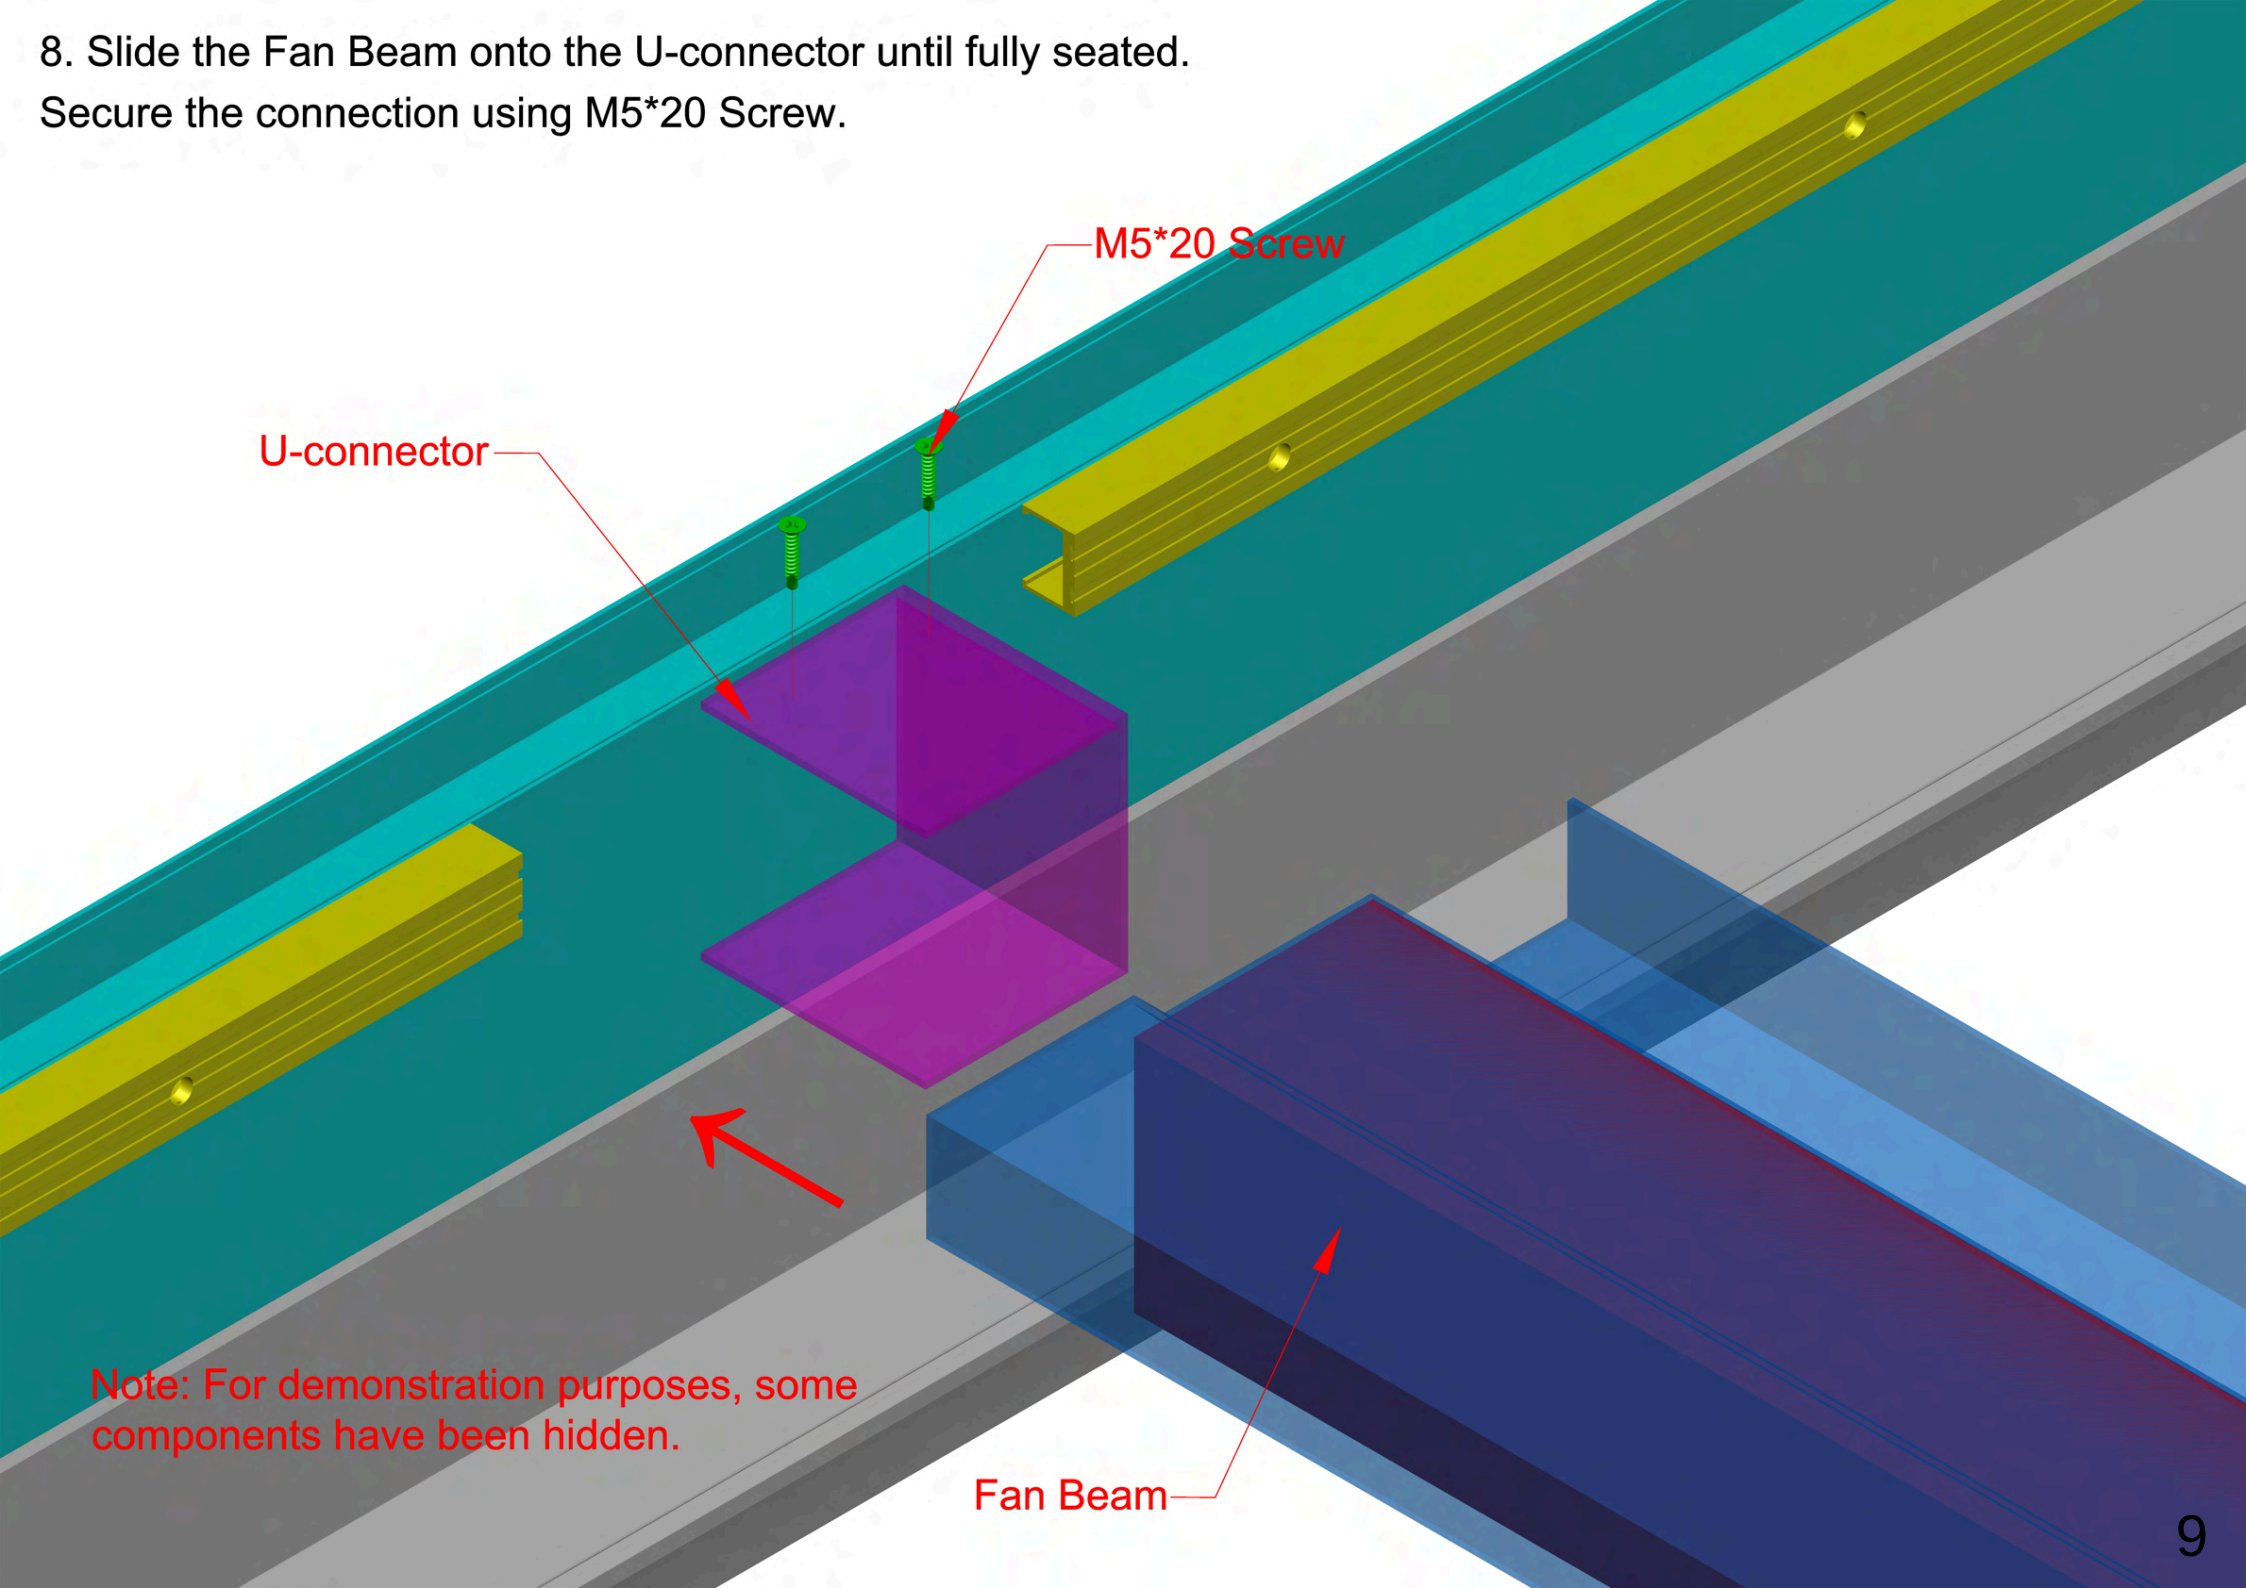


Note: For demonstration purposes, some components have been hidden.

Fan Beam

9. Secure "Fan Beam" using M5*20 Screw.

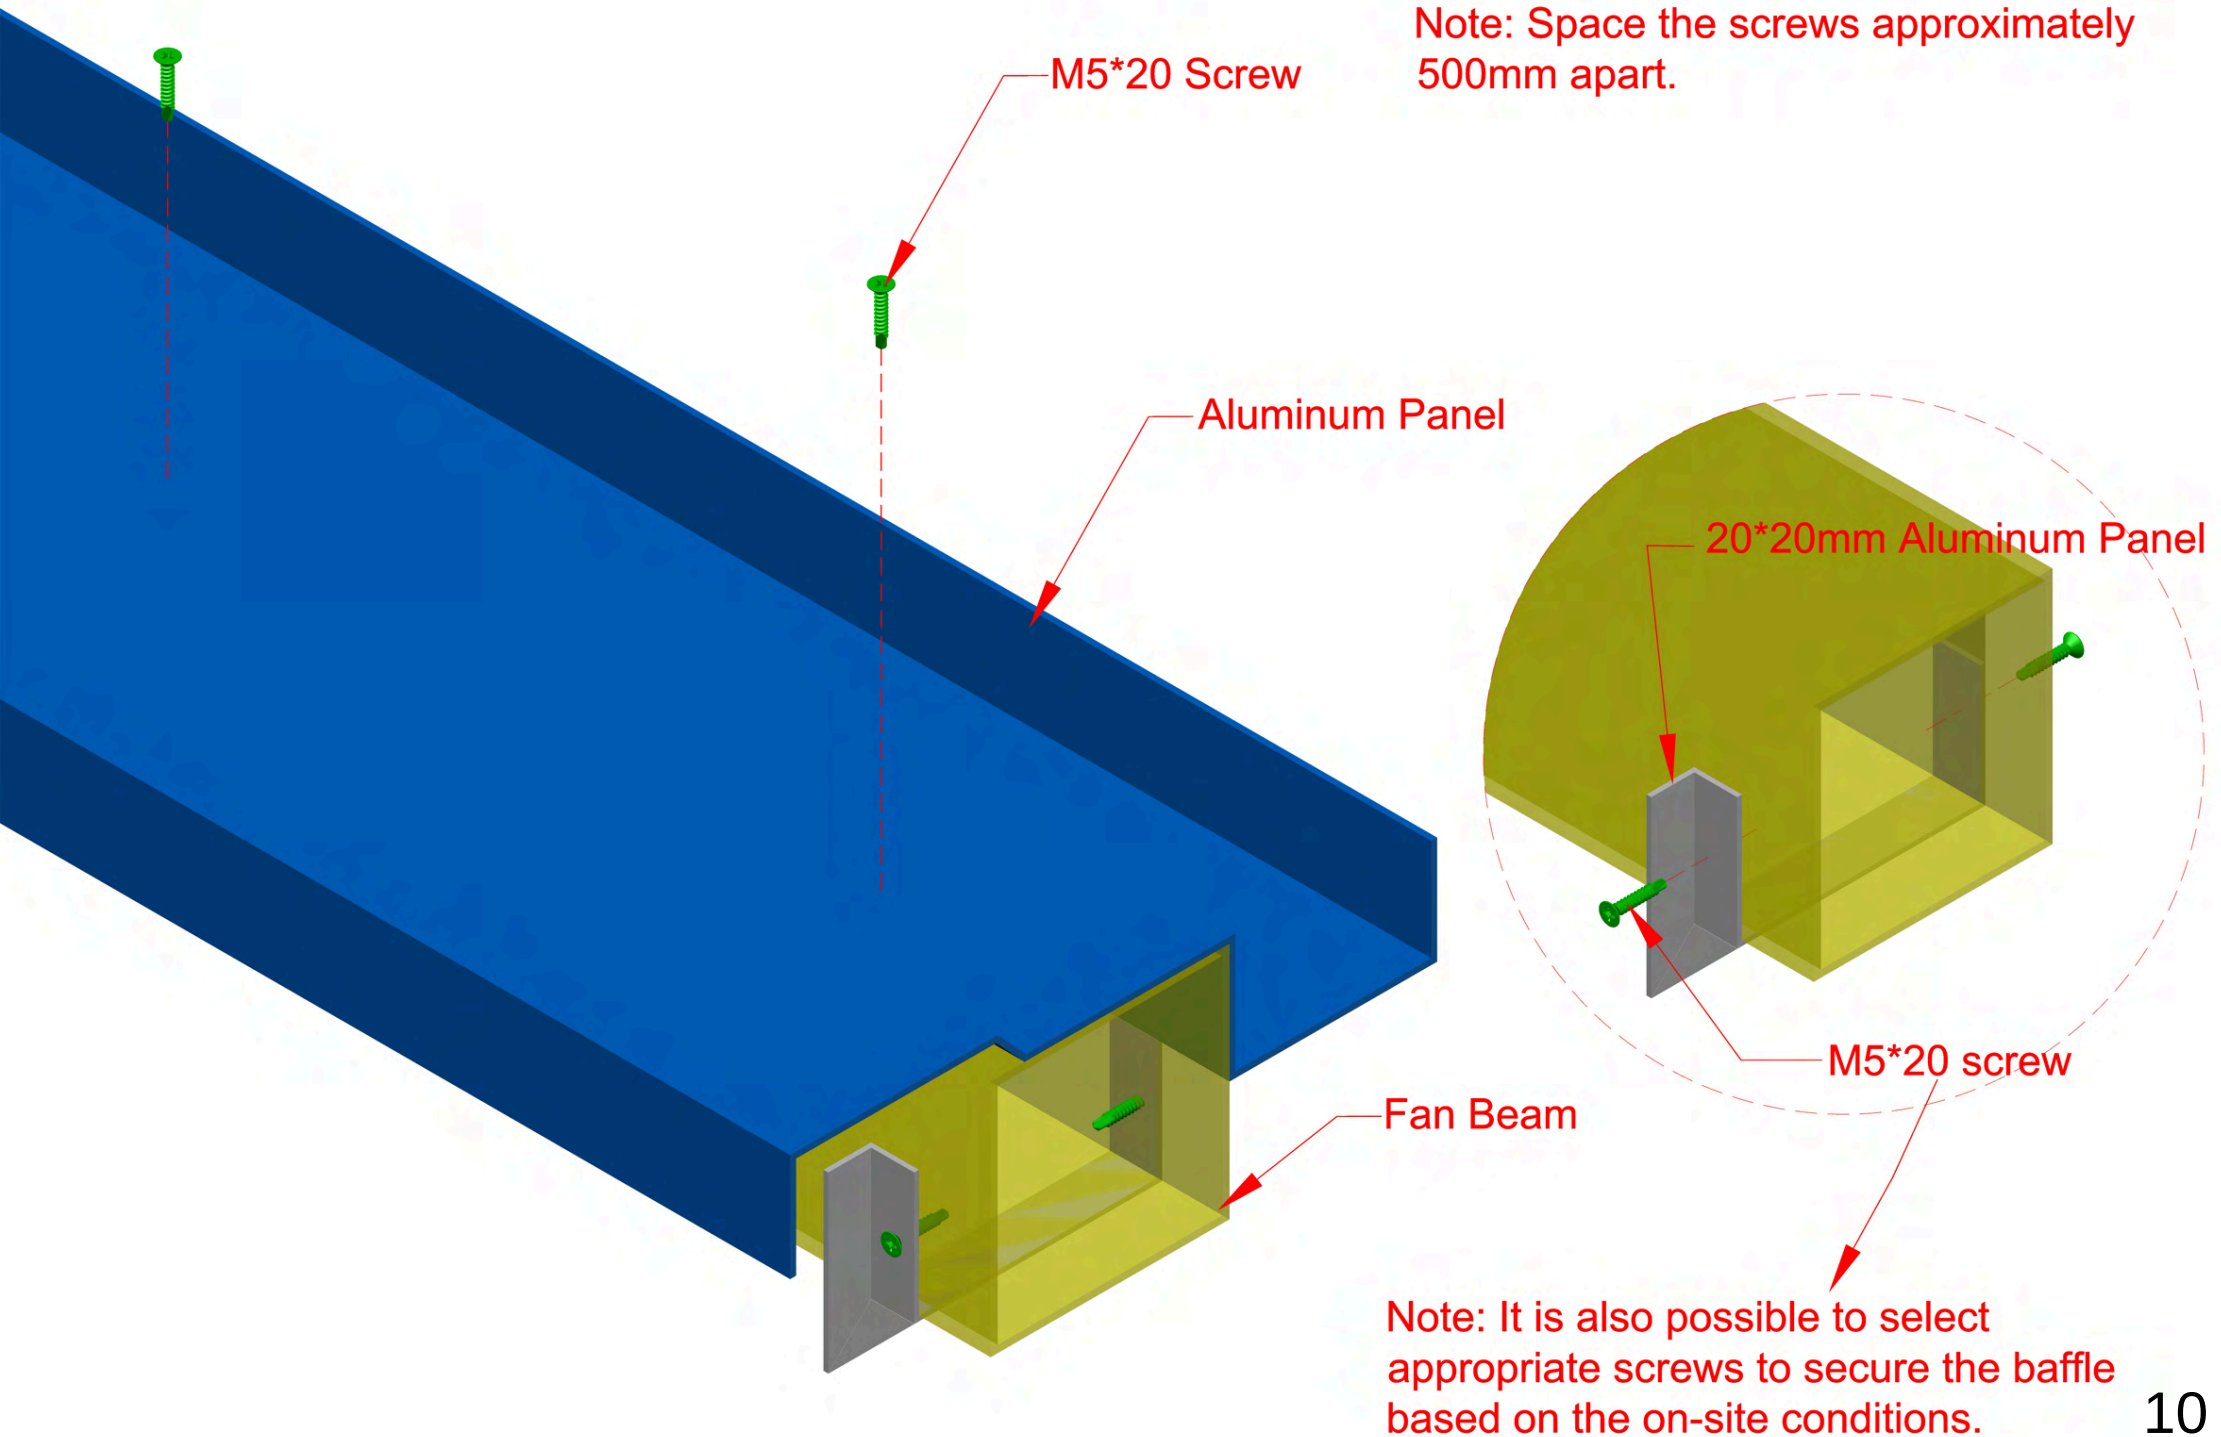


10. As shown, move the pergola on the suitable position, measure the diagonal and mark the location of the borehole on the ground.

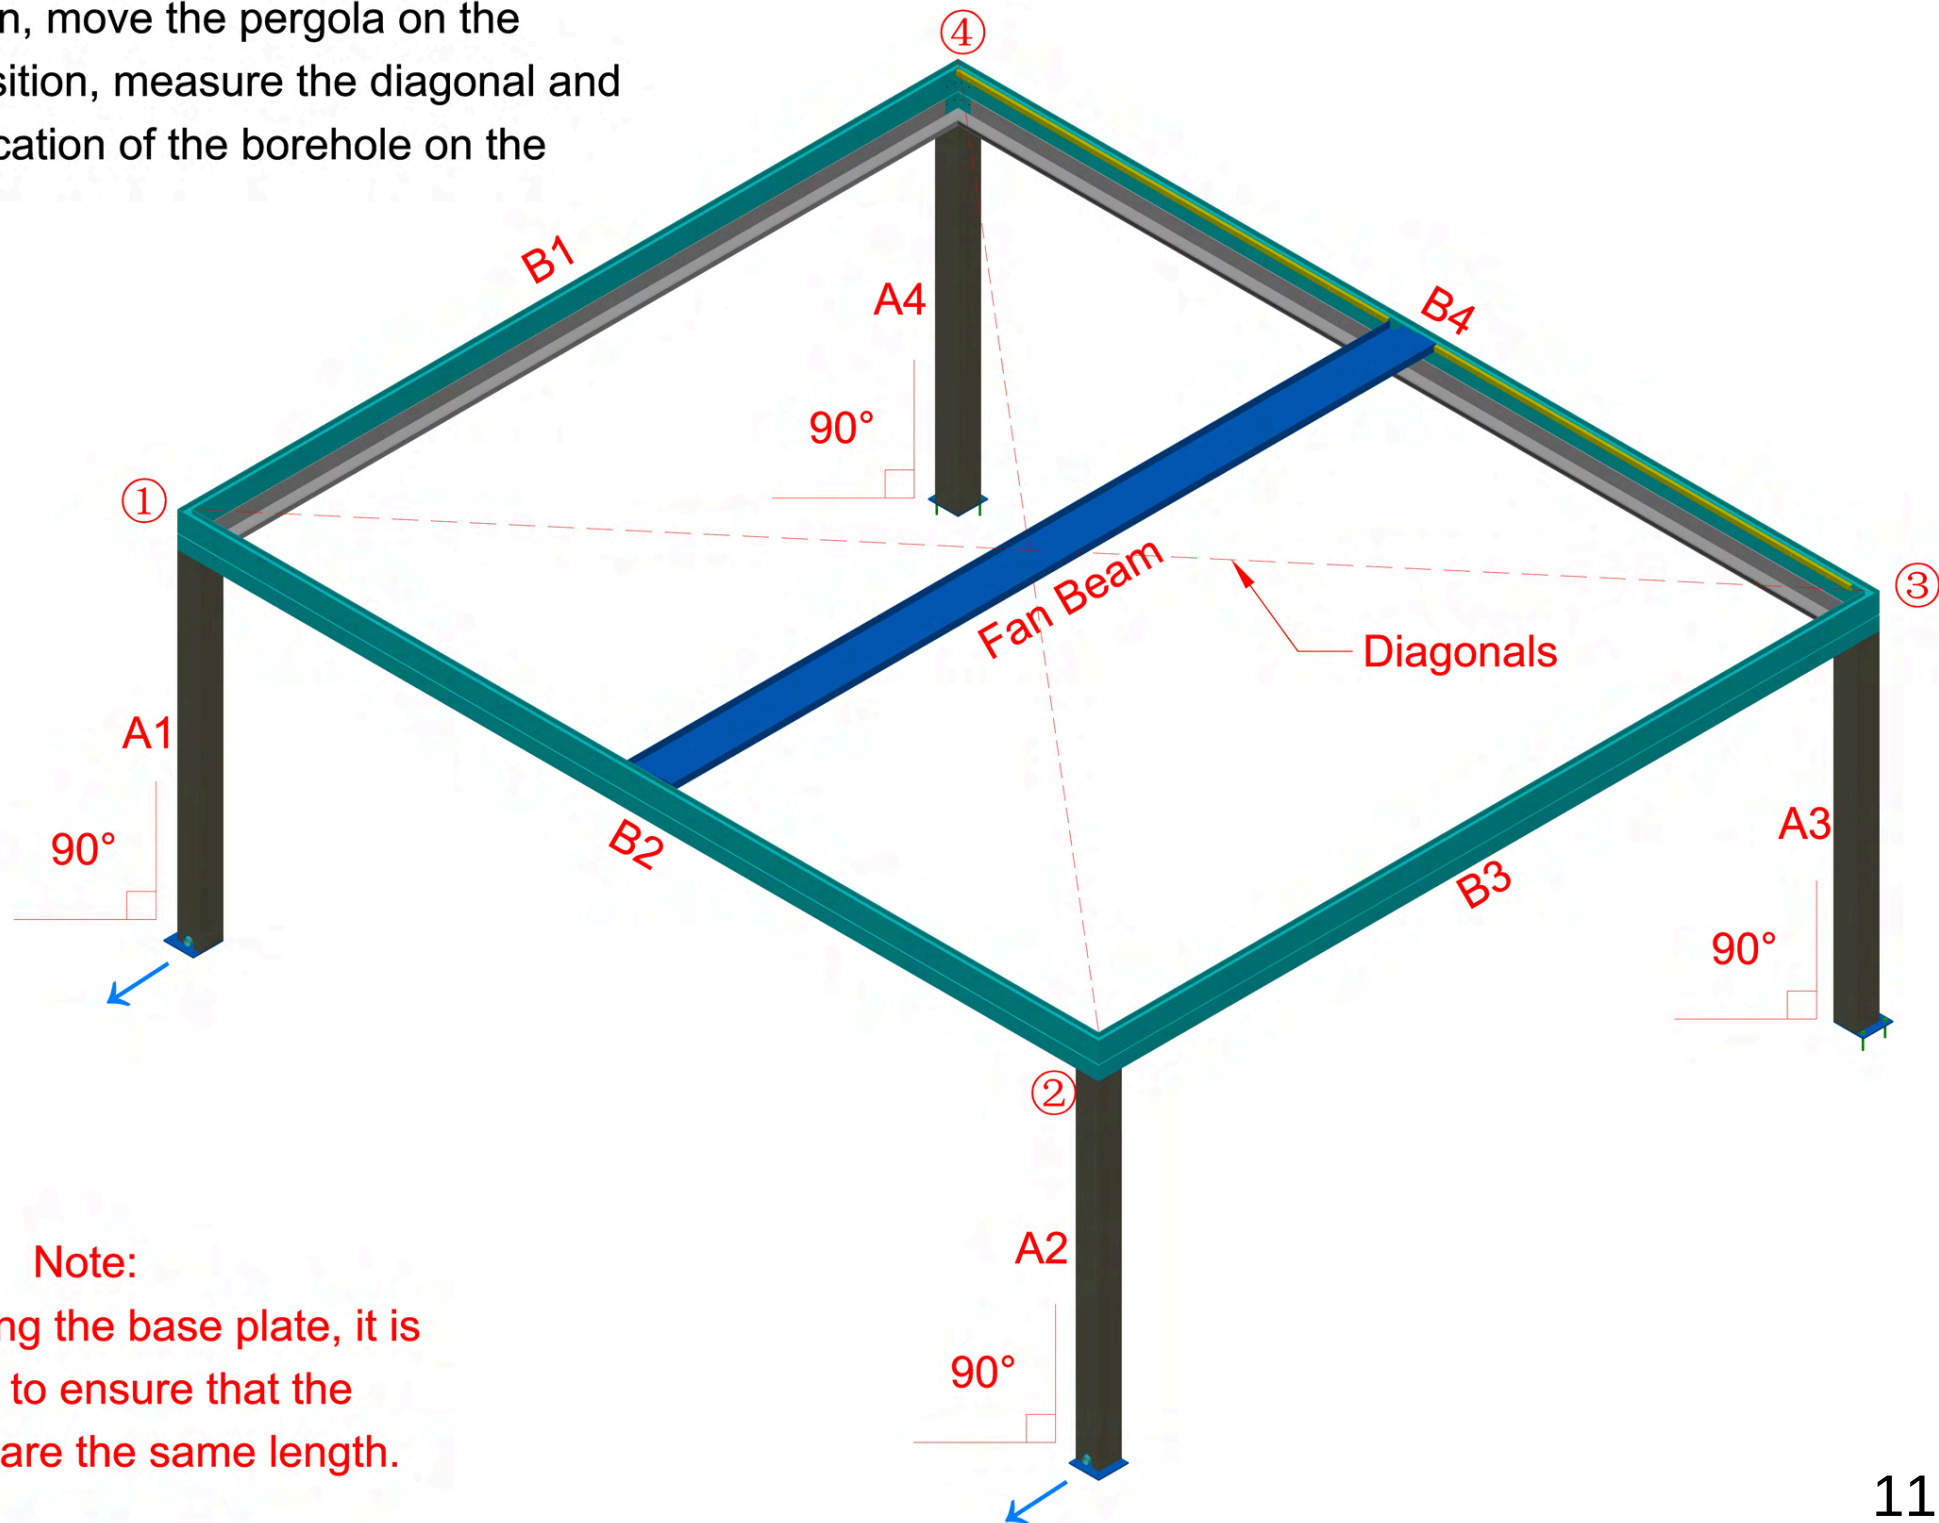


Note:

Before fixing the base plate, it is necessary to ensure that the diagonals are the same length.


11. Make sure the post standing perpendicular on the floor and drill holes on the ground. Then use "M10*100 Anchor Bolt" to fix the "Base Plate" on the ground.

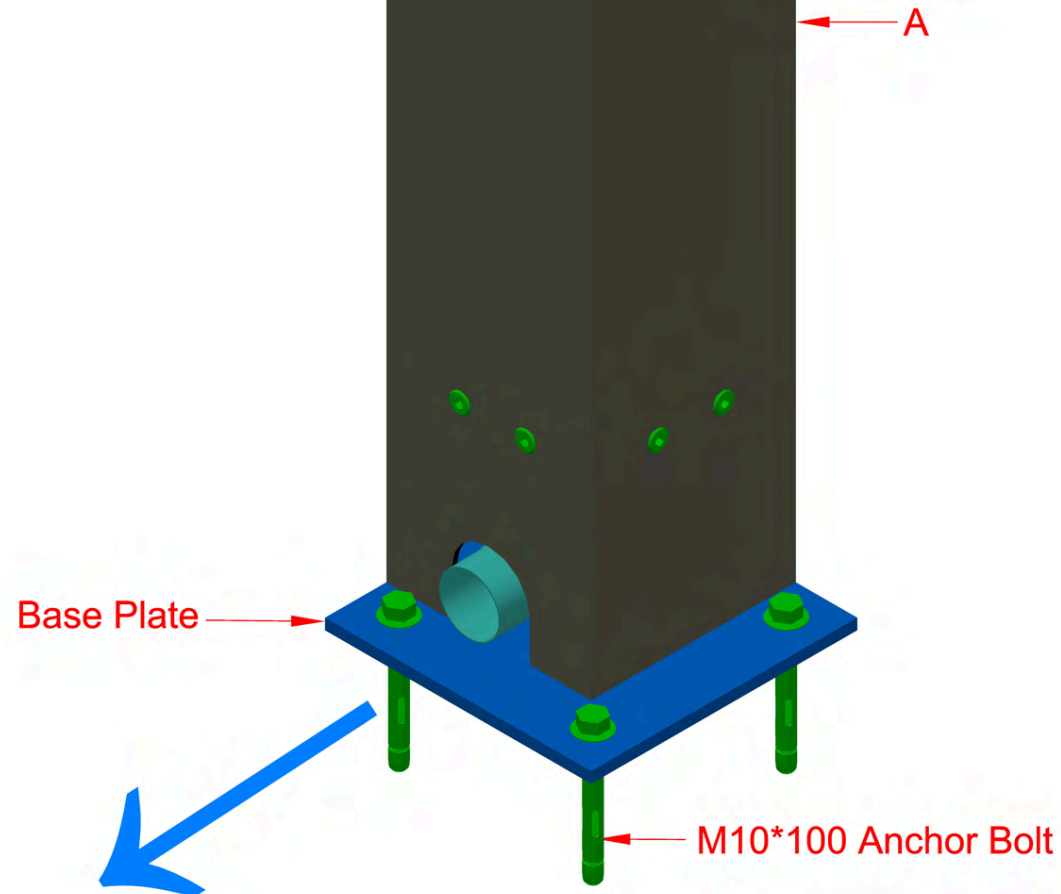


(2) . Install the blades.

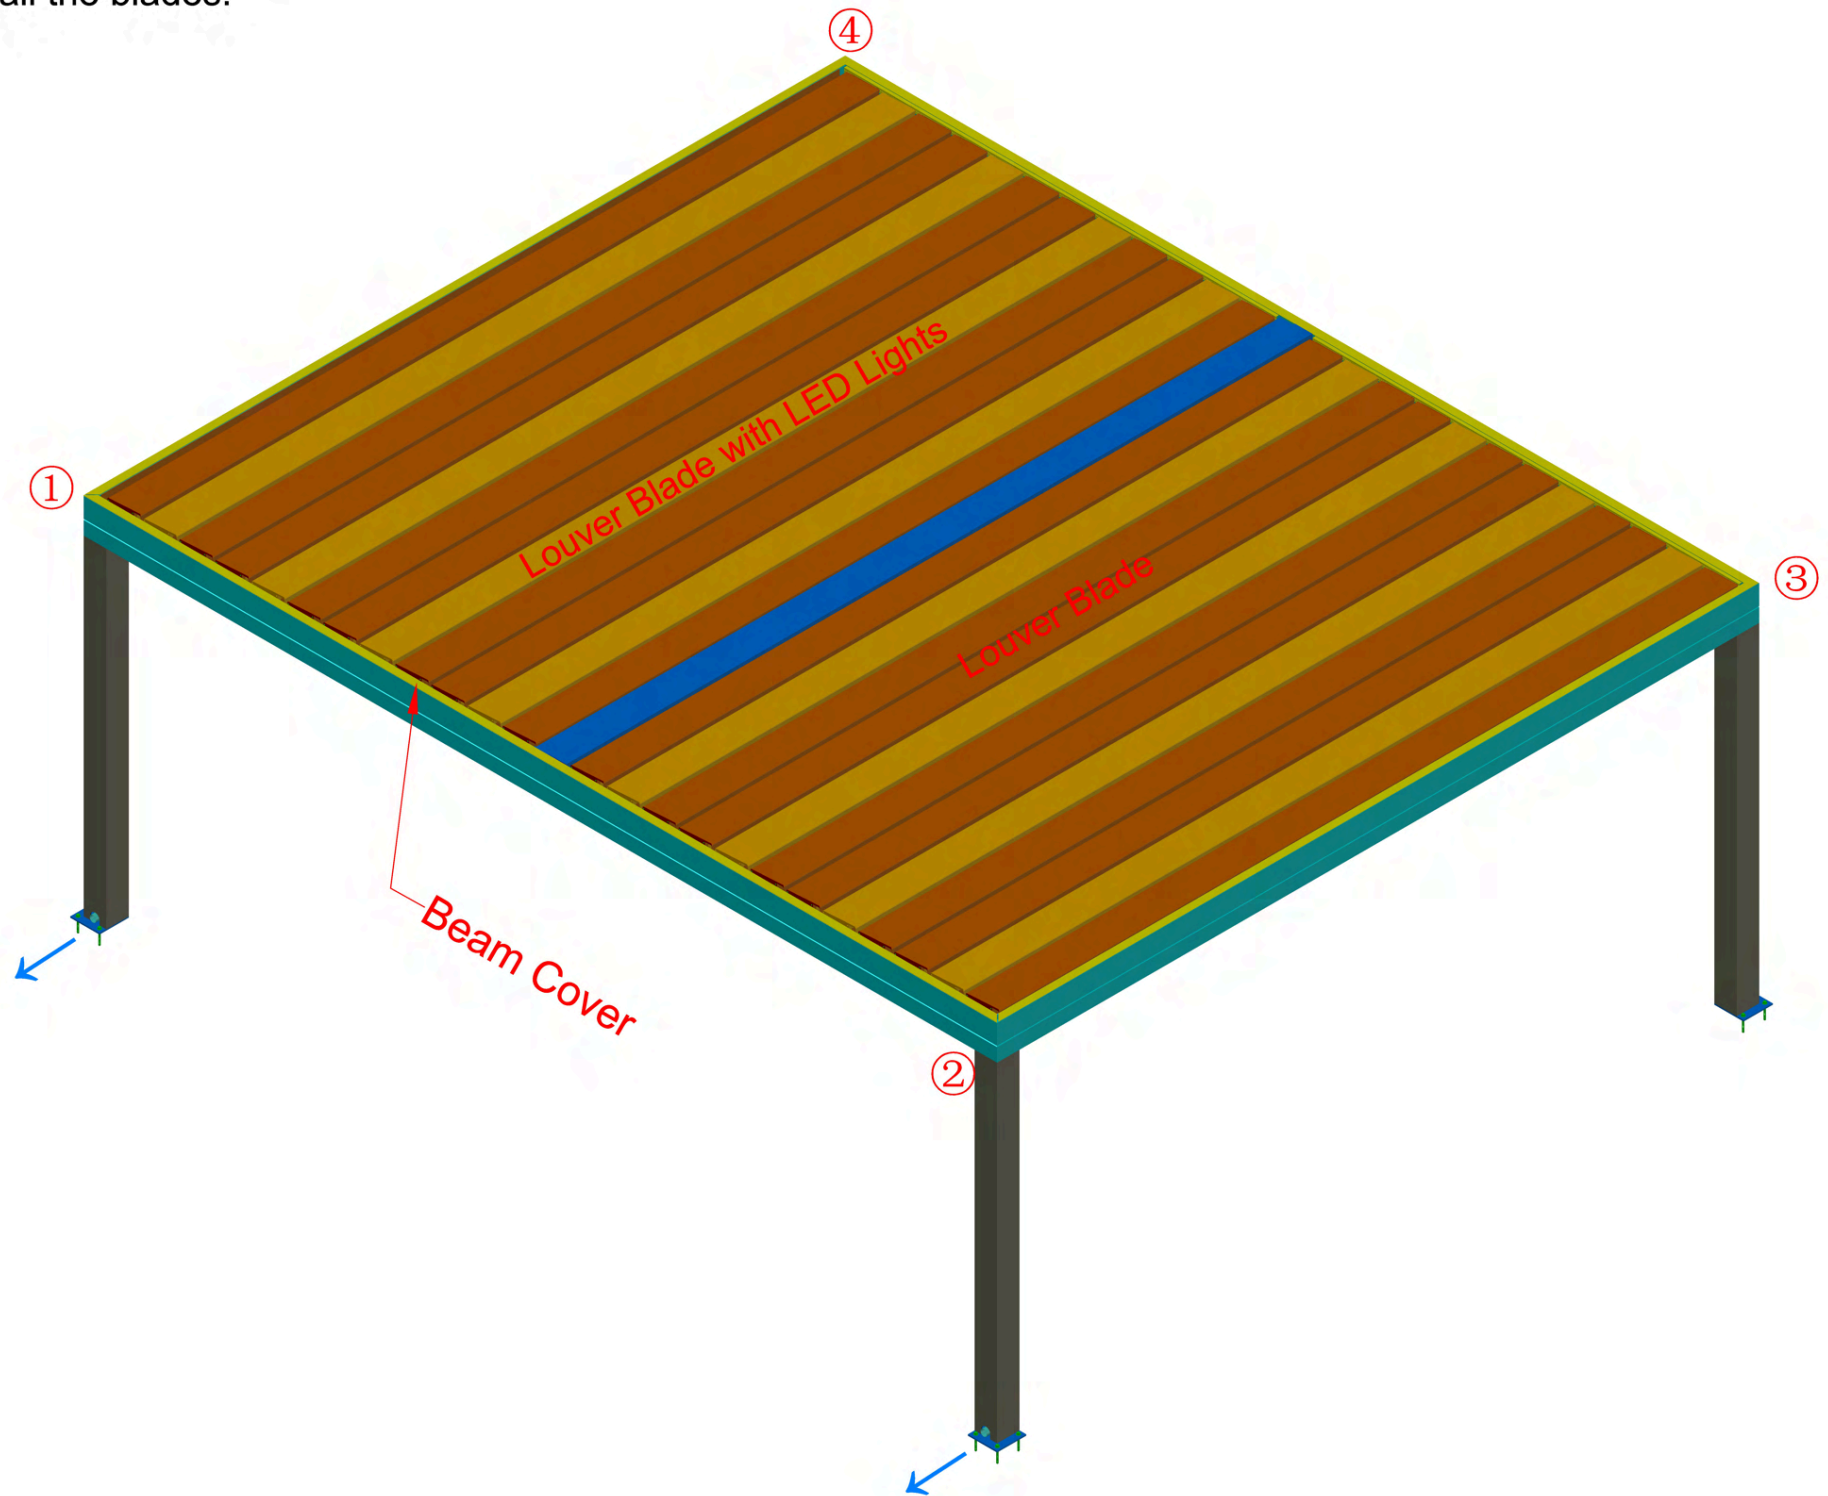


1. Press the RGB Lights to the gutter.
Then route all the wires to the ground.

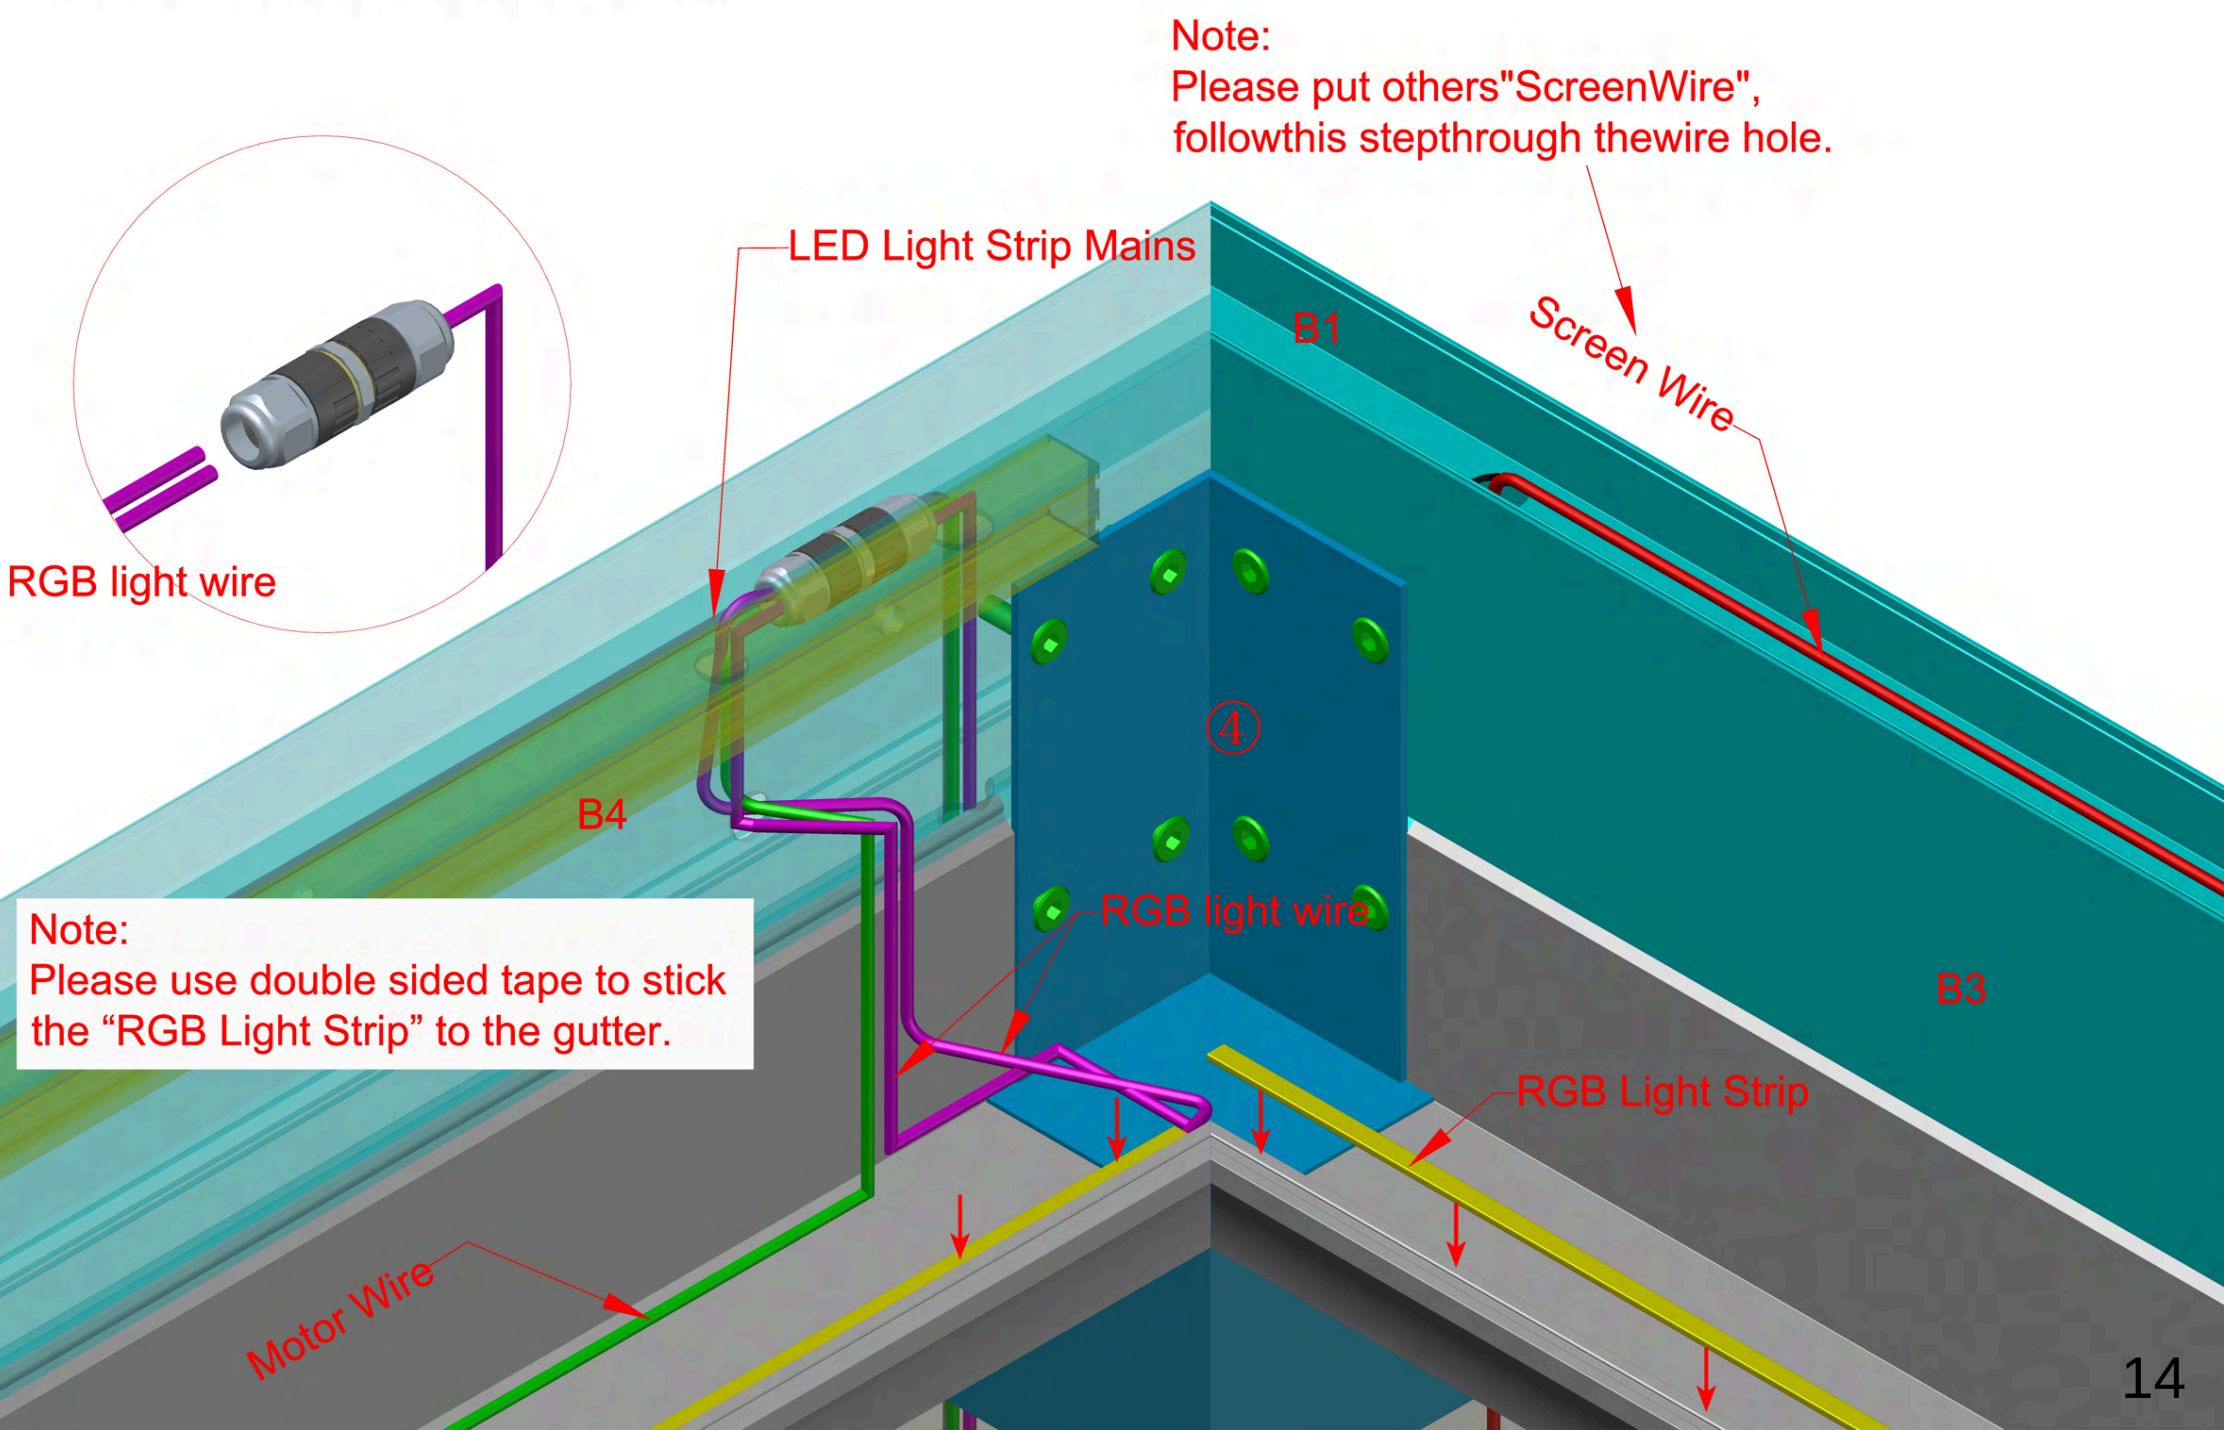


2. Connect the "Control Rod" and the "Motor" together.

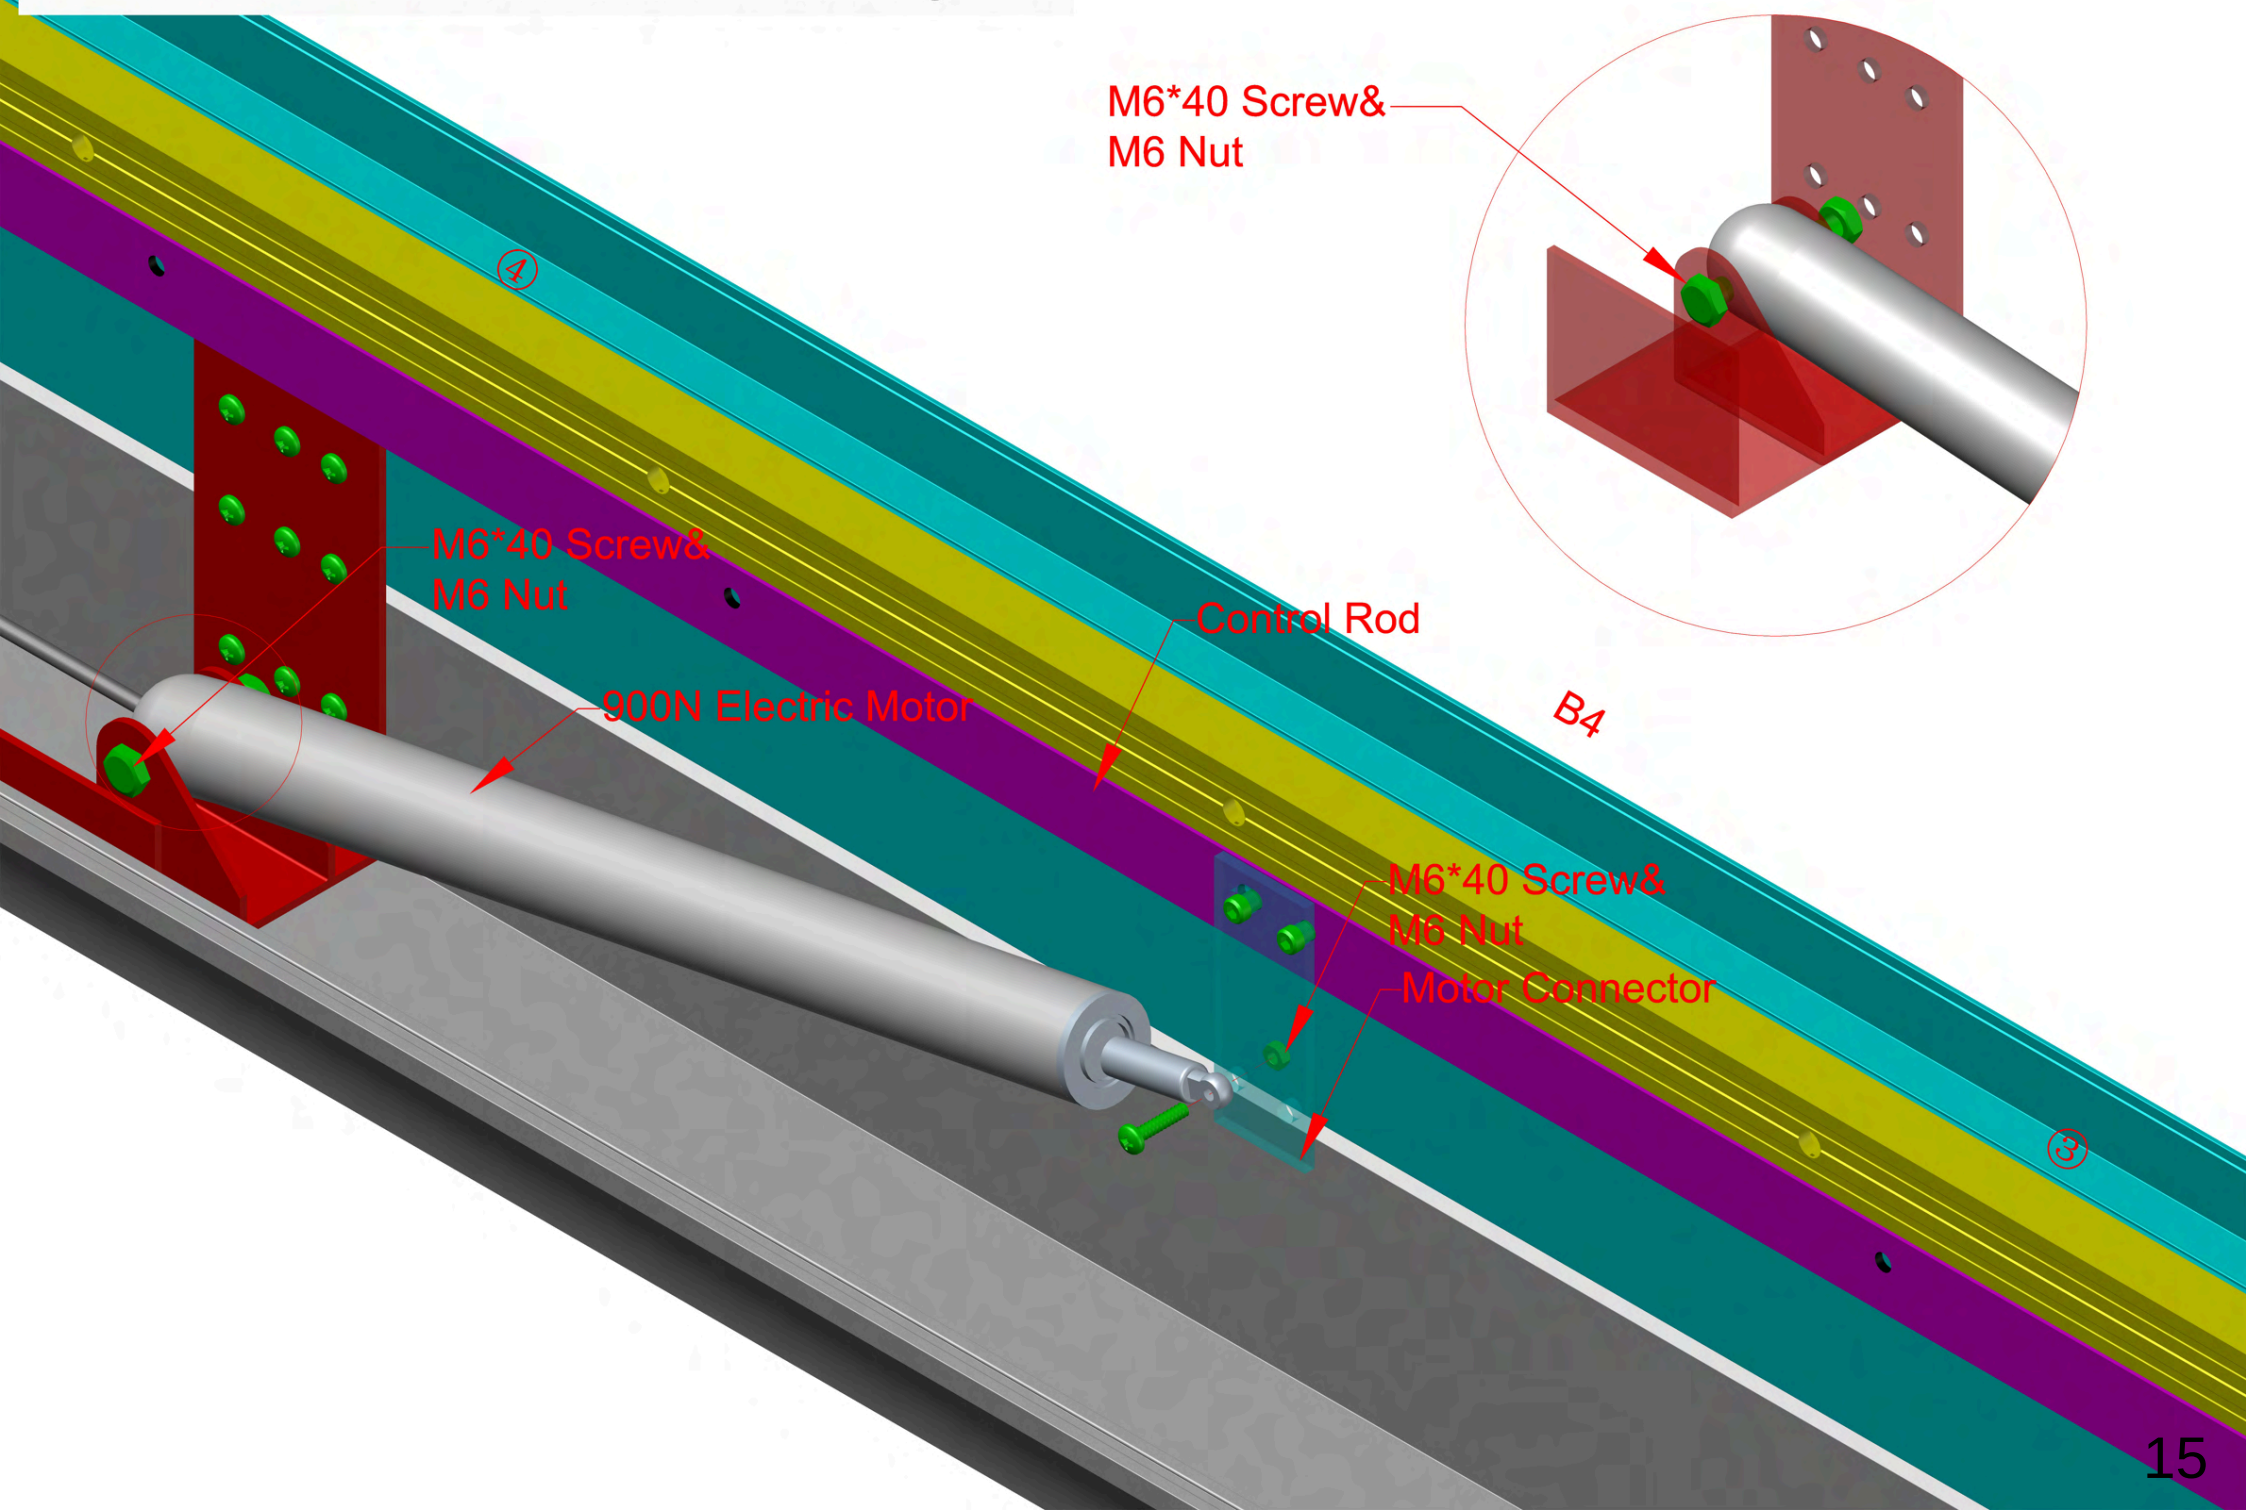

3.Insert the "Pivot Pin" into "Louver Blade".

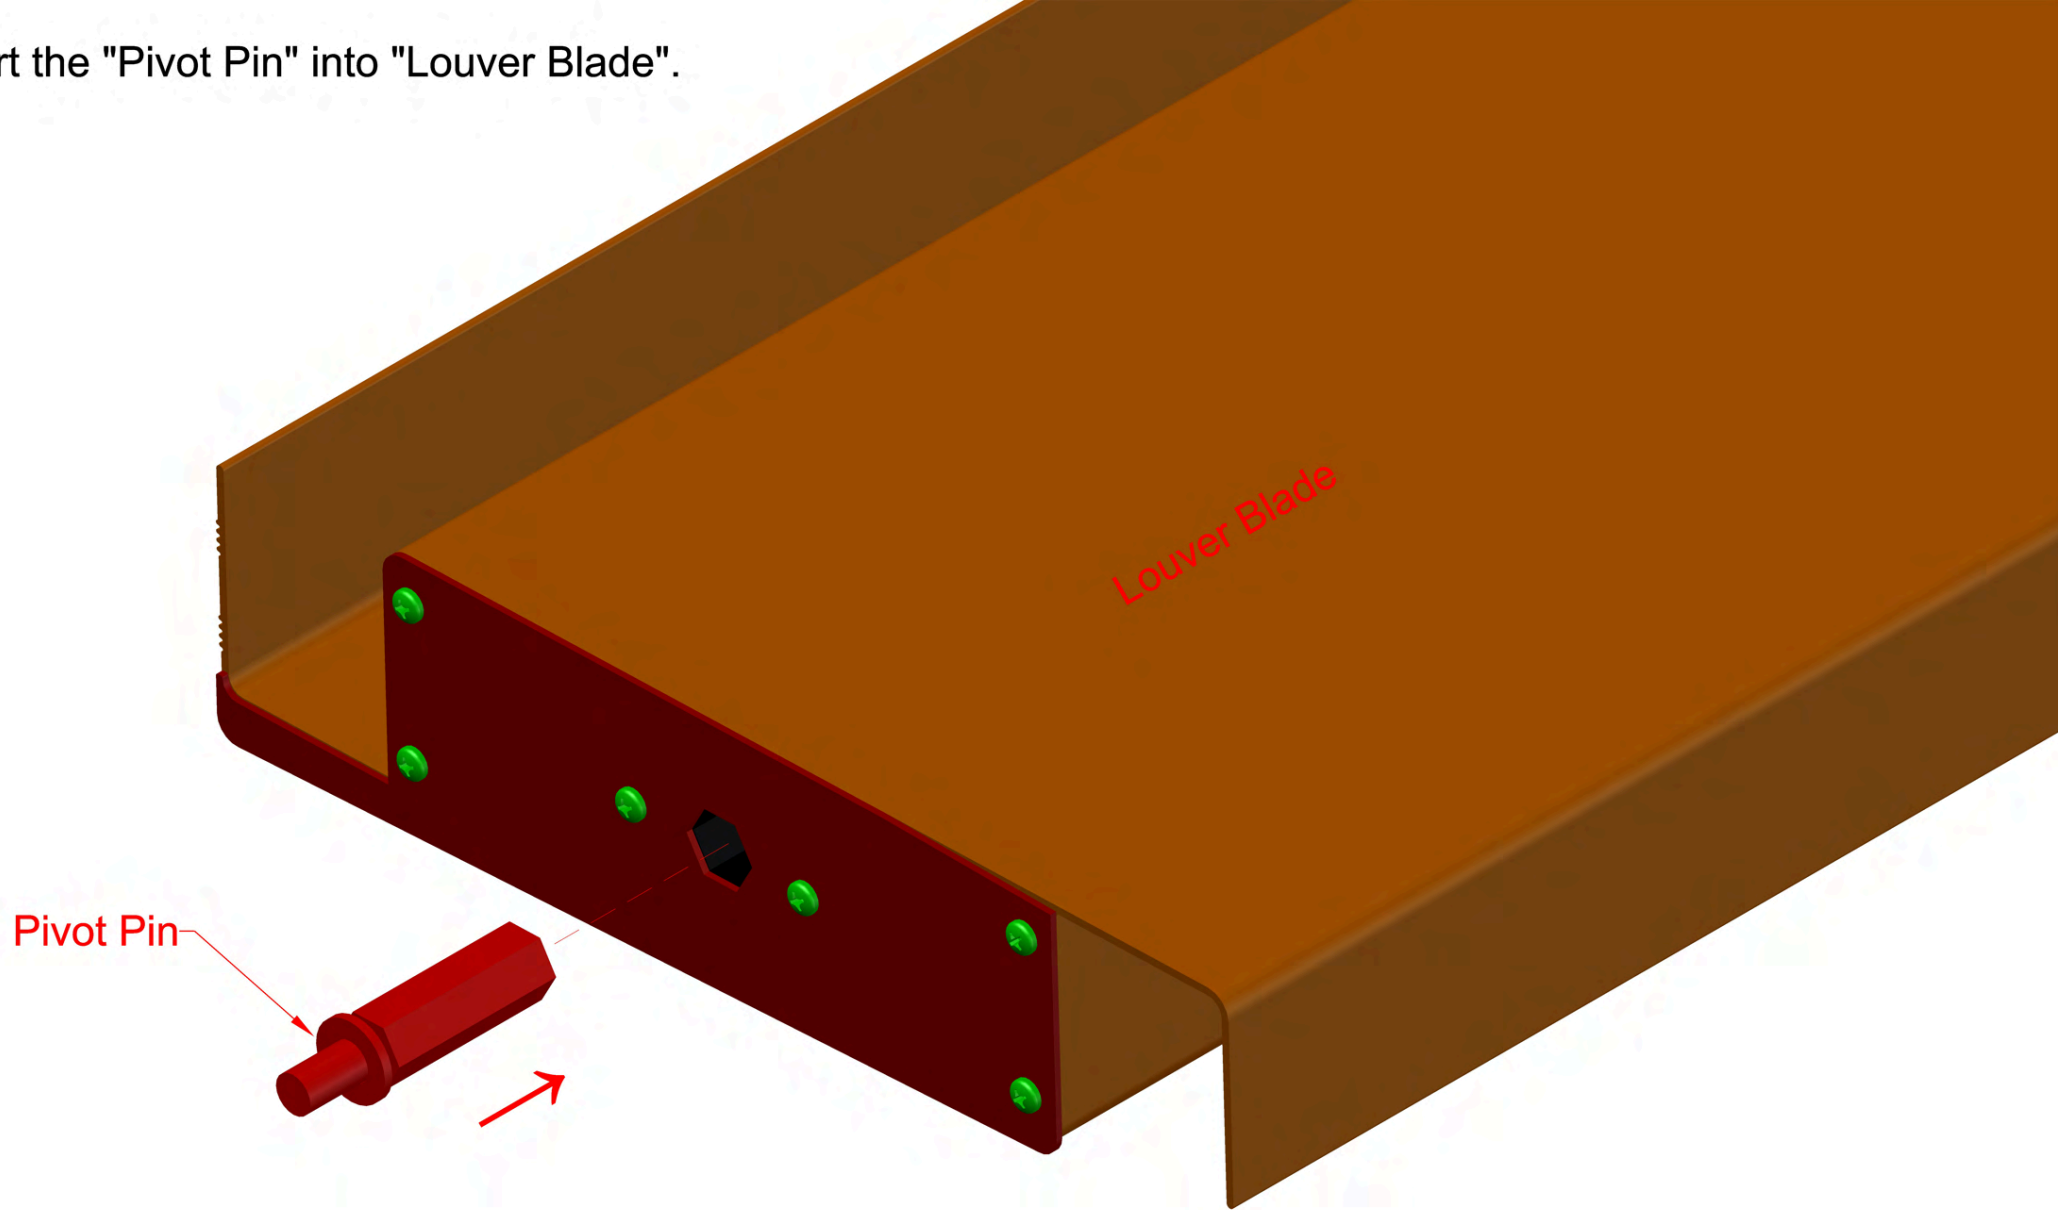


4. As shown, insert the "Pivot Pin" of the blade into the groove of Beam.

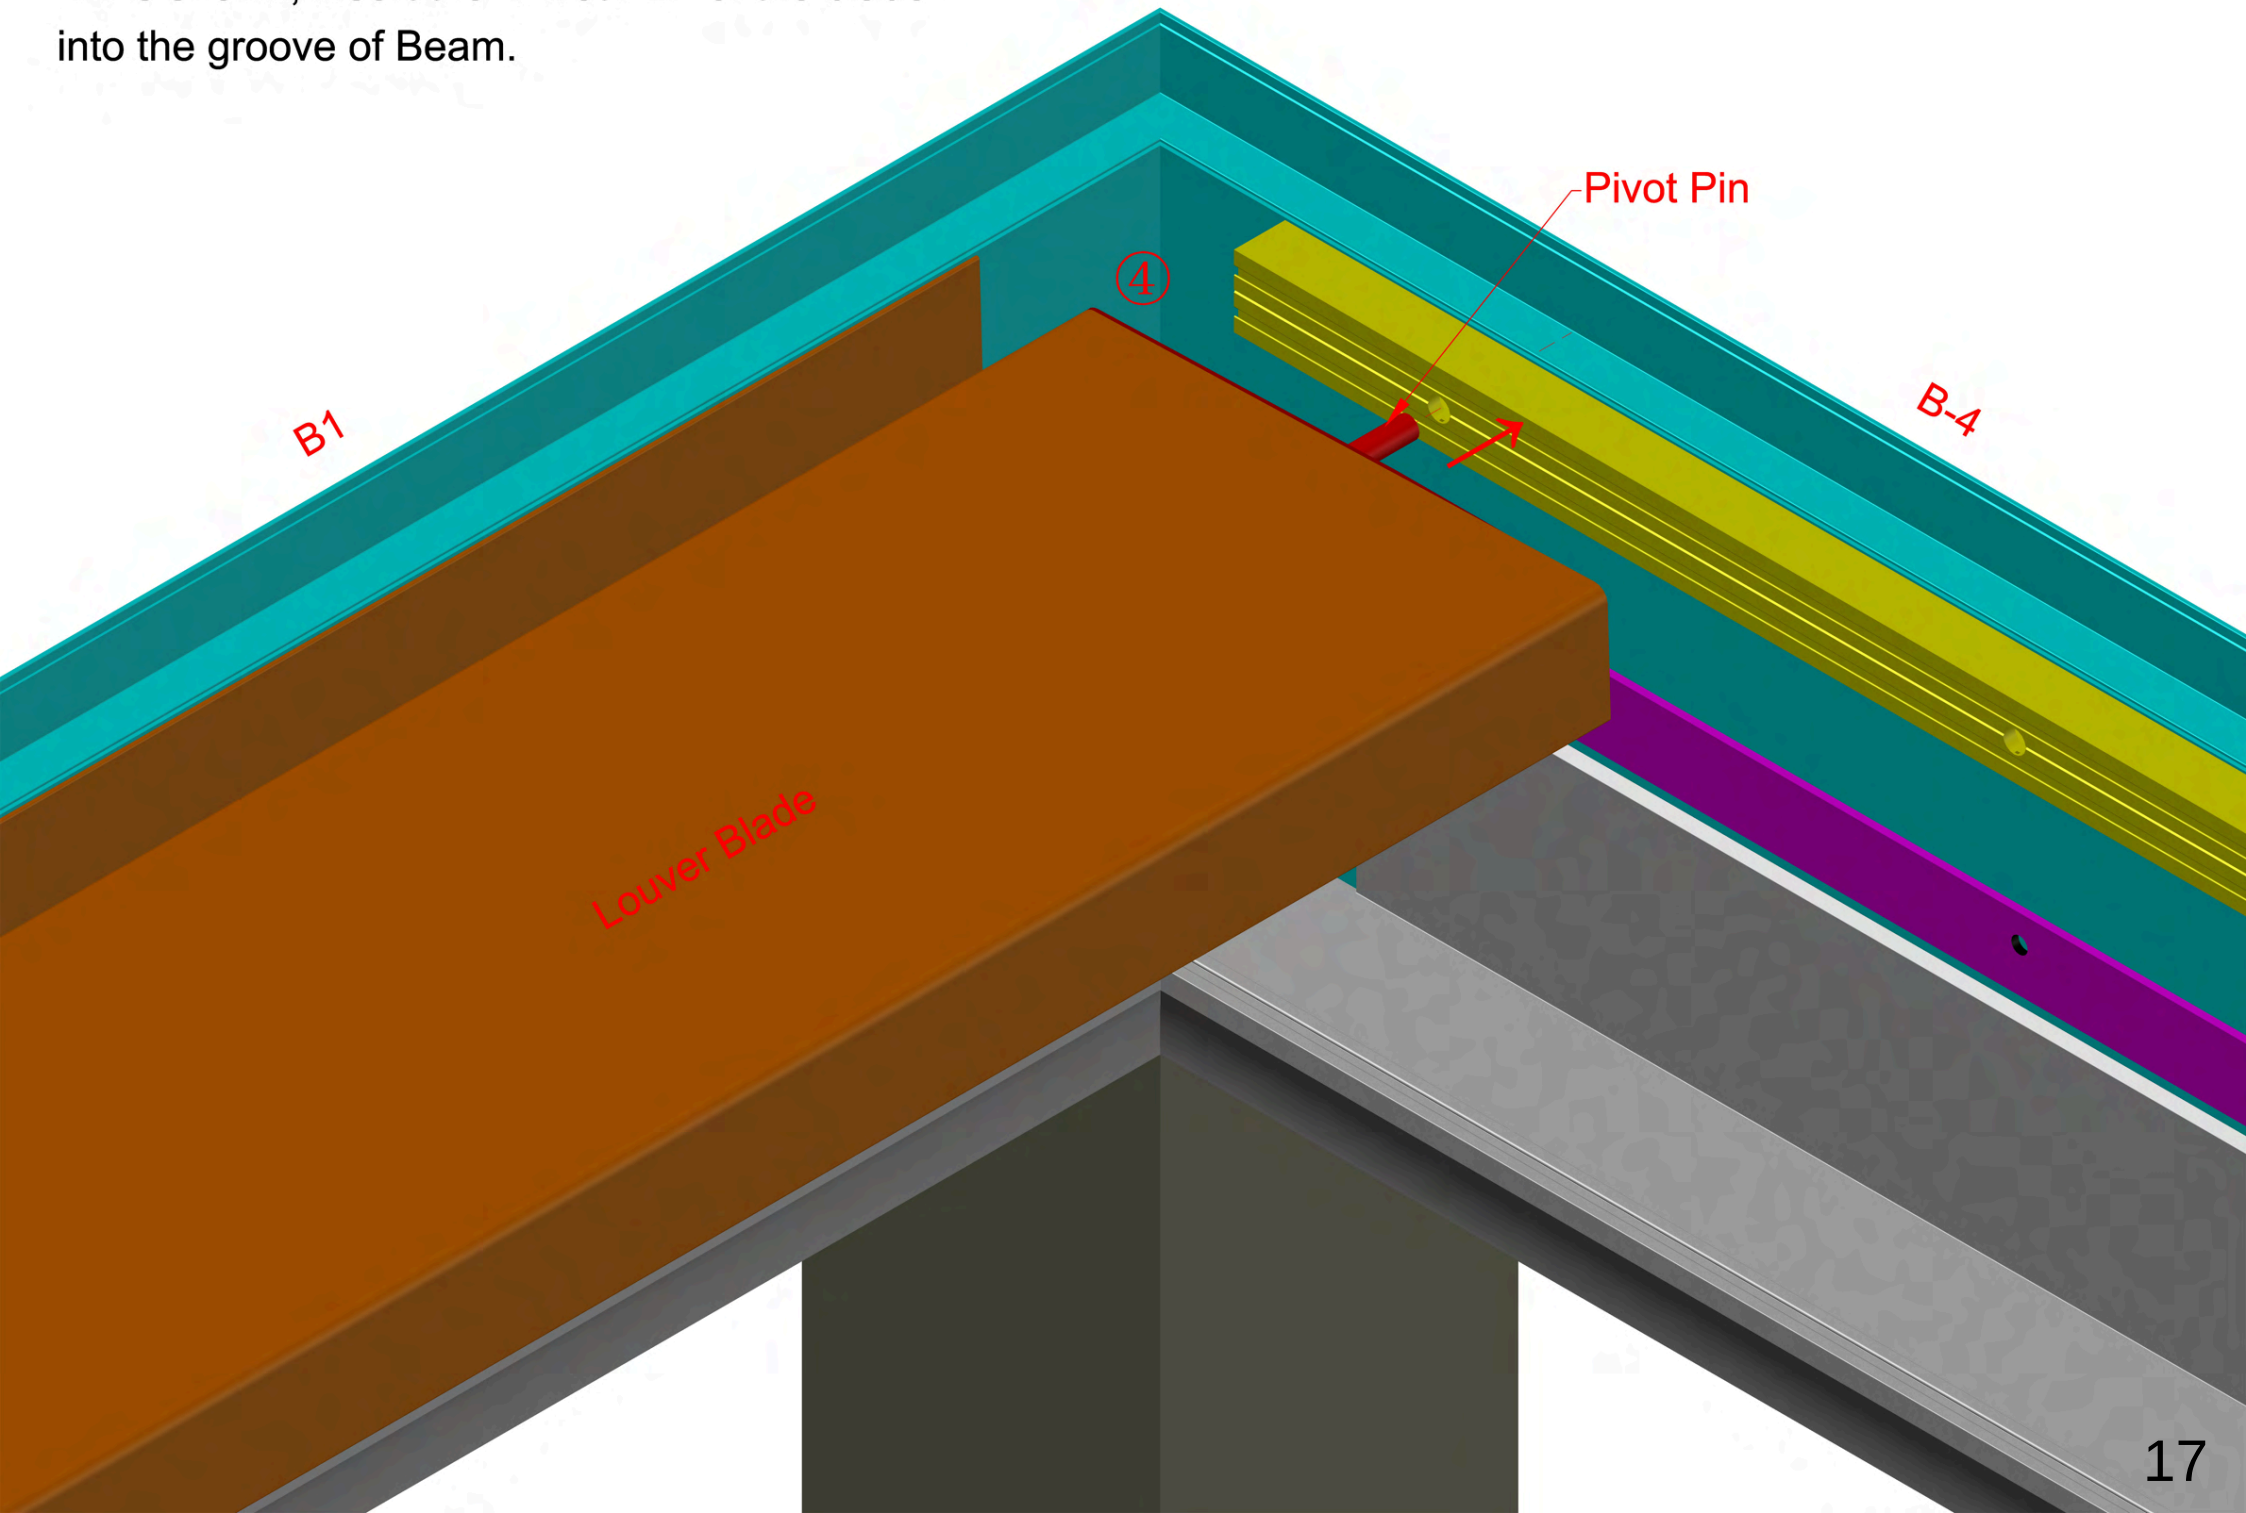


5. Connect "Louver Blade " with "Control Rod" together using "M6*20 Hex Screw&Washer".

Note: The blades should be placed horizontally. The inclined blades shown in the illustration are for the convenience of showing the installation details.

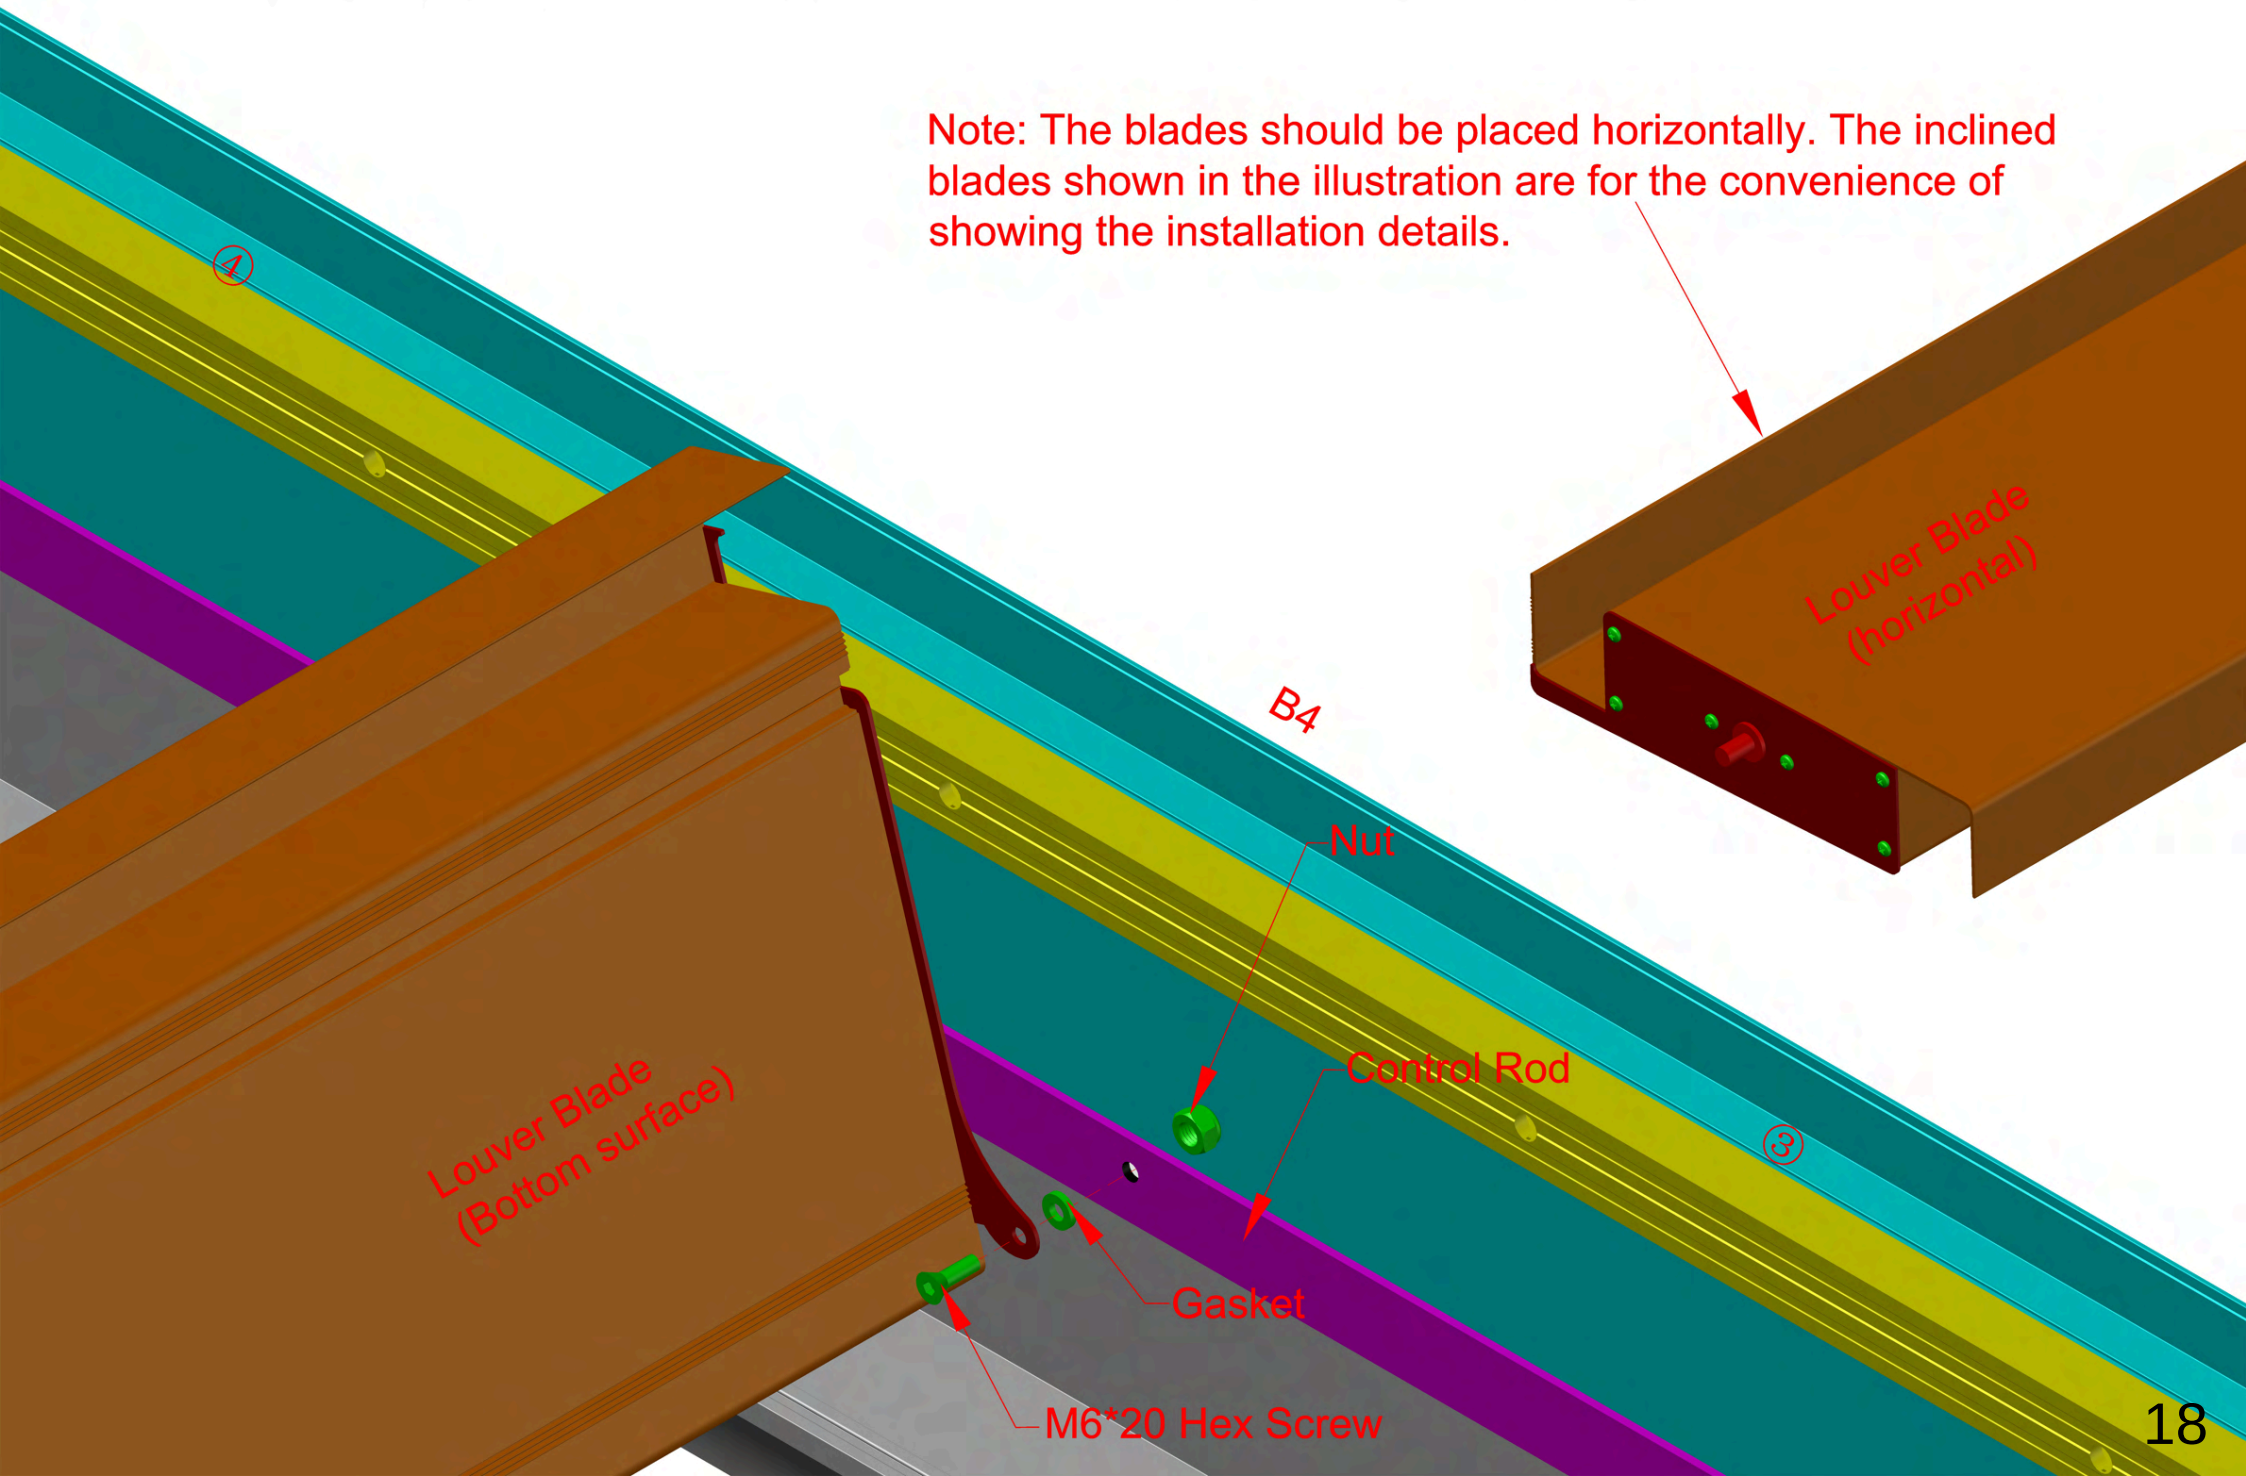

6.As shown, after installing the blades, connect all the LED light wires.

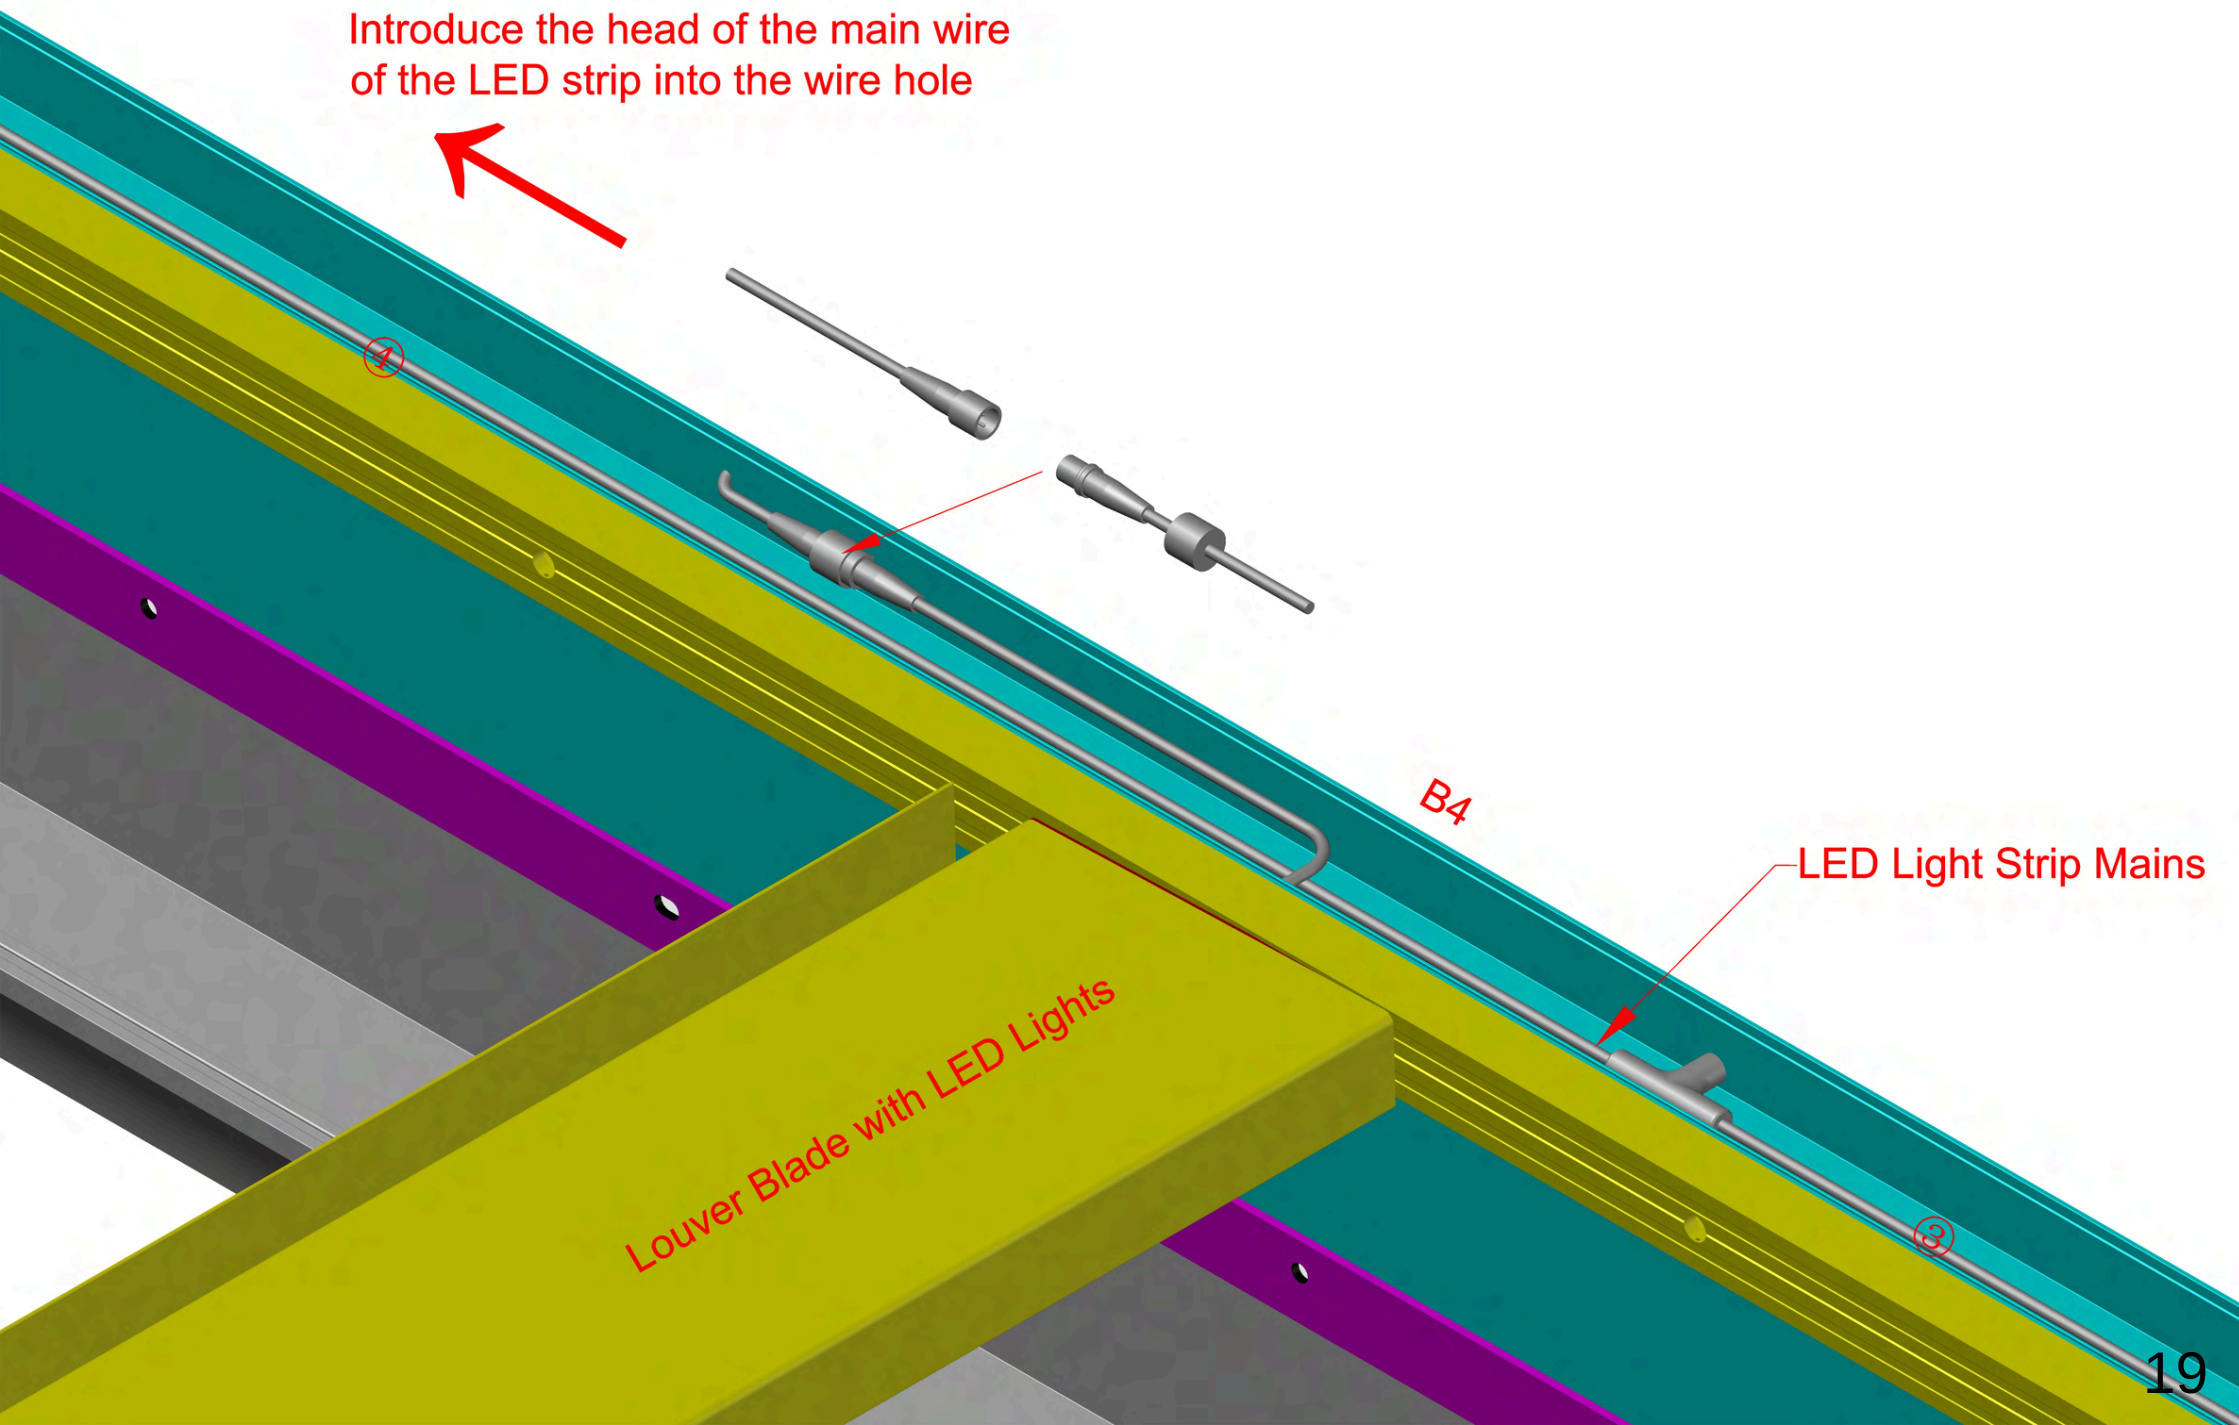



7. Fix the "Beam Cover" on the beam.

After installing the Beam Cover, apply
silicone sealant to the edge gaps.

Silicone Sealant

①

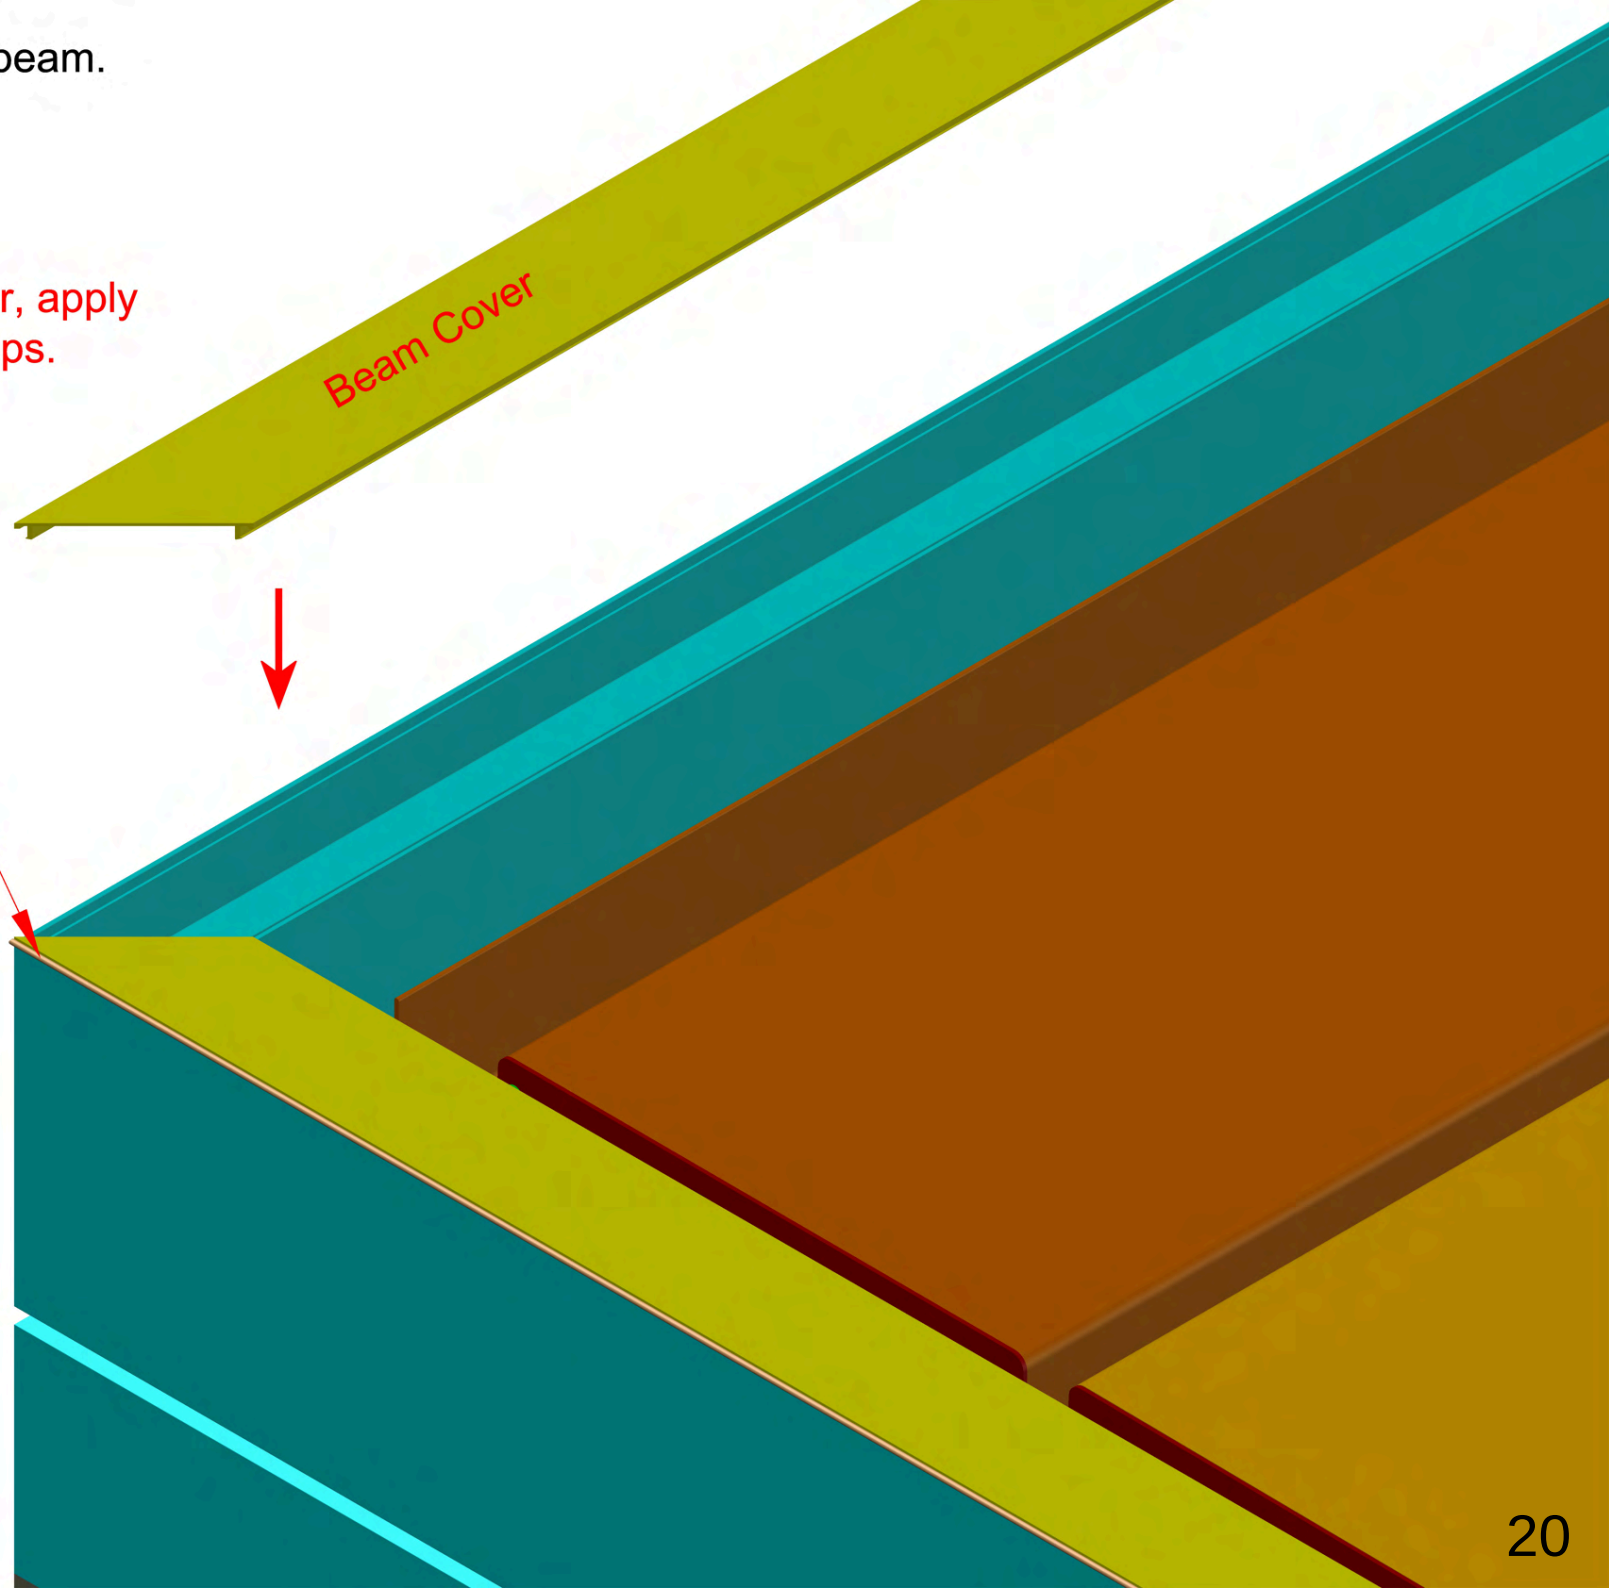

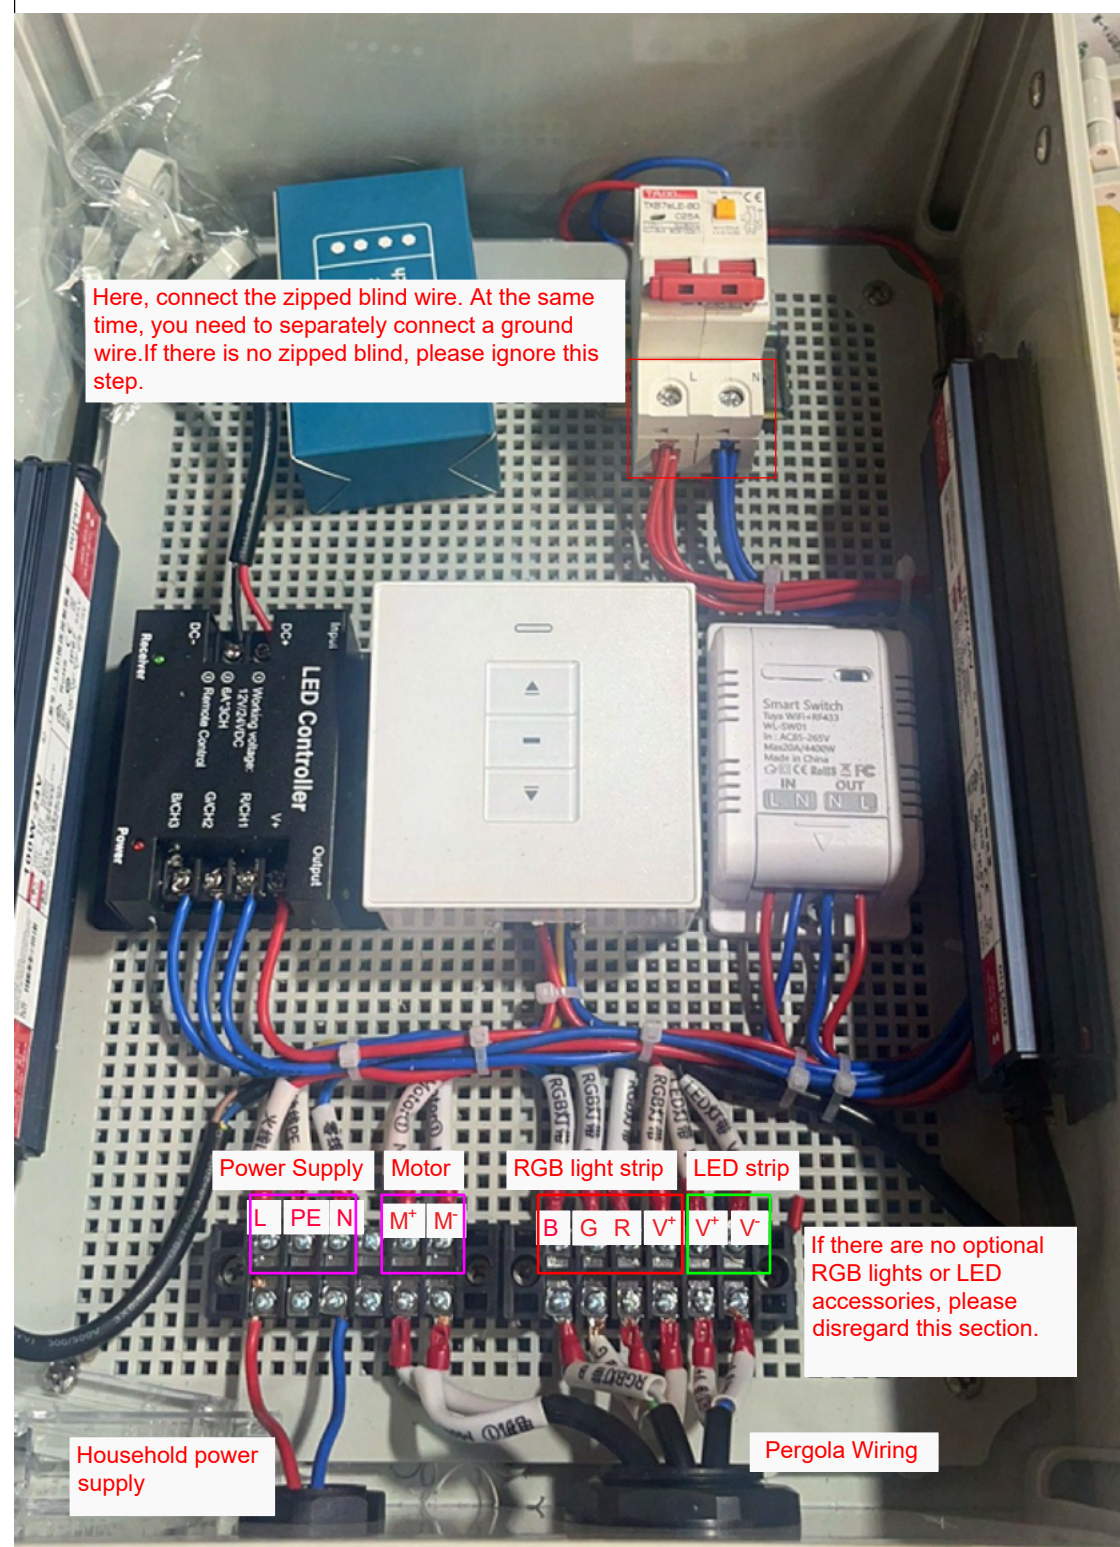

Here, connect the zipped blind wire. At the same time, you need to separately connect a ground wire. If there is no zipped blind, please ignore this step.

Power Supply

Motor

RGB light strip

LED strip

L PE N

M+ M-

B G R V+ V+ V-

V+ V-

If there are no optional RGB lights or LED accessories, please disregard this section.

Household power supply

Pergola Wiring



For safety, When installing the pergola, please let the children away from awning.
In cold weather, expecially for snowy days, the operation of the pergola may become difficult or impossible, excessive force may cause damage to the pergola. In order to prevent the fatigue of the material, pls clear the snow on the top of the awning in time.

Note:

1. Wall Switch is non-waterproof, must install our supplied waterproof box.
2. Please ensure that the downpipe hole on gutter won't be blocked by other things.
3. Please check the tightness of the screws regularly