

## 《Important》

- Paint your model with enamel before assembly and touch up on completion.
- Use a good plastic model kit cement and apply sparingly.
- Remove parts from the runners with a knife or snippers and remove sharp edges with a file.
- Cement all parts in place as shown unless noted in the instructions.
- Black iron color can be made by mixing black & silver.

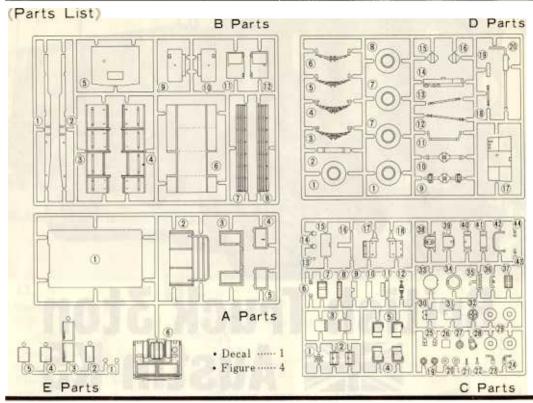

1. Cement the engine block together as shown, starting with C7.10.13. Paint each parts as shown.

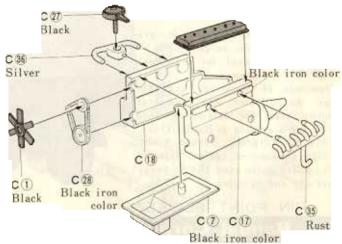

2. Cement all parts to the chassis frame B(1)-(2). C (12) BI Engine Black C(9) D 20 B(2) CO 3. C38&C39 Cement front suspension Black iron color D(5)-6 and transmission C38-39 to the chassis frame. Cement front axle D(9-11) -15 together and to the front suspension. Assemble the front wheels as shown. **D 6** C (19) D(5)

