


PRINTRBOT SIMPLE KIT BUILD




01

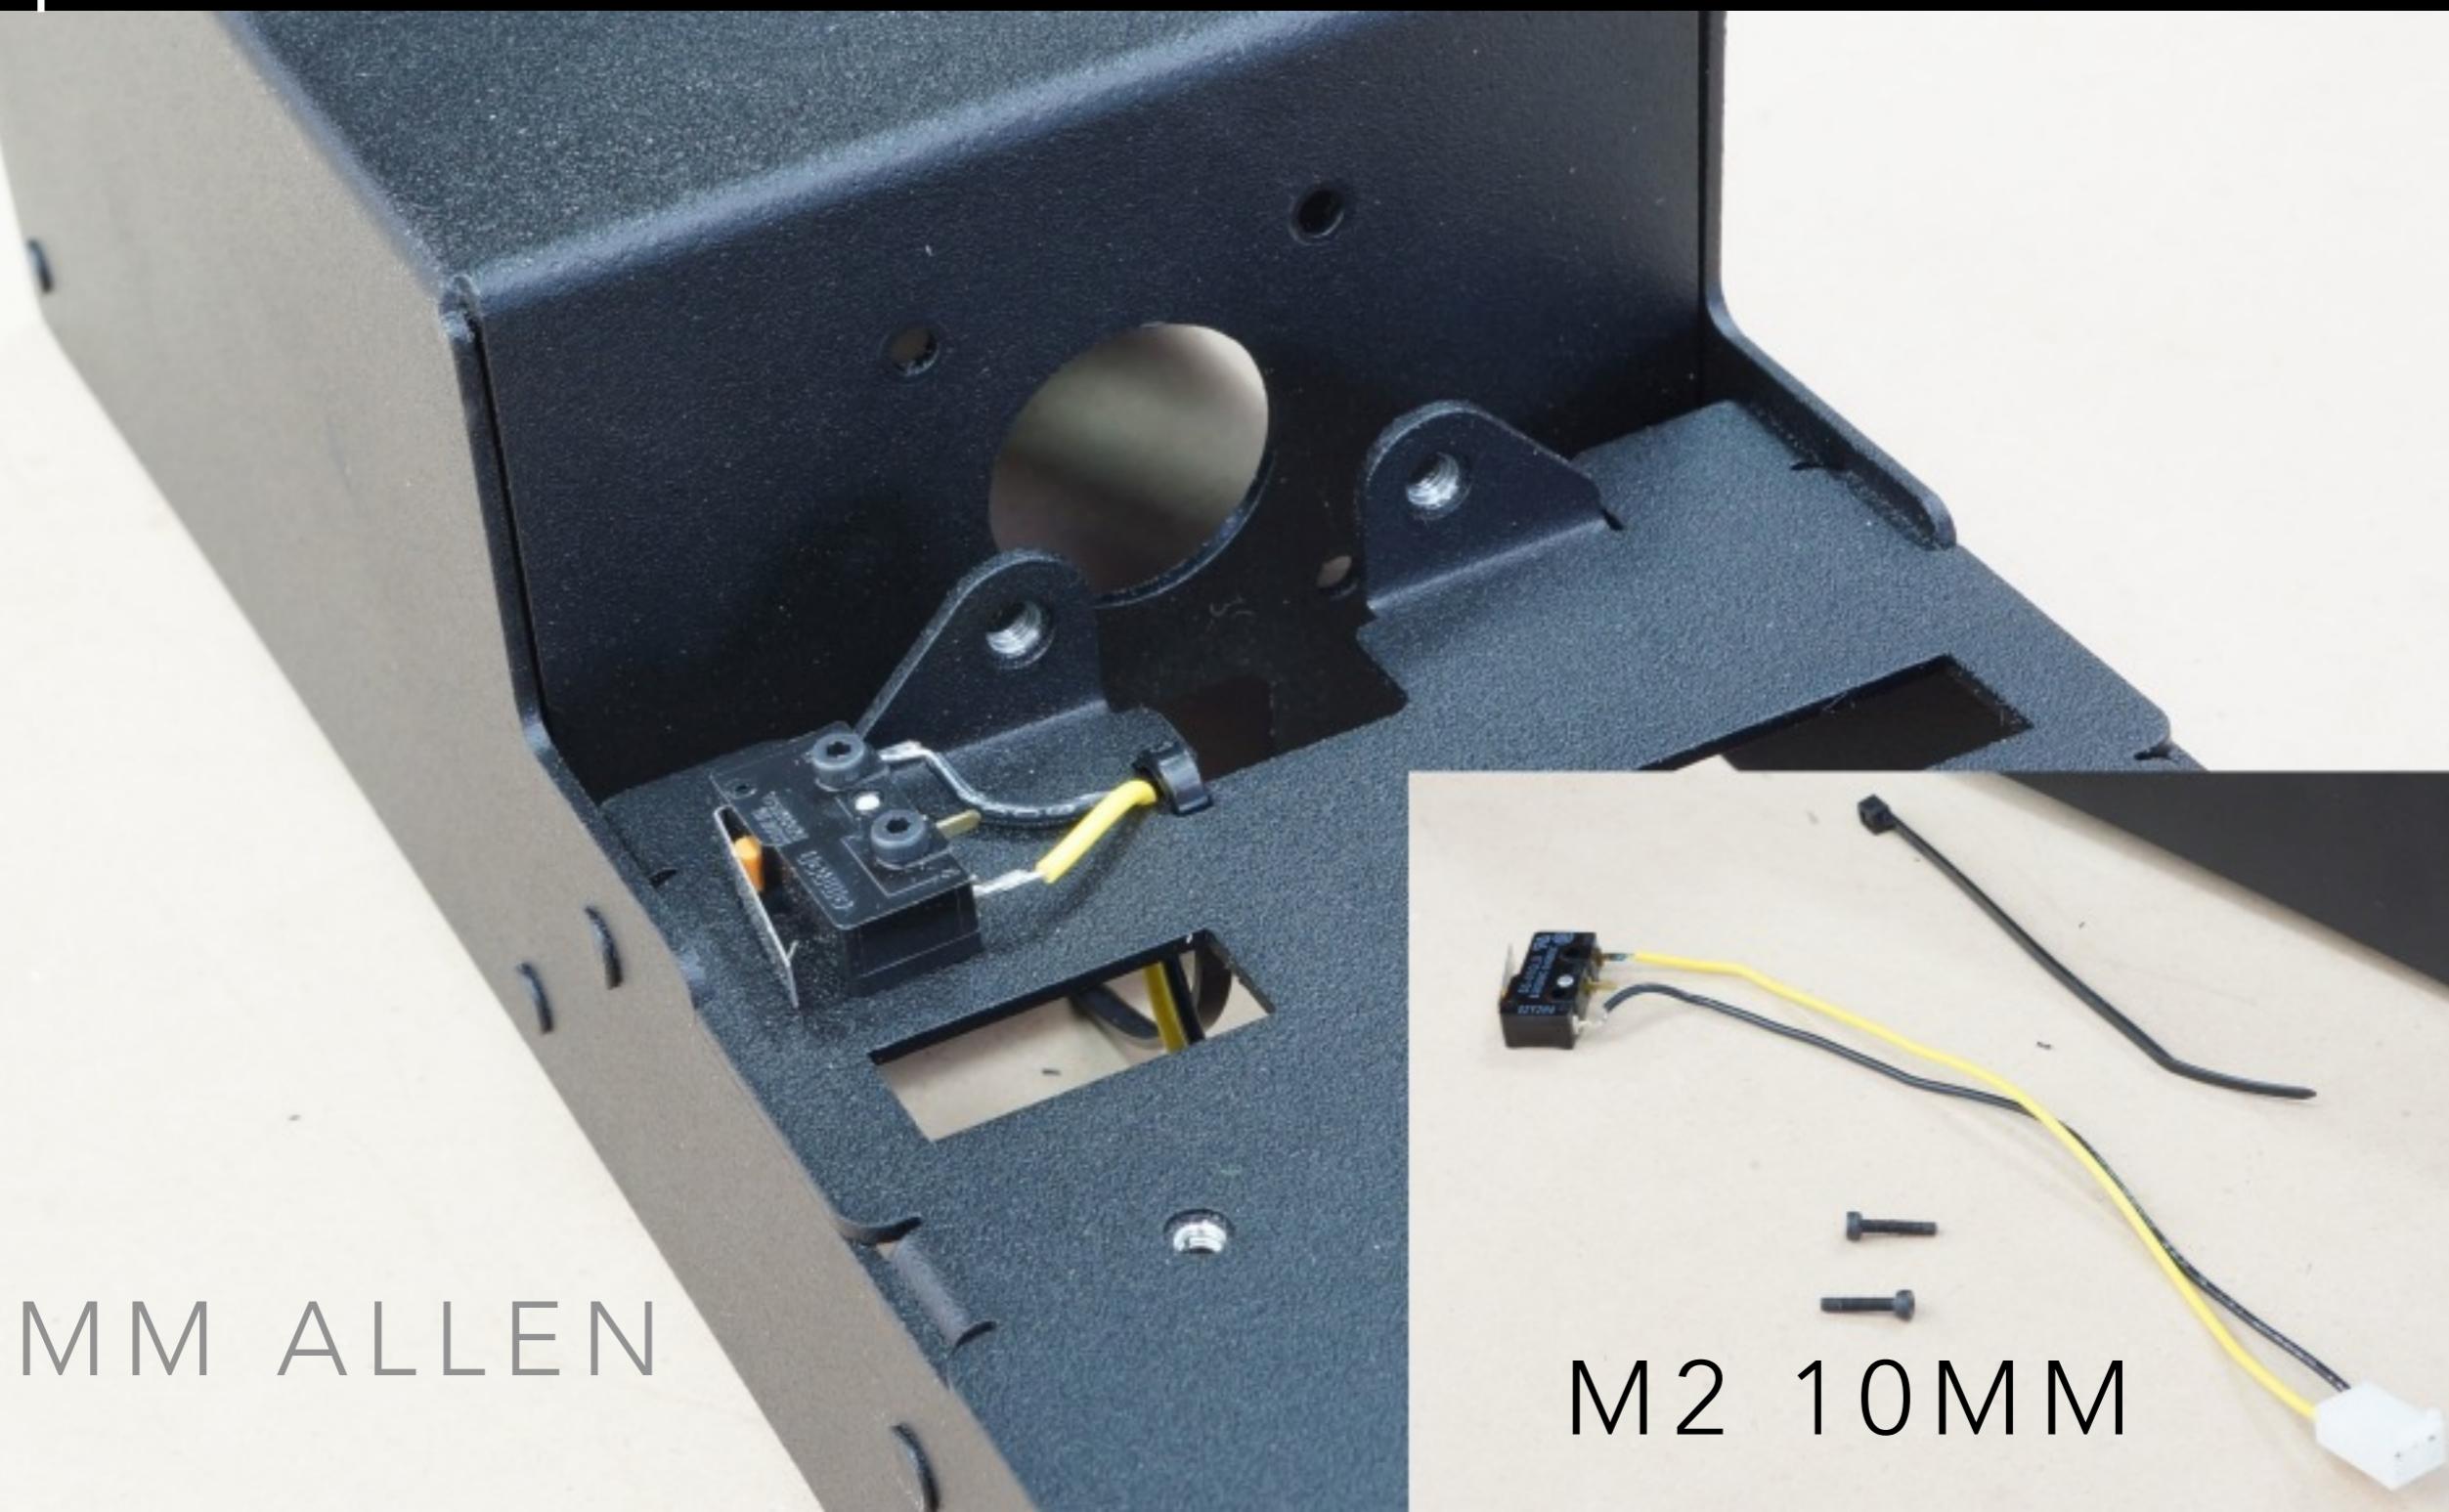


1.5MM ALLEN

M2 10MM

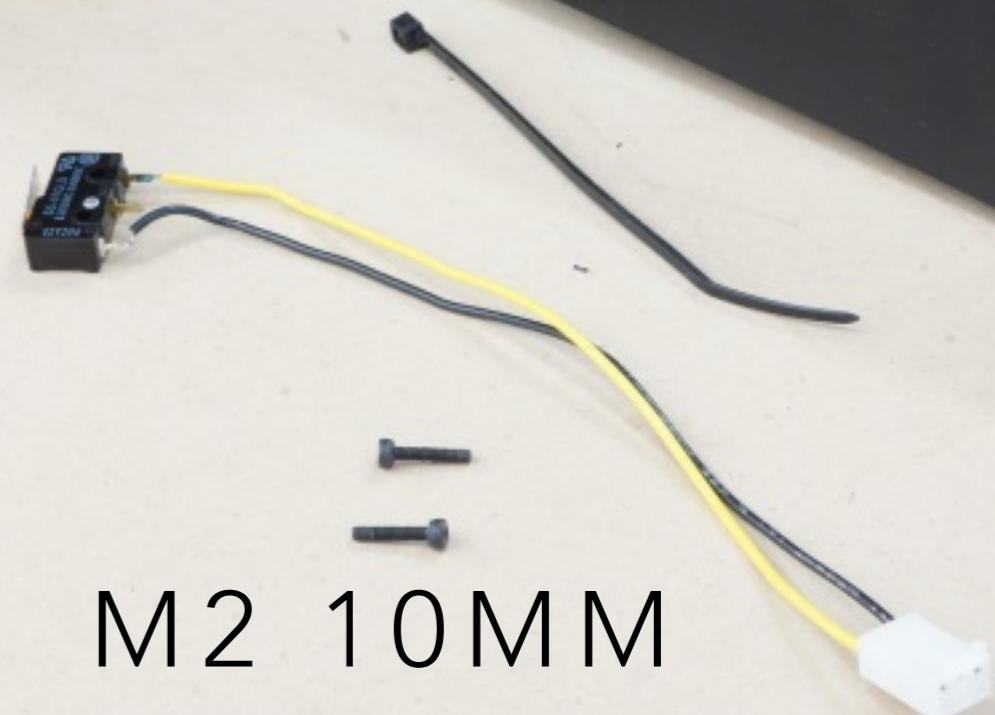


02

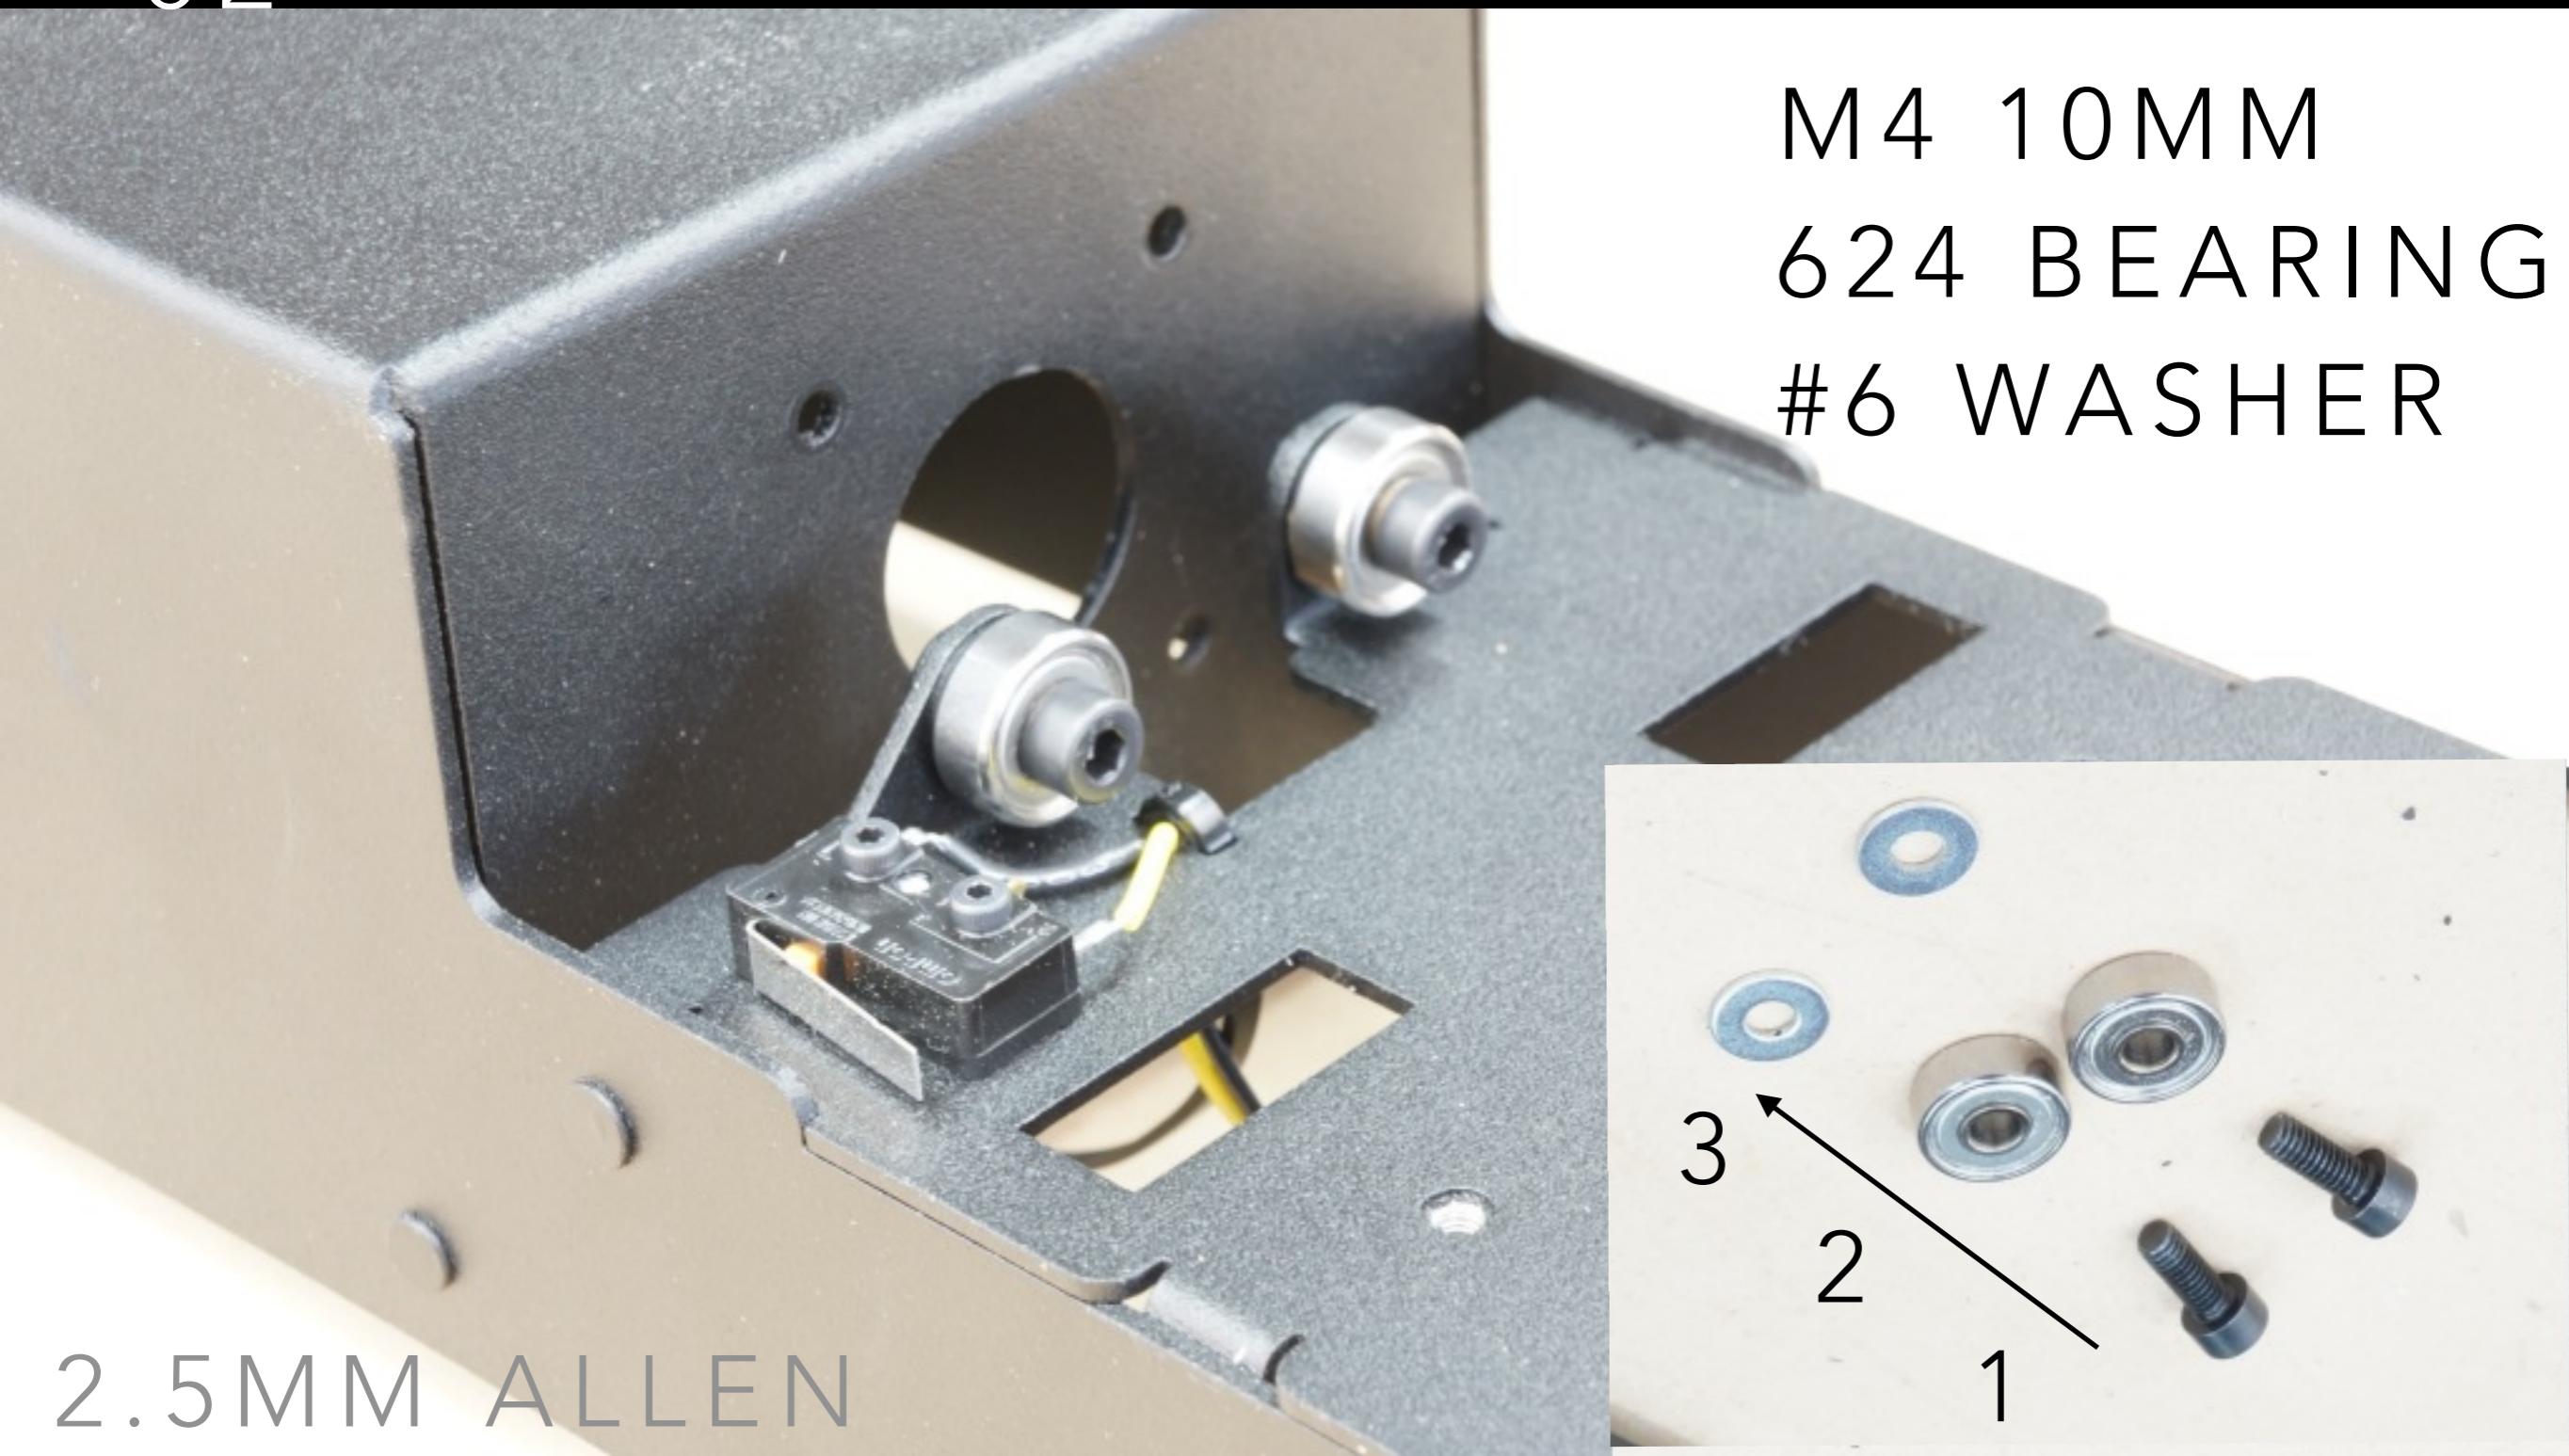

03






M3 SETSCREW
BLUE LOCTITE

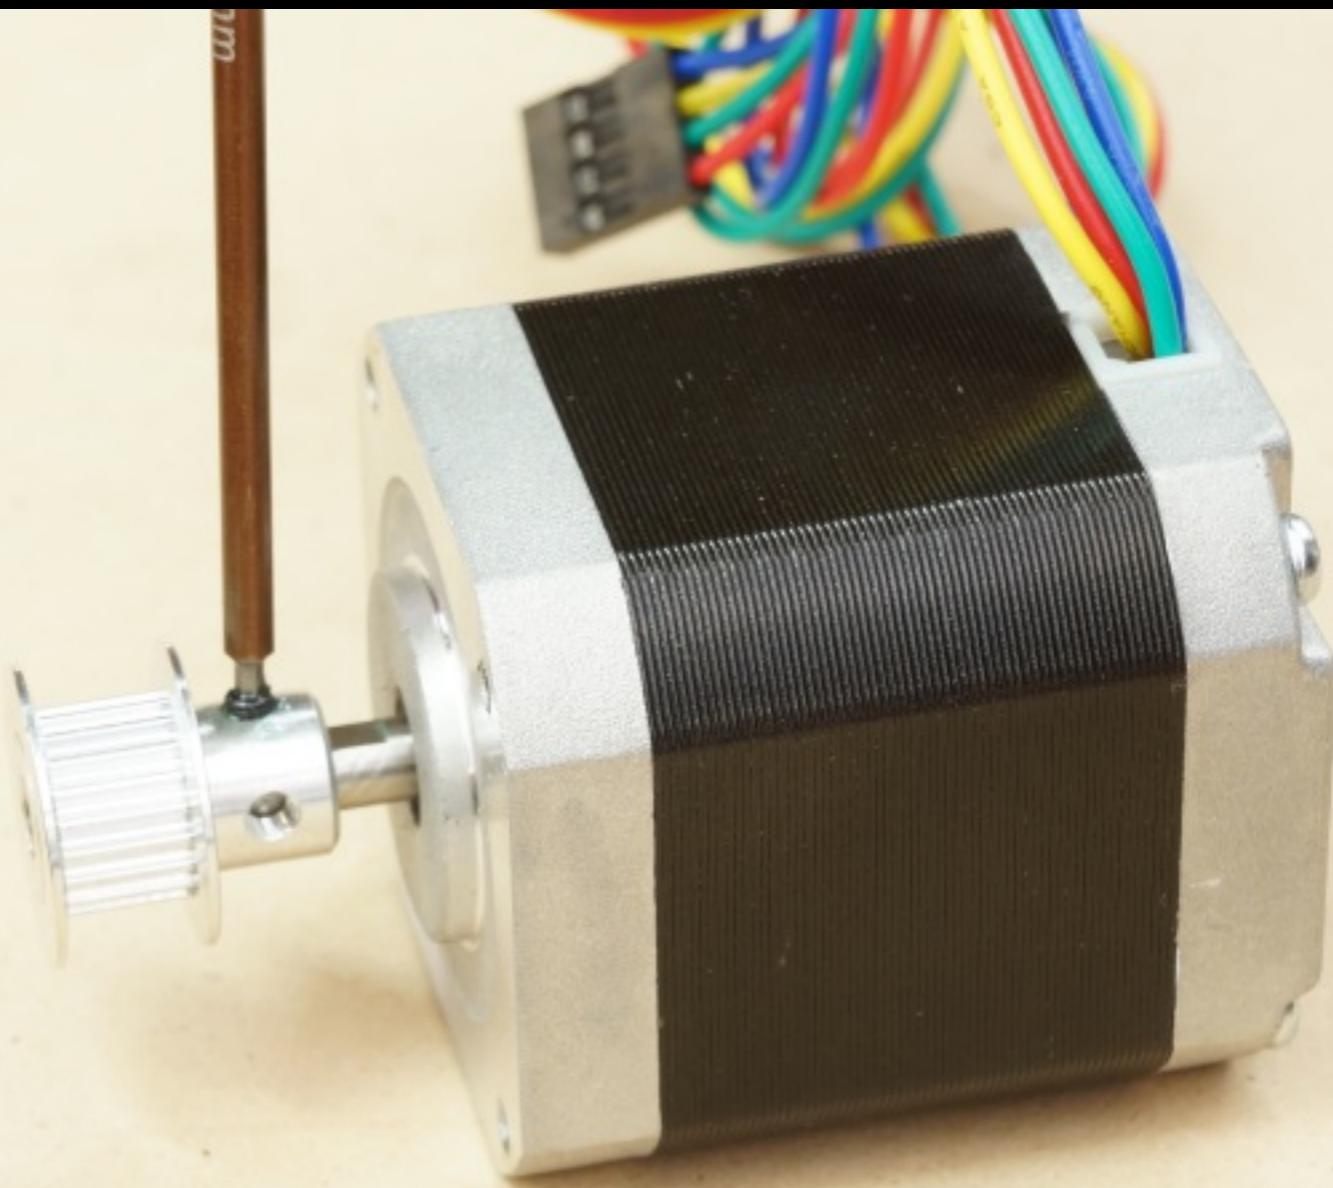


1.5MM ALLEN



04

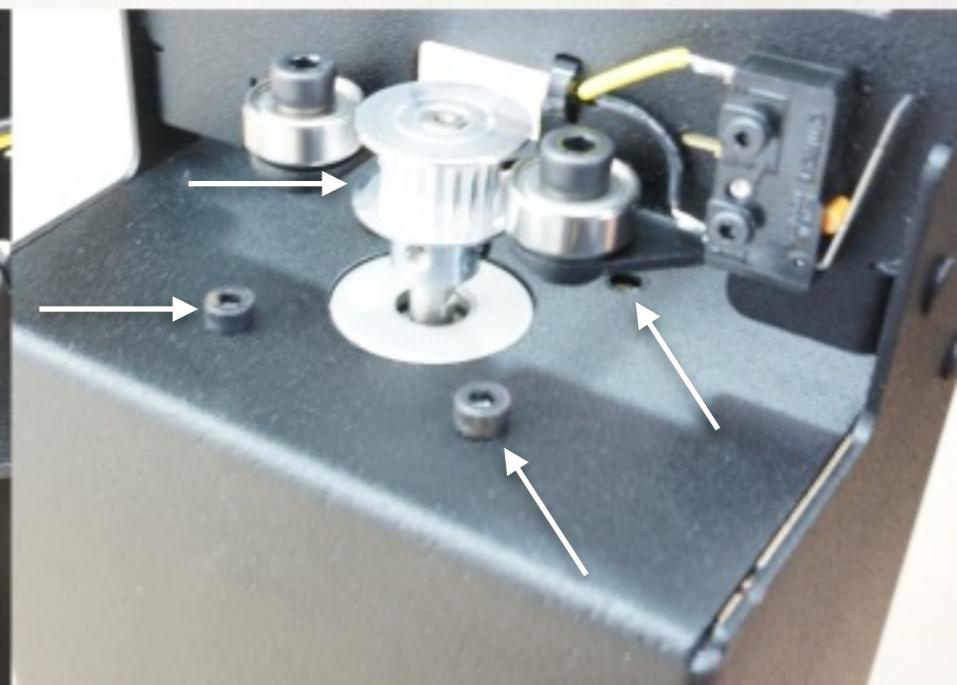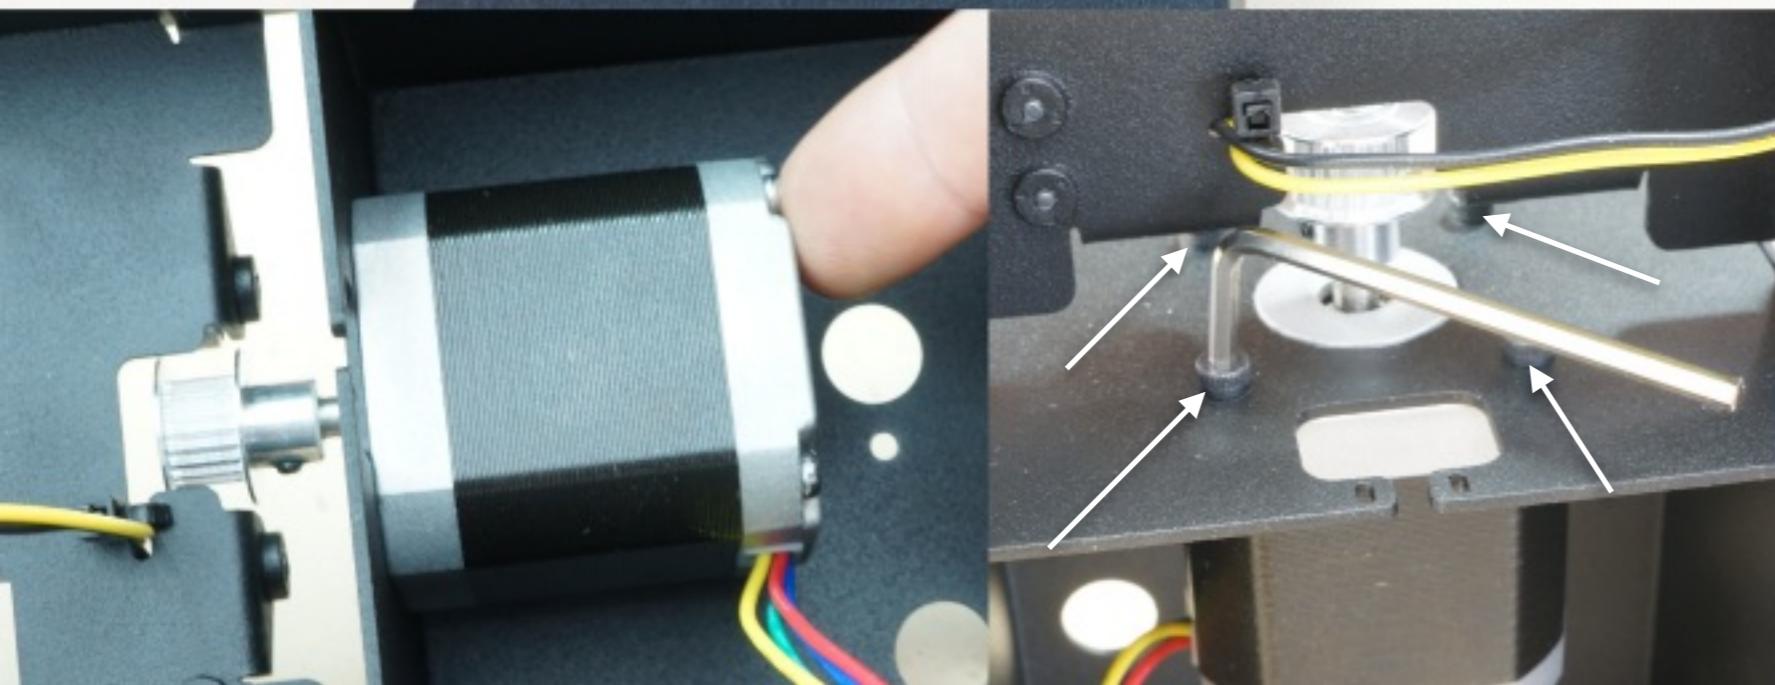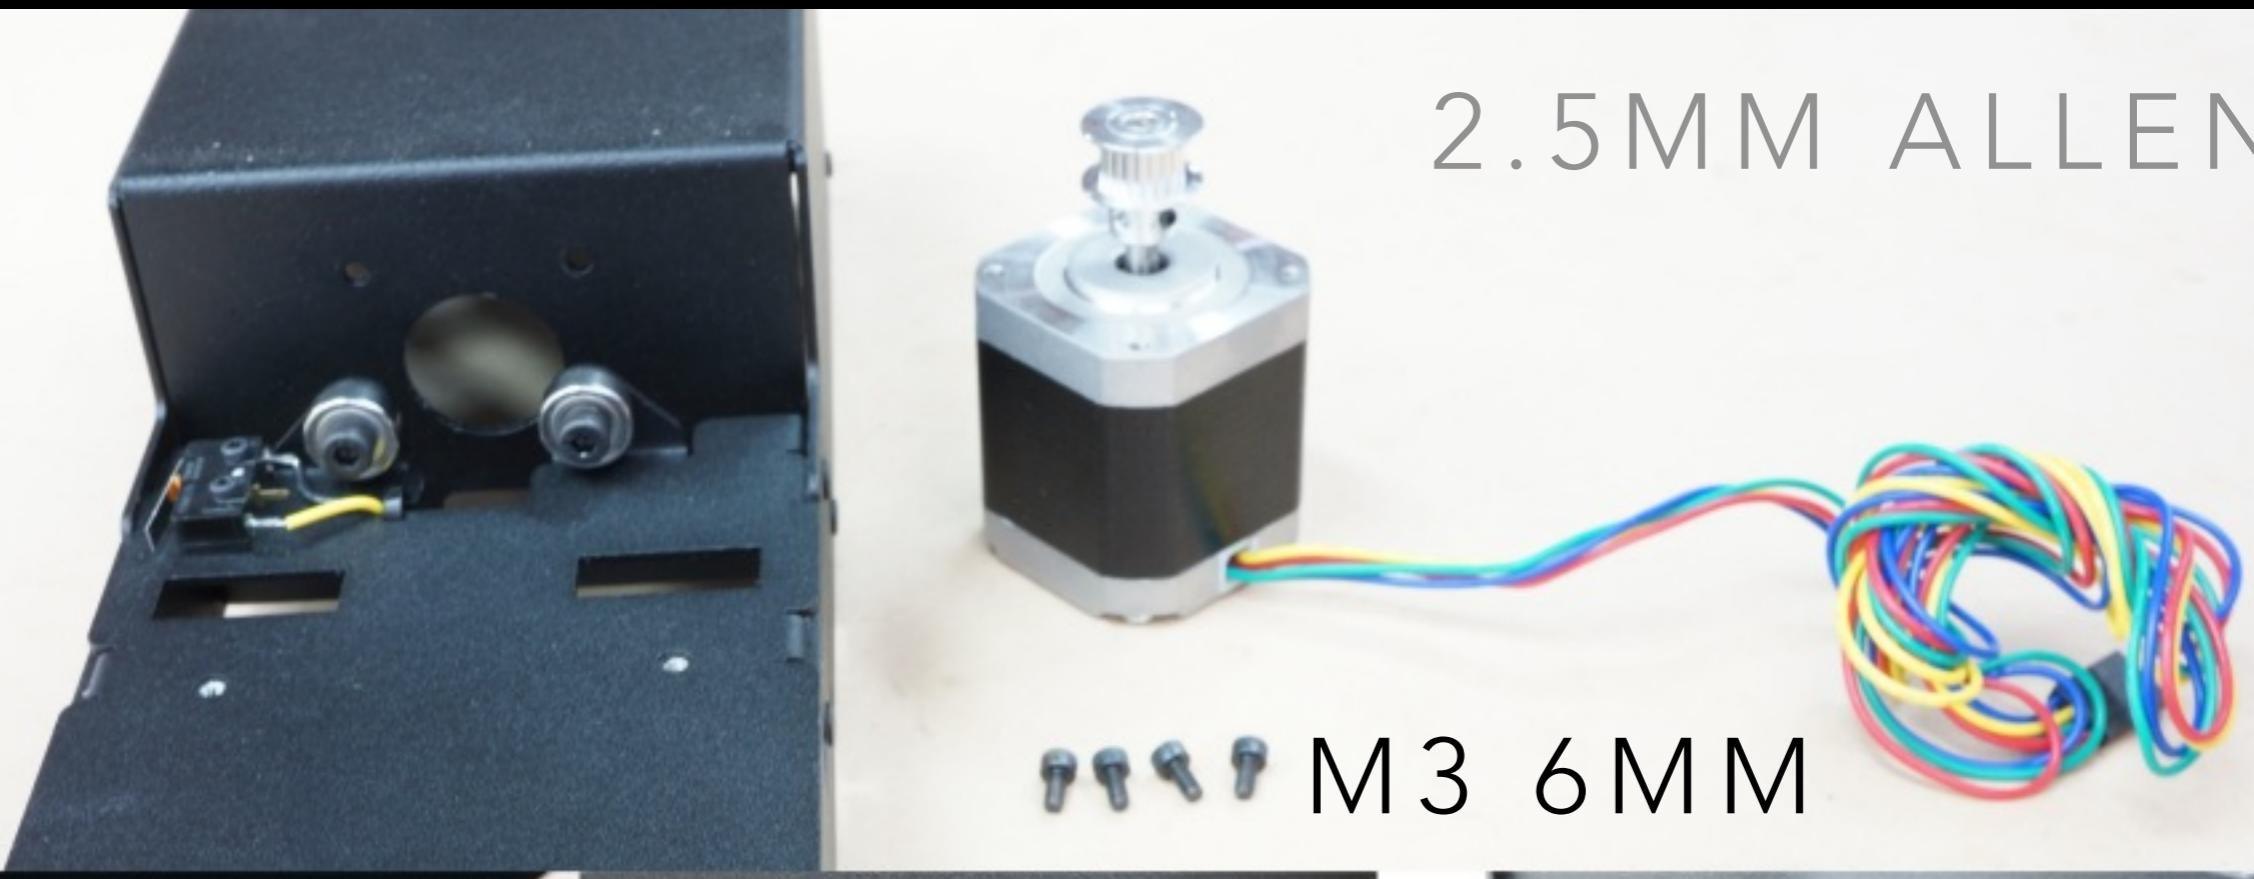


05

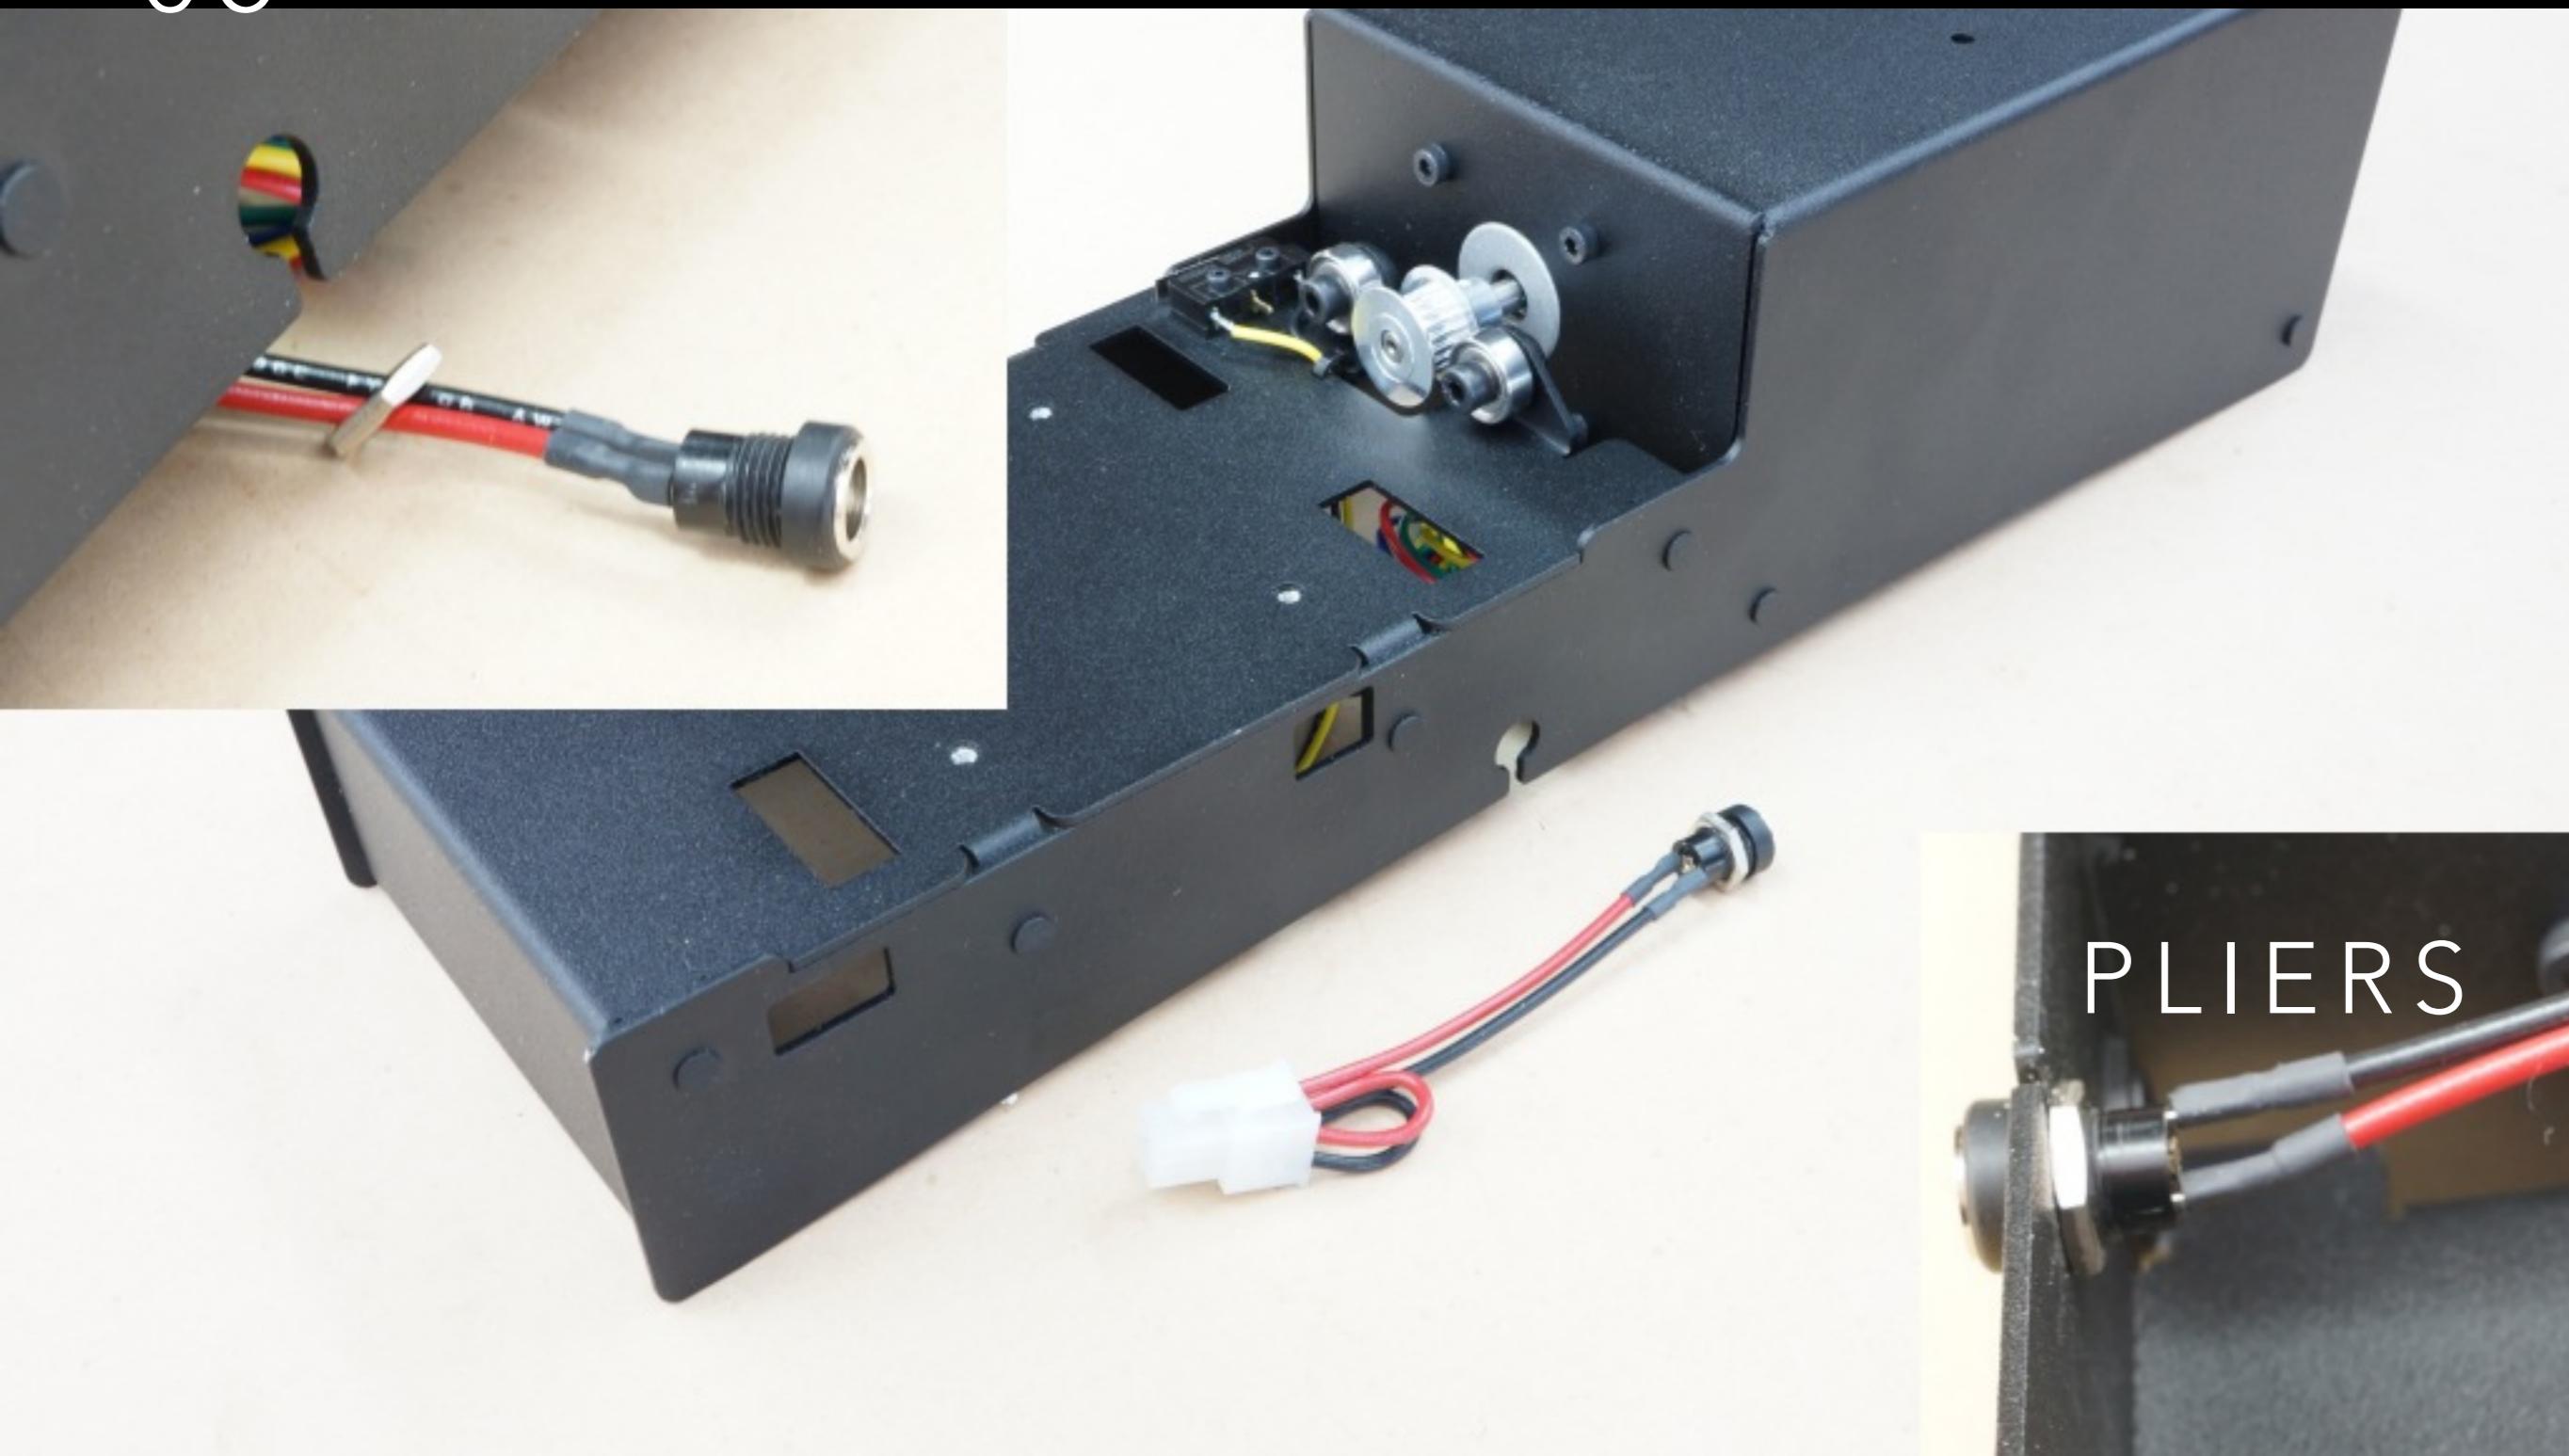

06

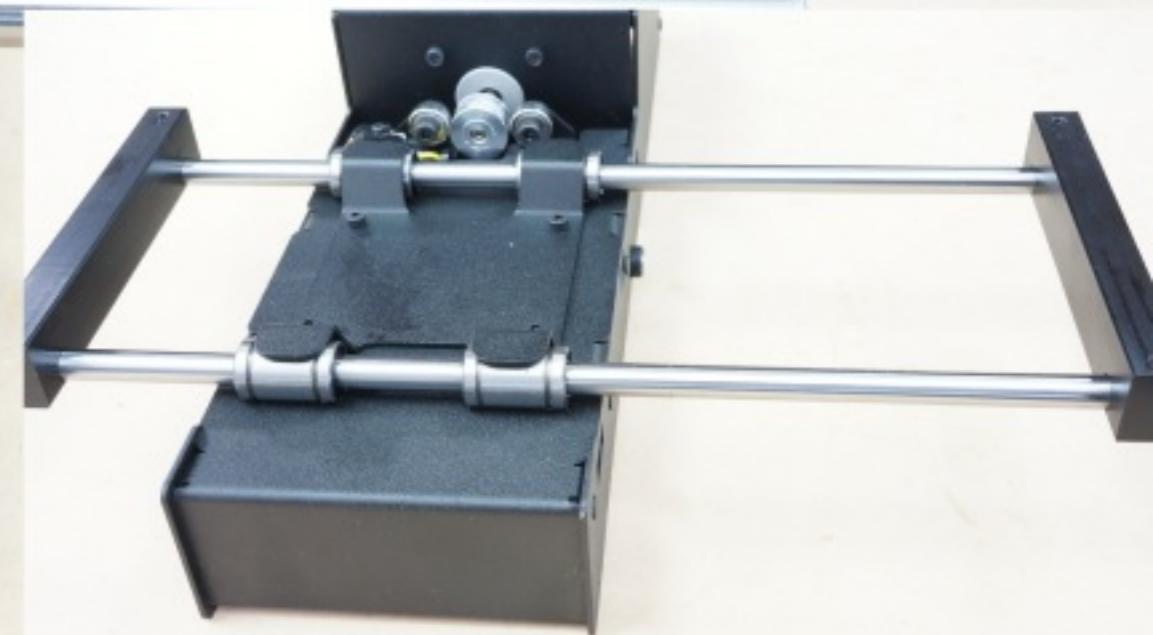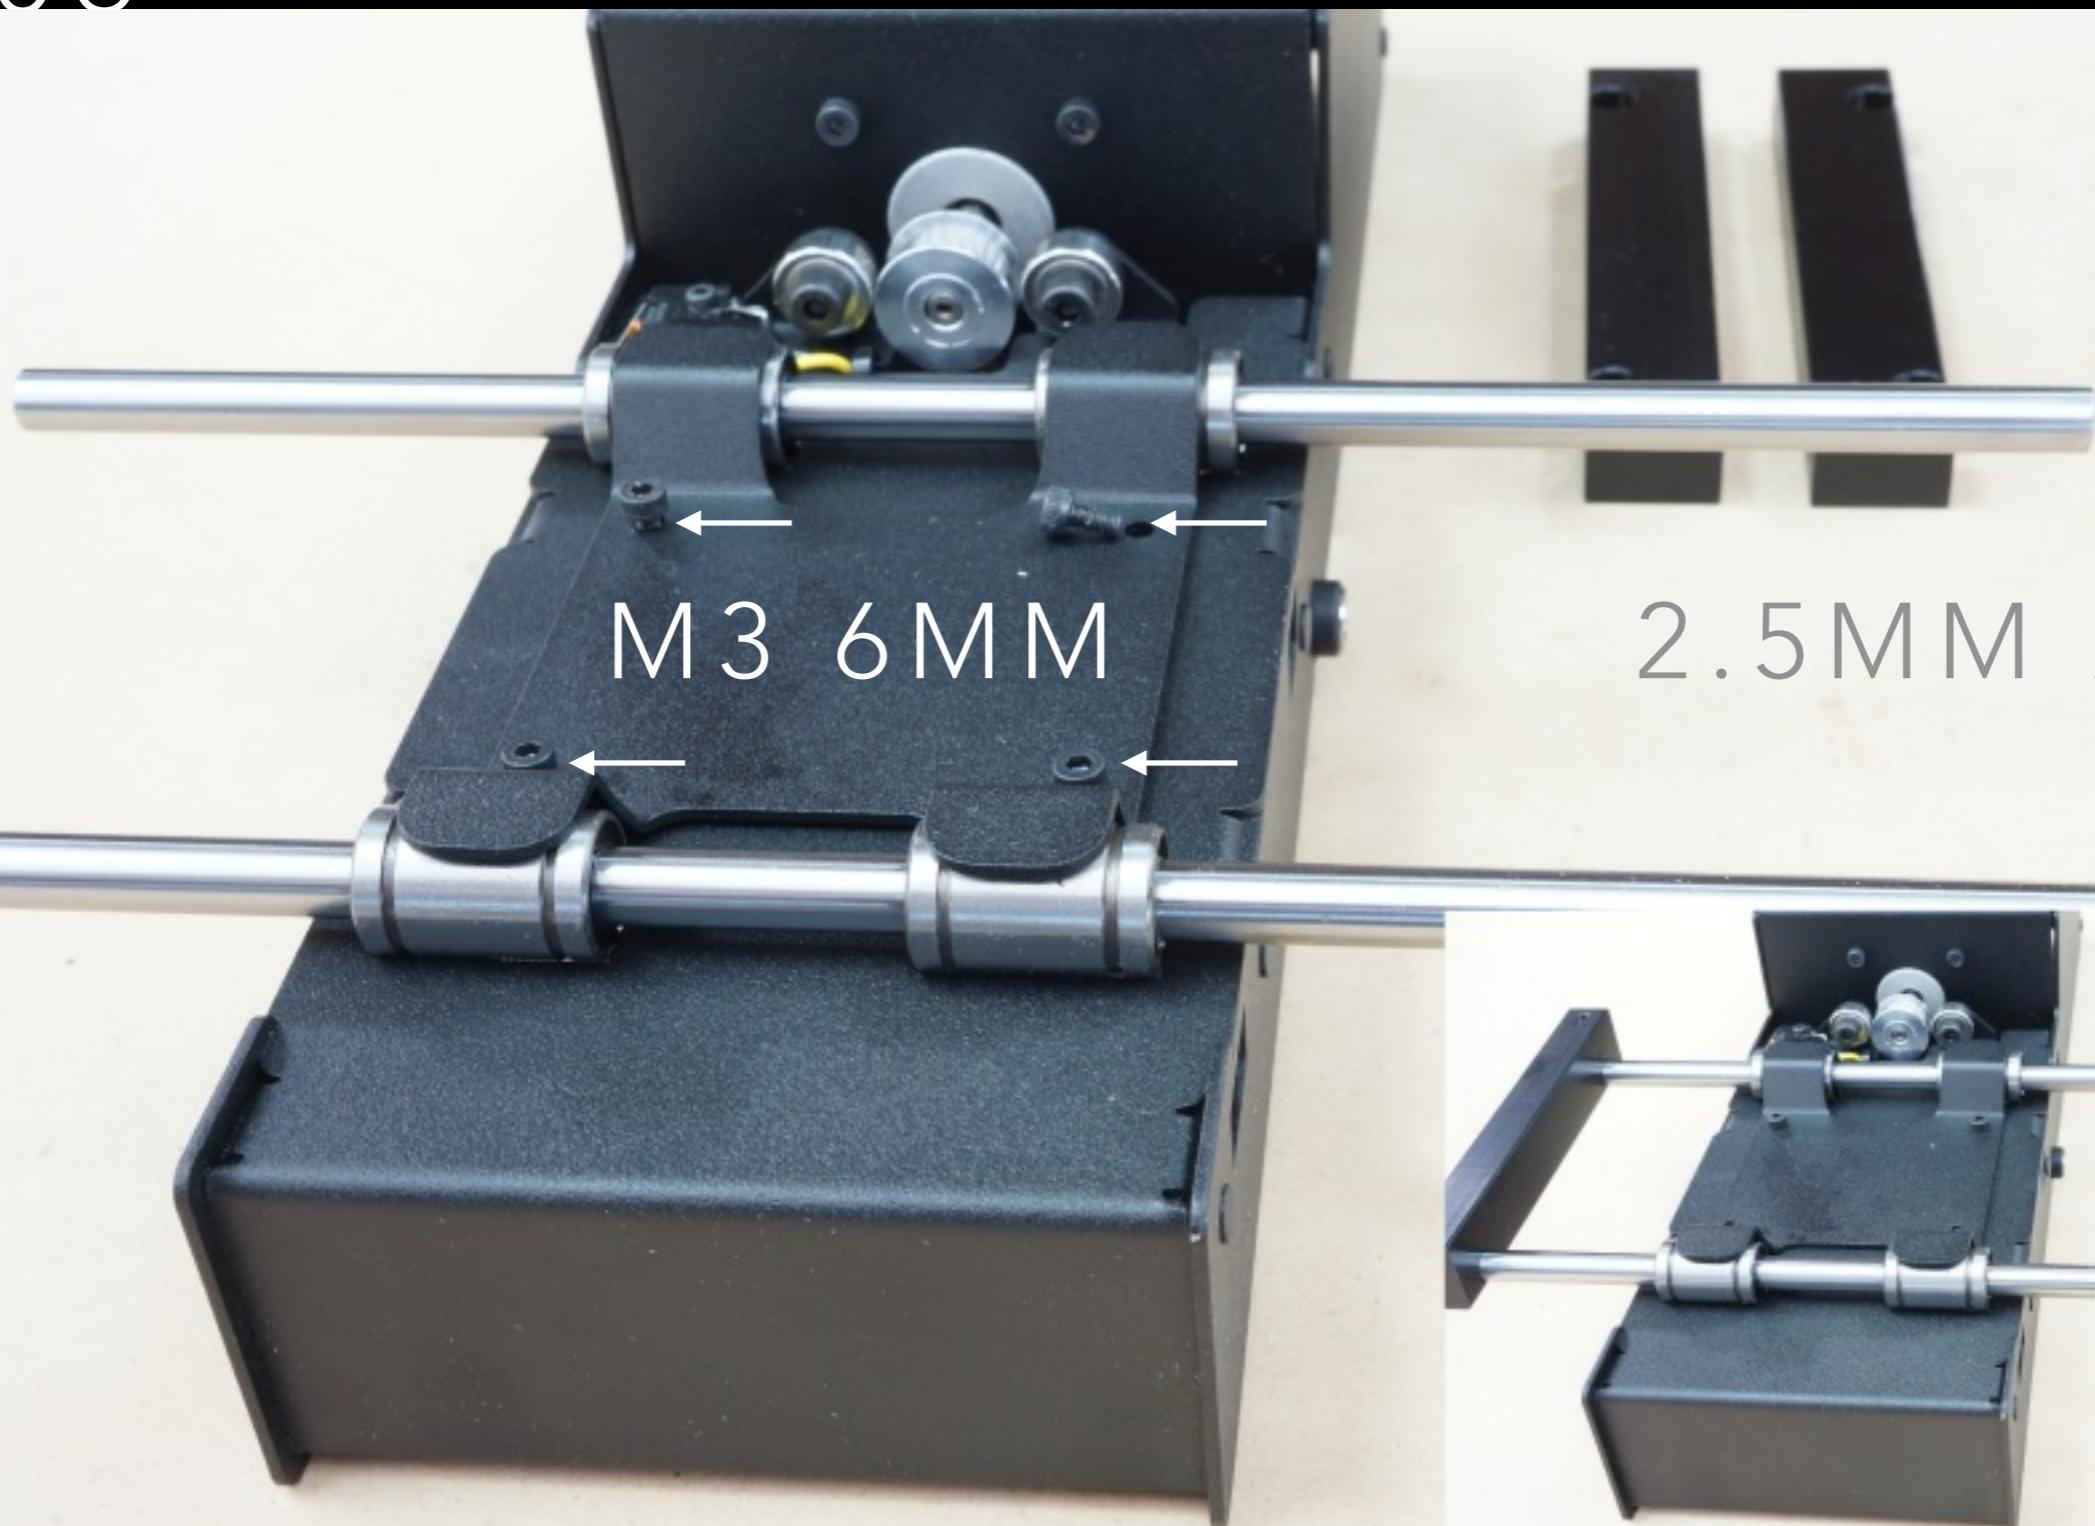

07

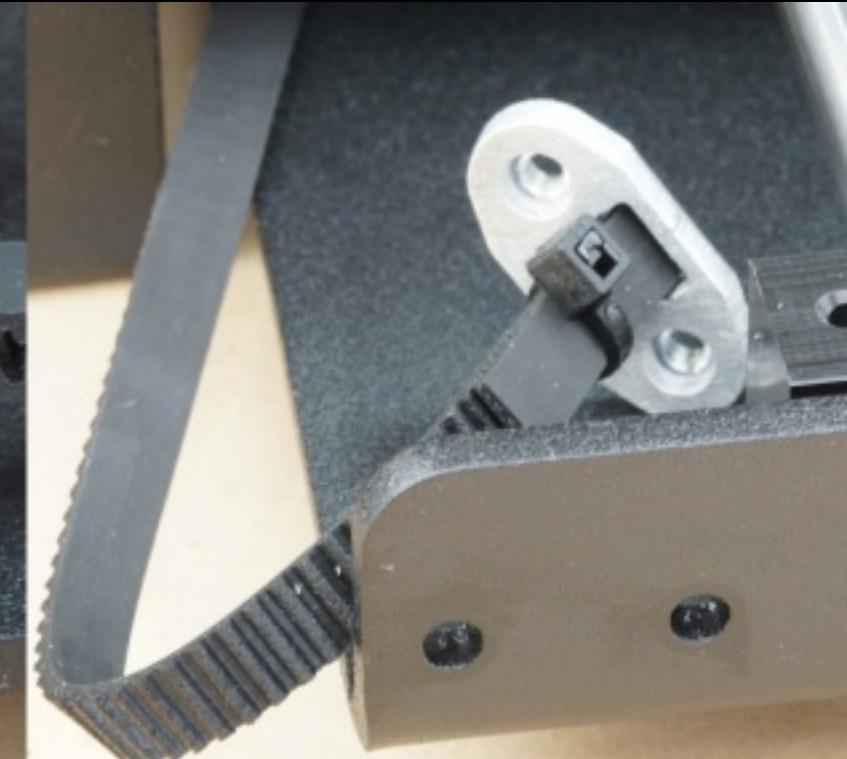

M3 10MM



2.5MM ALLEN




M3 16MM



08

M3 10MM


M3 16MM

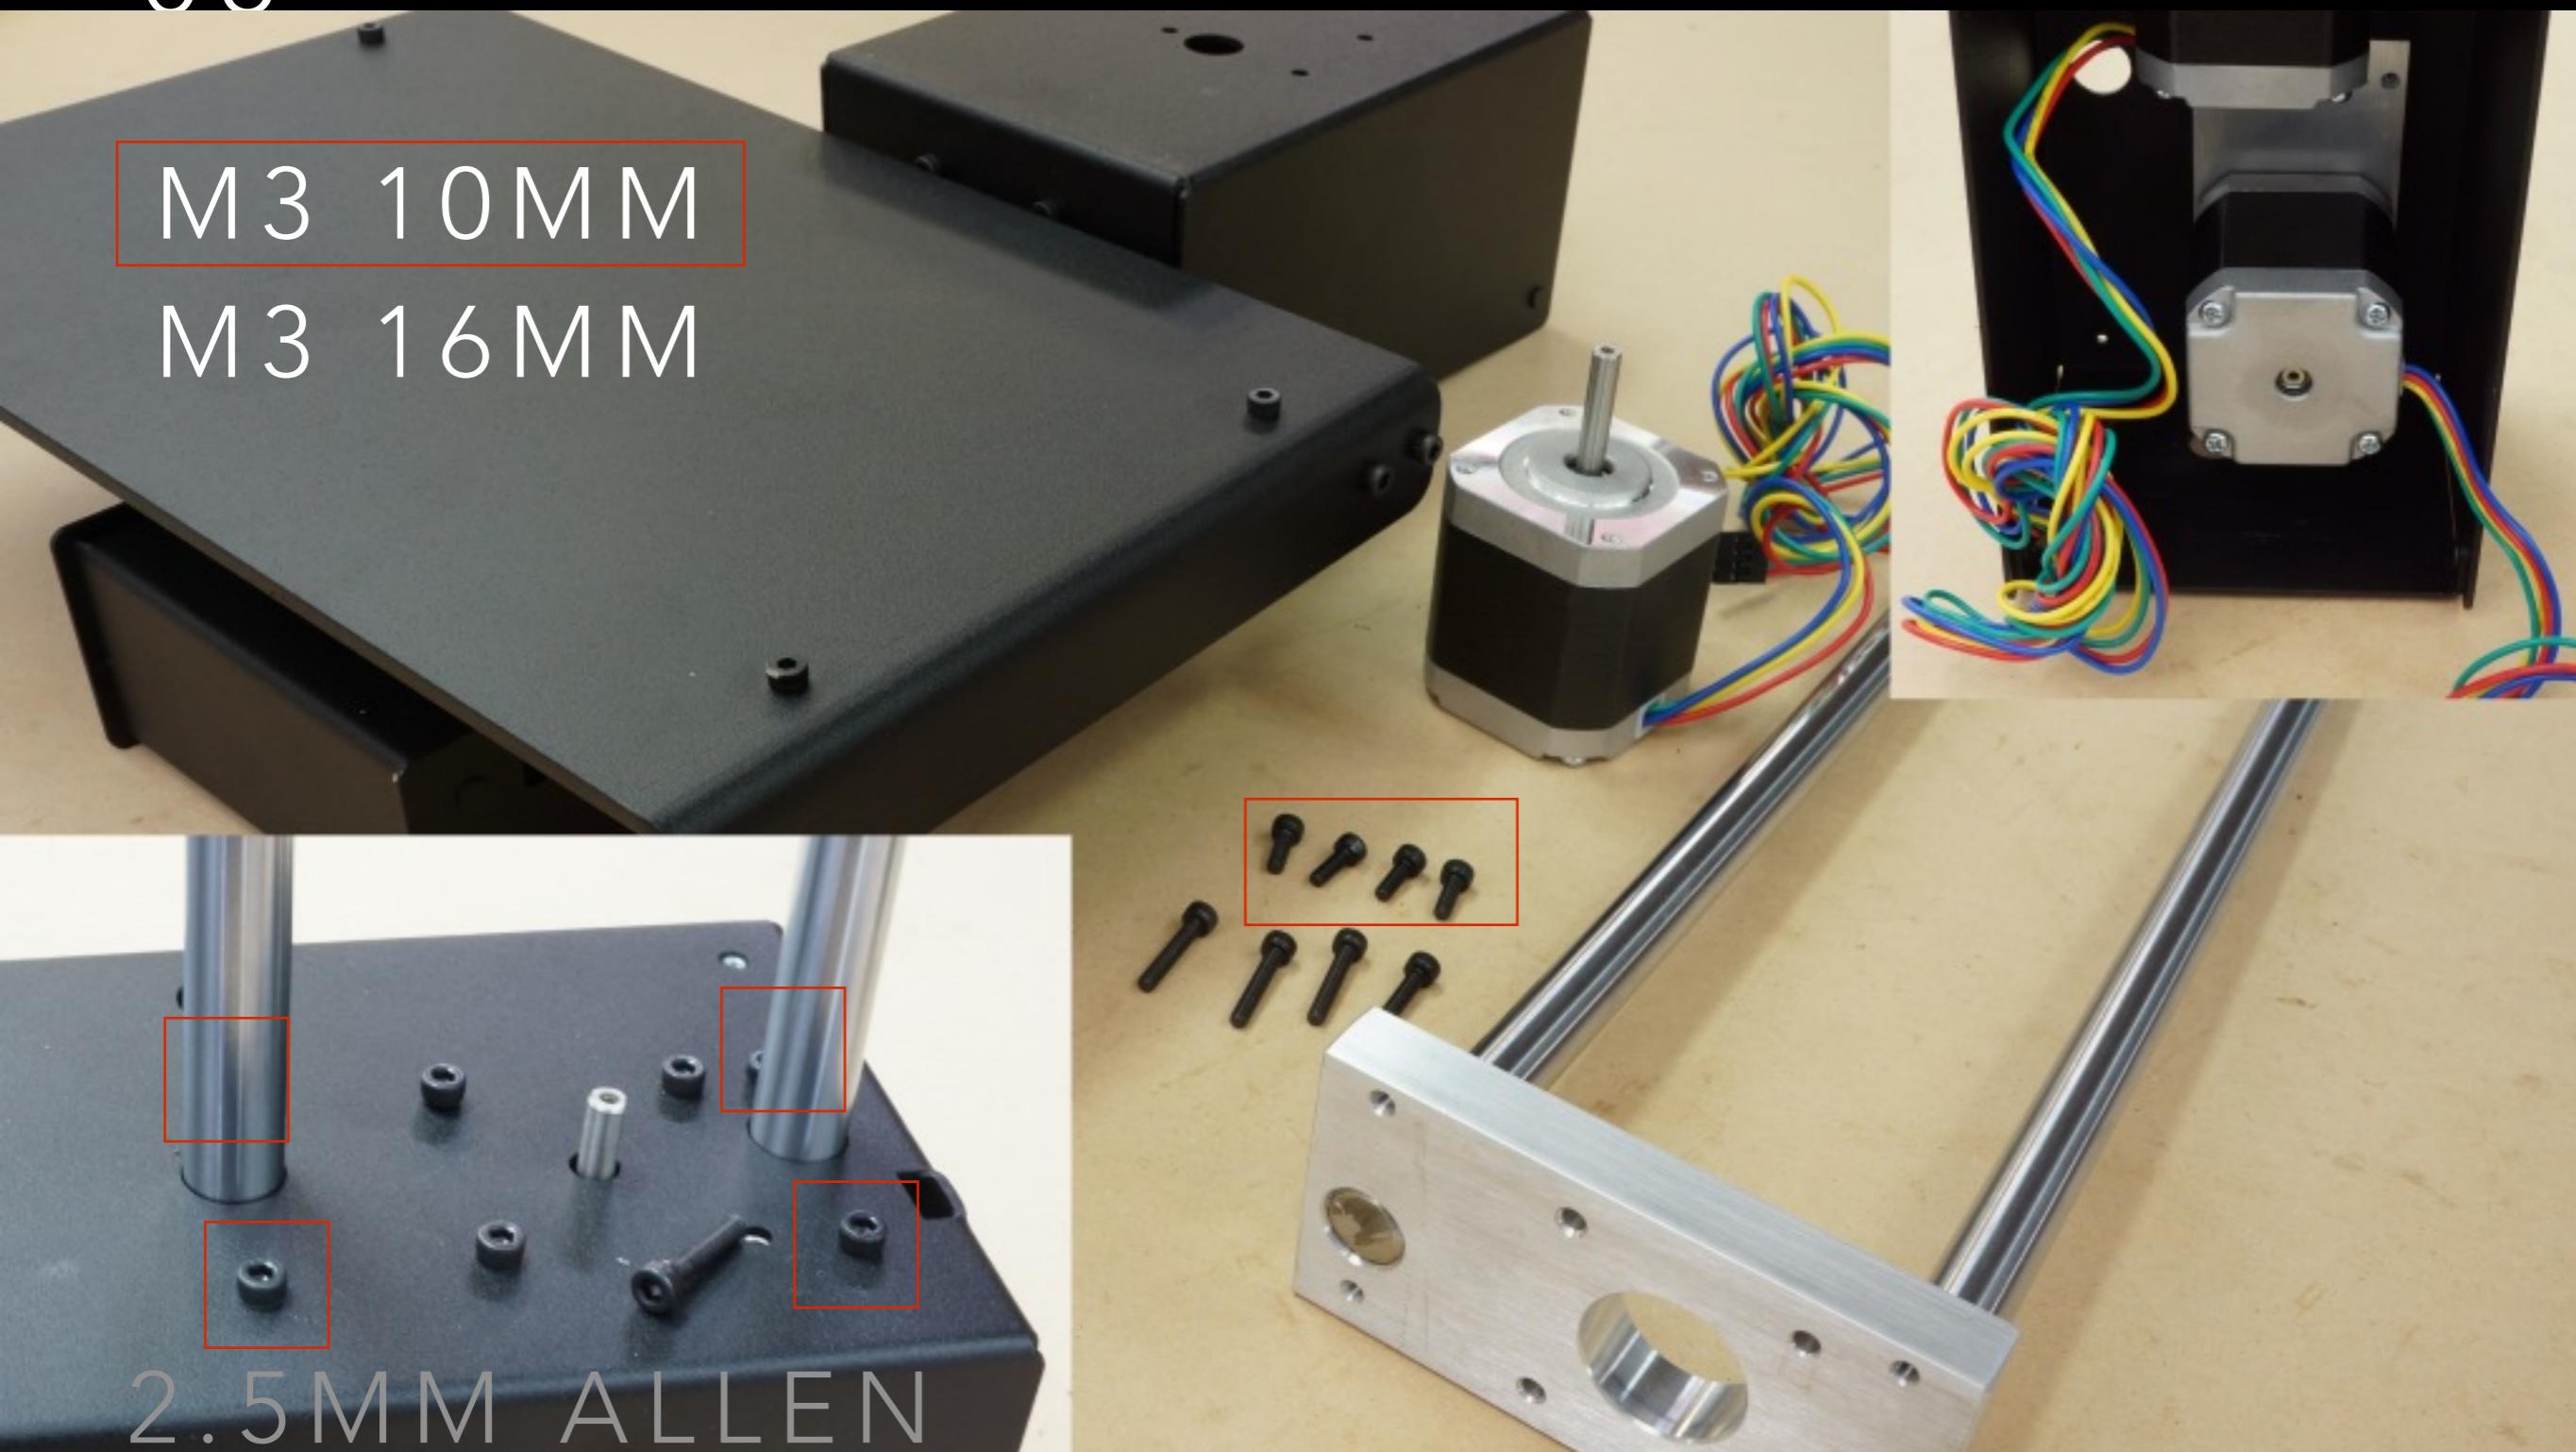

09

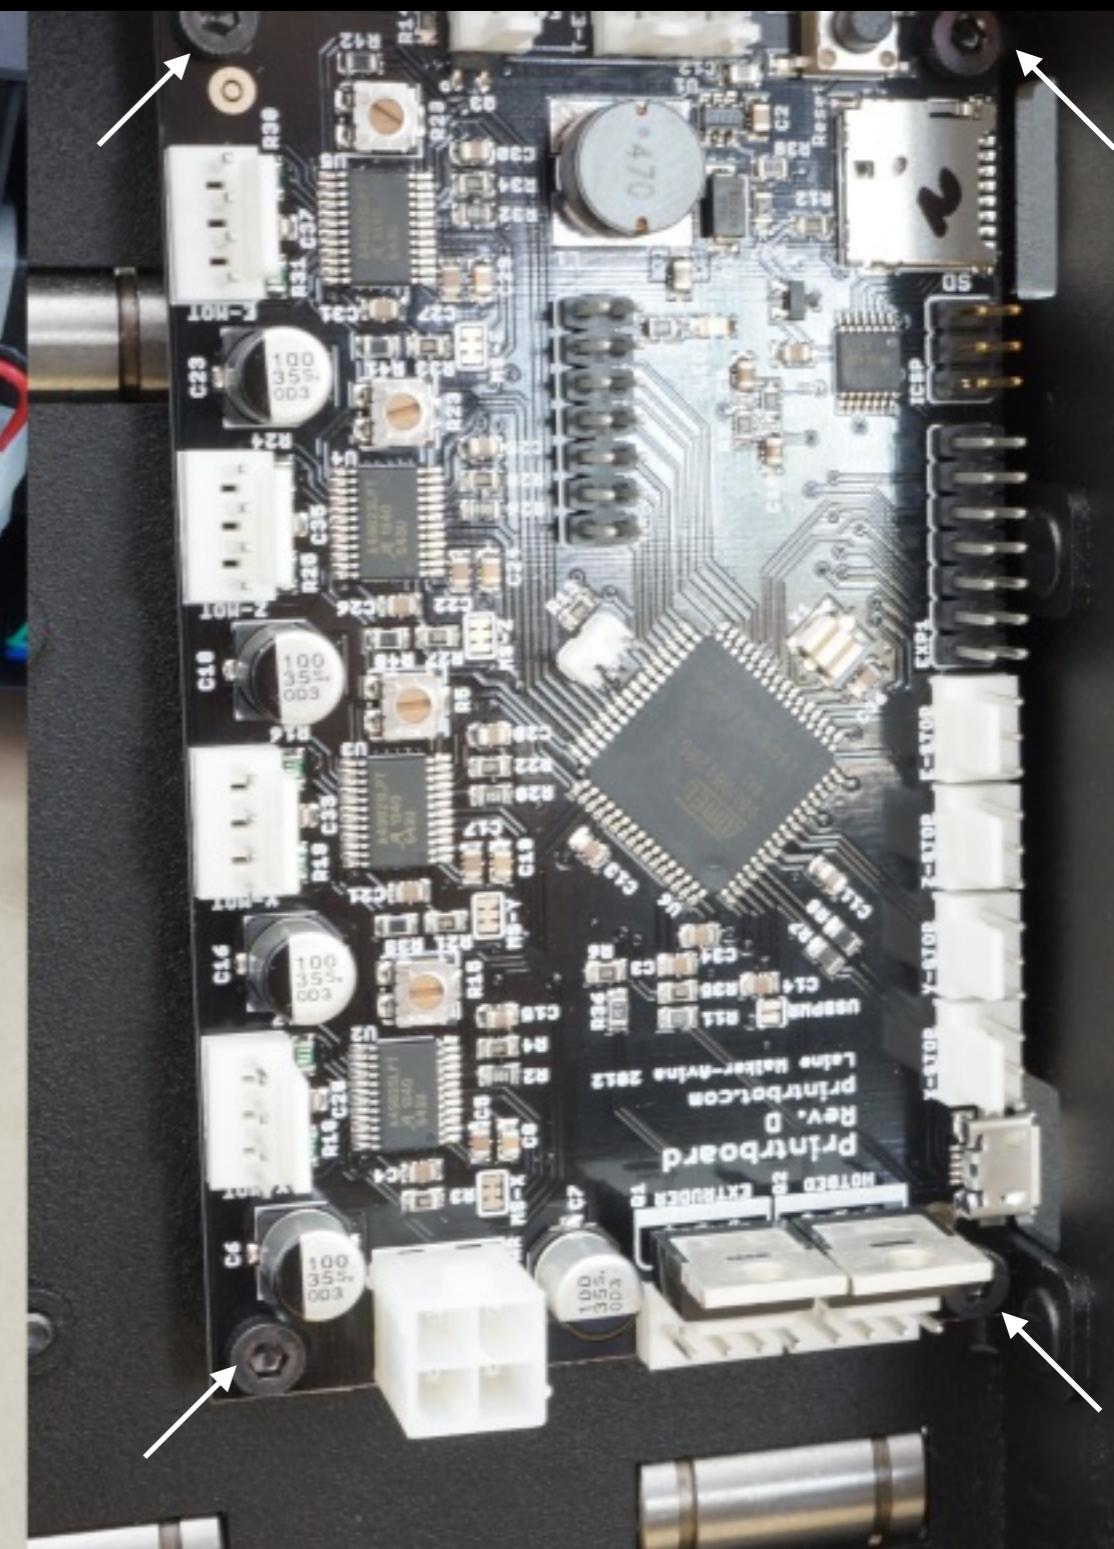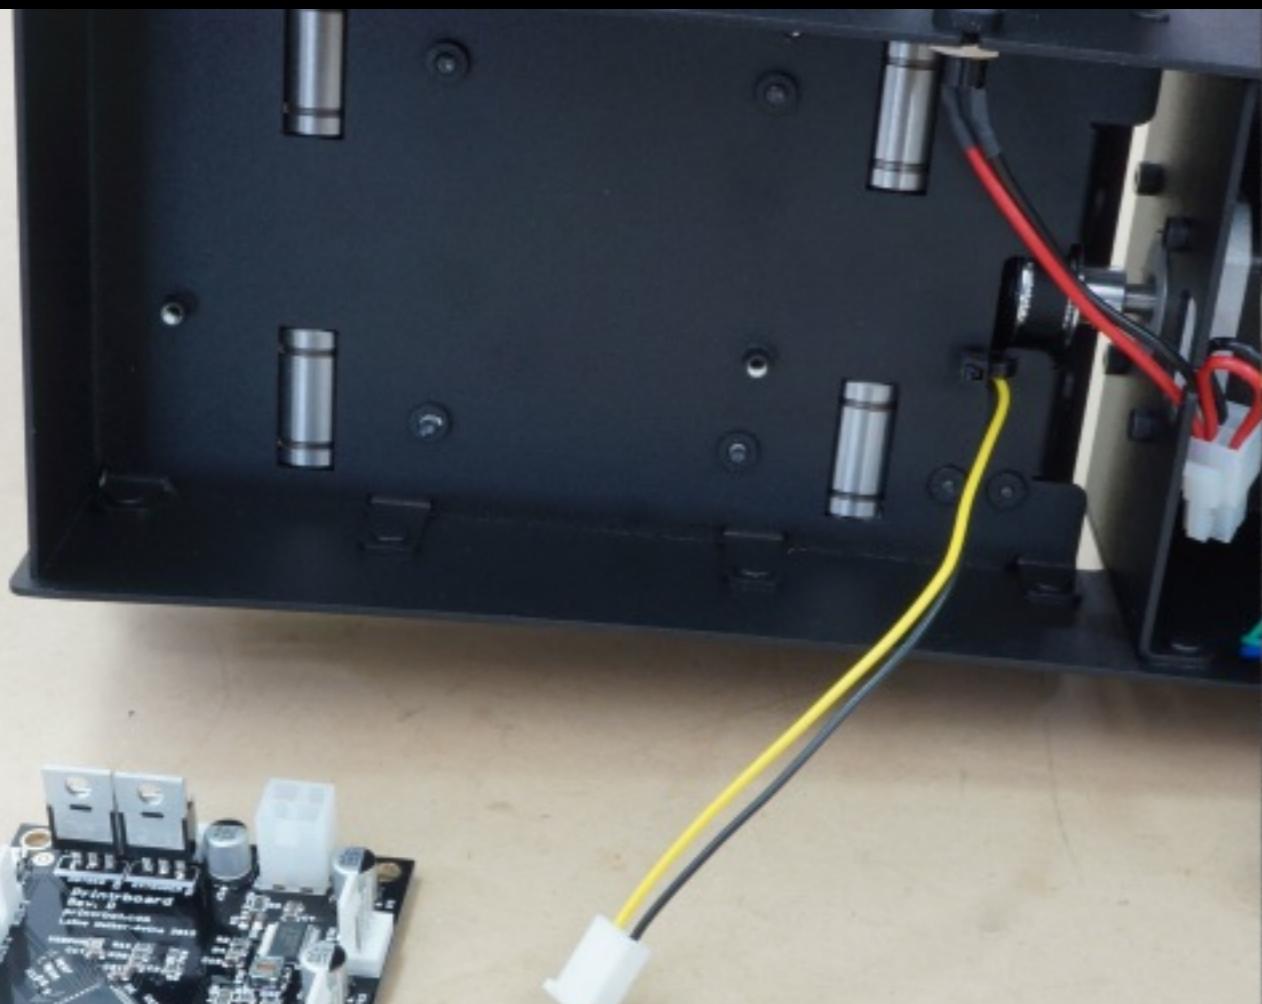

10

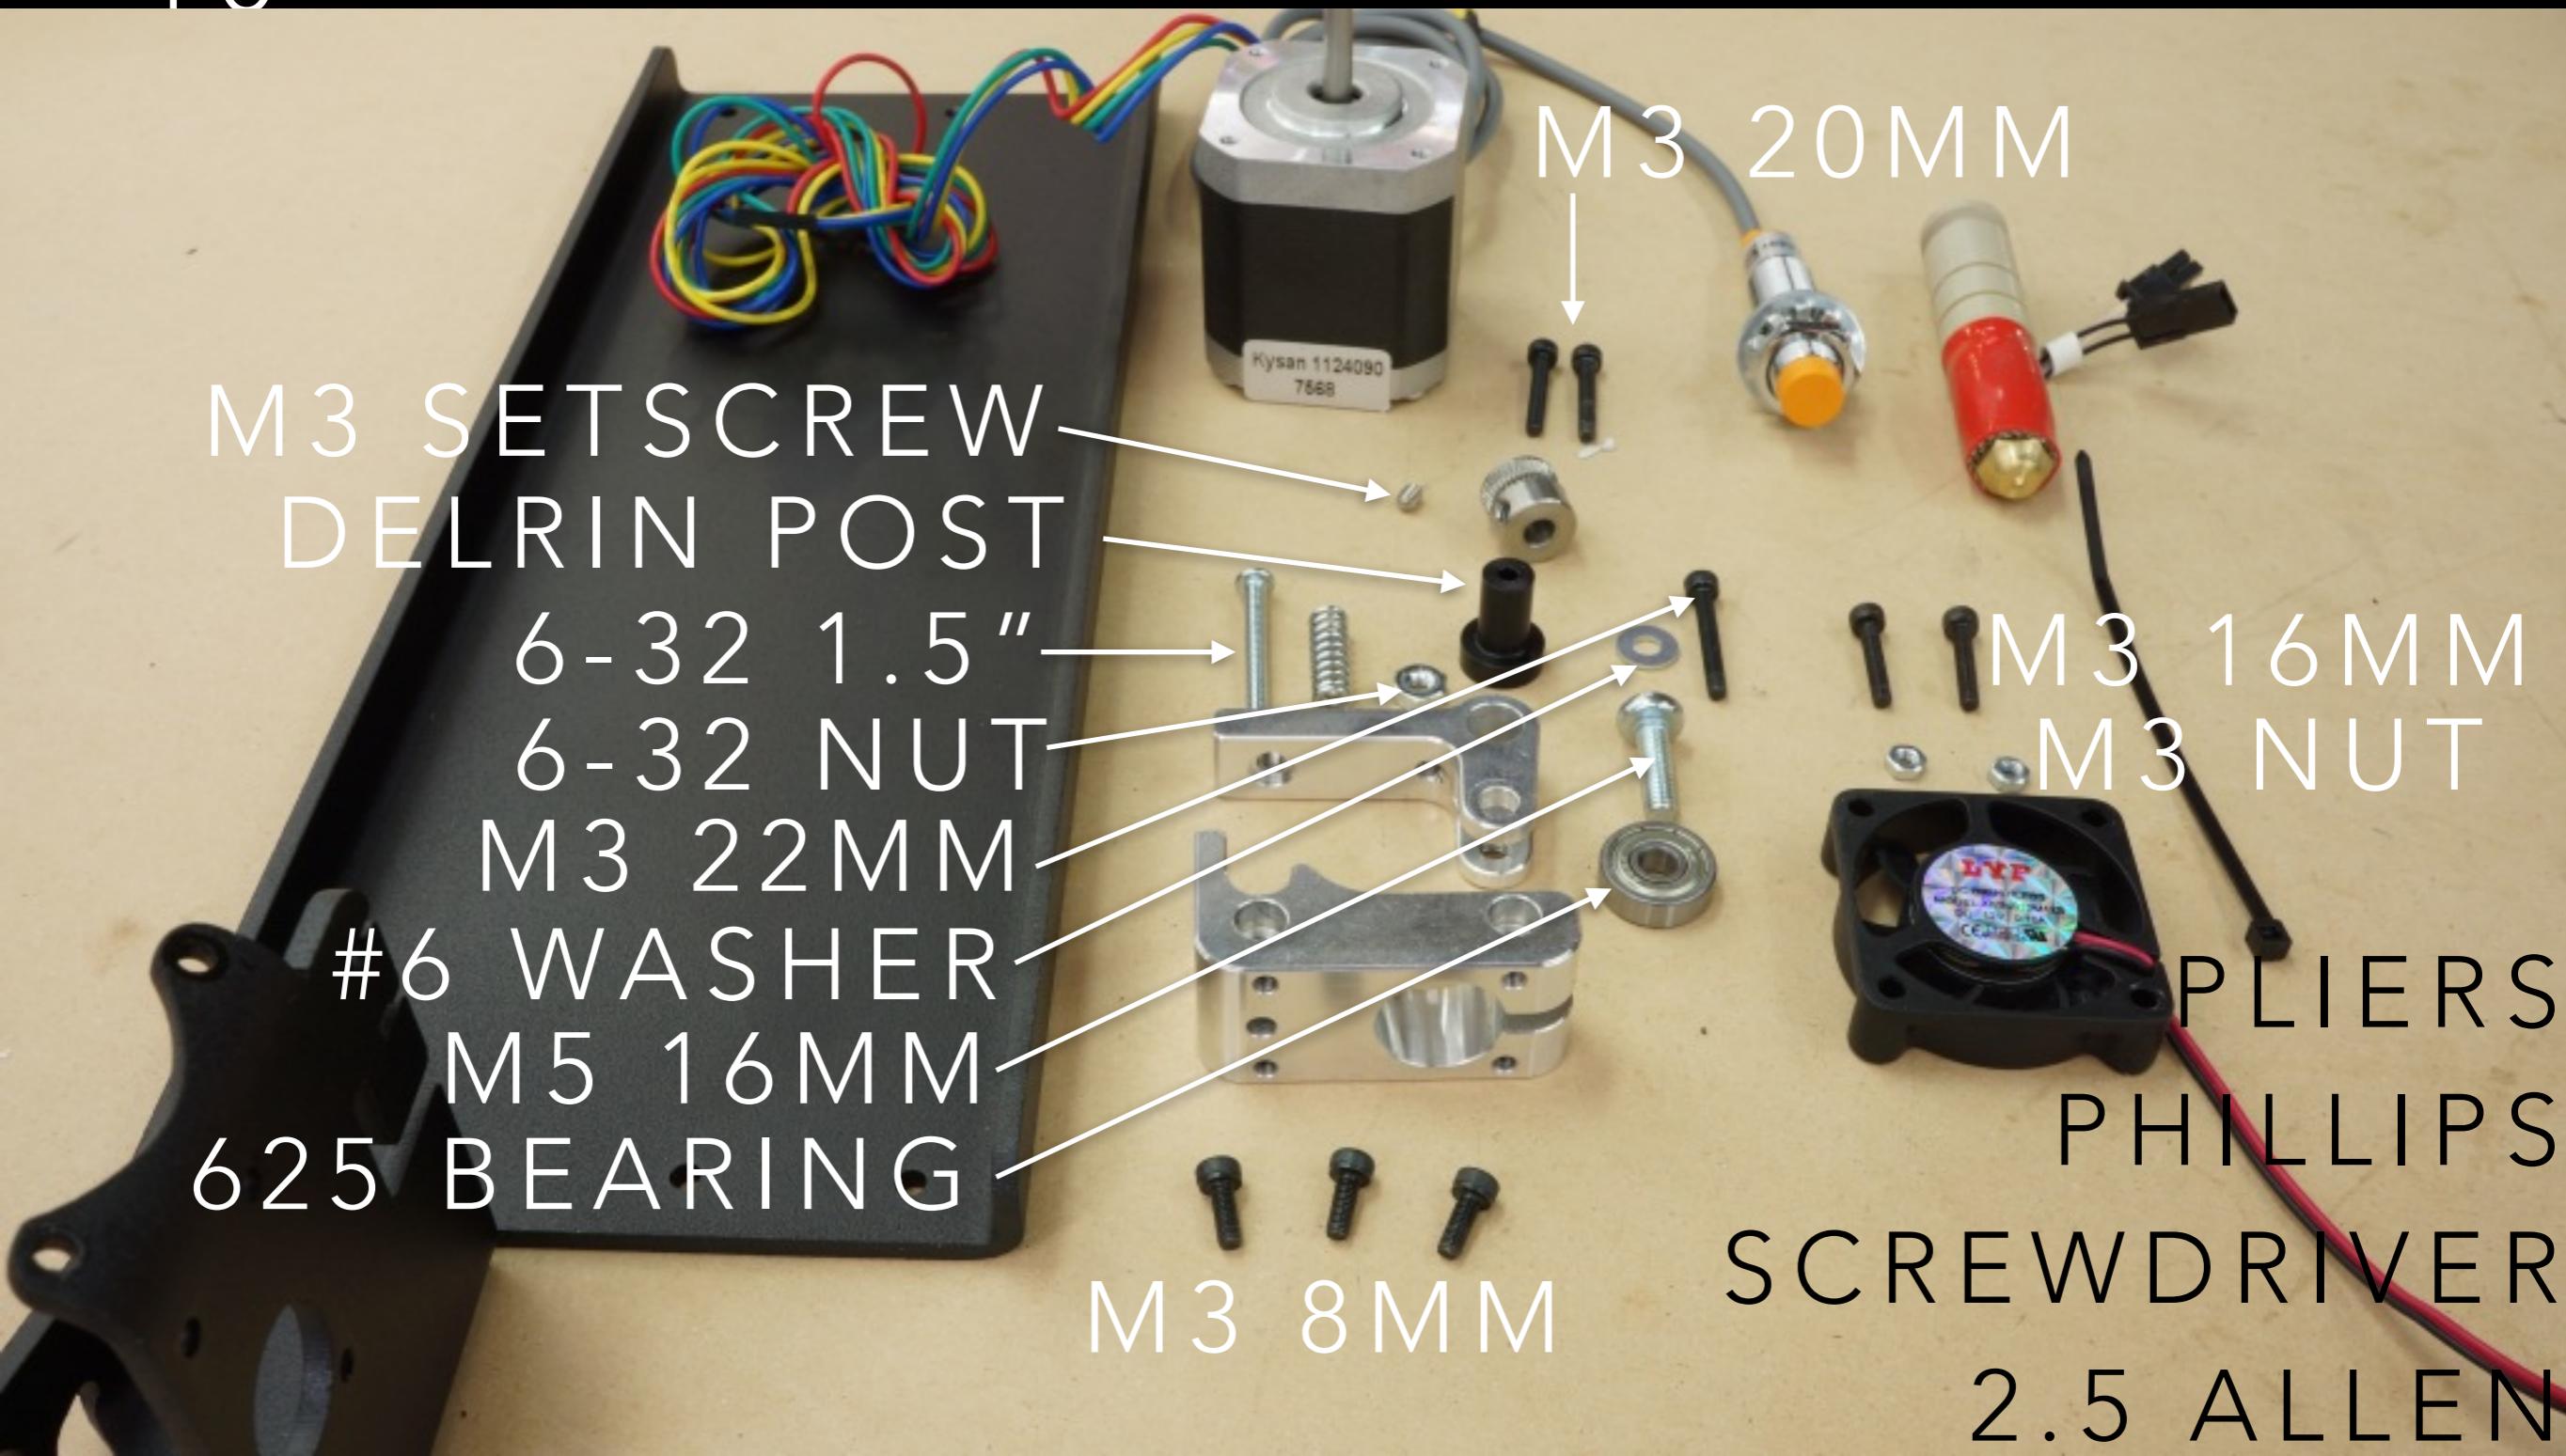

11

BLUE LOCTITE



M3 SETSCREW




1.5MM ALLEN



2.5 ALLEN

PHILLIPS SCREWDRIVER


12

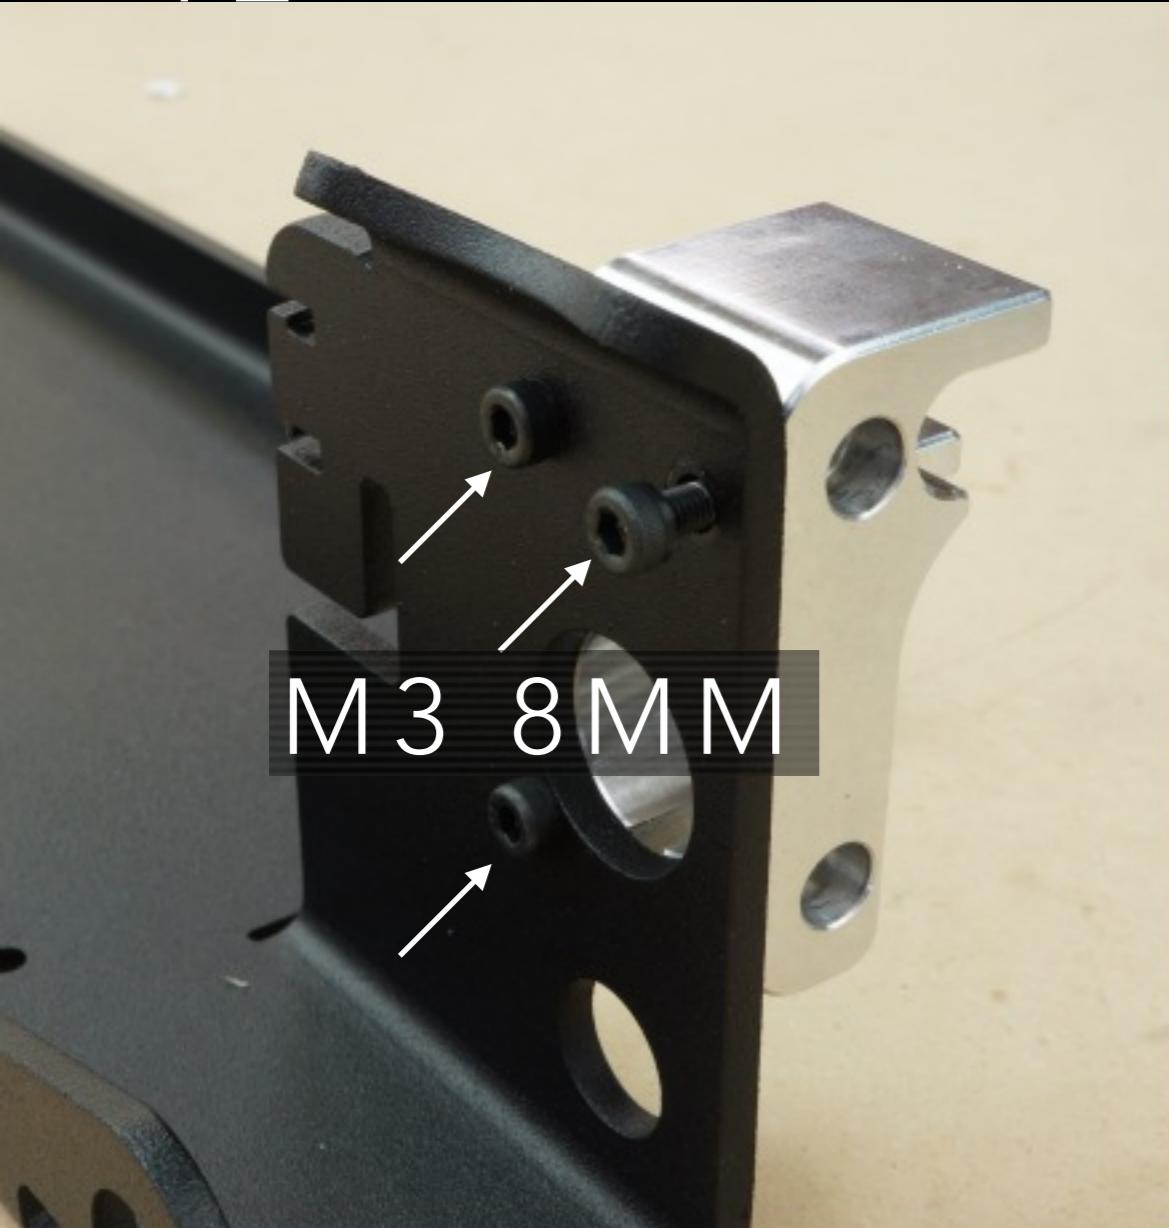



2.5MM ALLEN



13

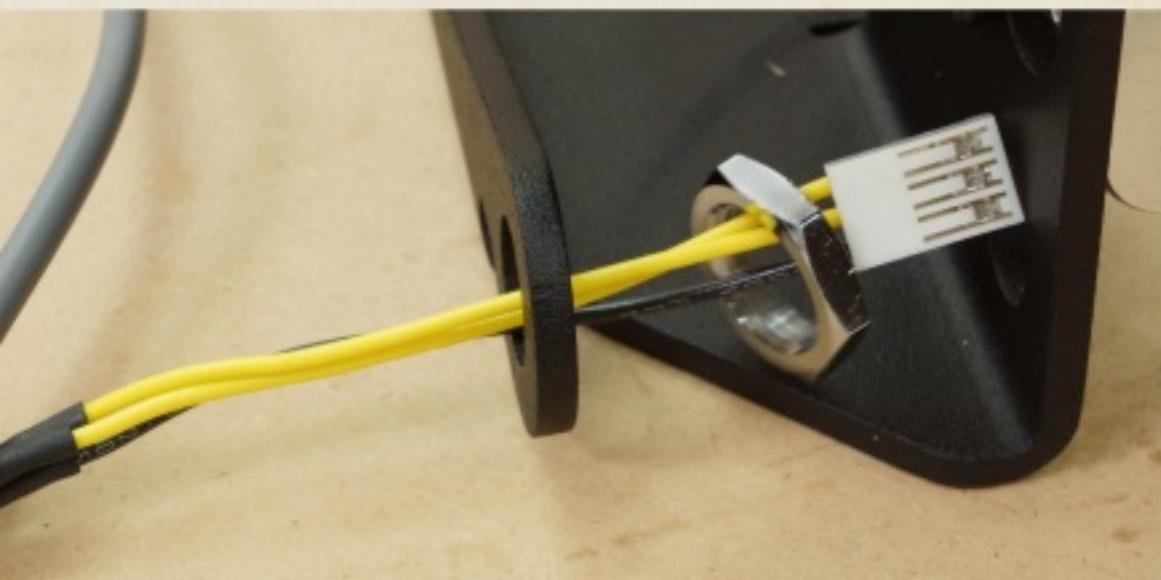

14

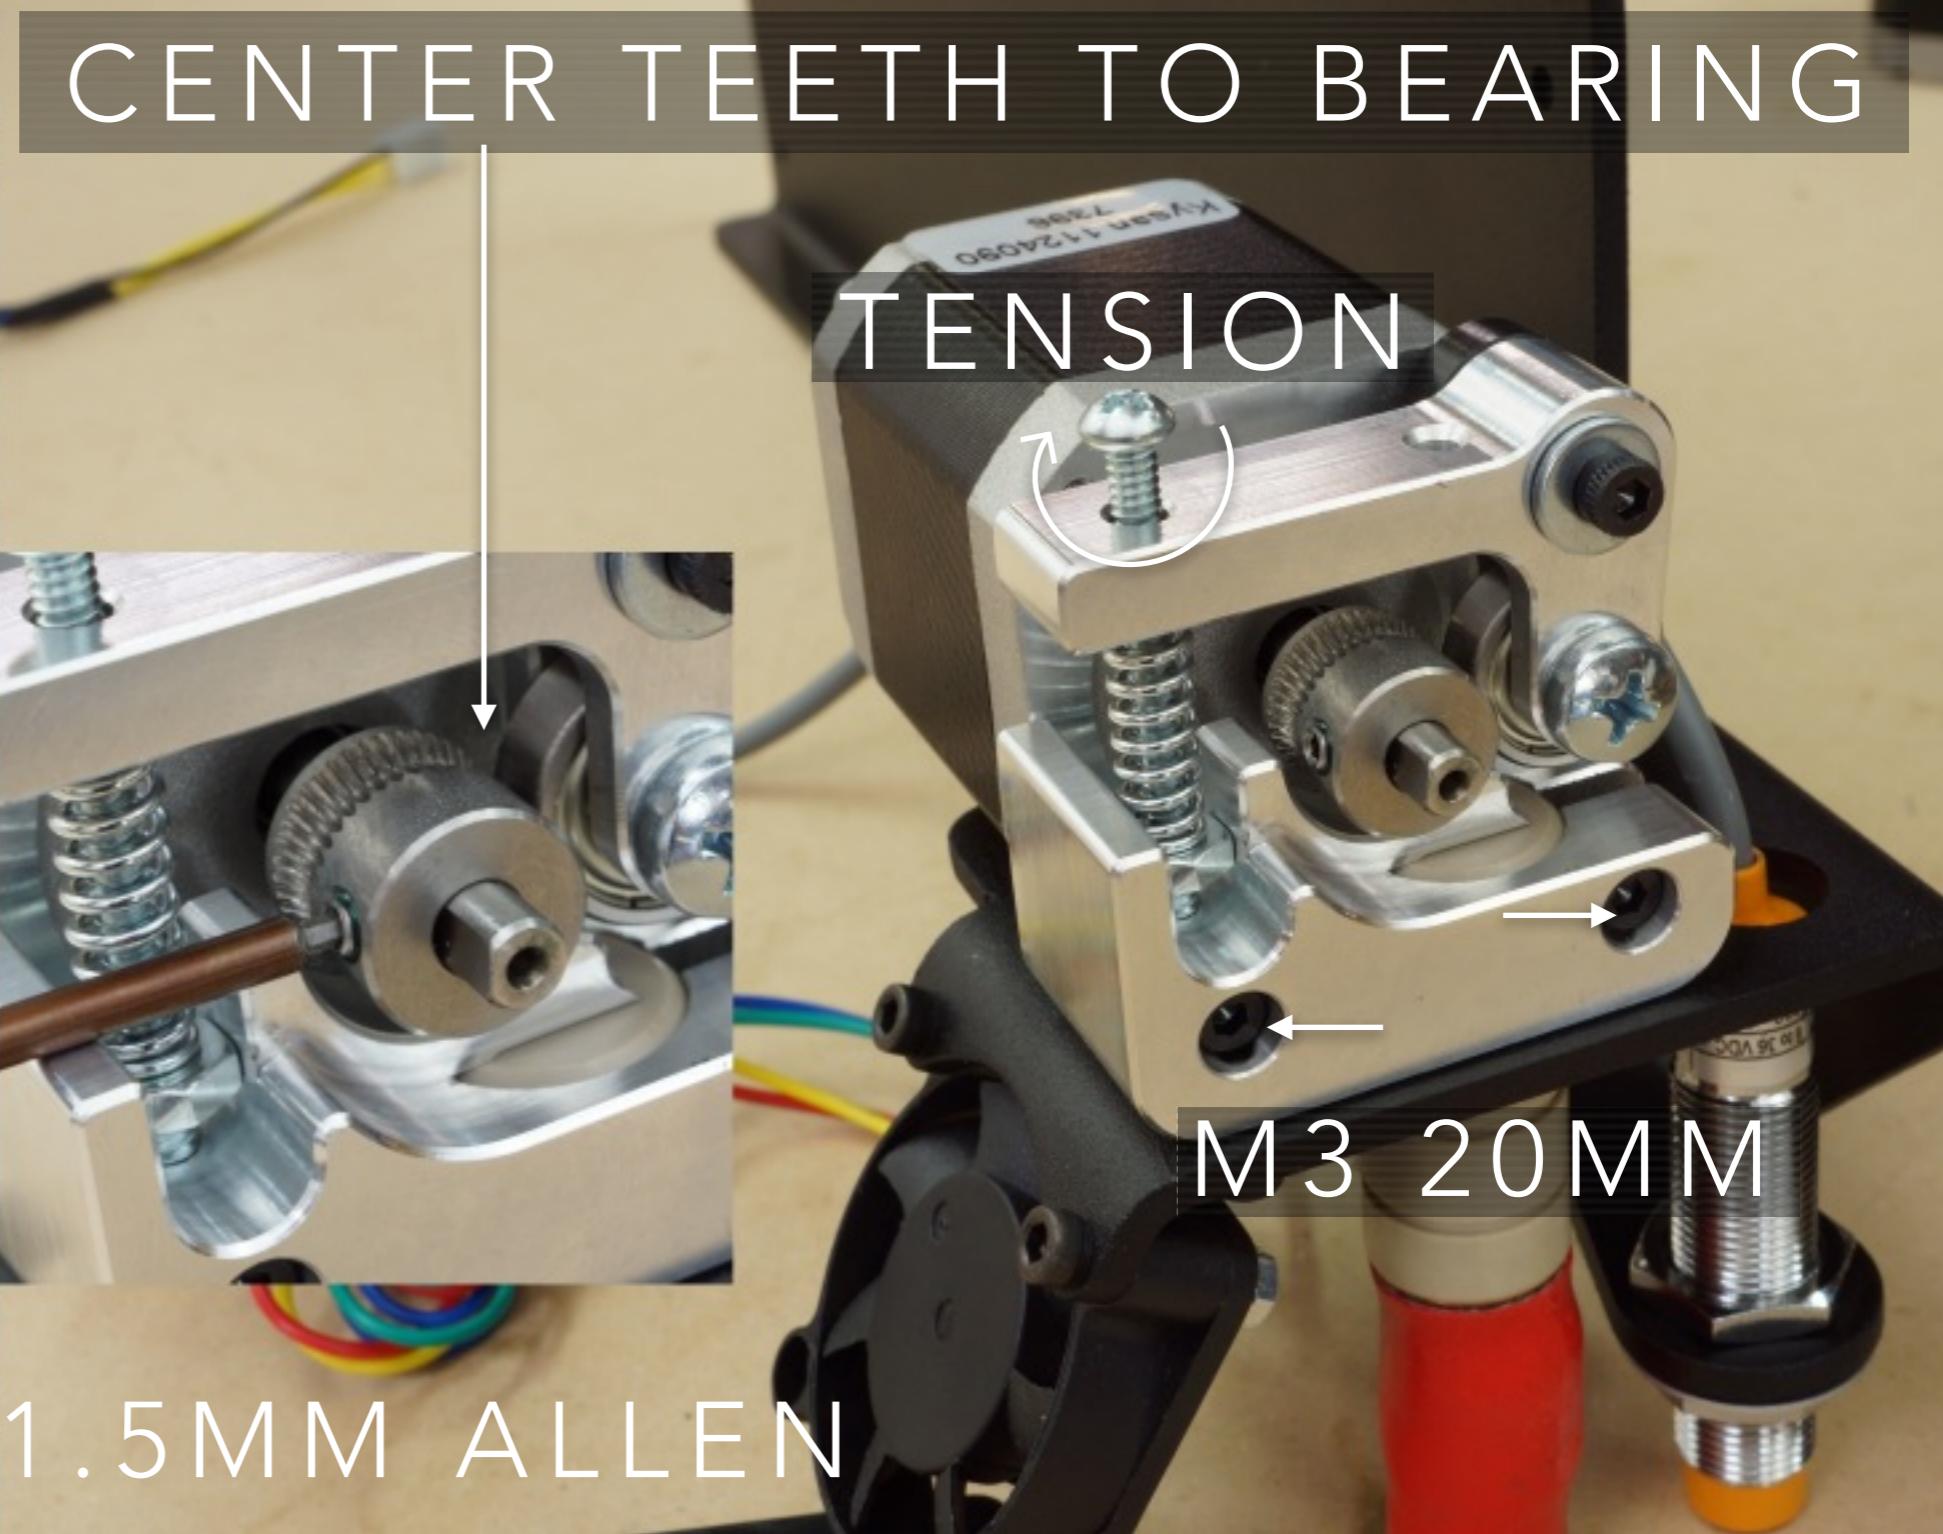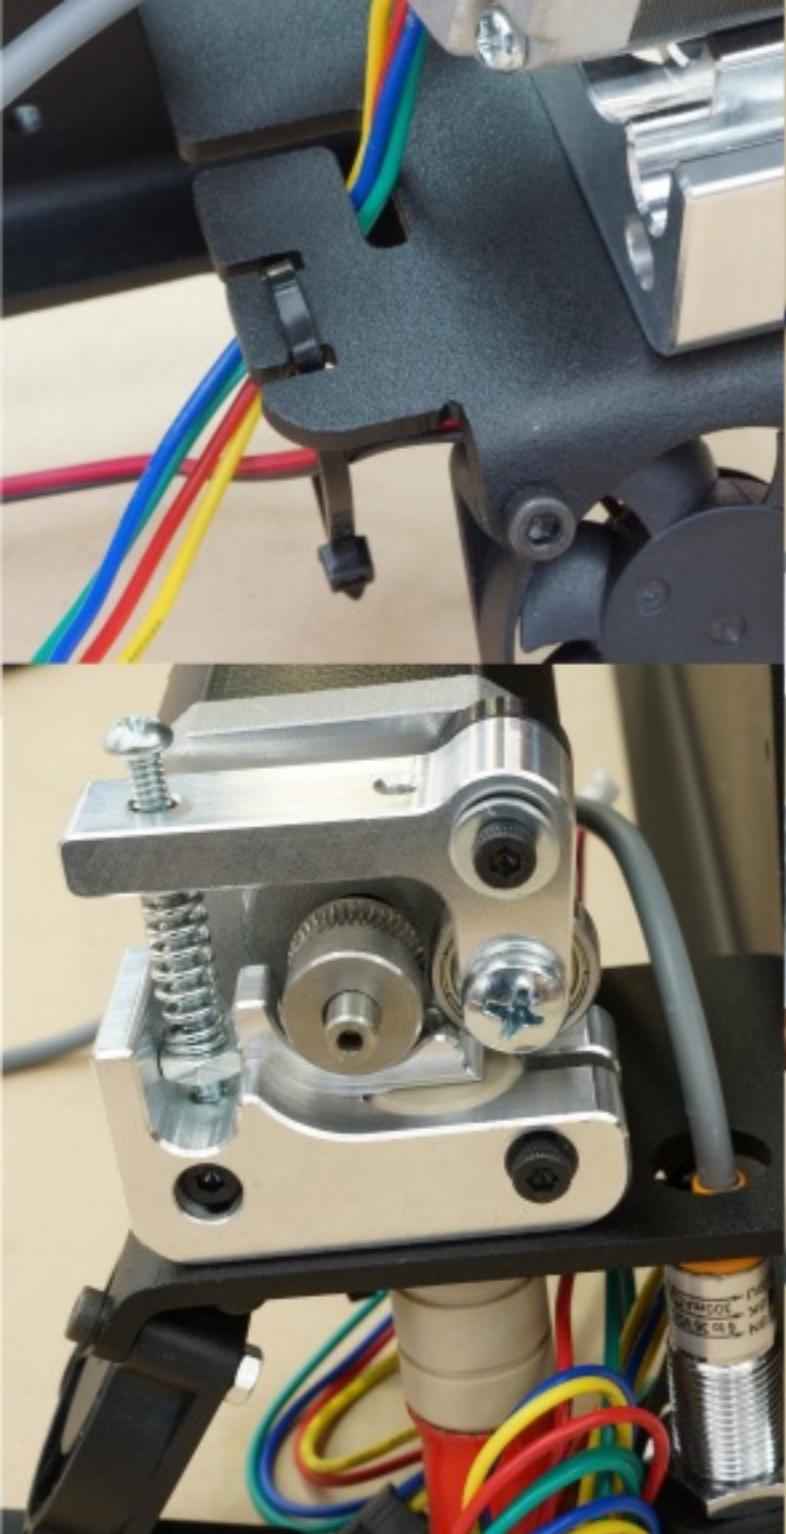

15

M3 SETSCREW
BLUE LOCTITE

Kysan 1124090
7568




#6 WASHER

624 BEARINGS




M4 12MM

M2 10MM

M3 22MM

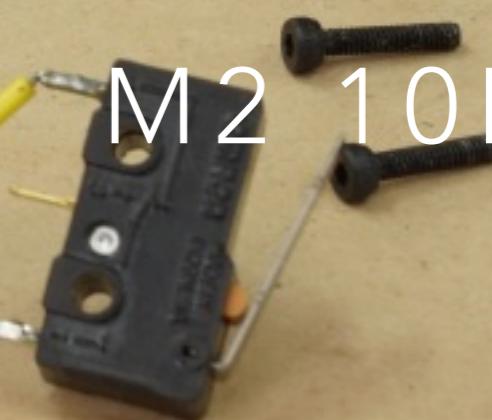


16

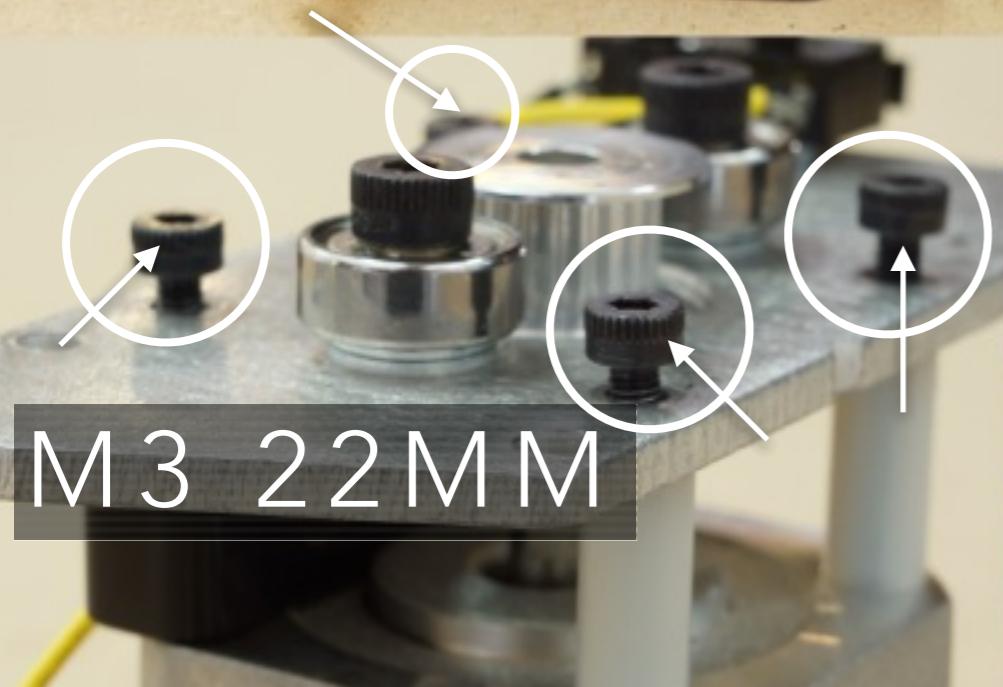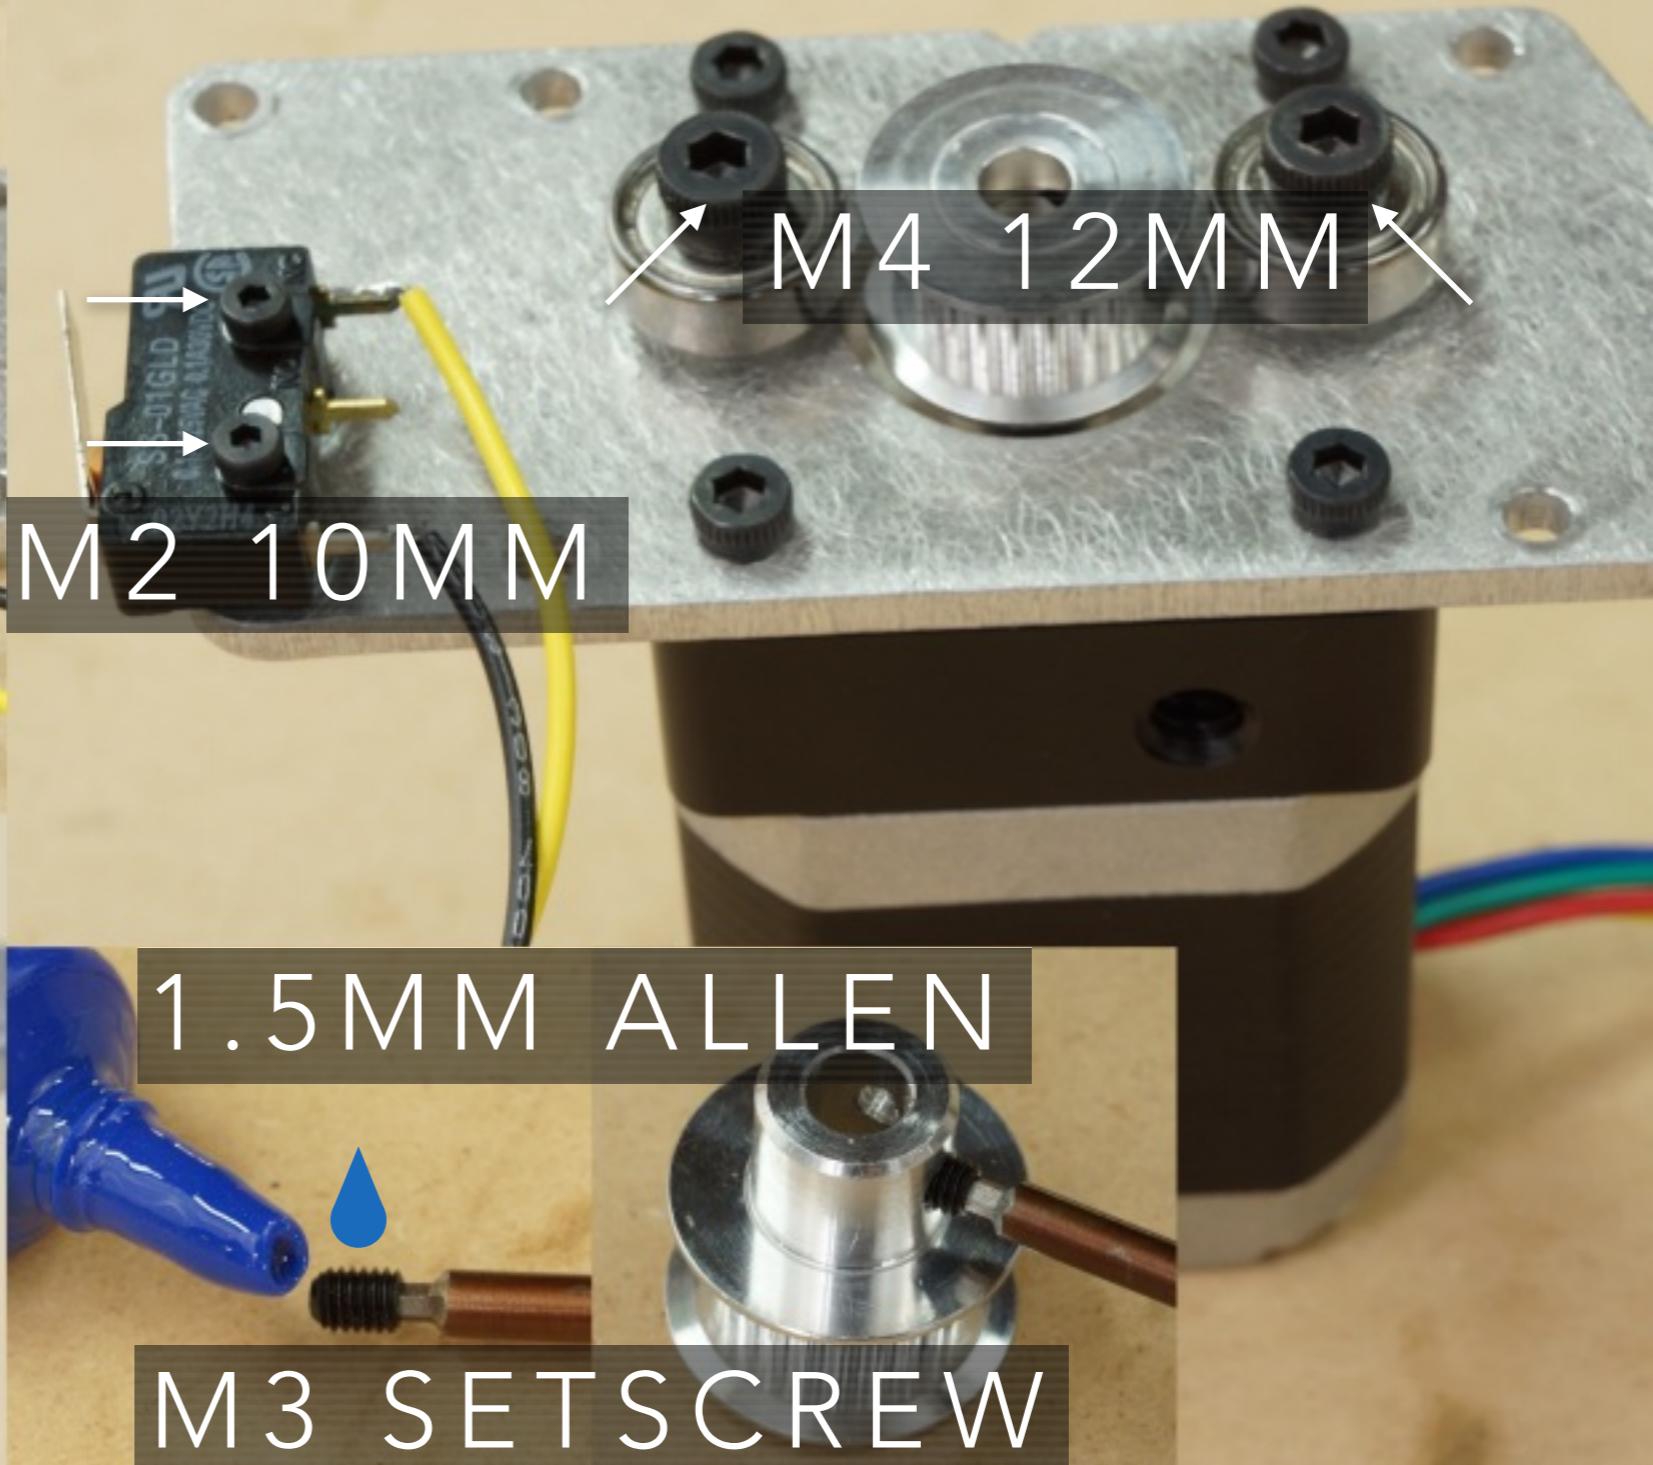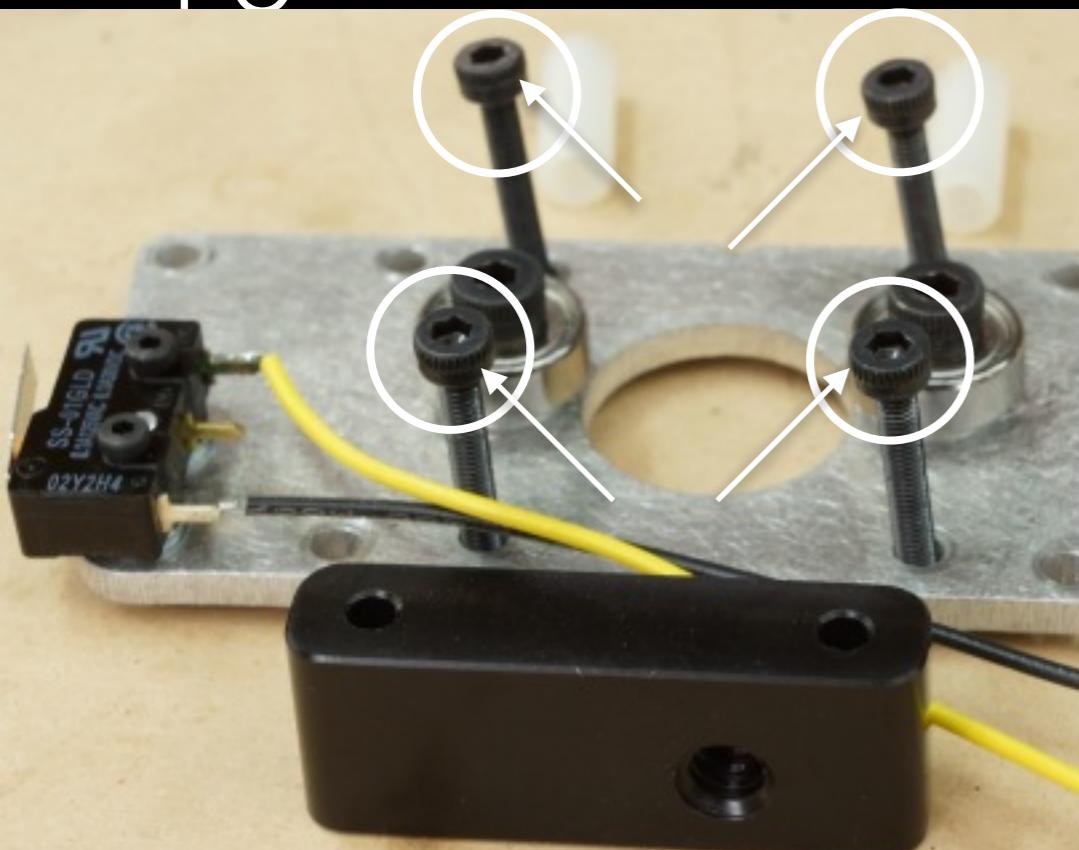

M3 22MM

M3 SETSCREW

17

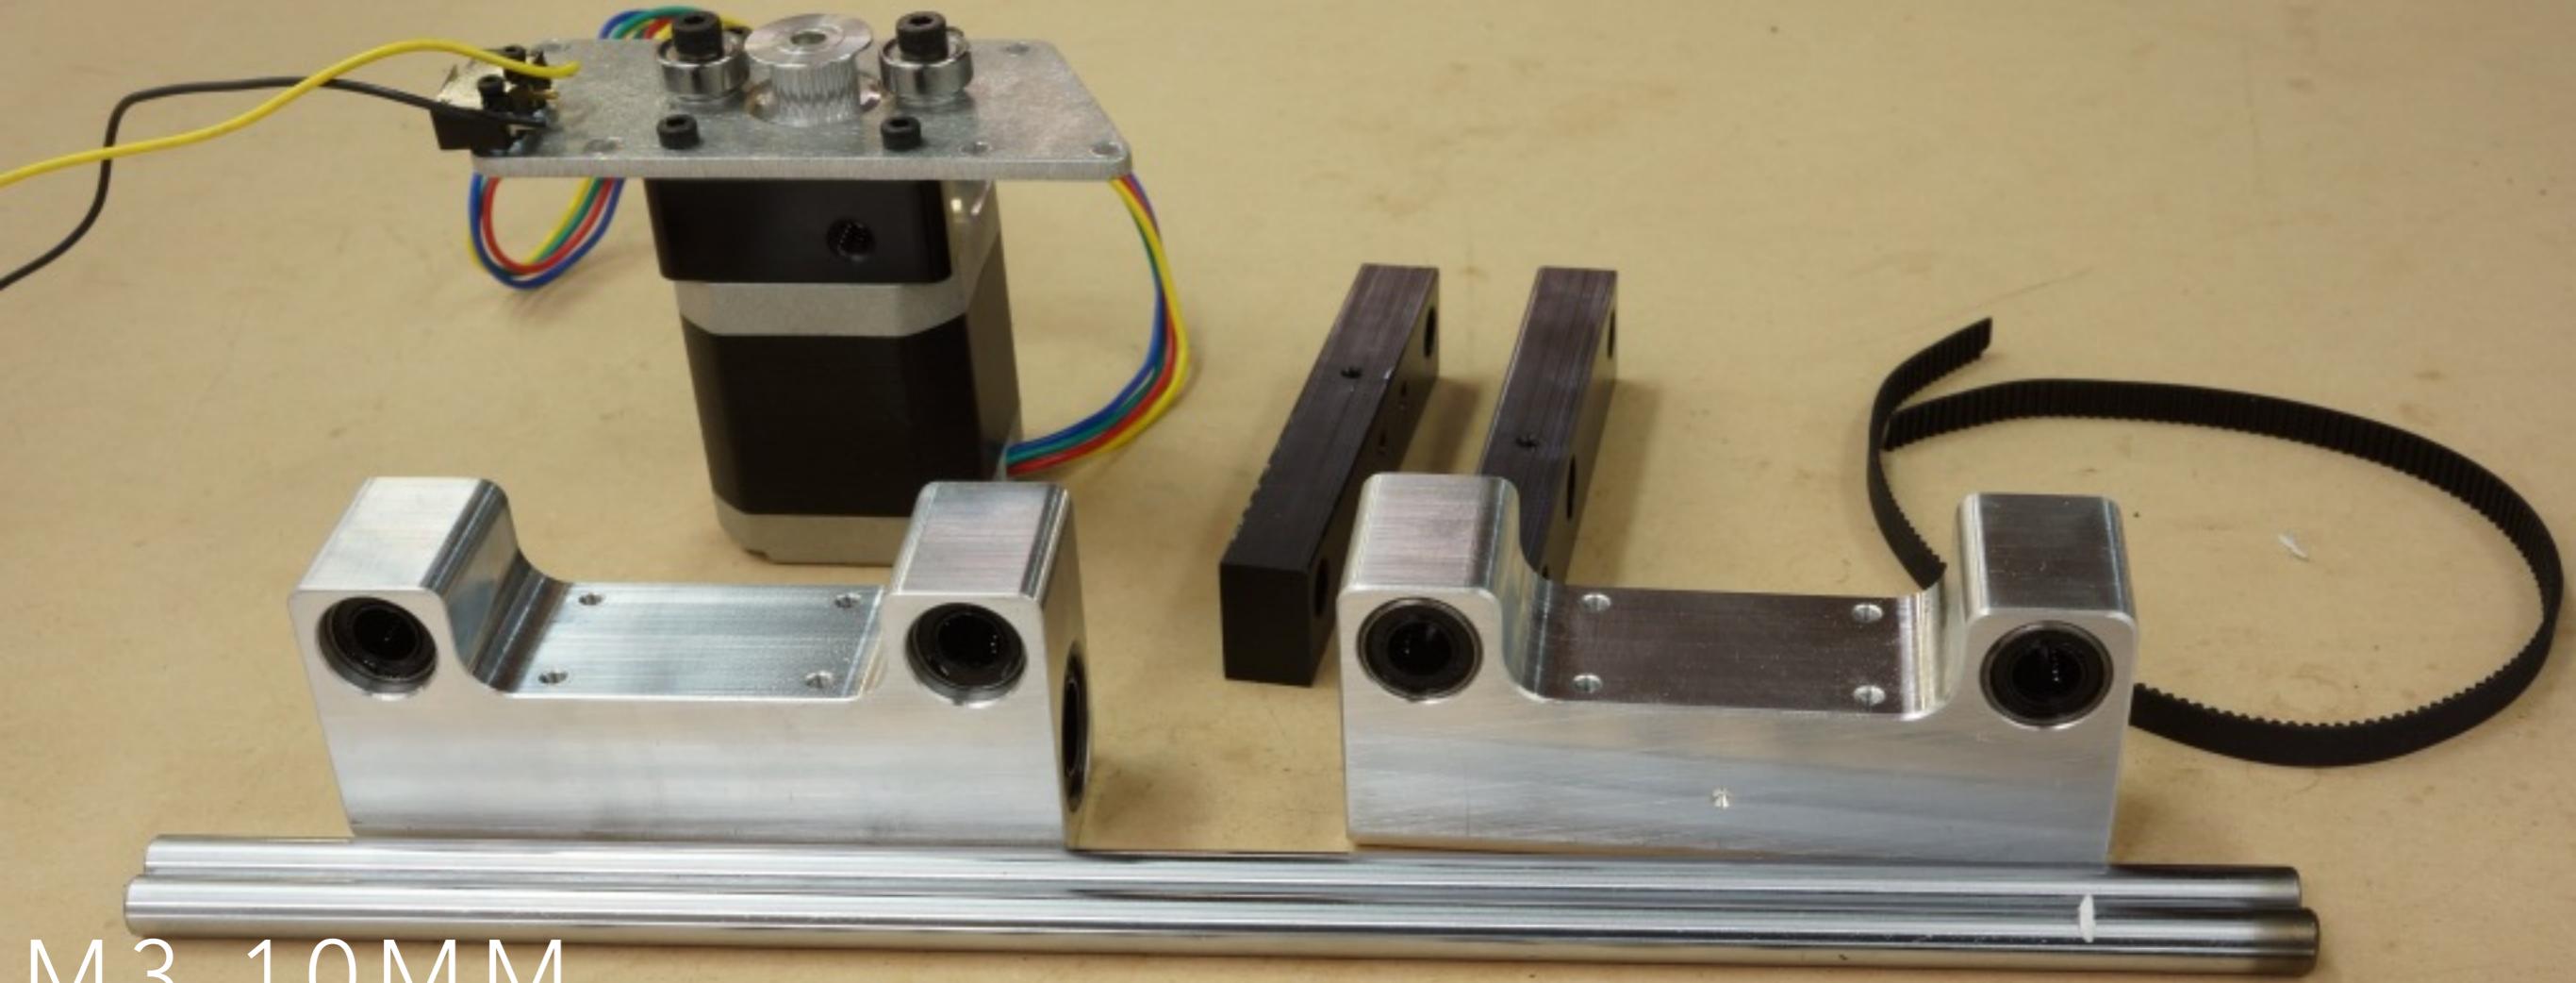

M3 10MM




M3 8MM




M3 22MM




18

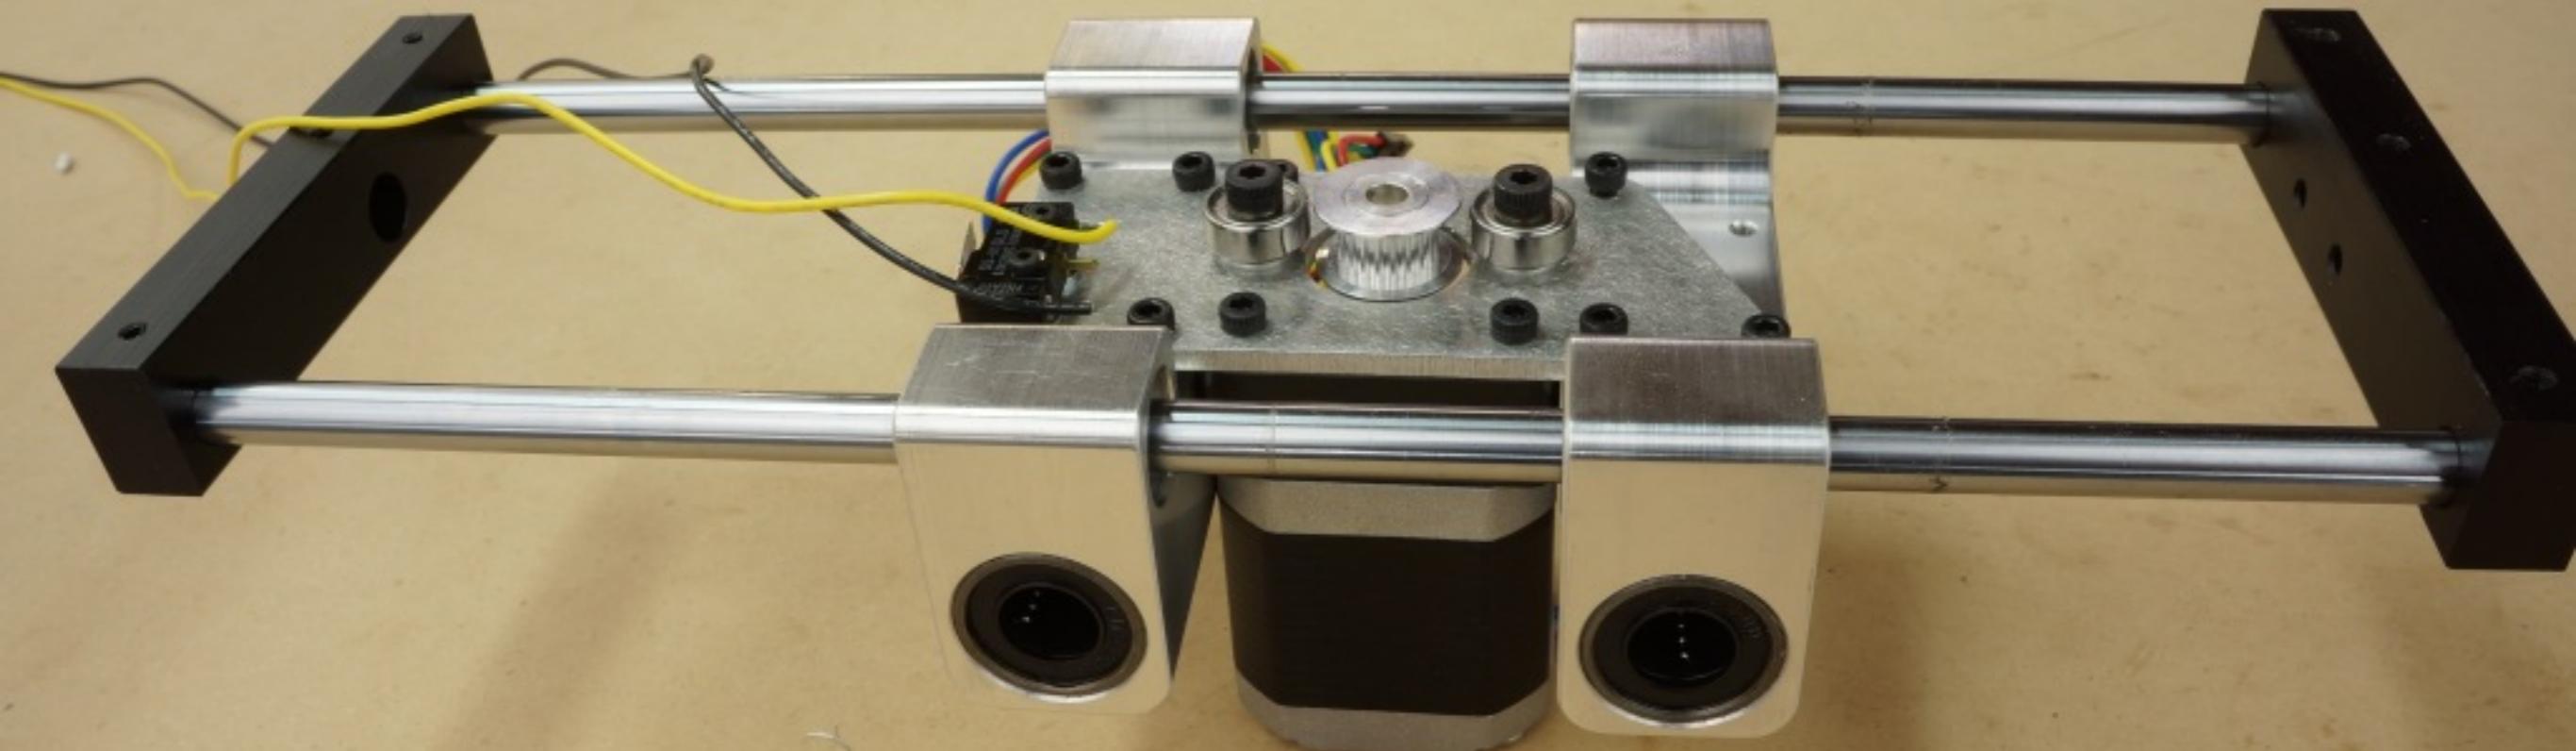

19

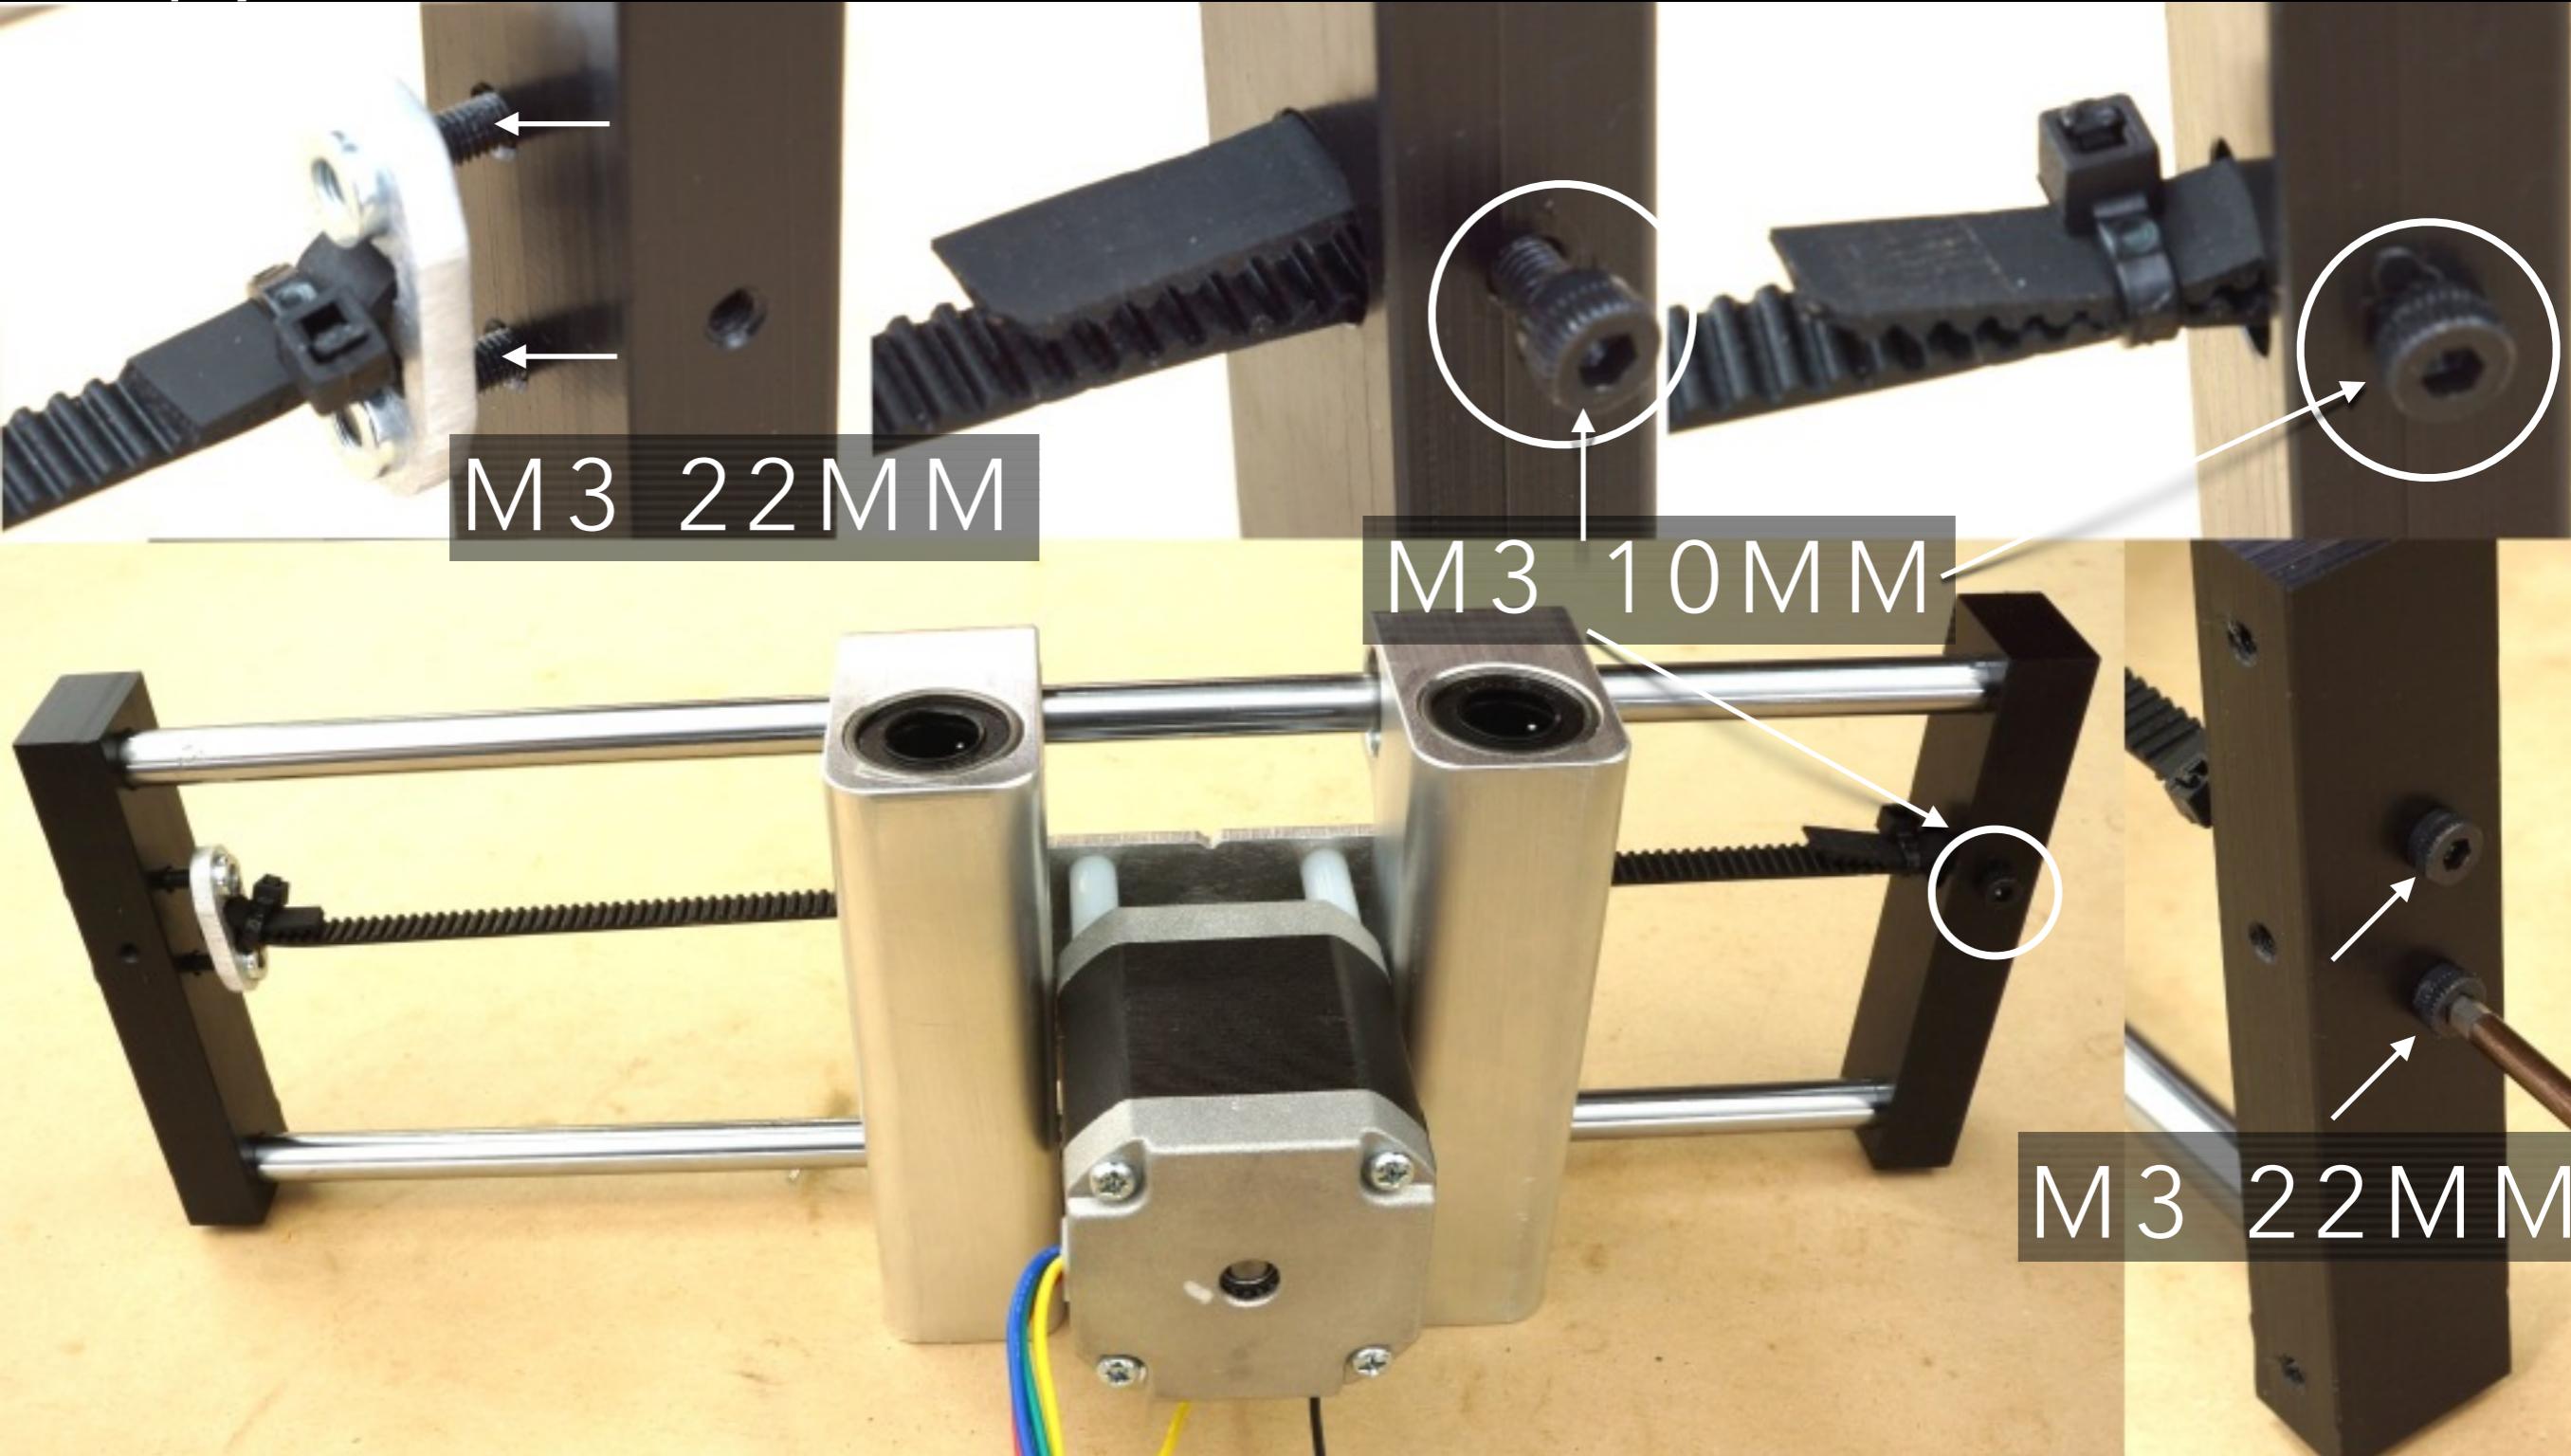


20

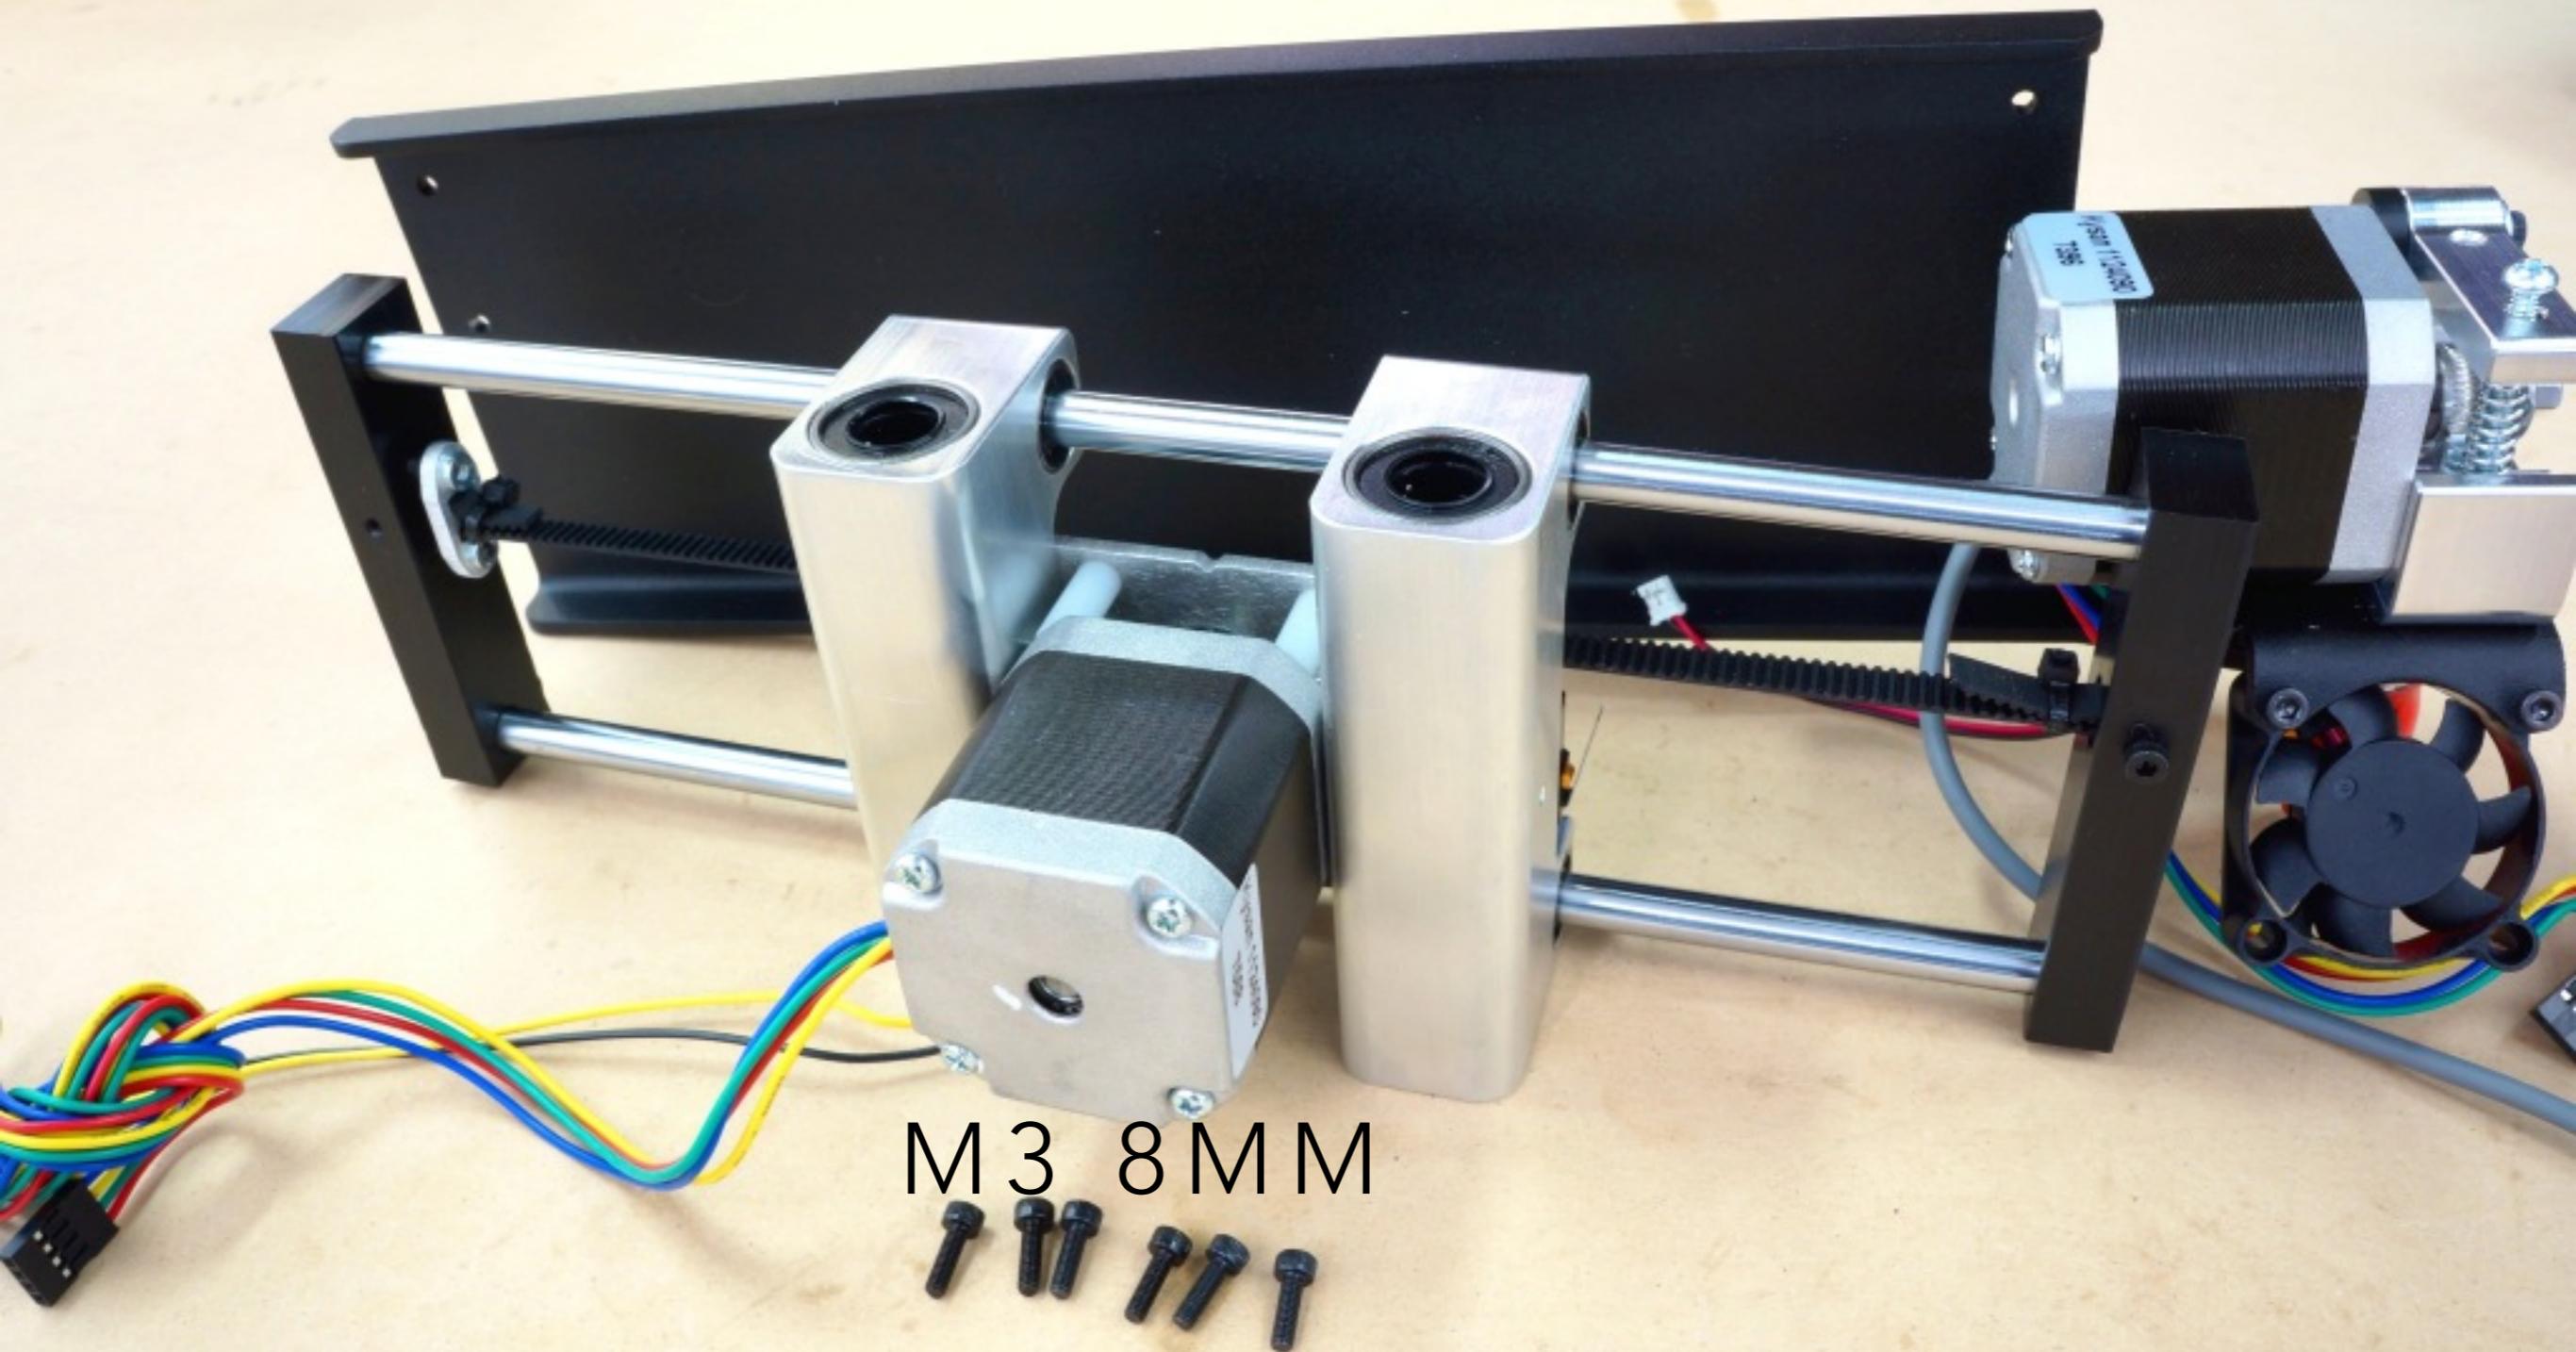


M3 8MM




21

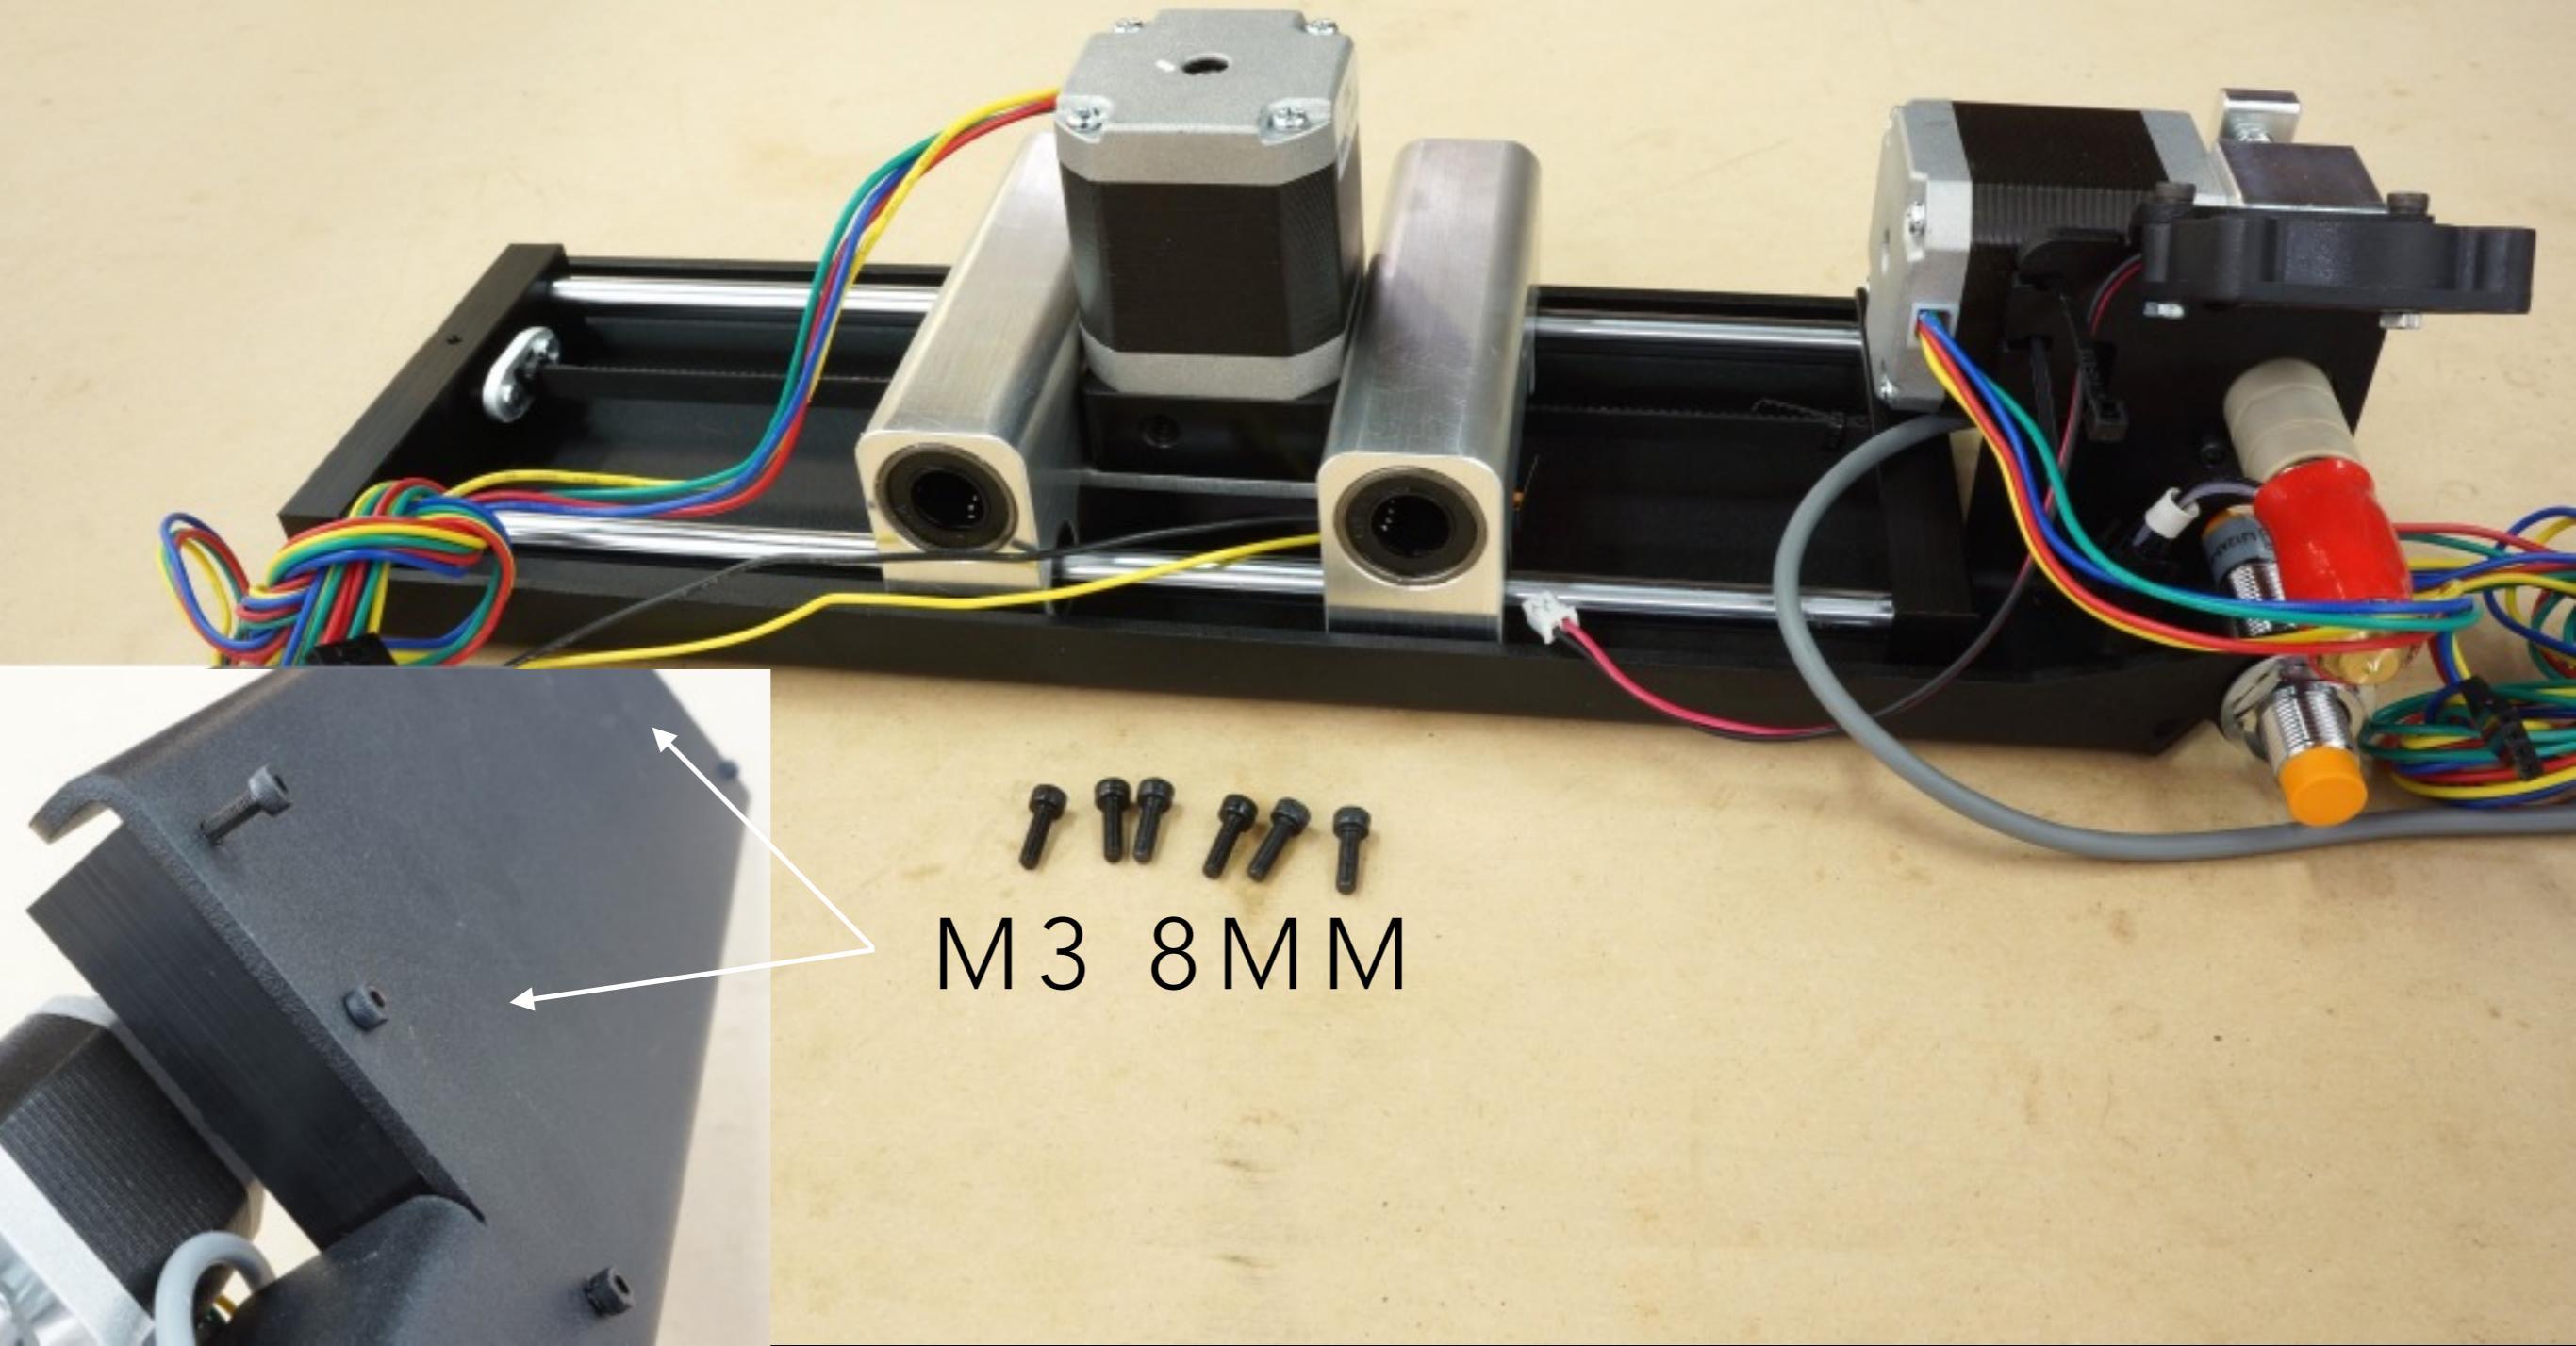


22

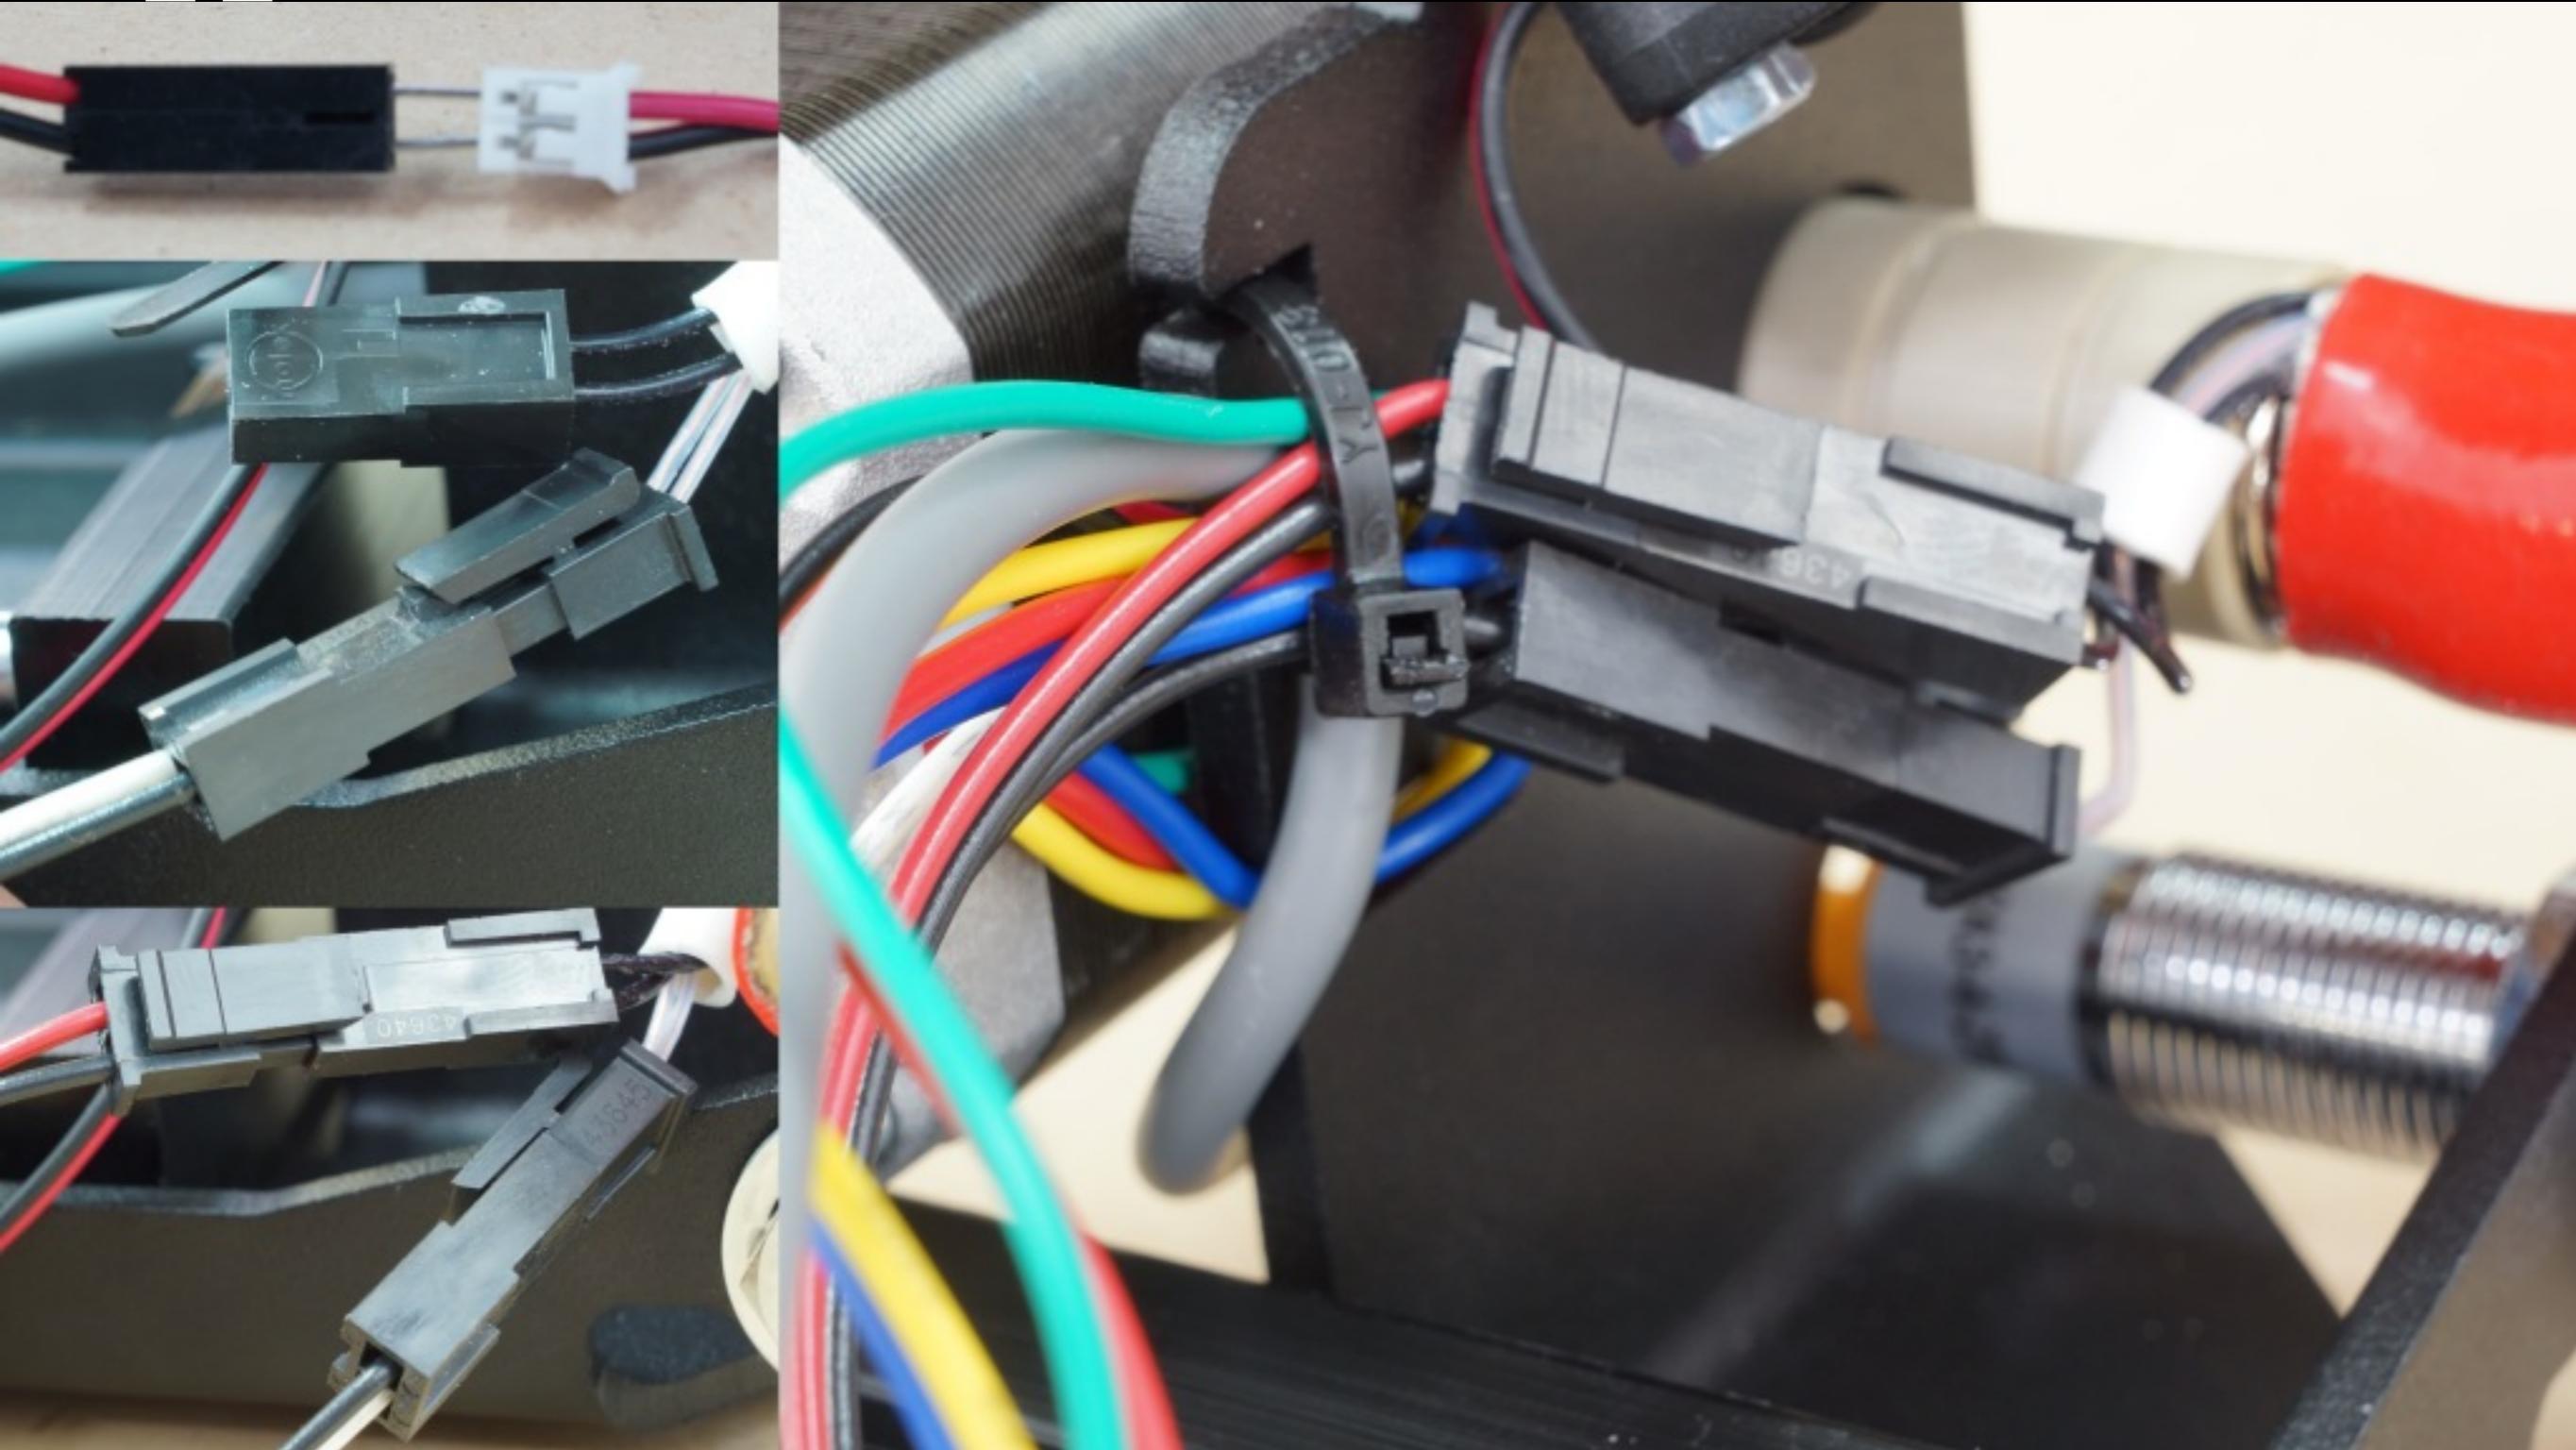


23

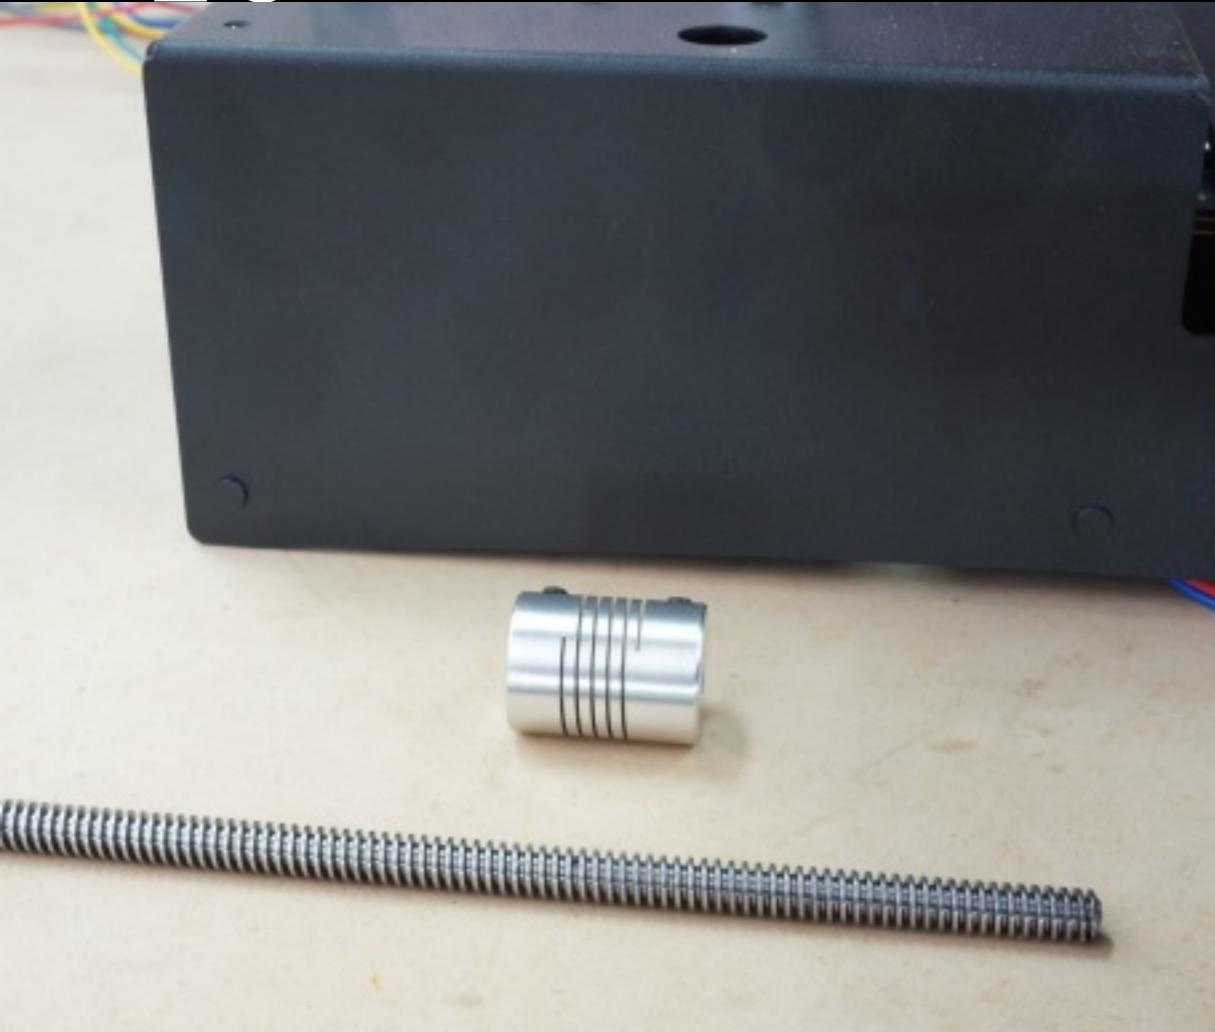


2MM ALLEN

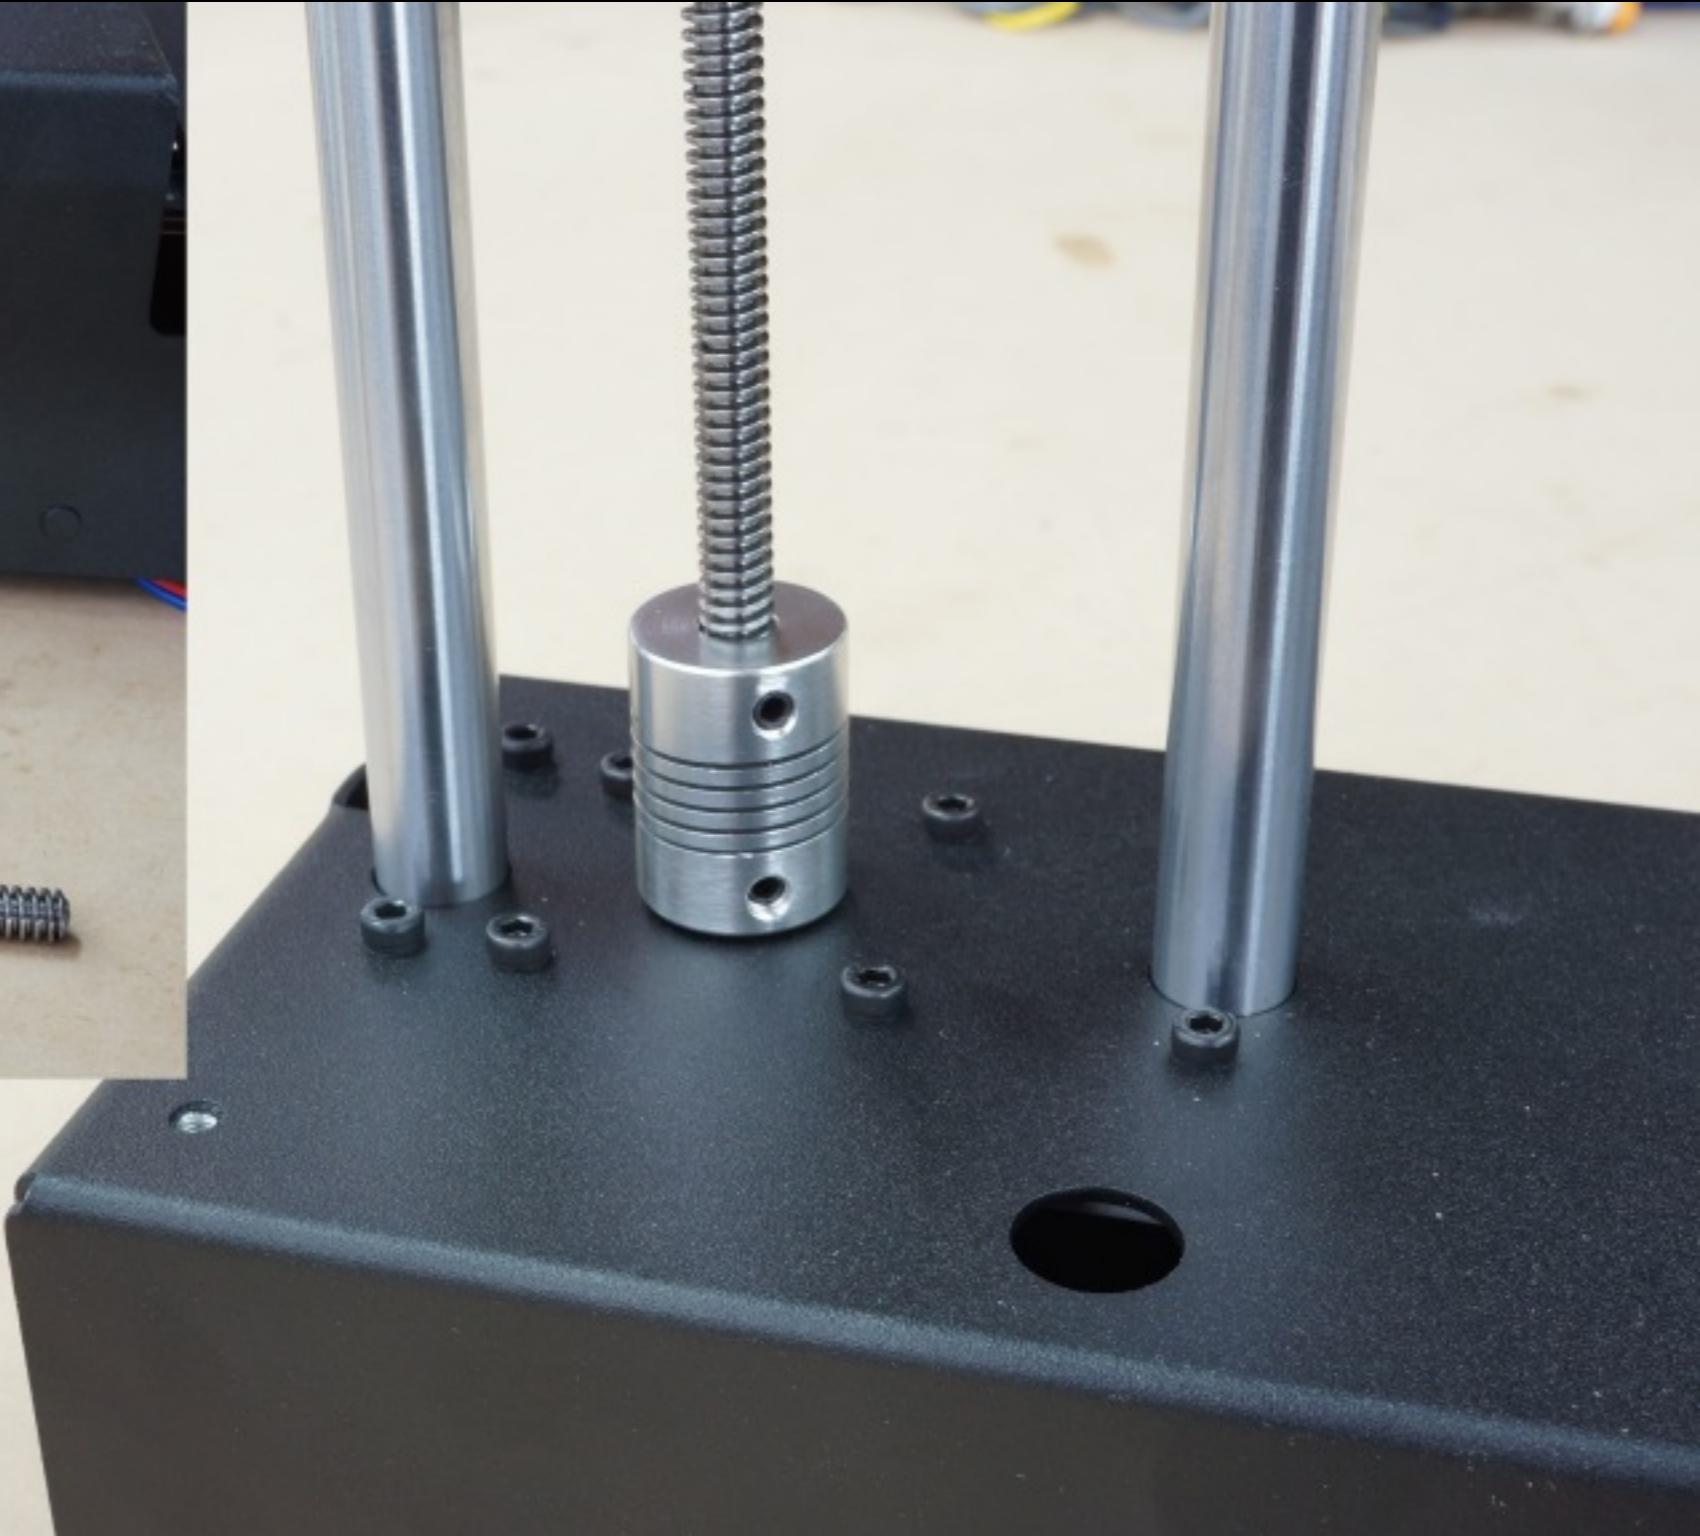




24

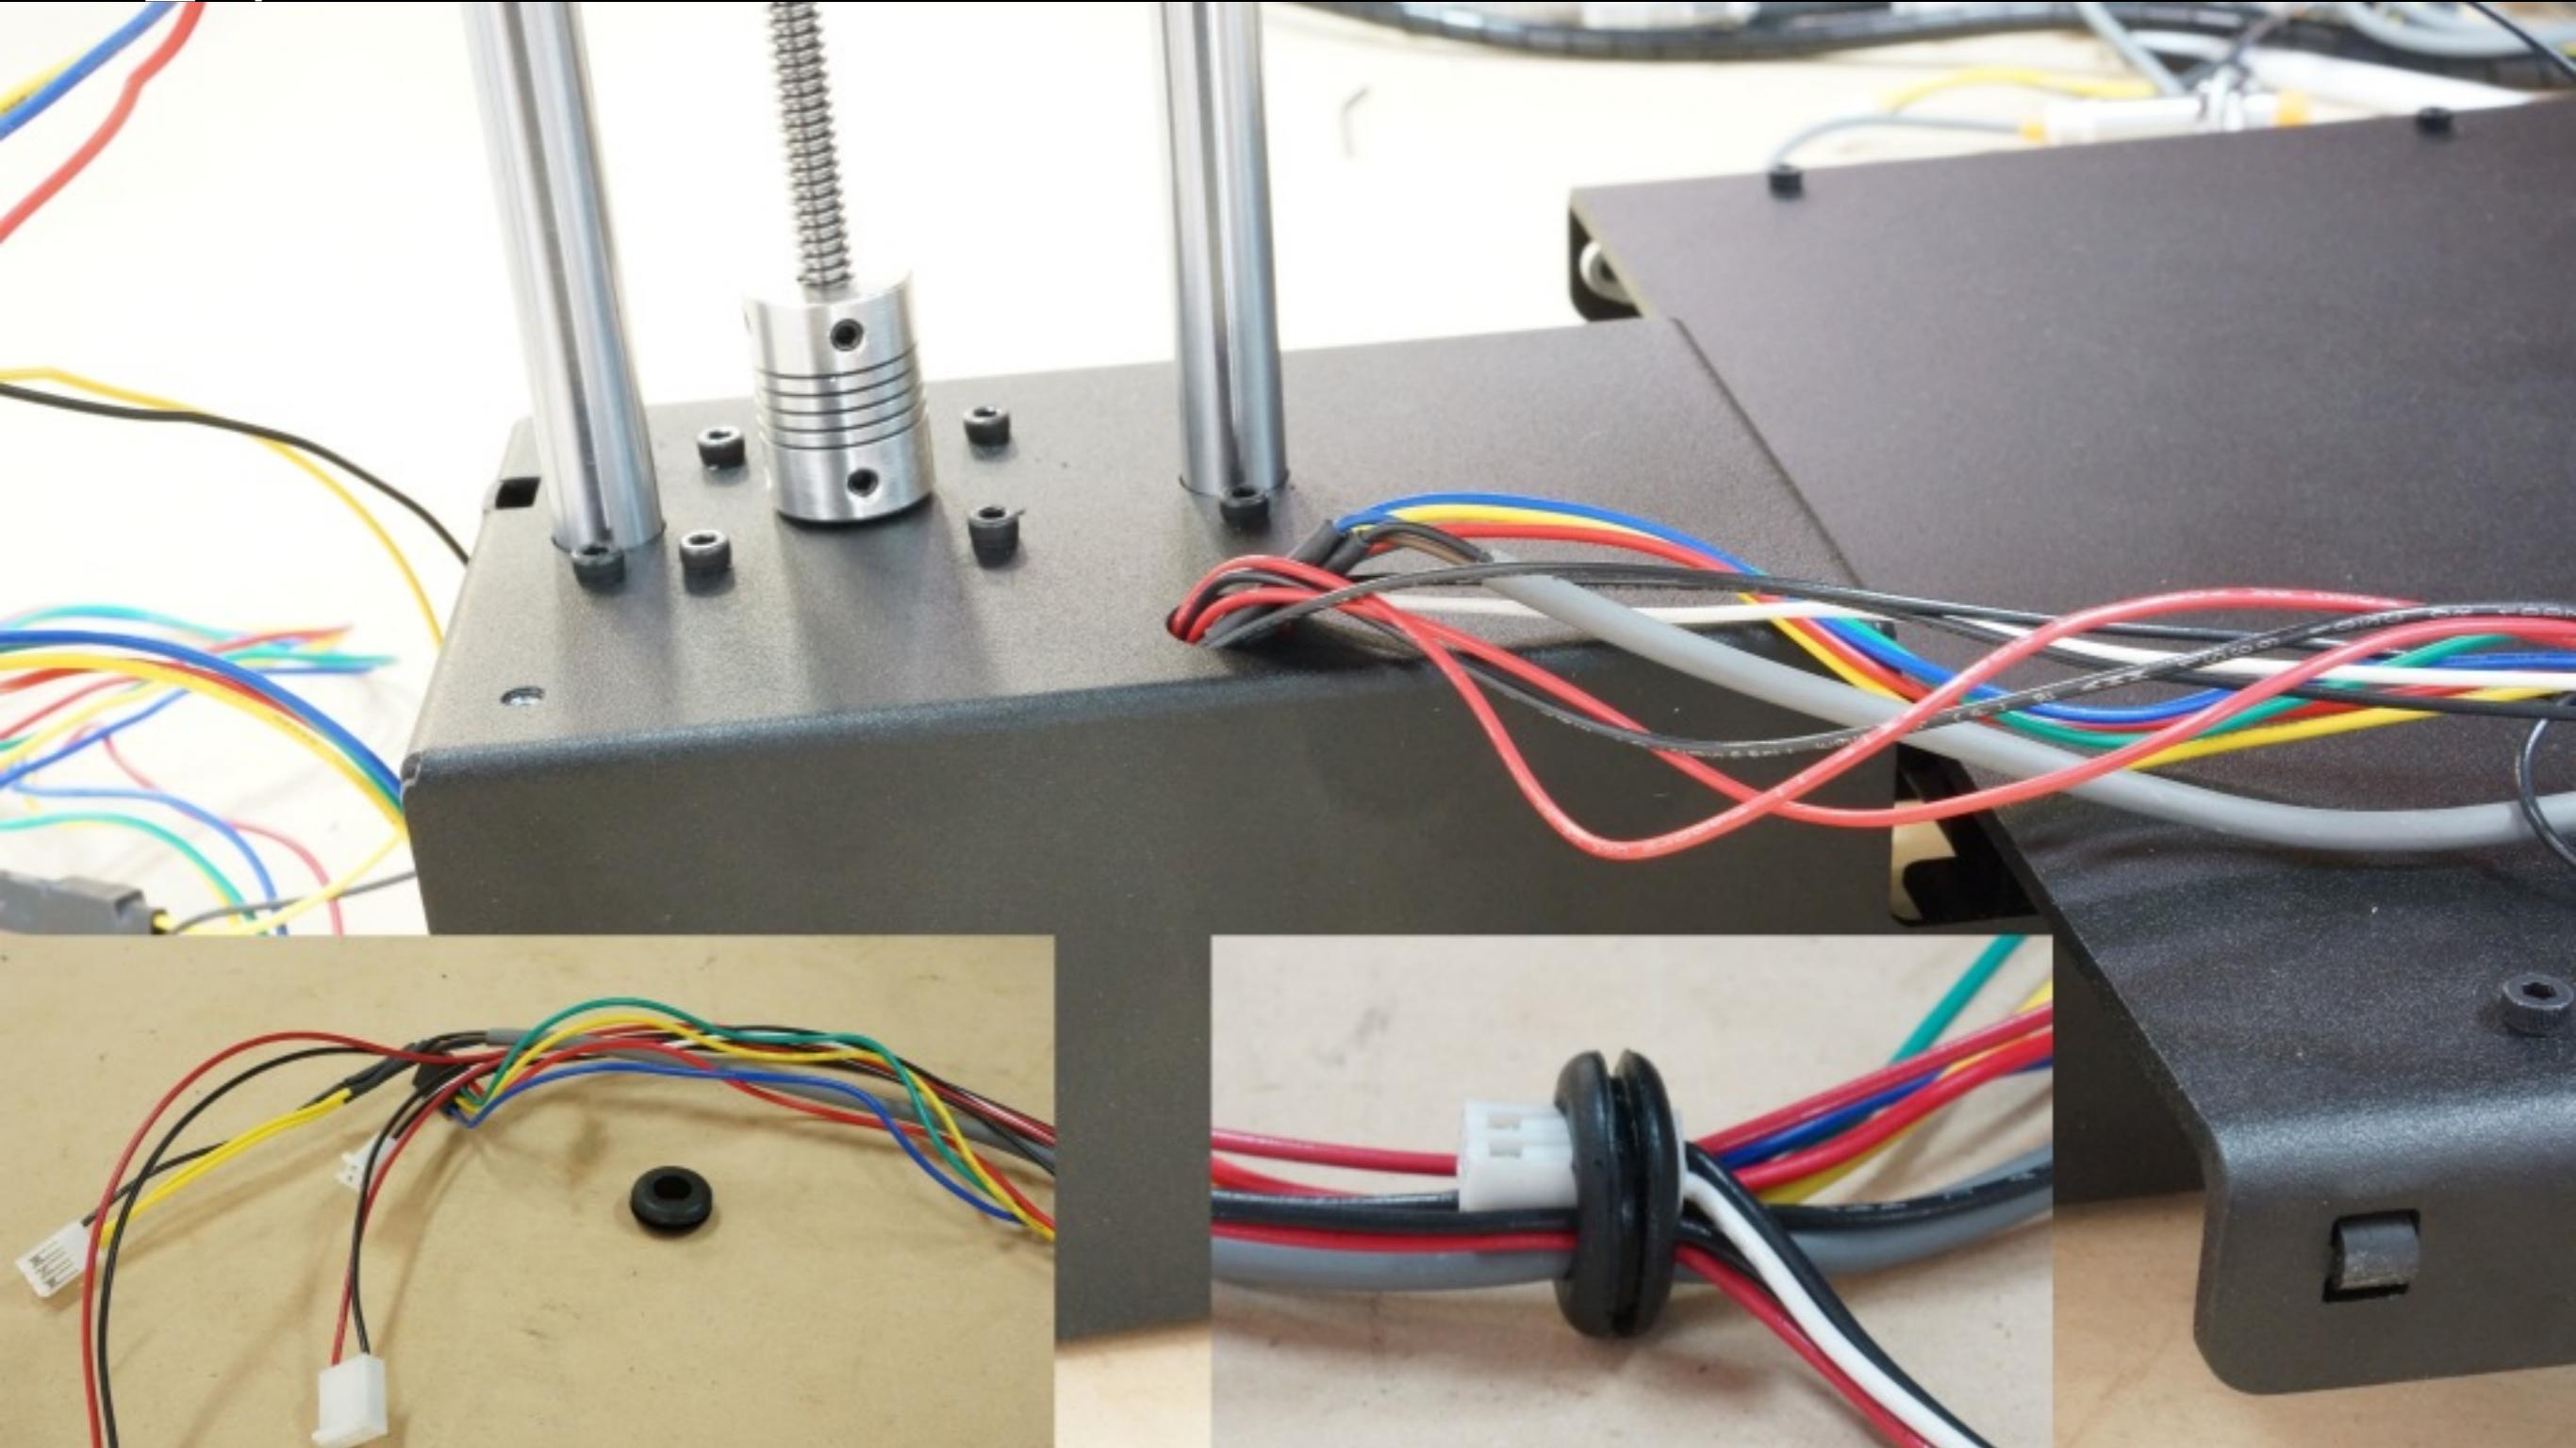


25

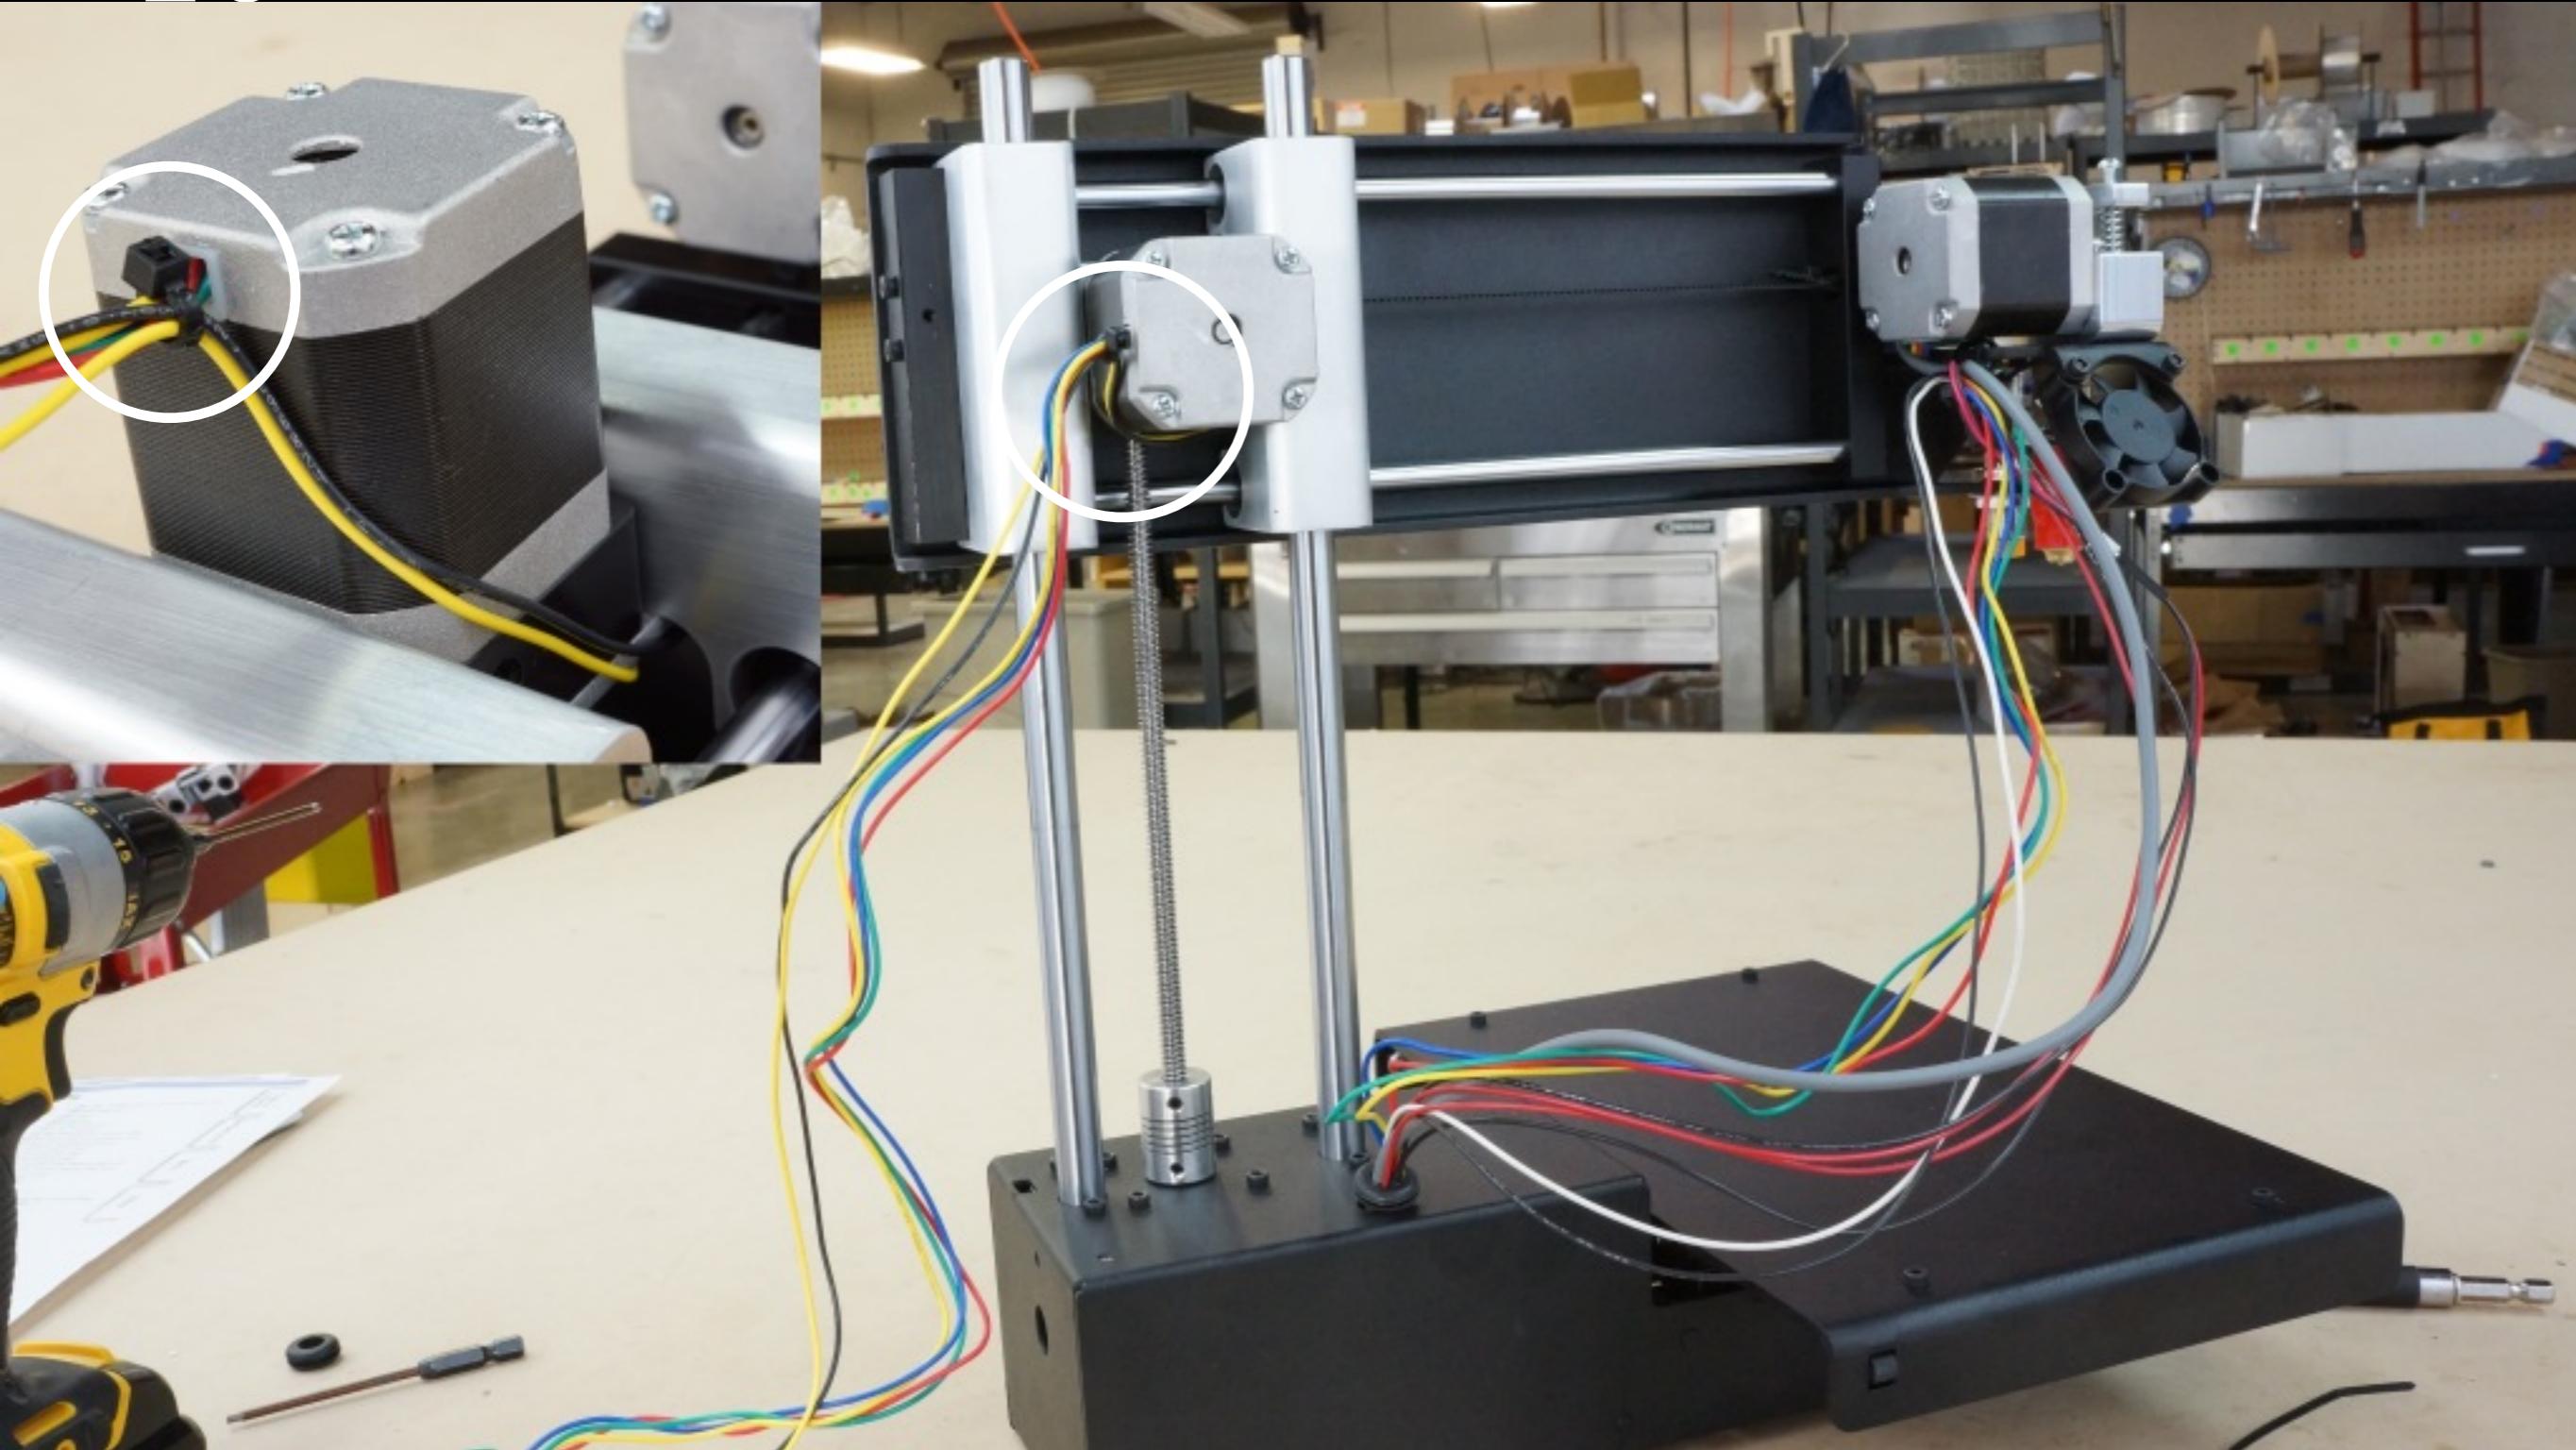


26

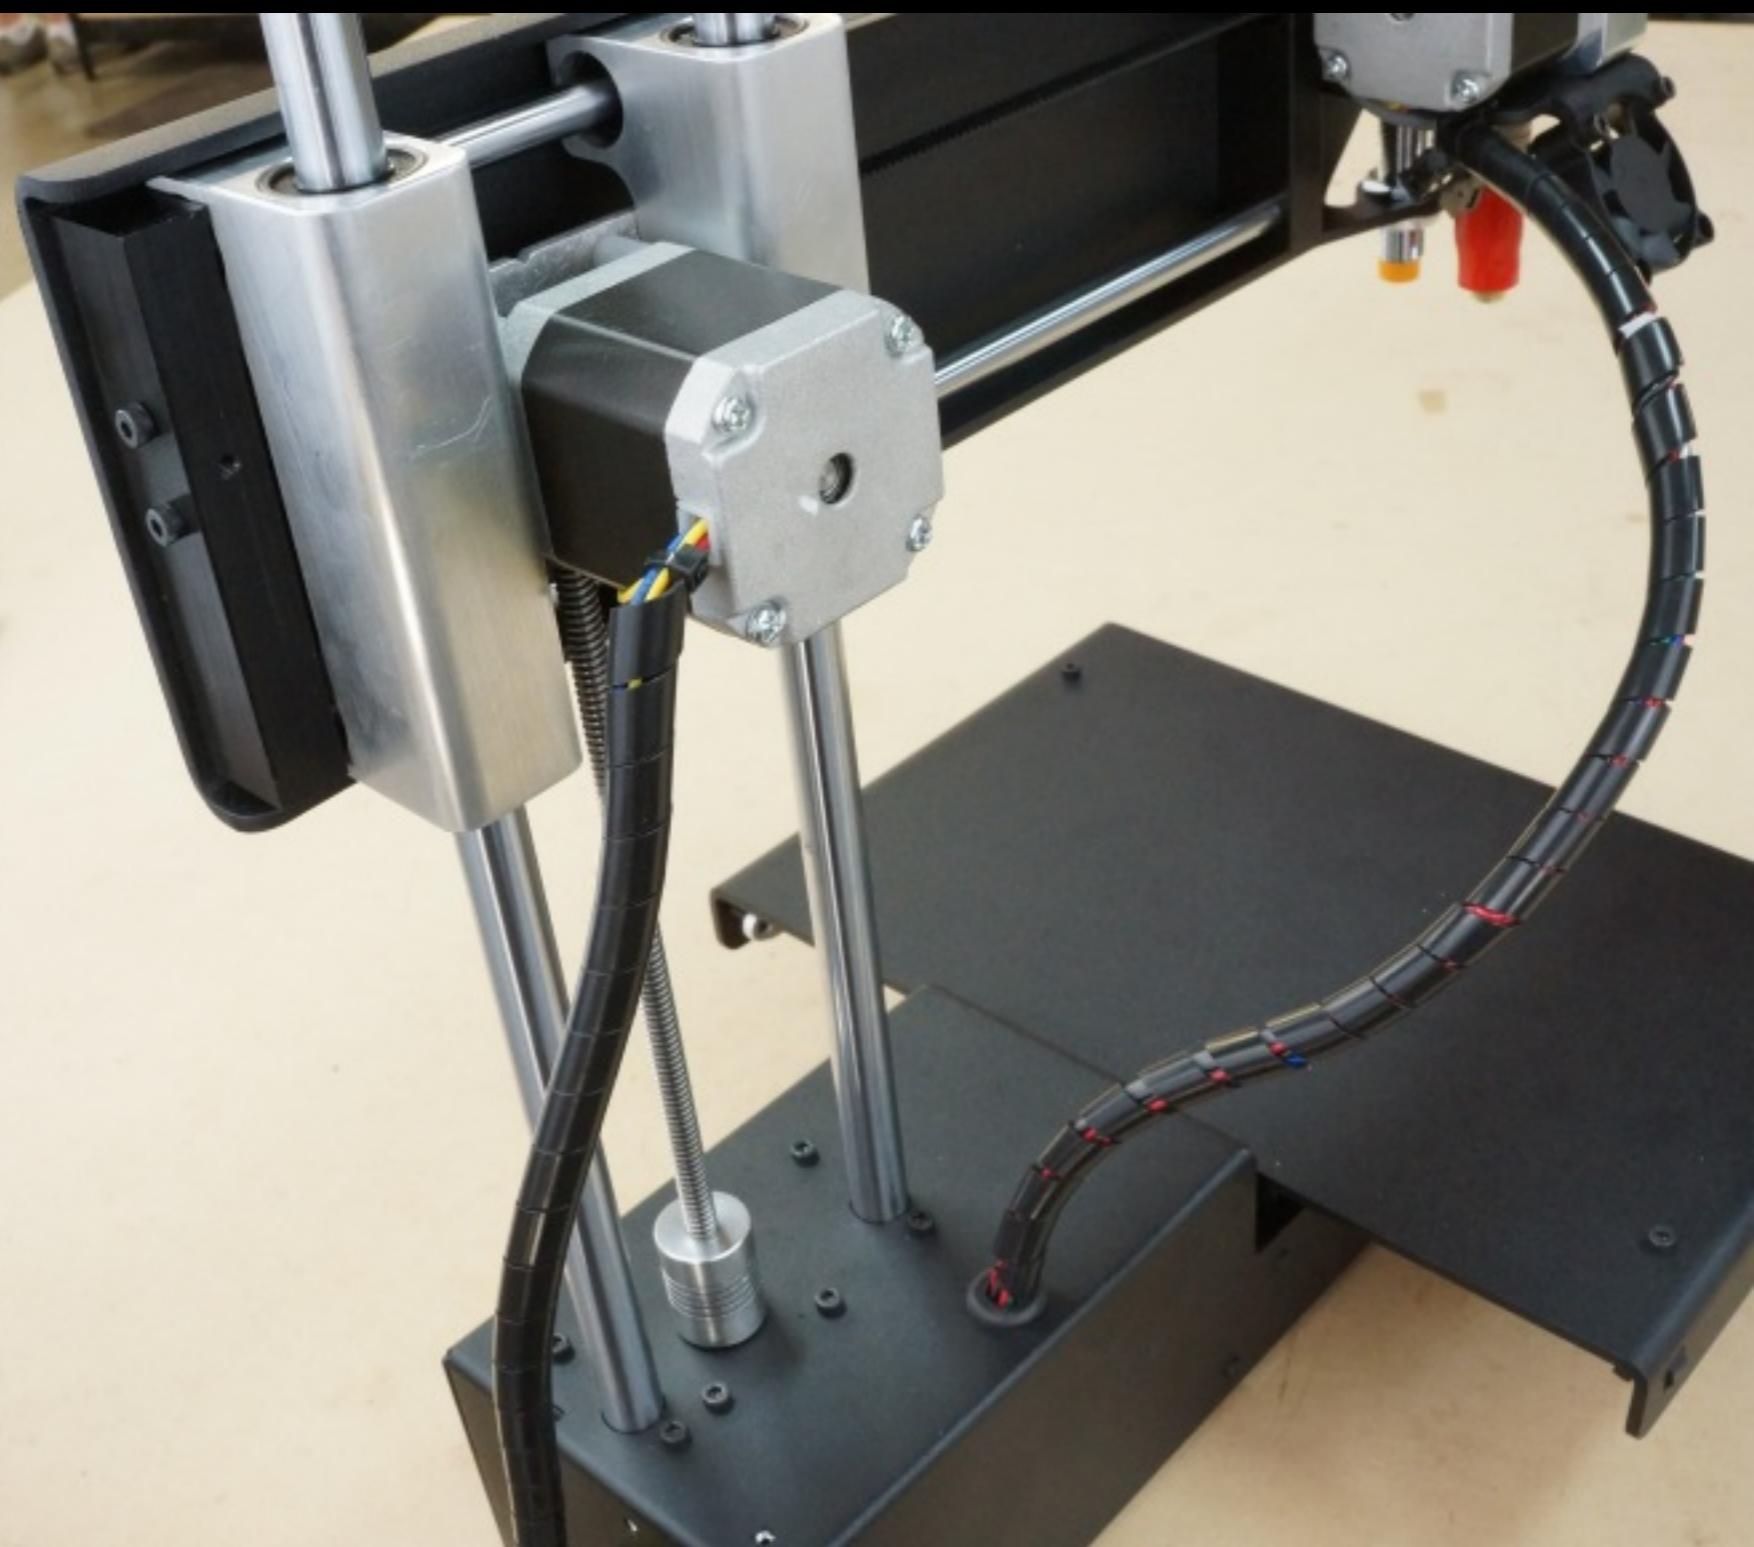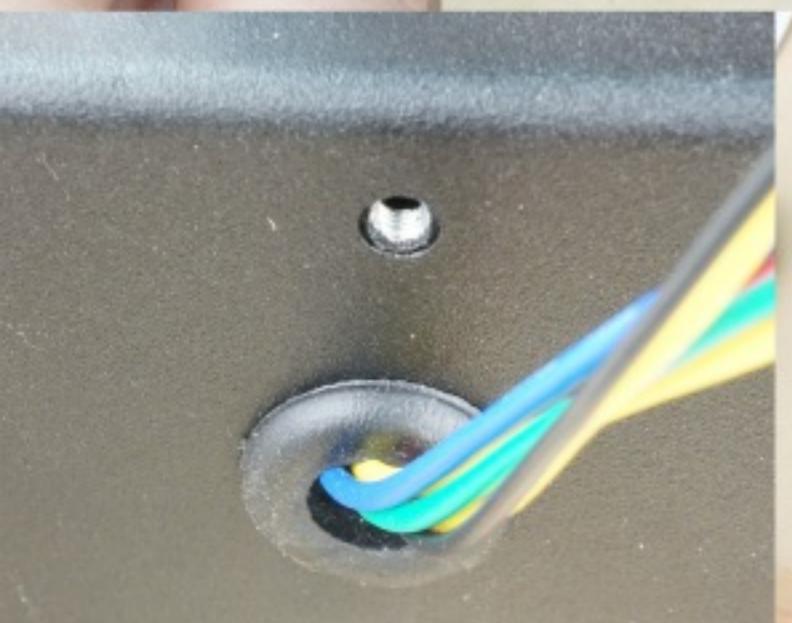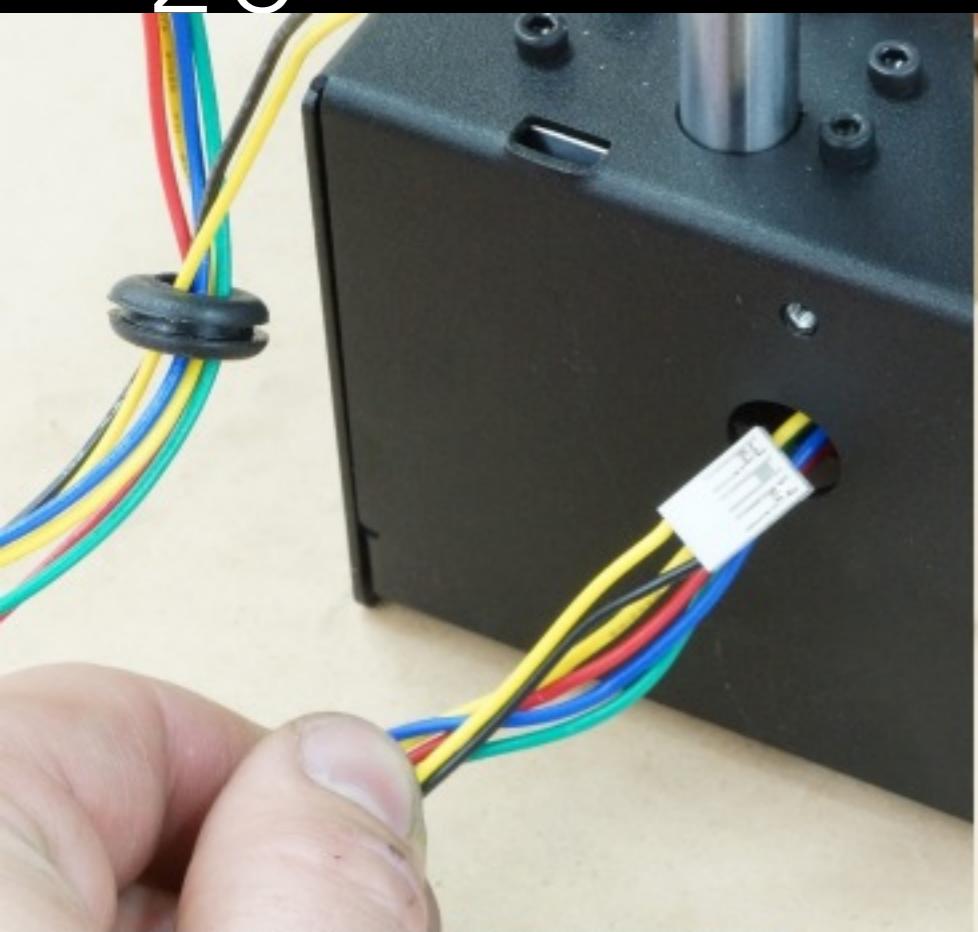


27

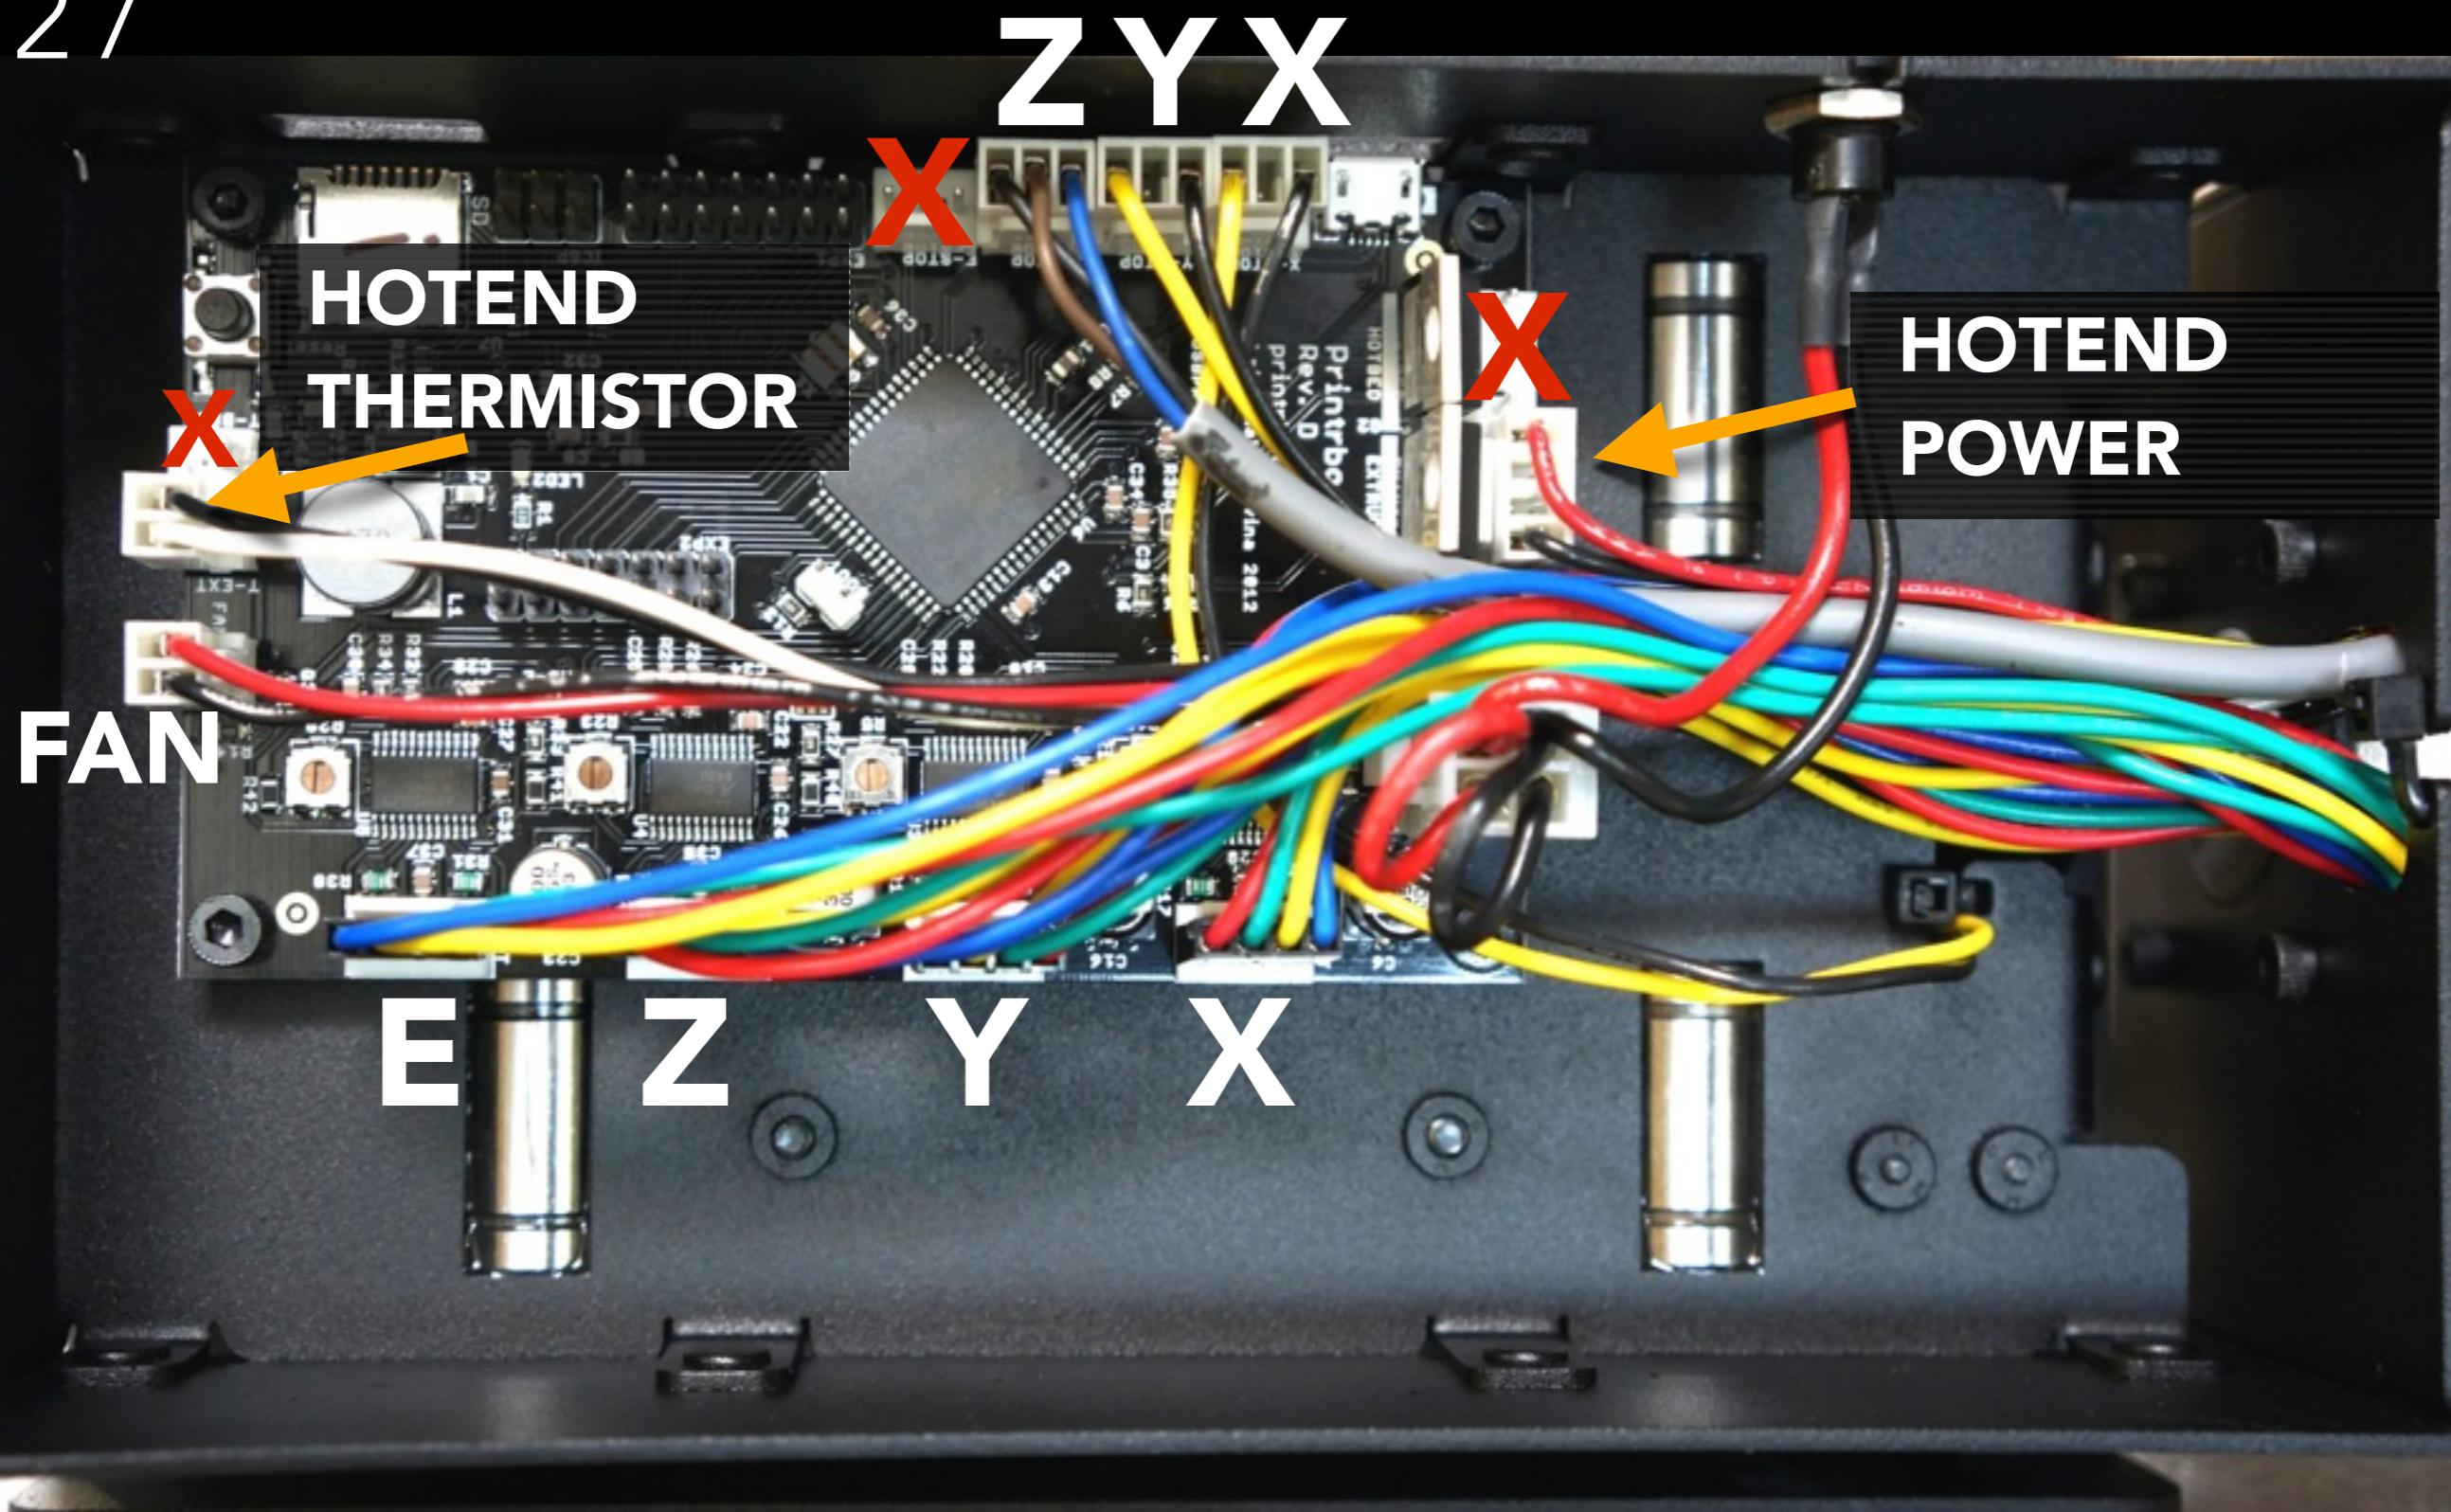

28

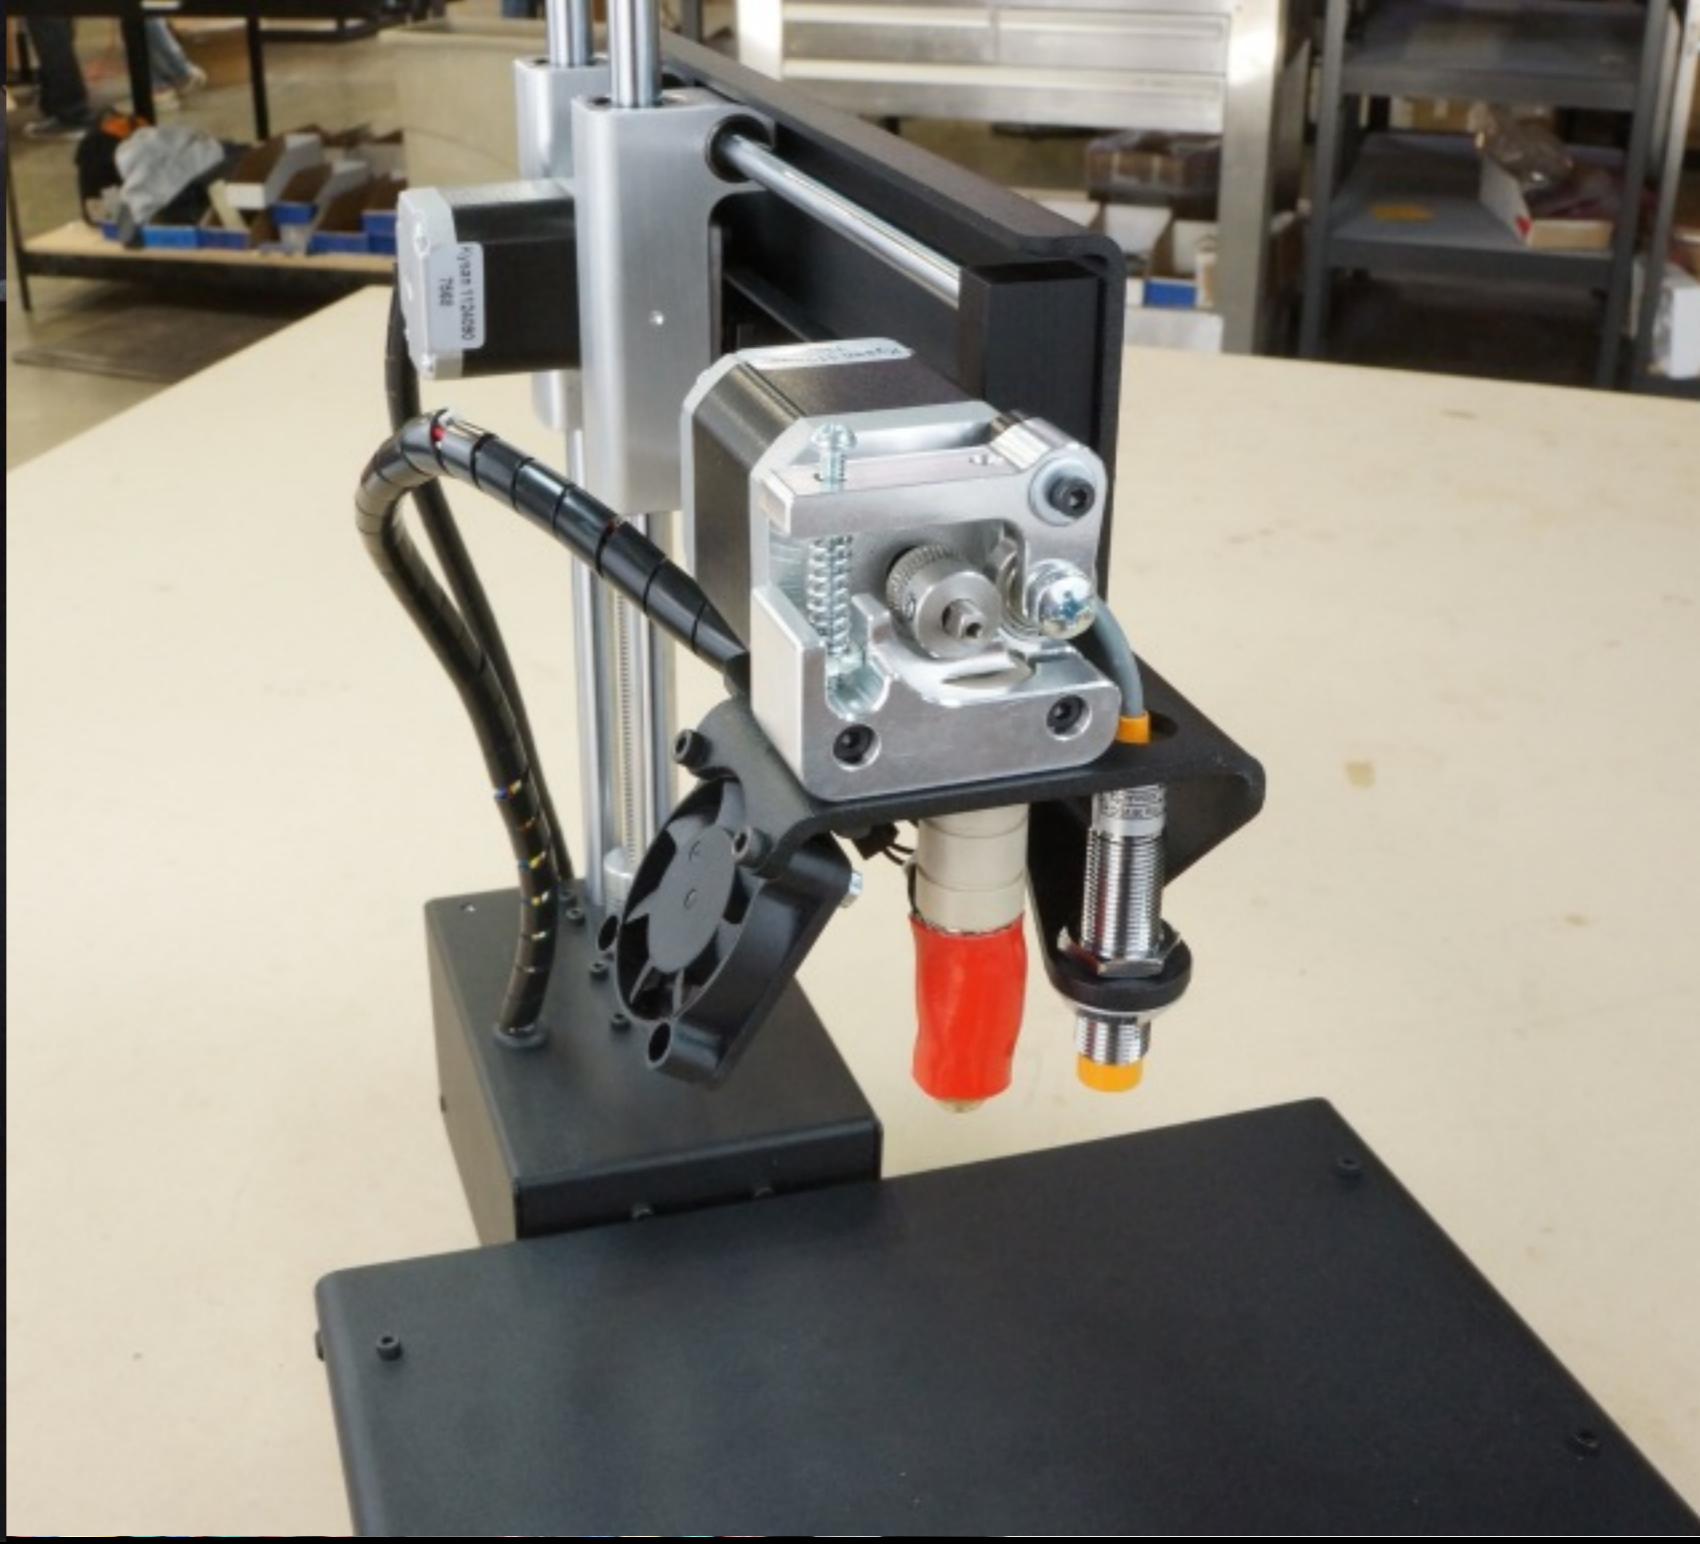

GREAT JOB! YOU DID IT.

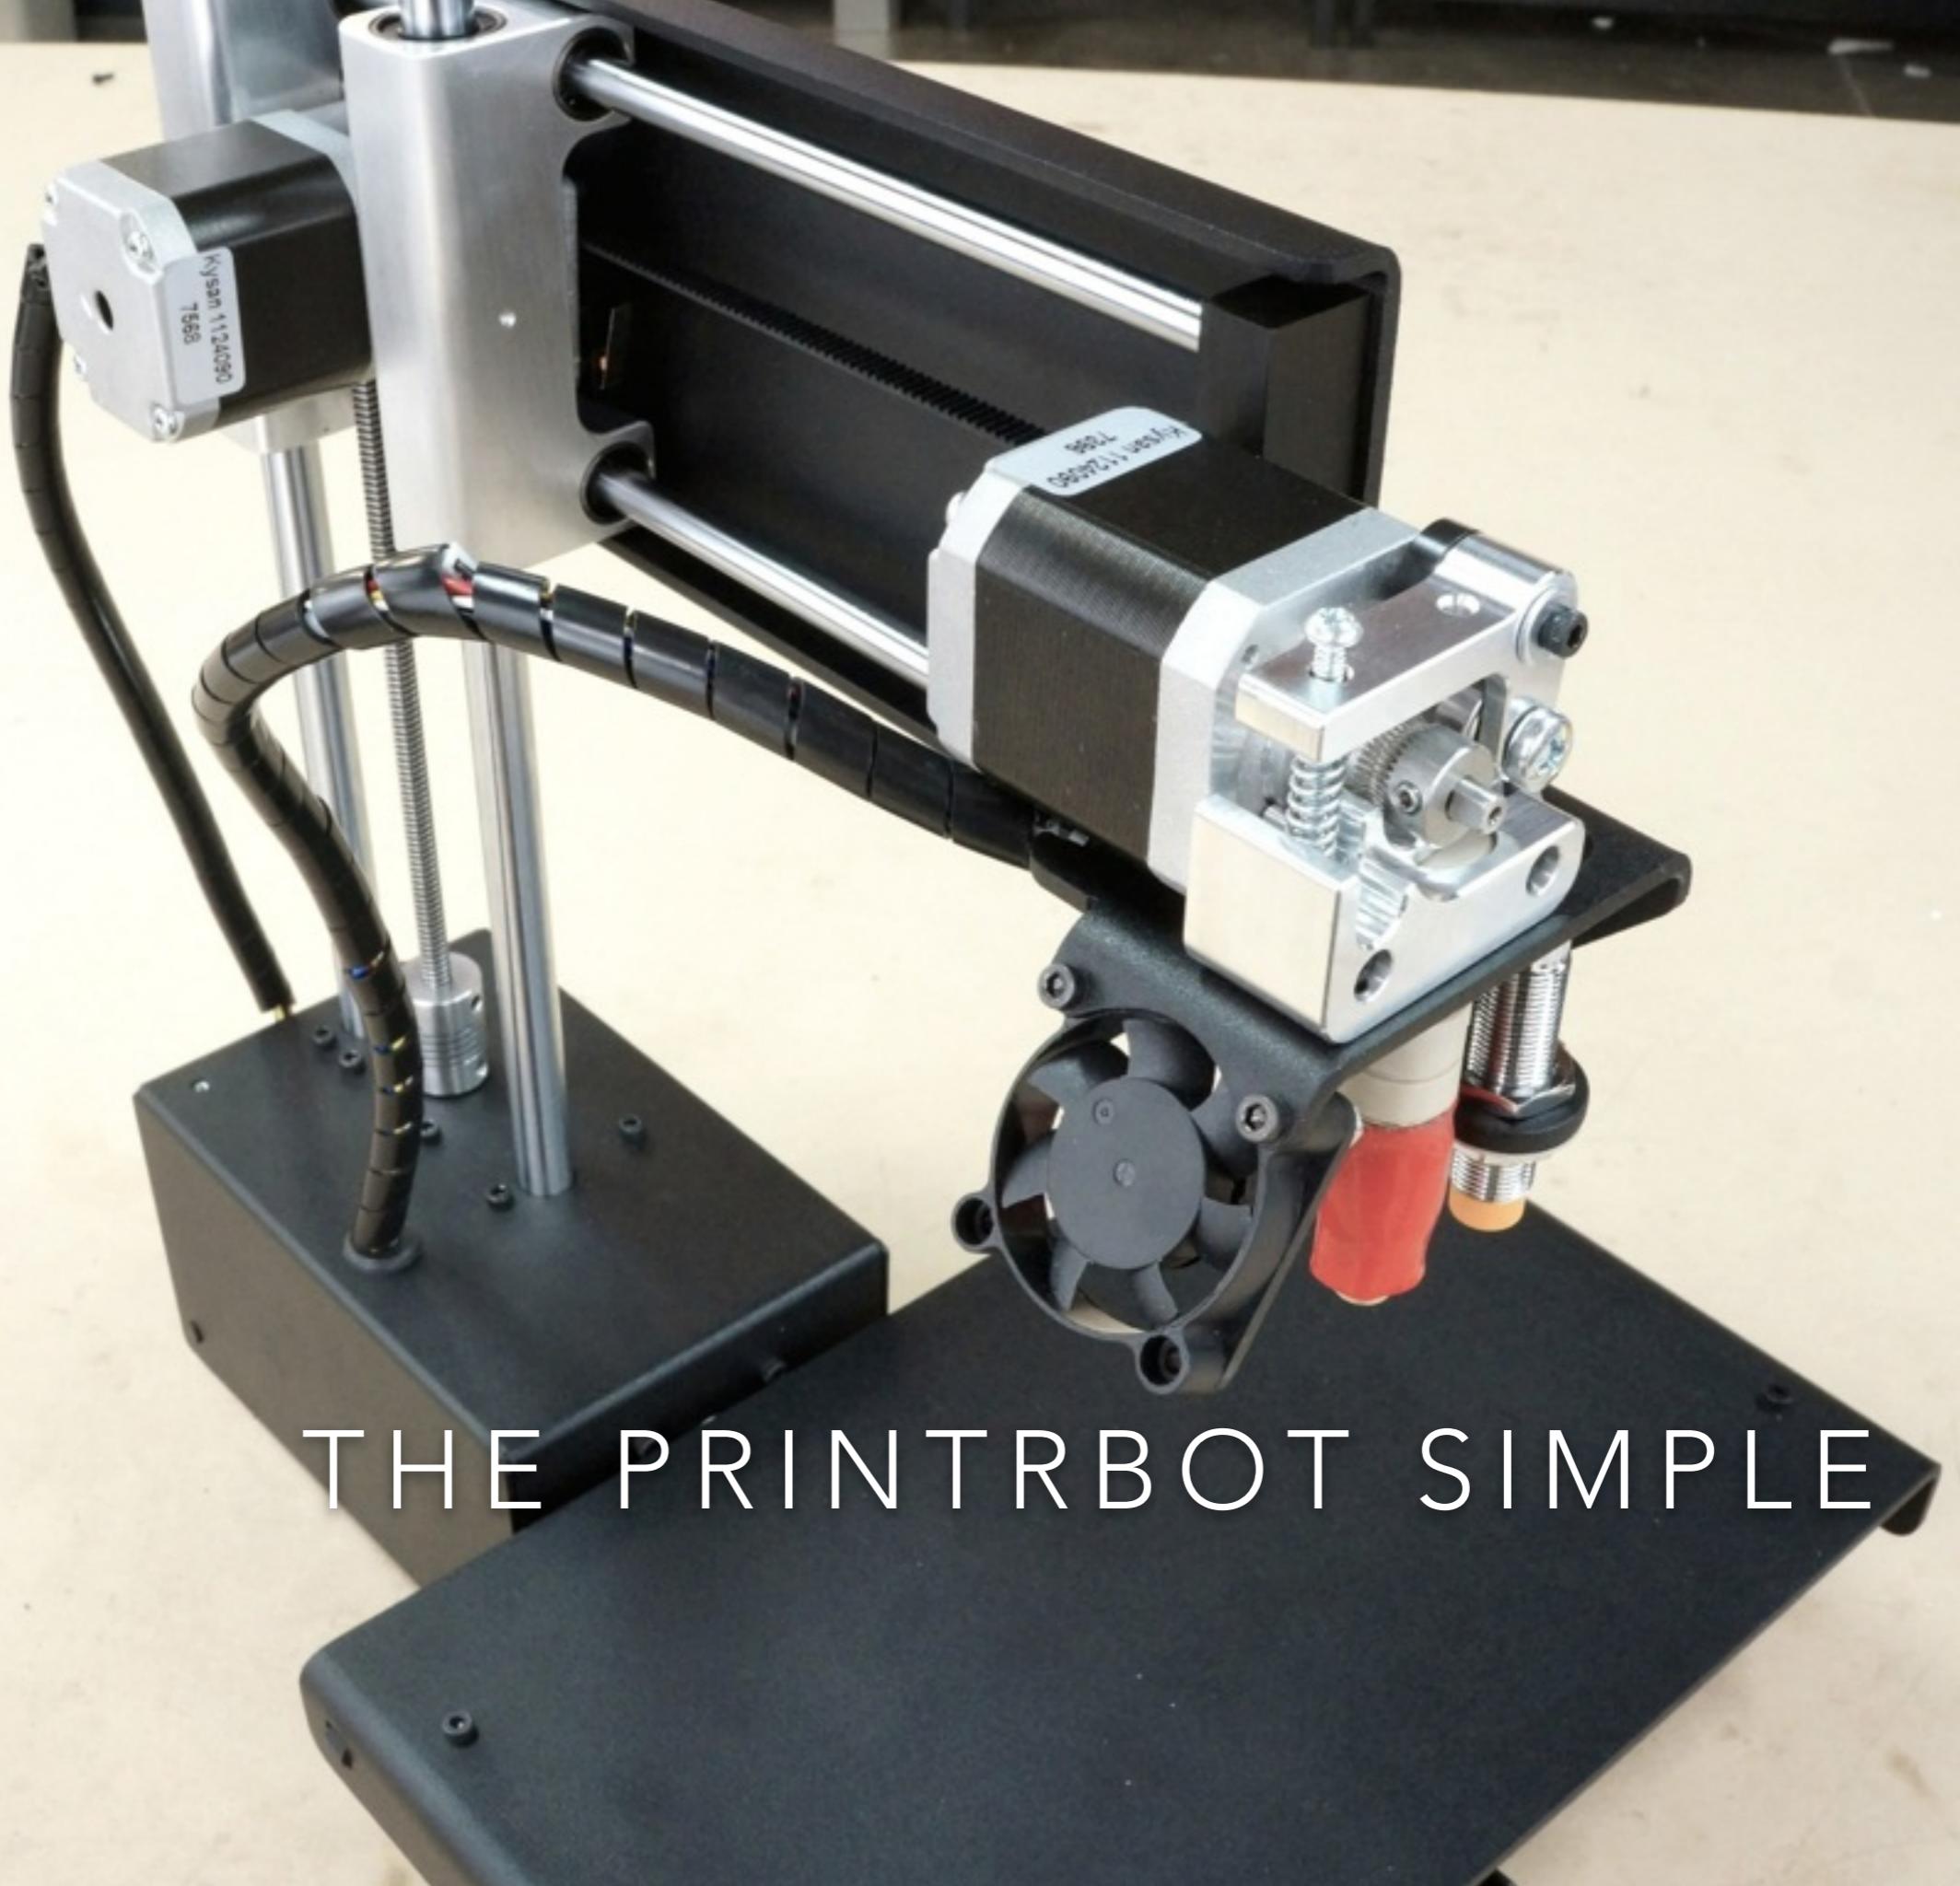

THE PRINTRBOT SIMPLE