



PRINTRBOT SIMPLE BUILD



01

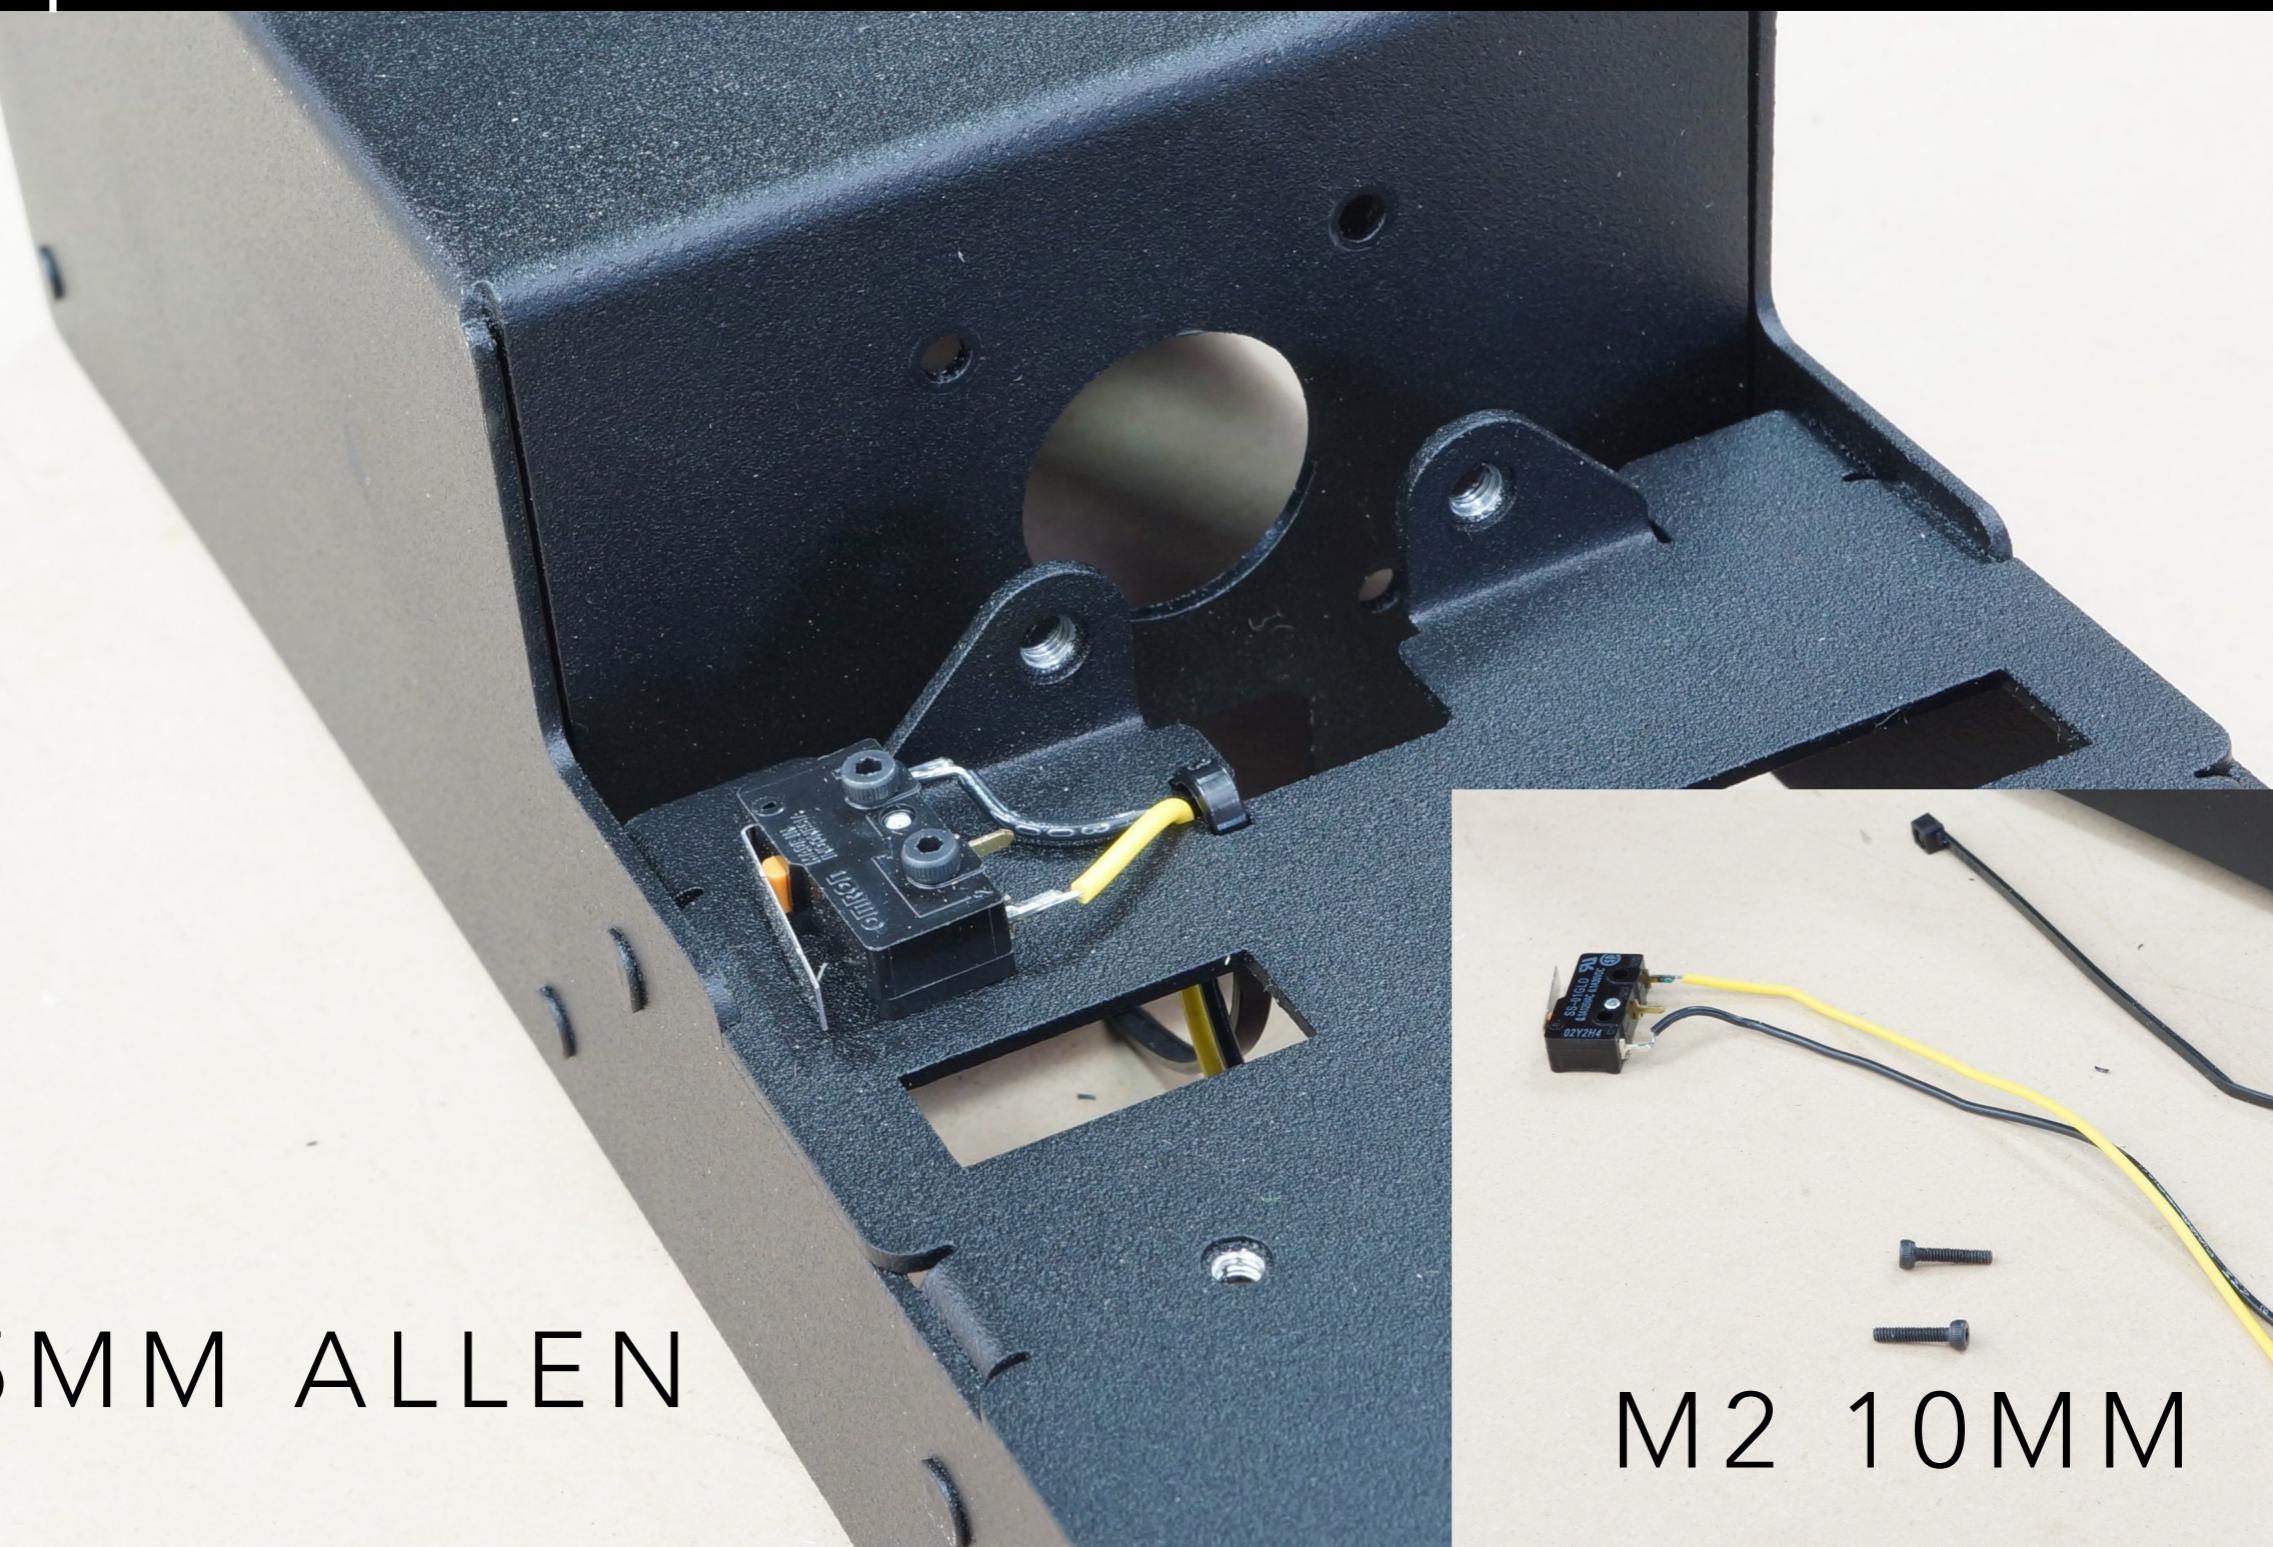

1.5MM ALLEN

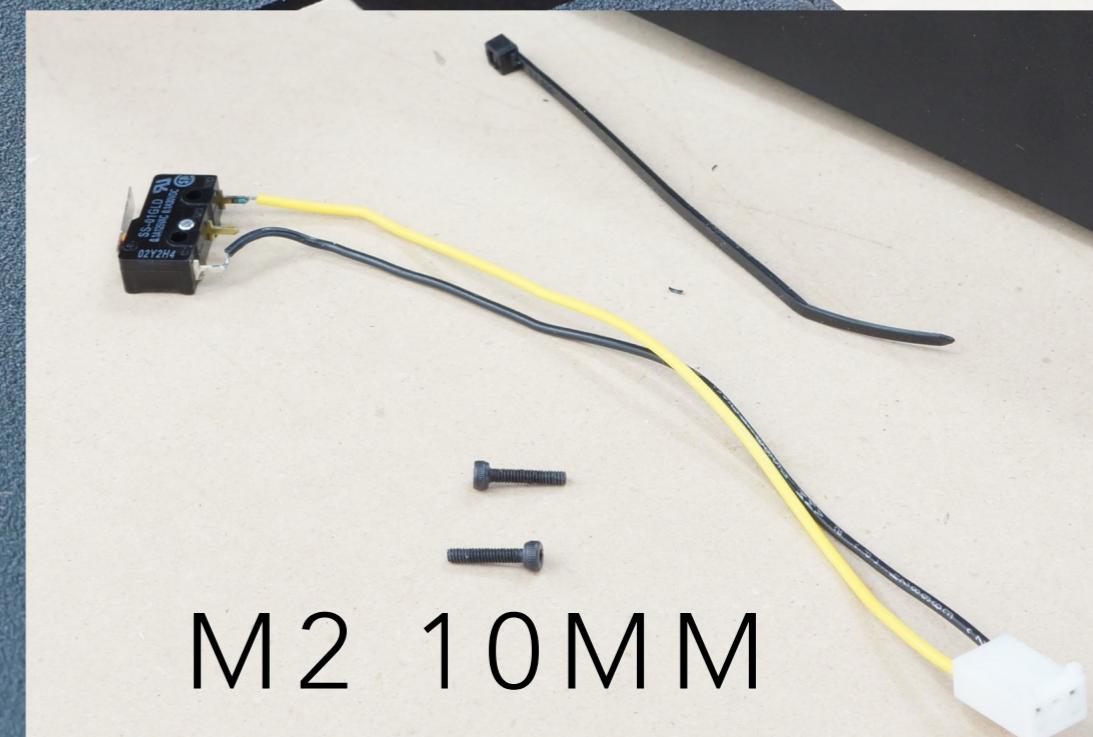


M2 10MM

02

2.5MM ALLEN


M4 10MM
624 BEARING
#6 WASHER

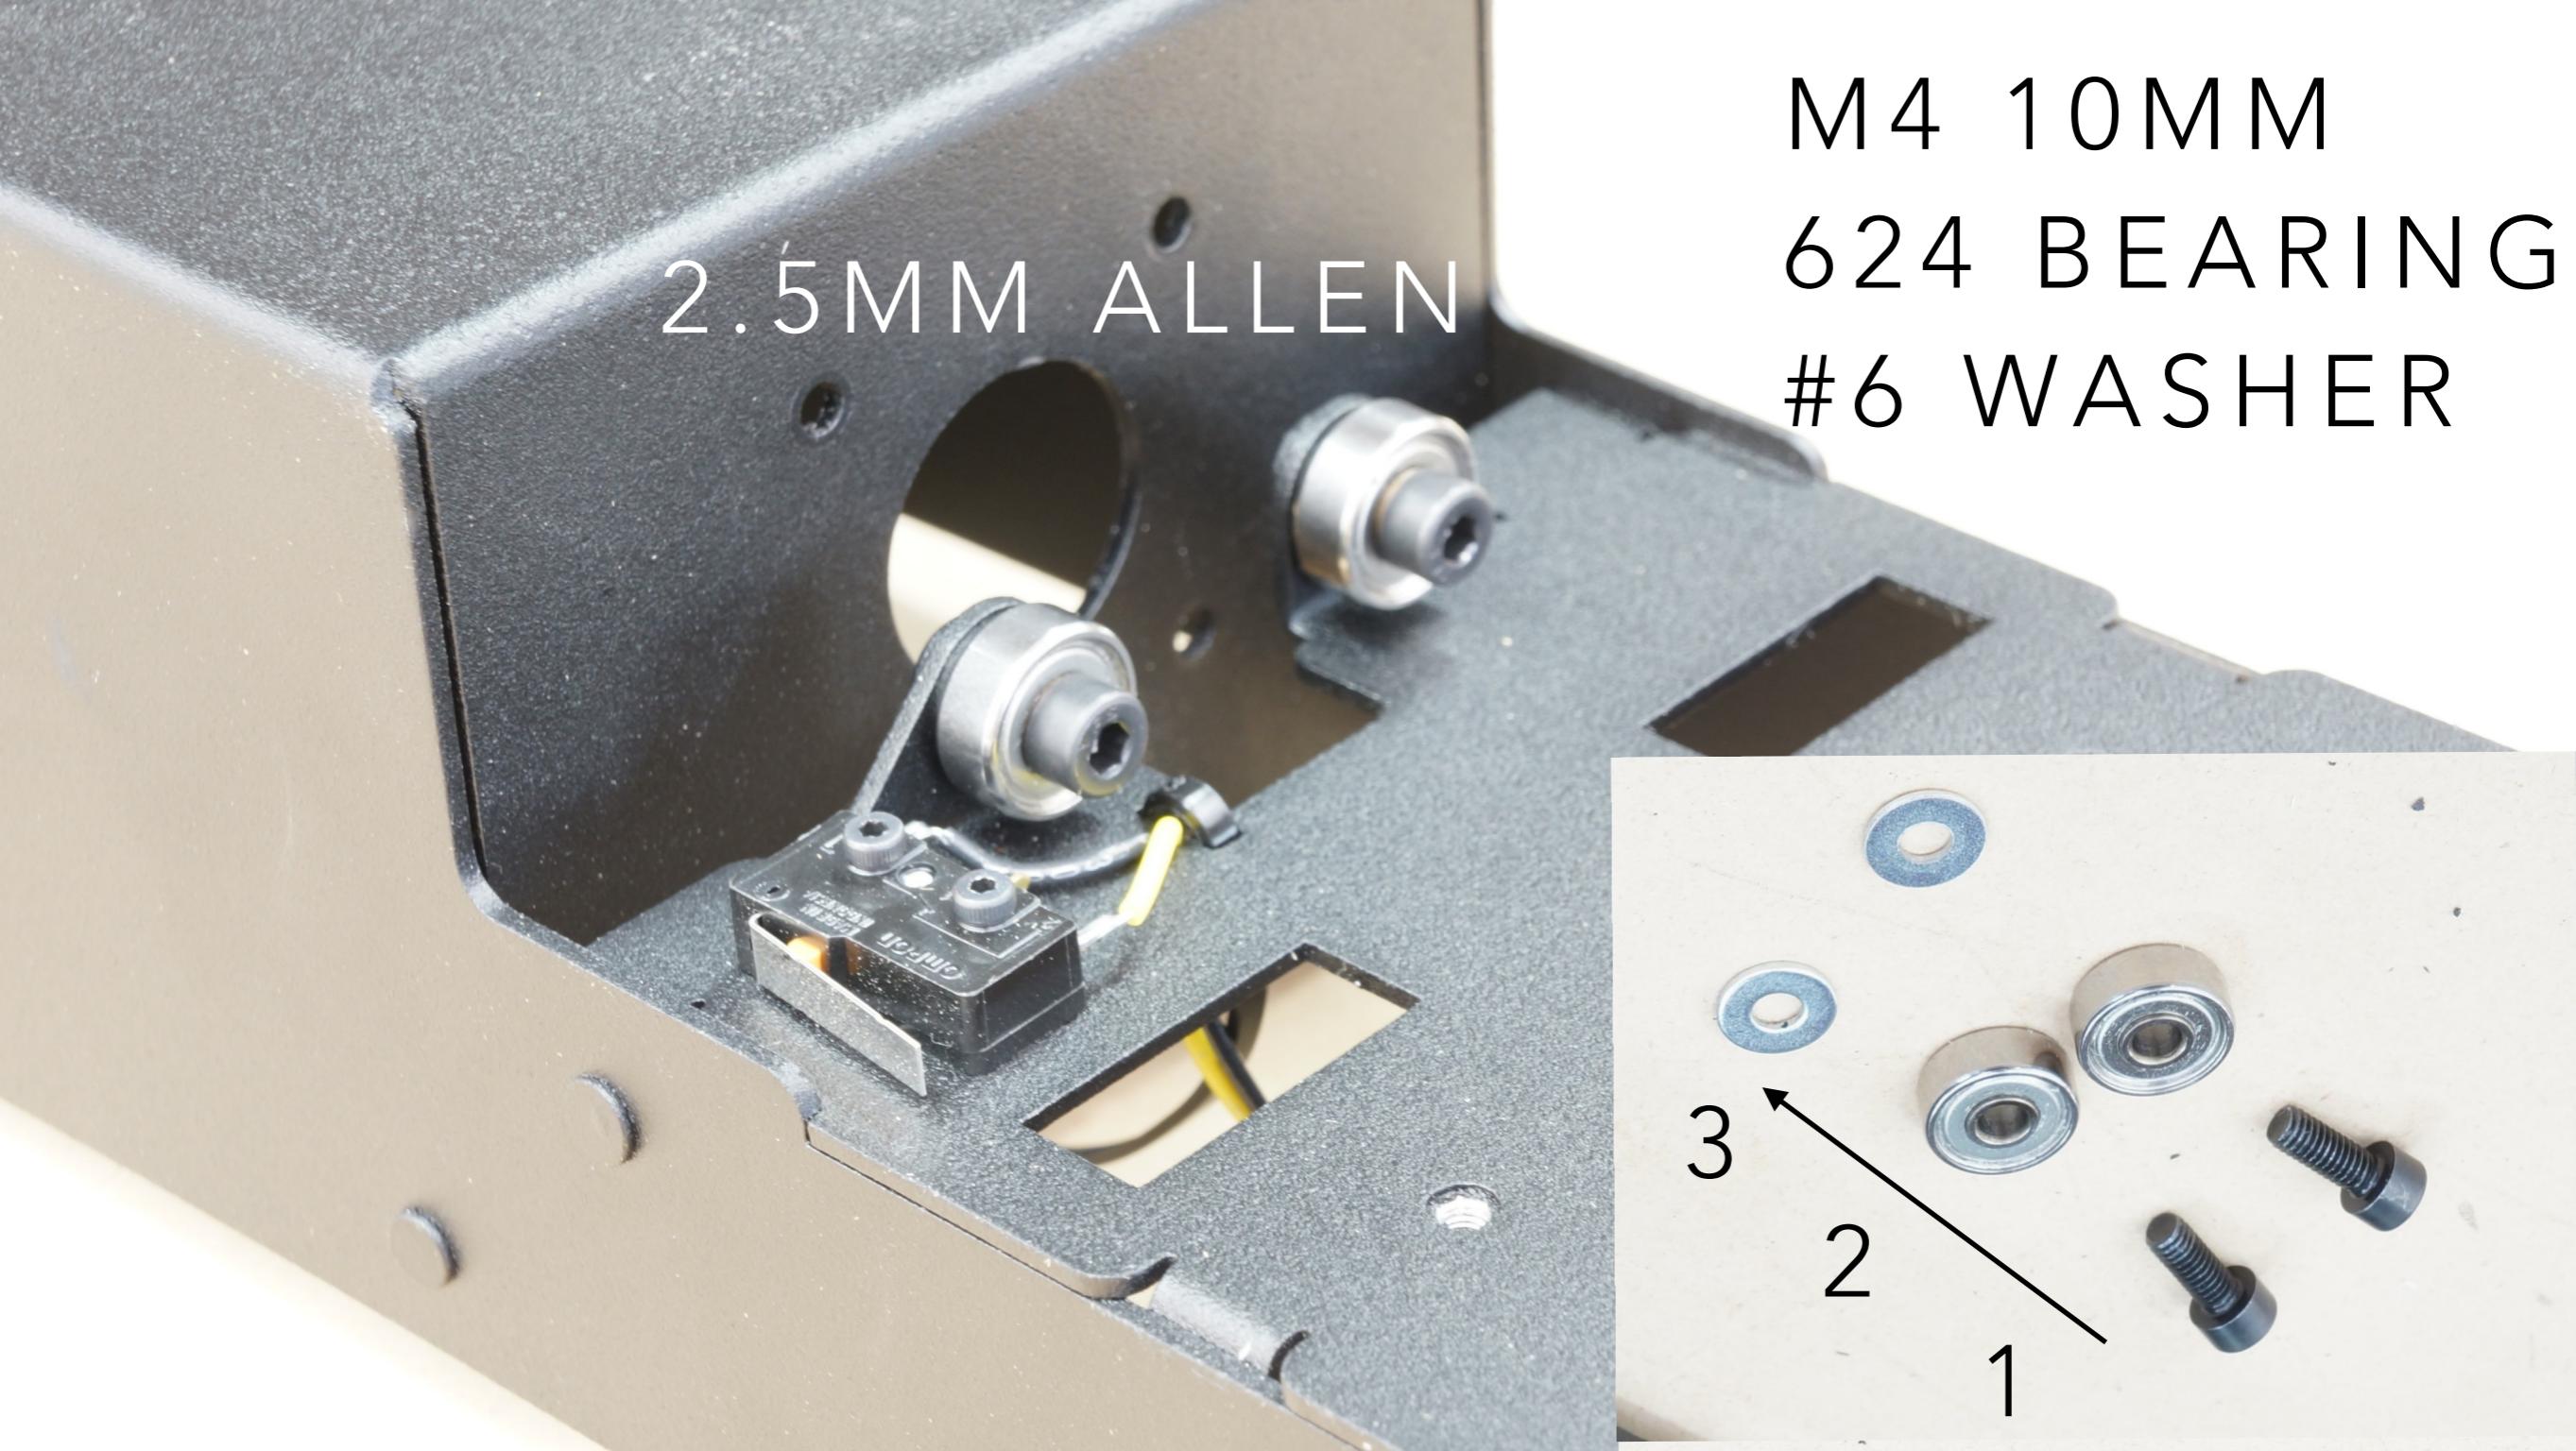



03




M3 SETSCREW
1.5MM ALLEN
BLUE LOCTITE

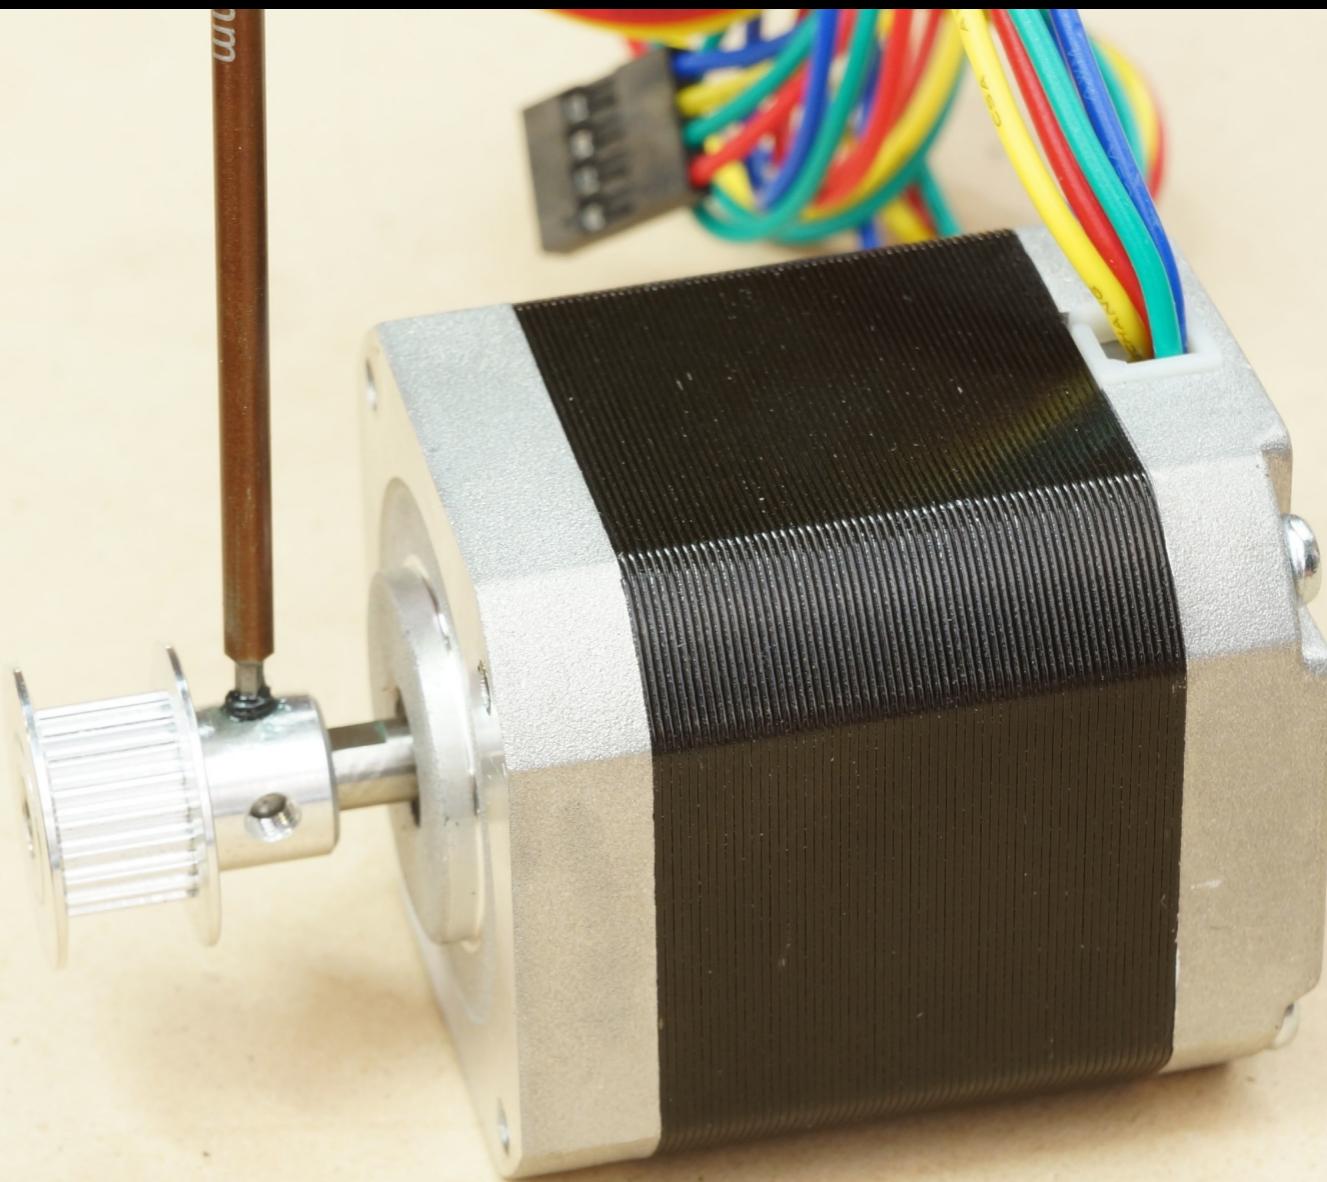



04

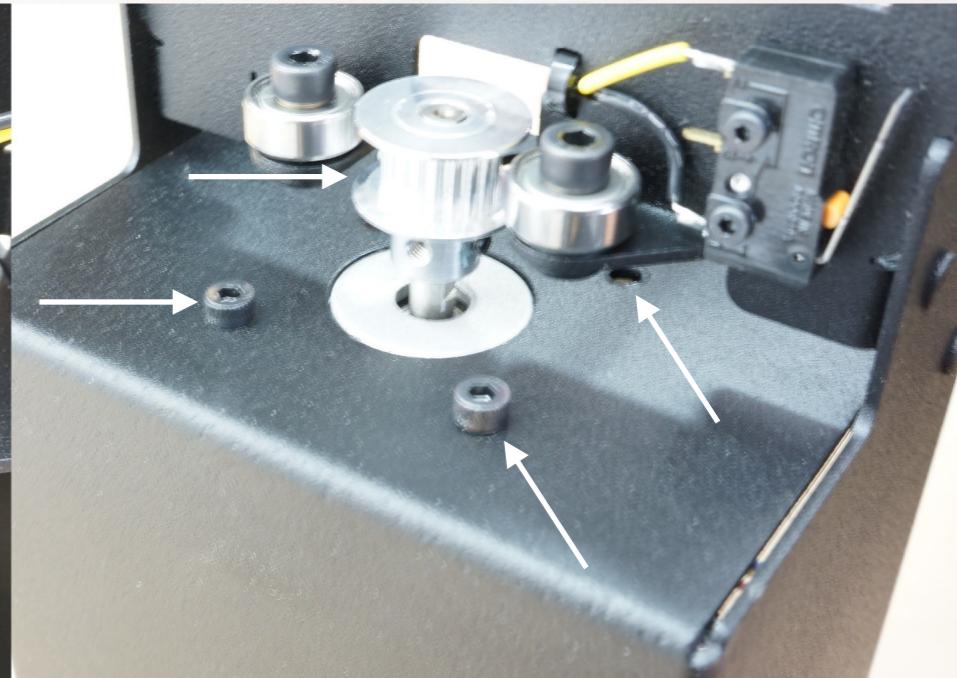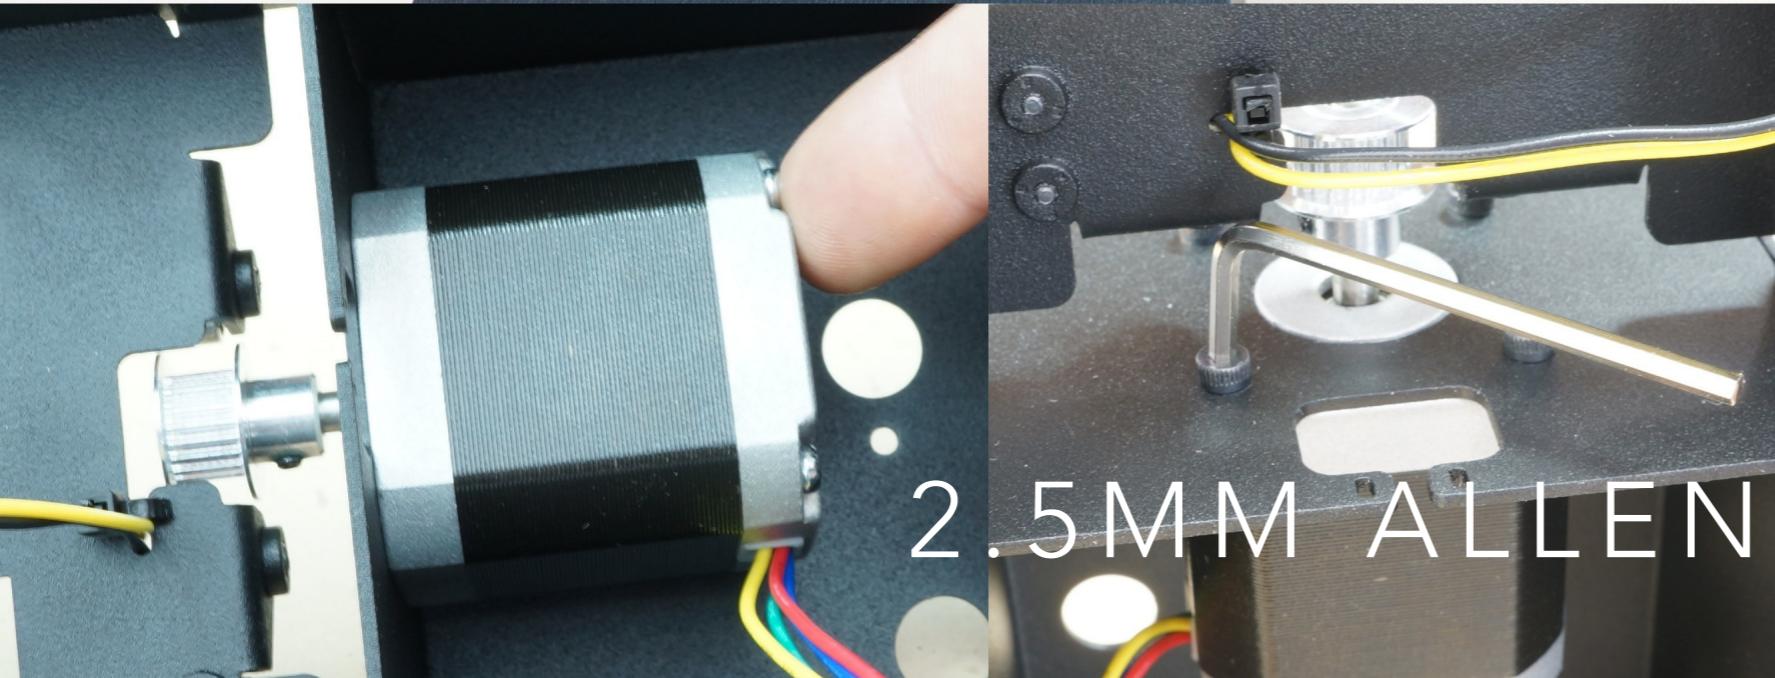



05

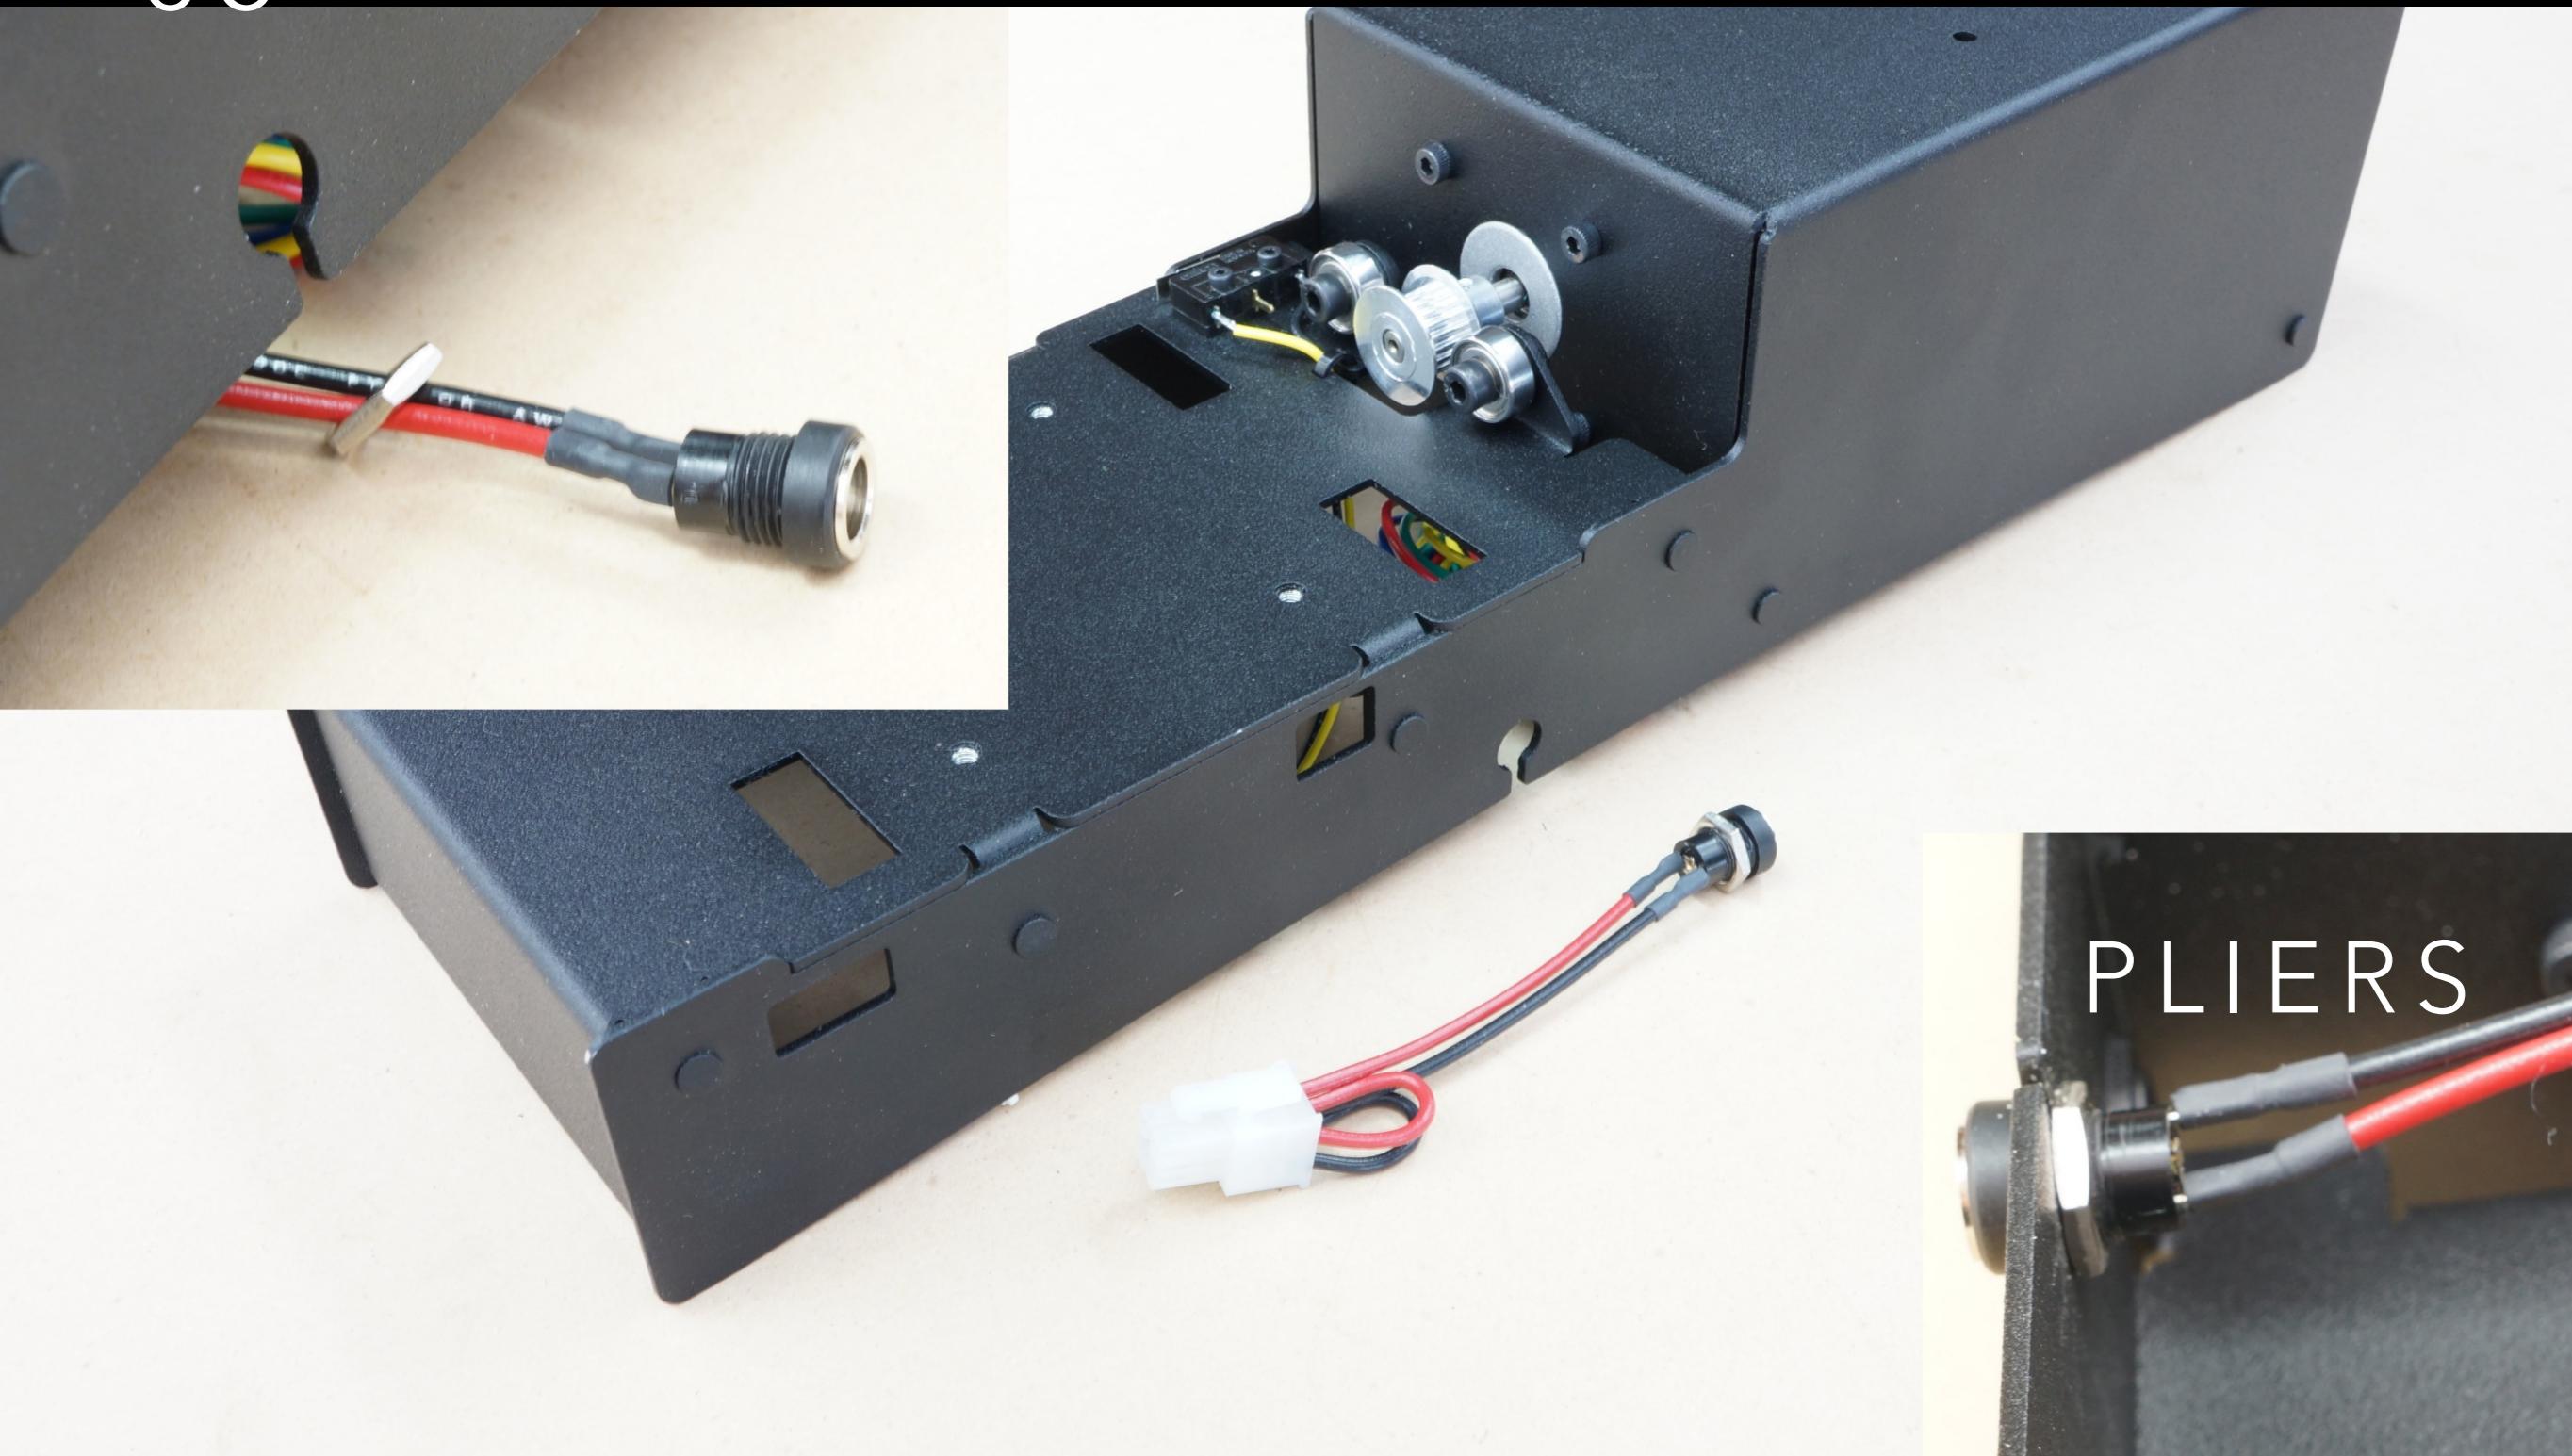

06

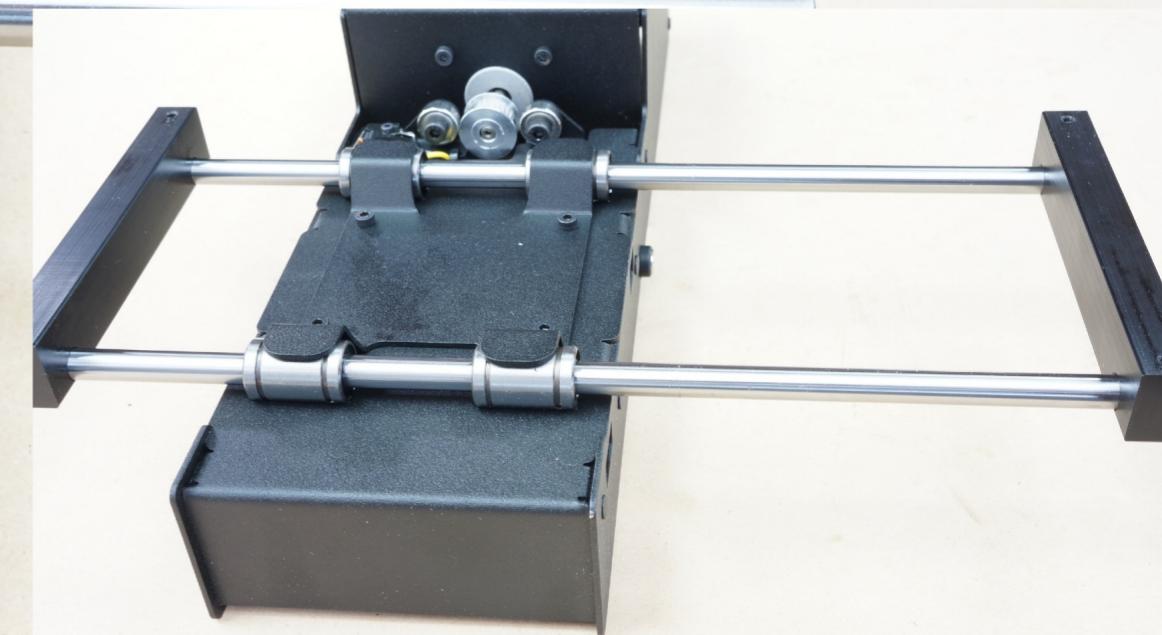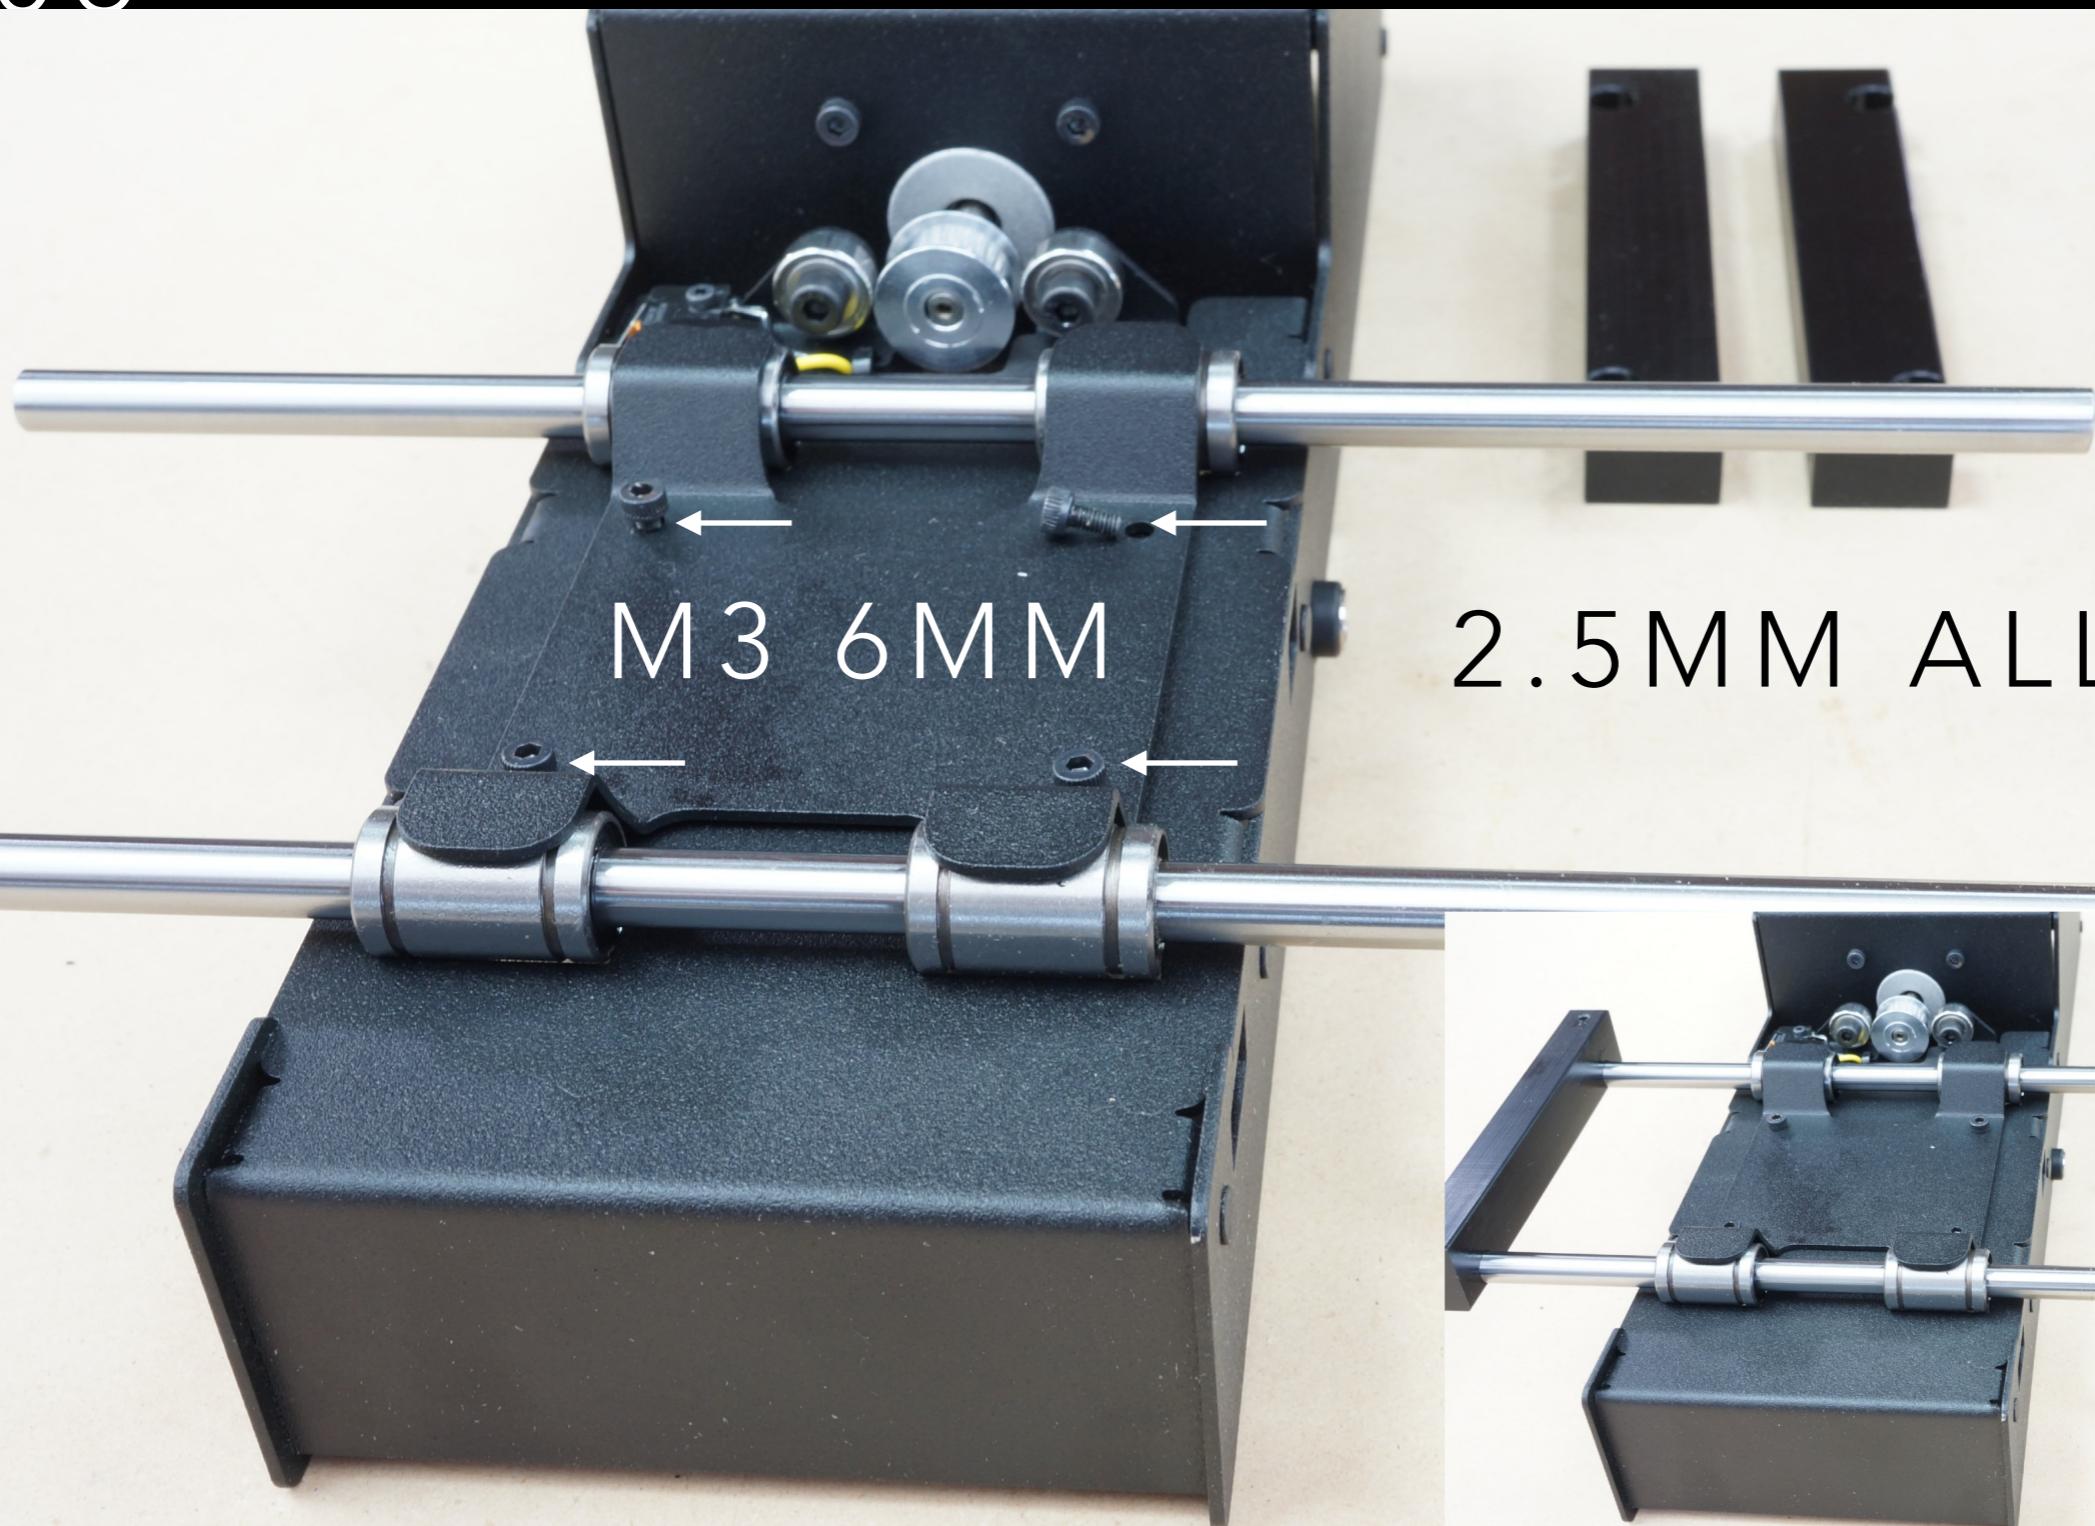

07

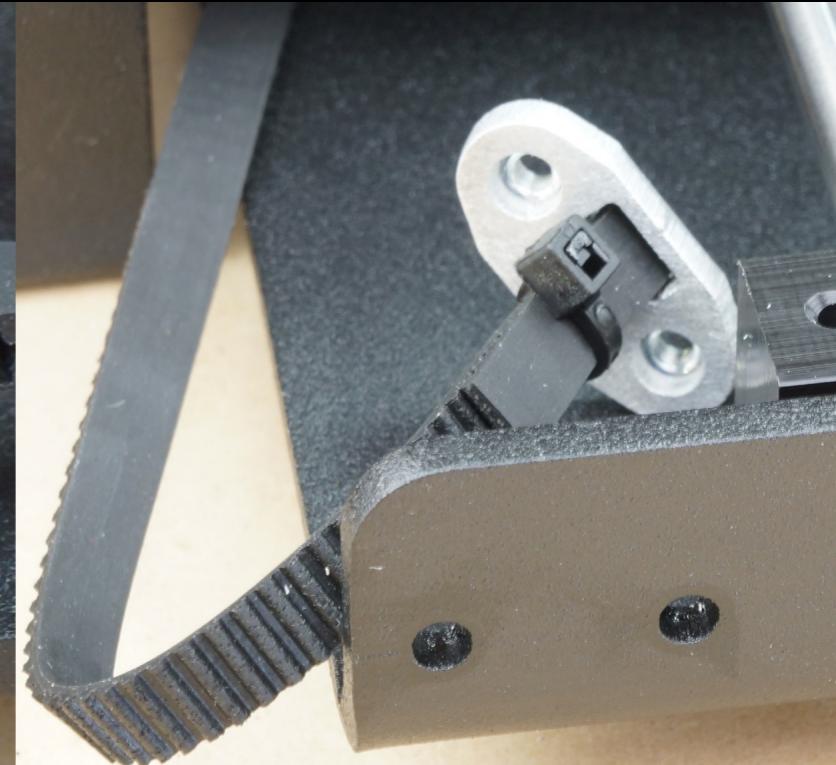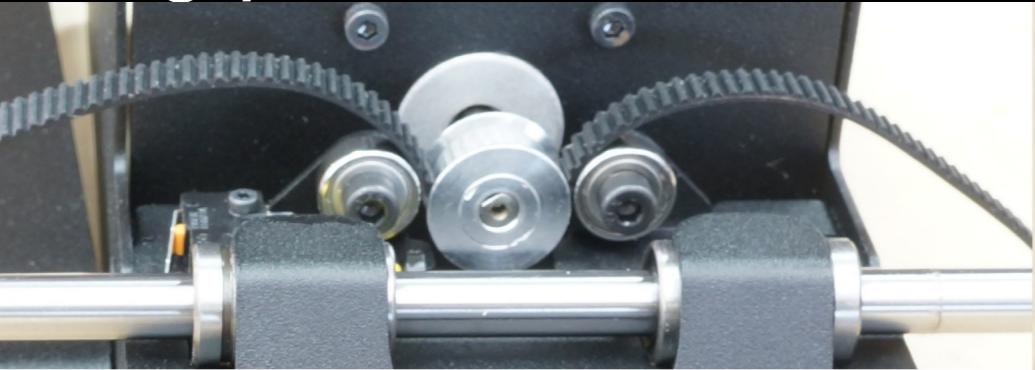

M3 10MM



2.5MM ALLEN





M3 16MM



08

M3 10MM


M3 16MM

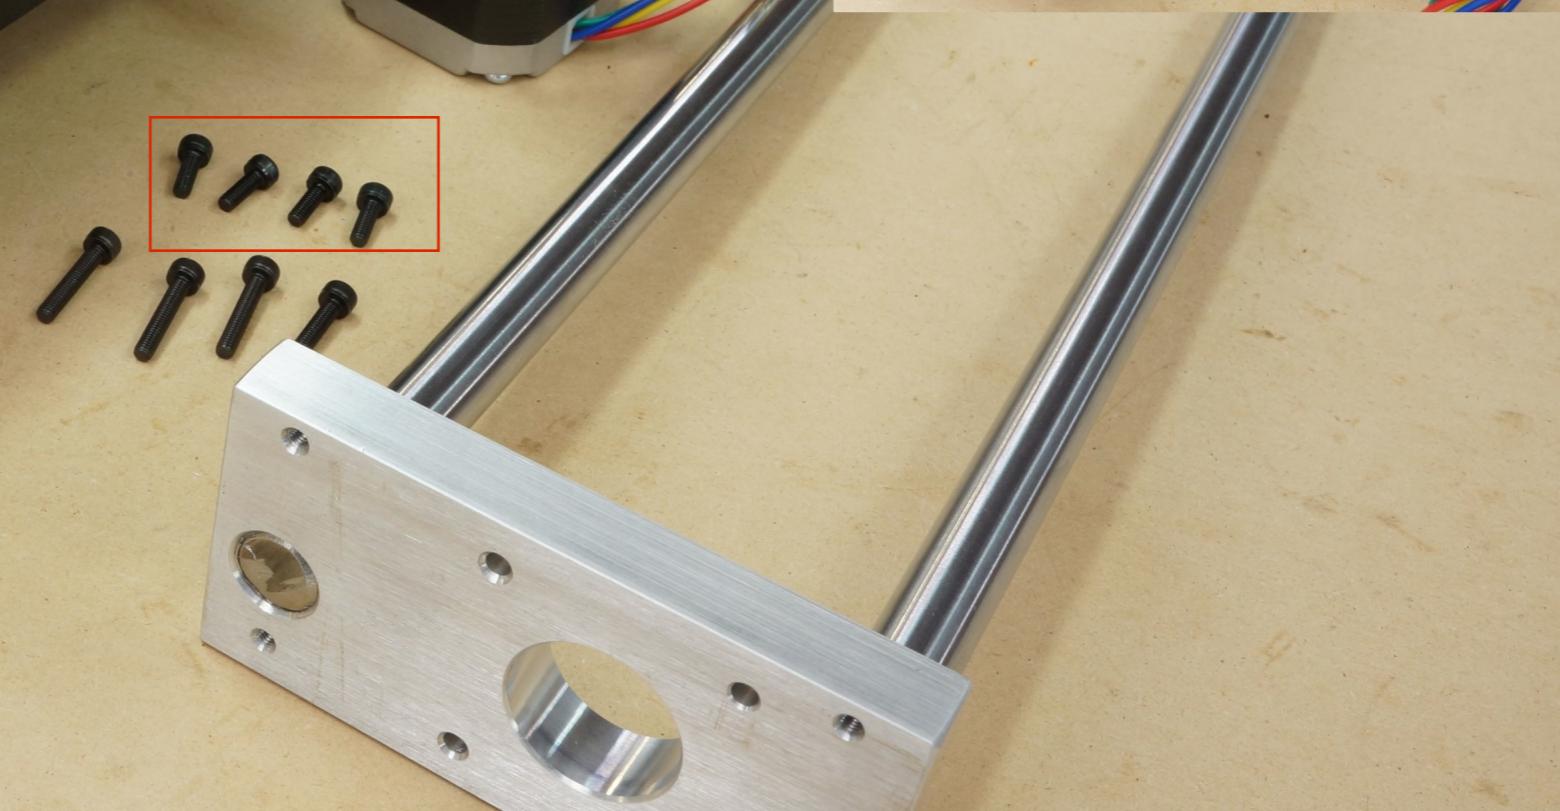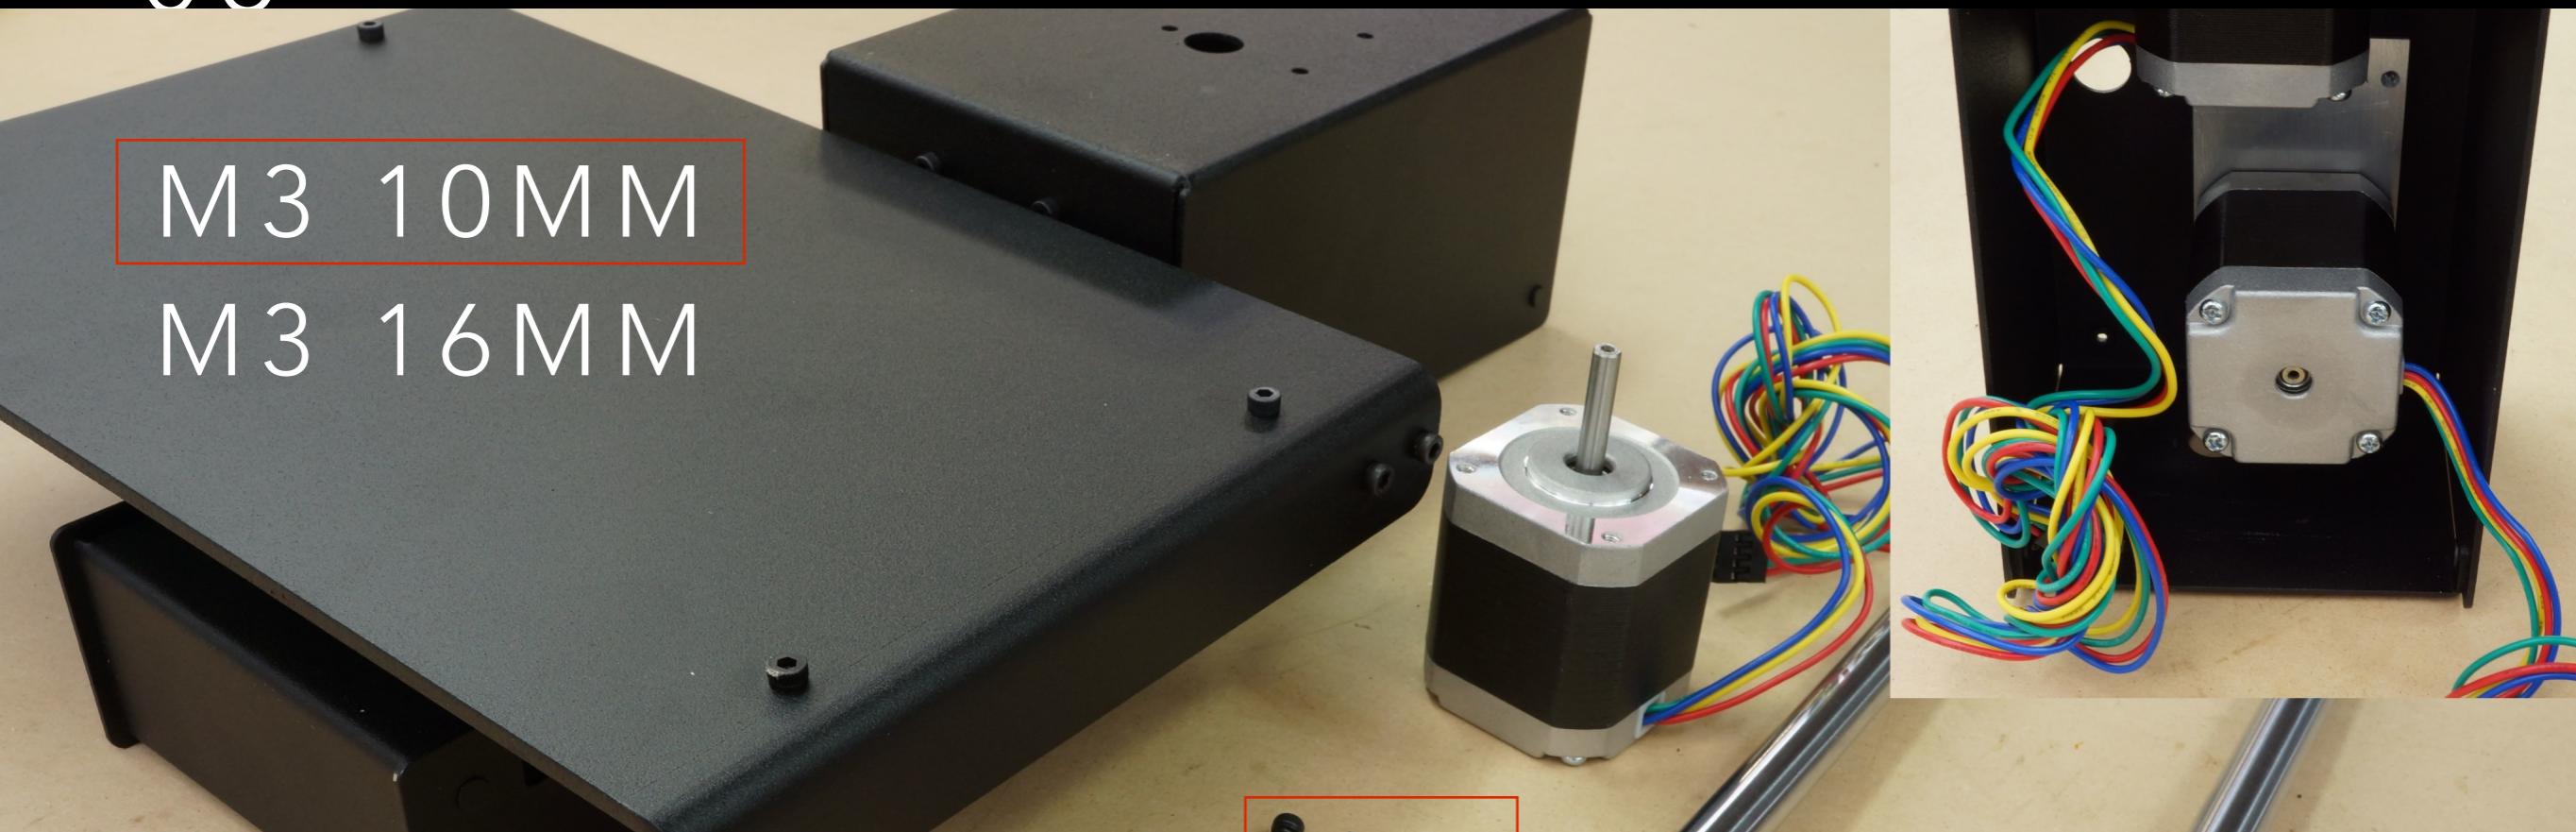

09

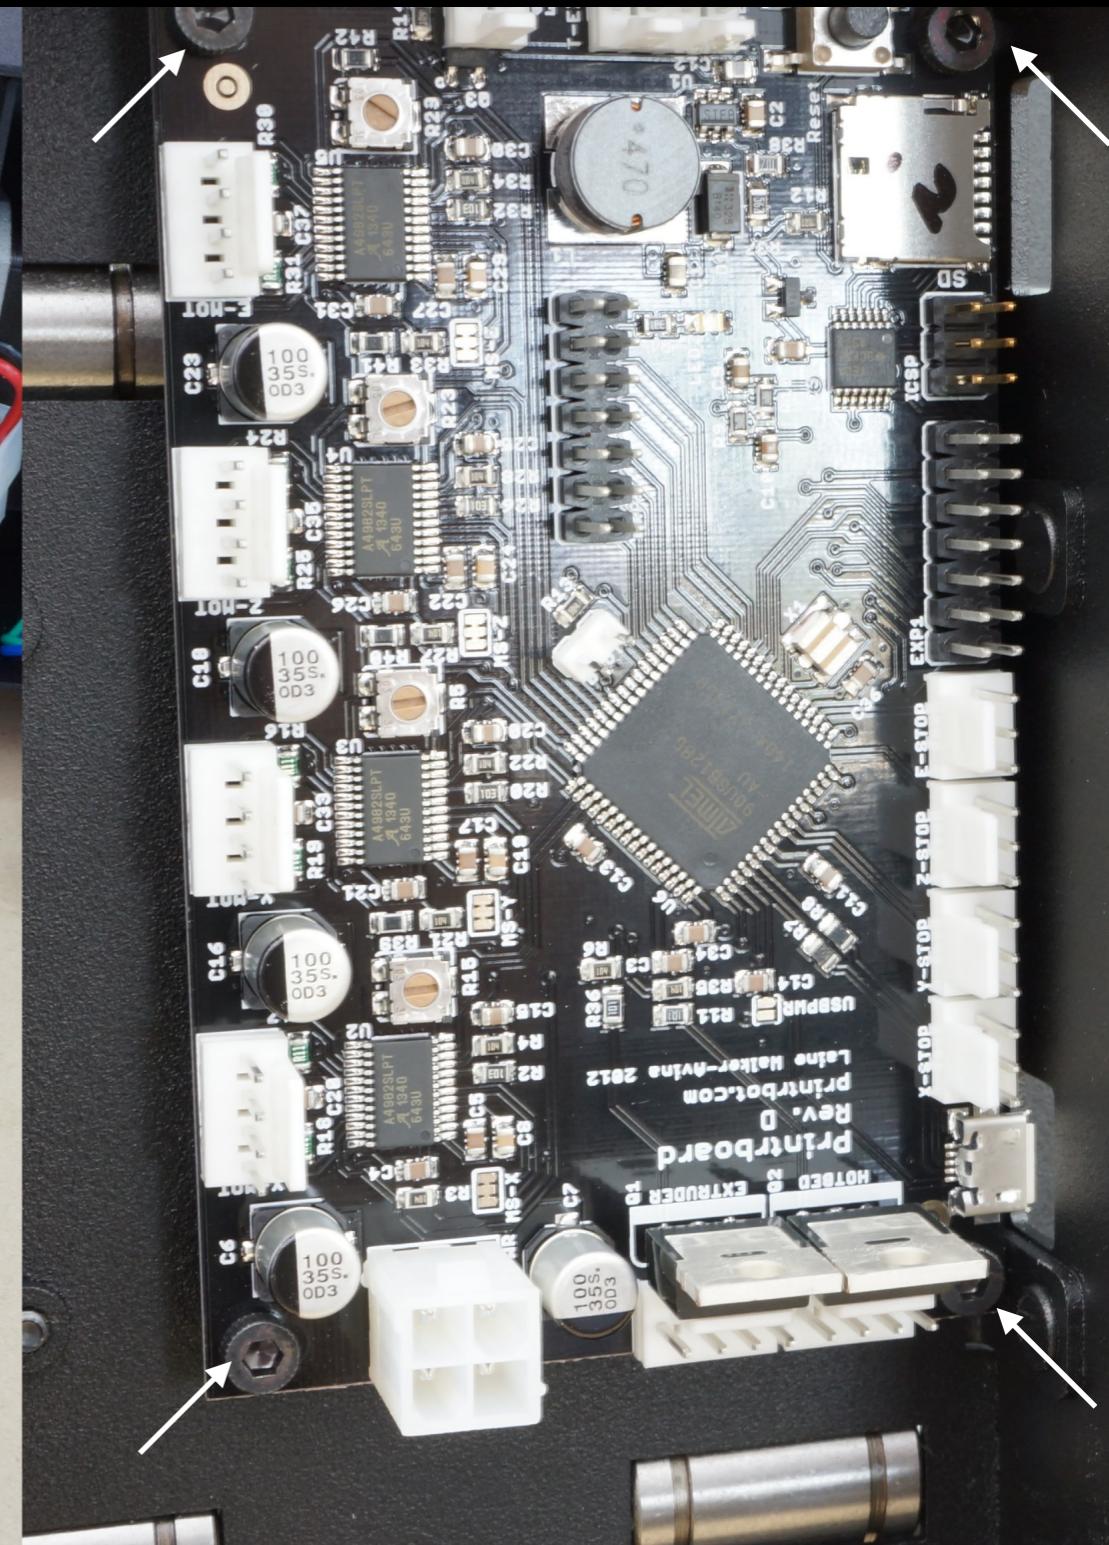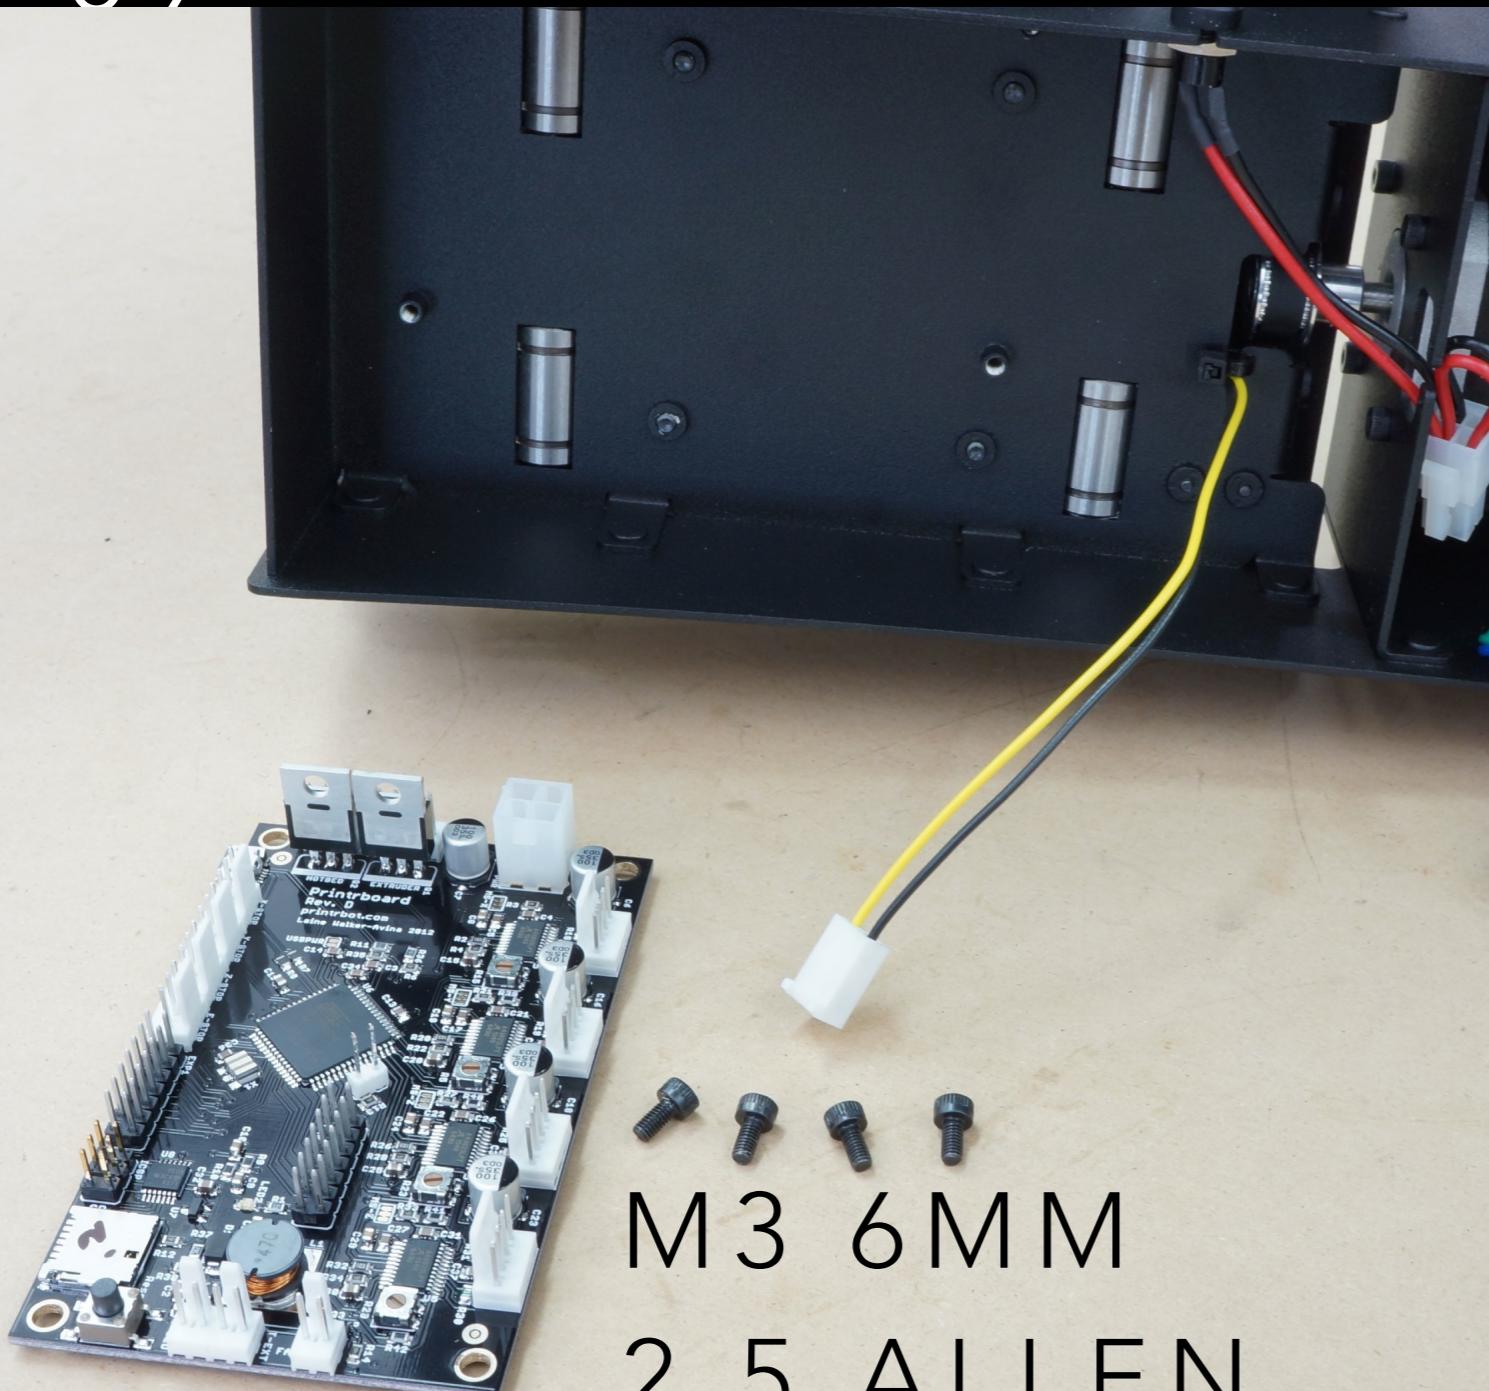

10

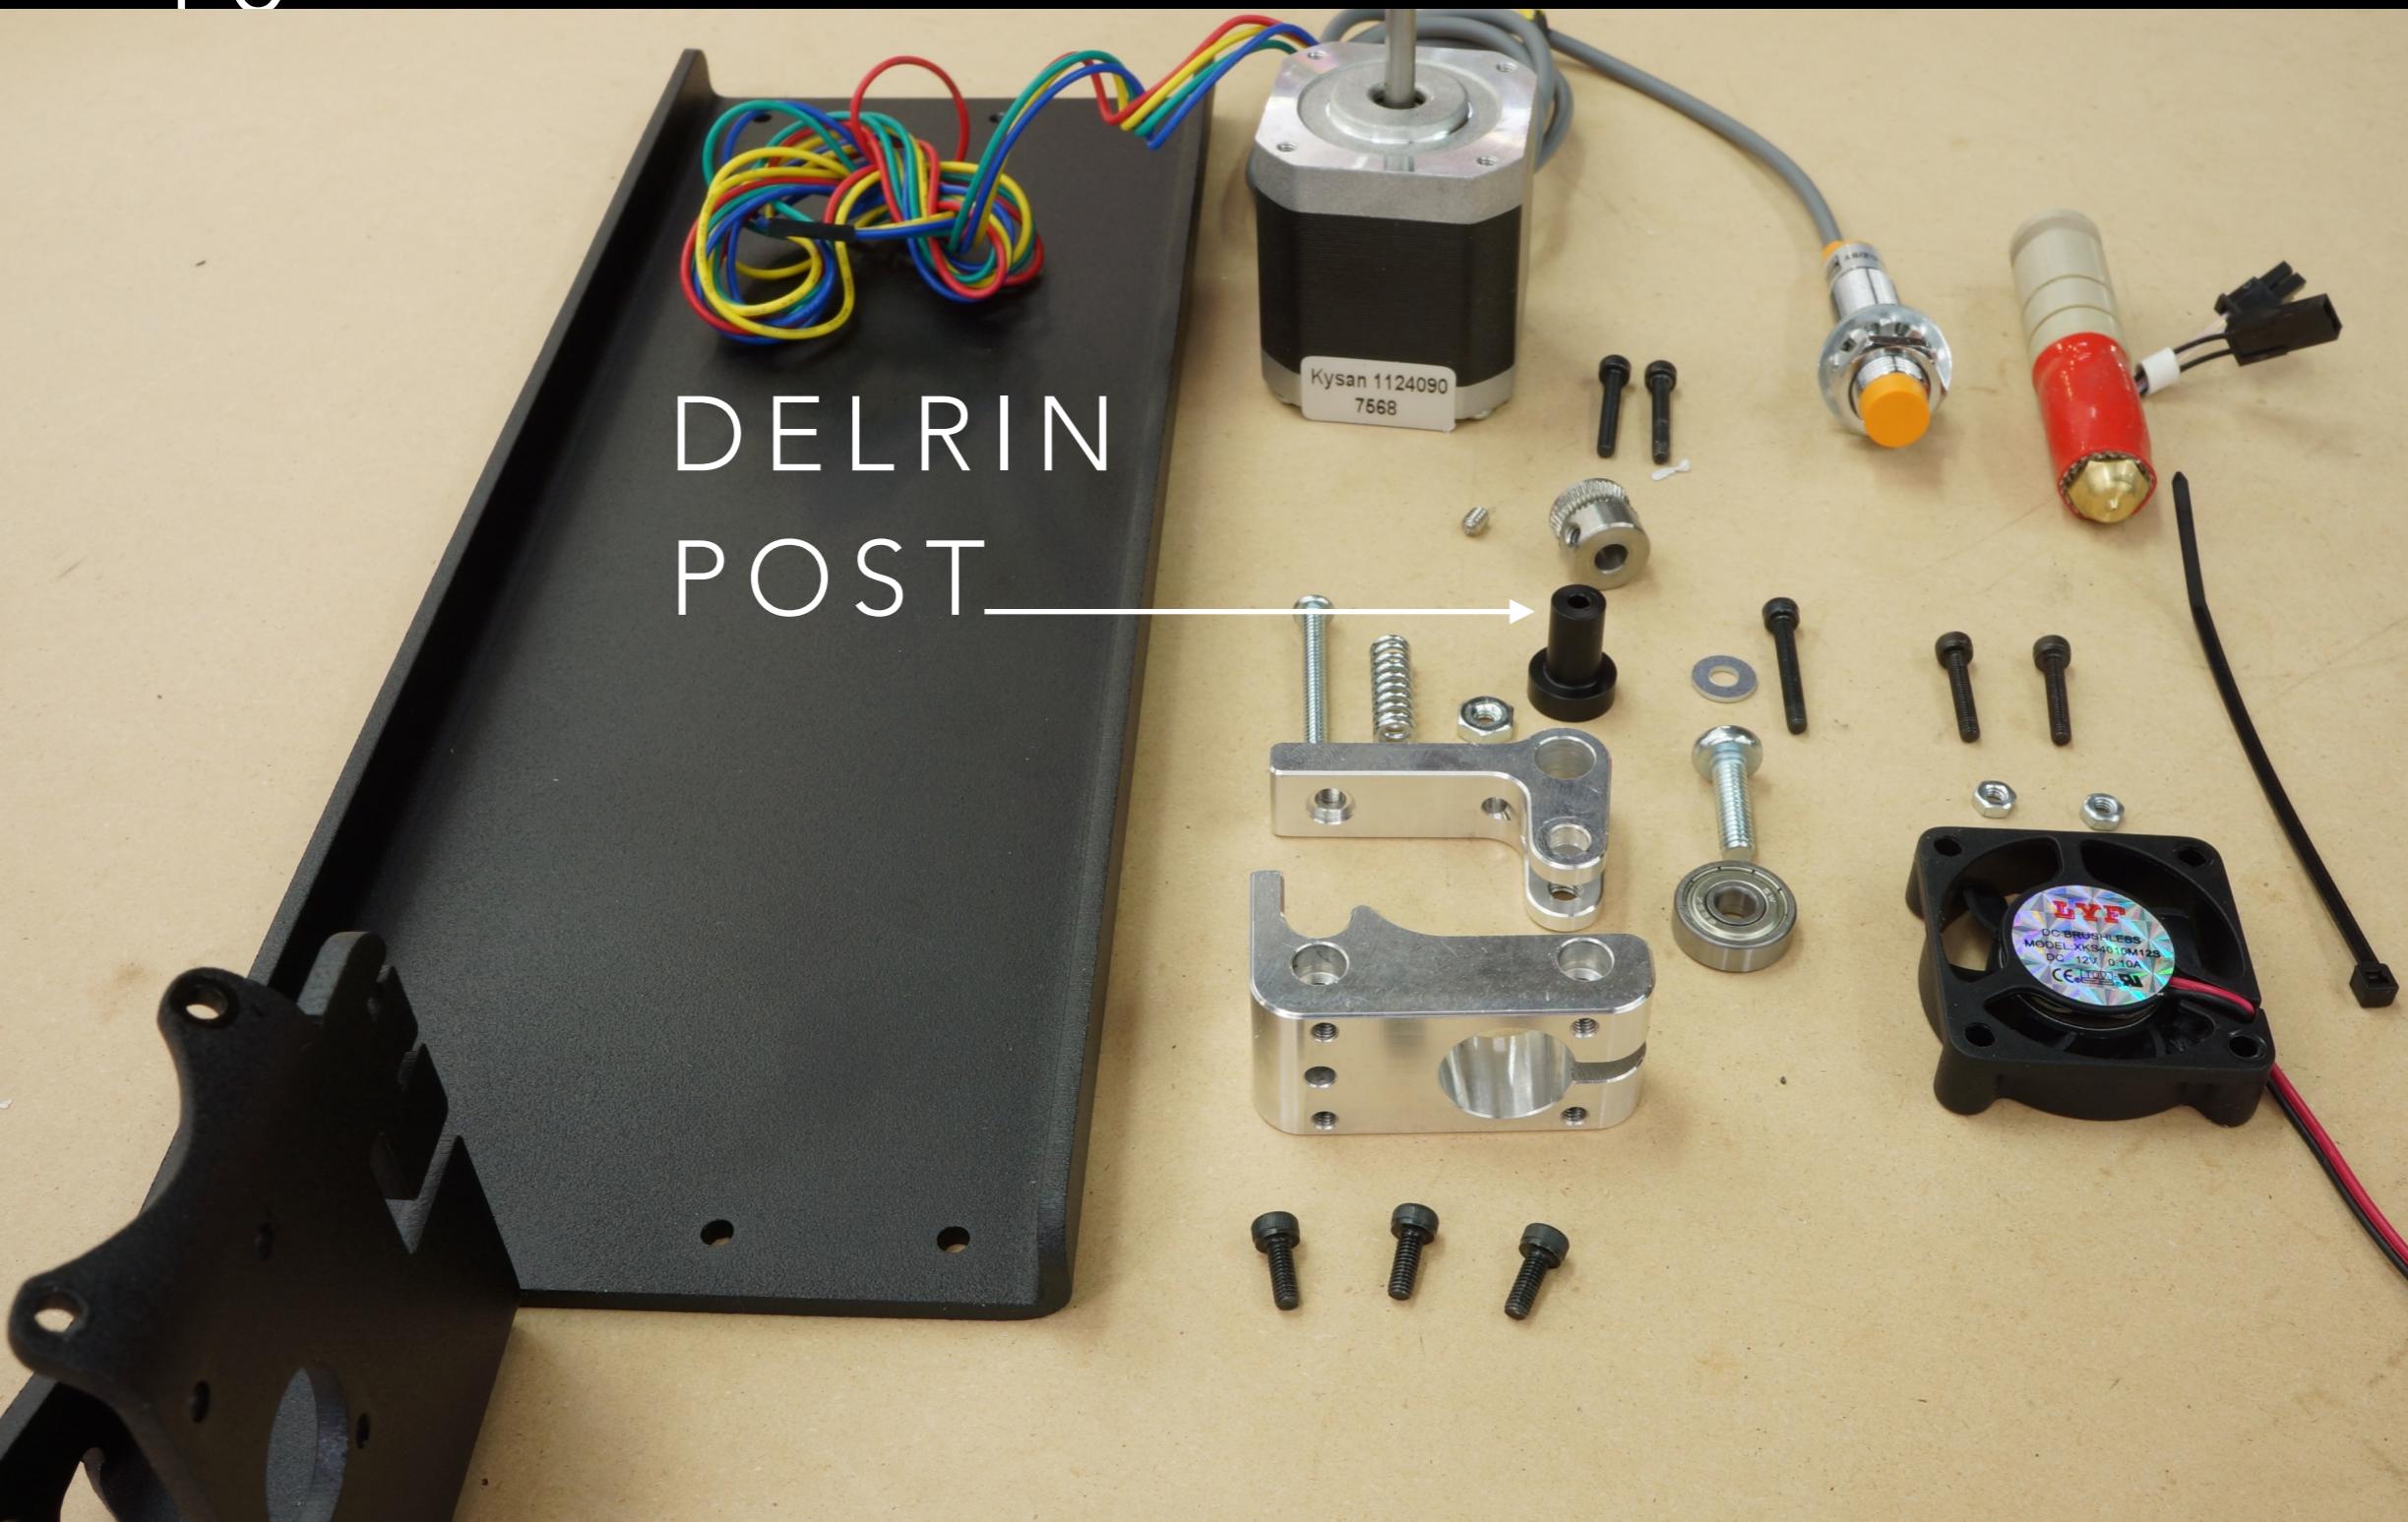


11




12

M3 8MM


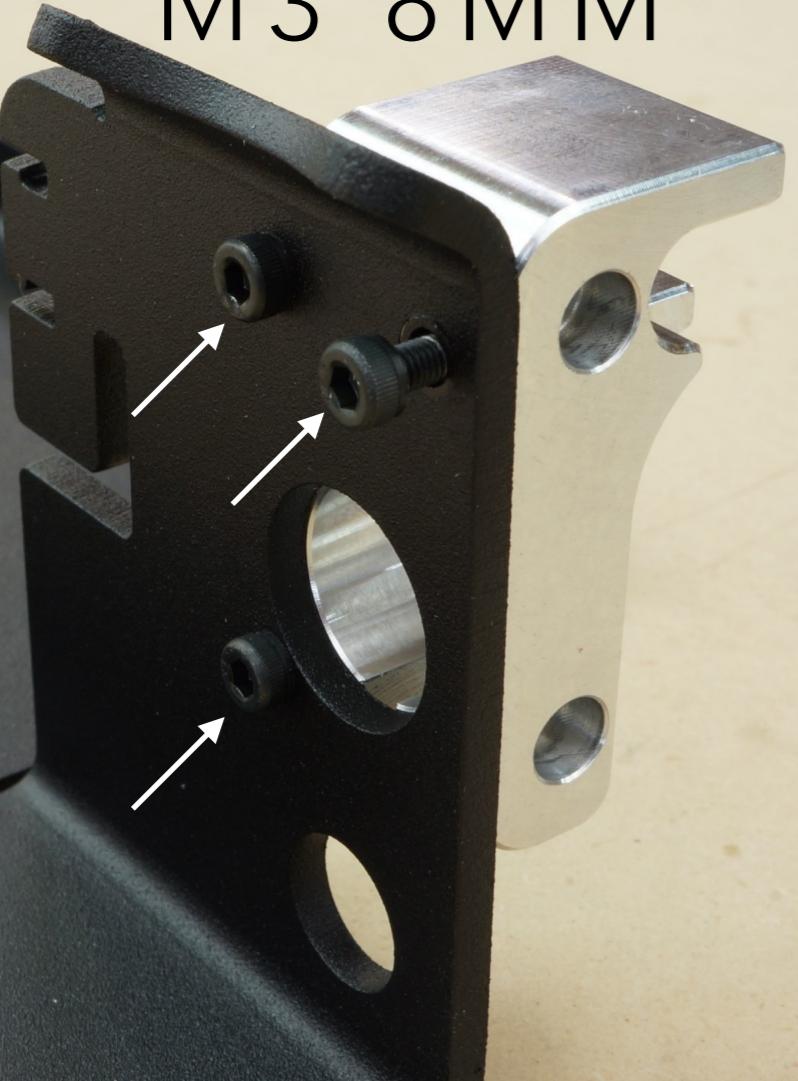


2.5MM ALLEN





M3 8MM
M3 NUT

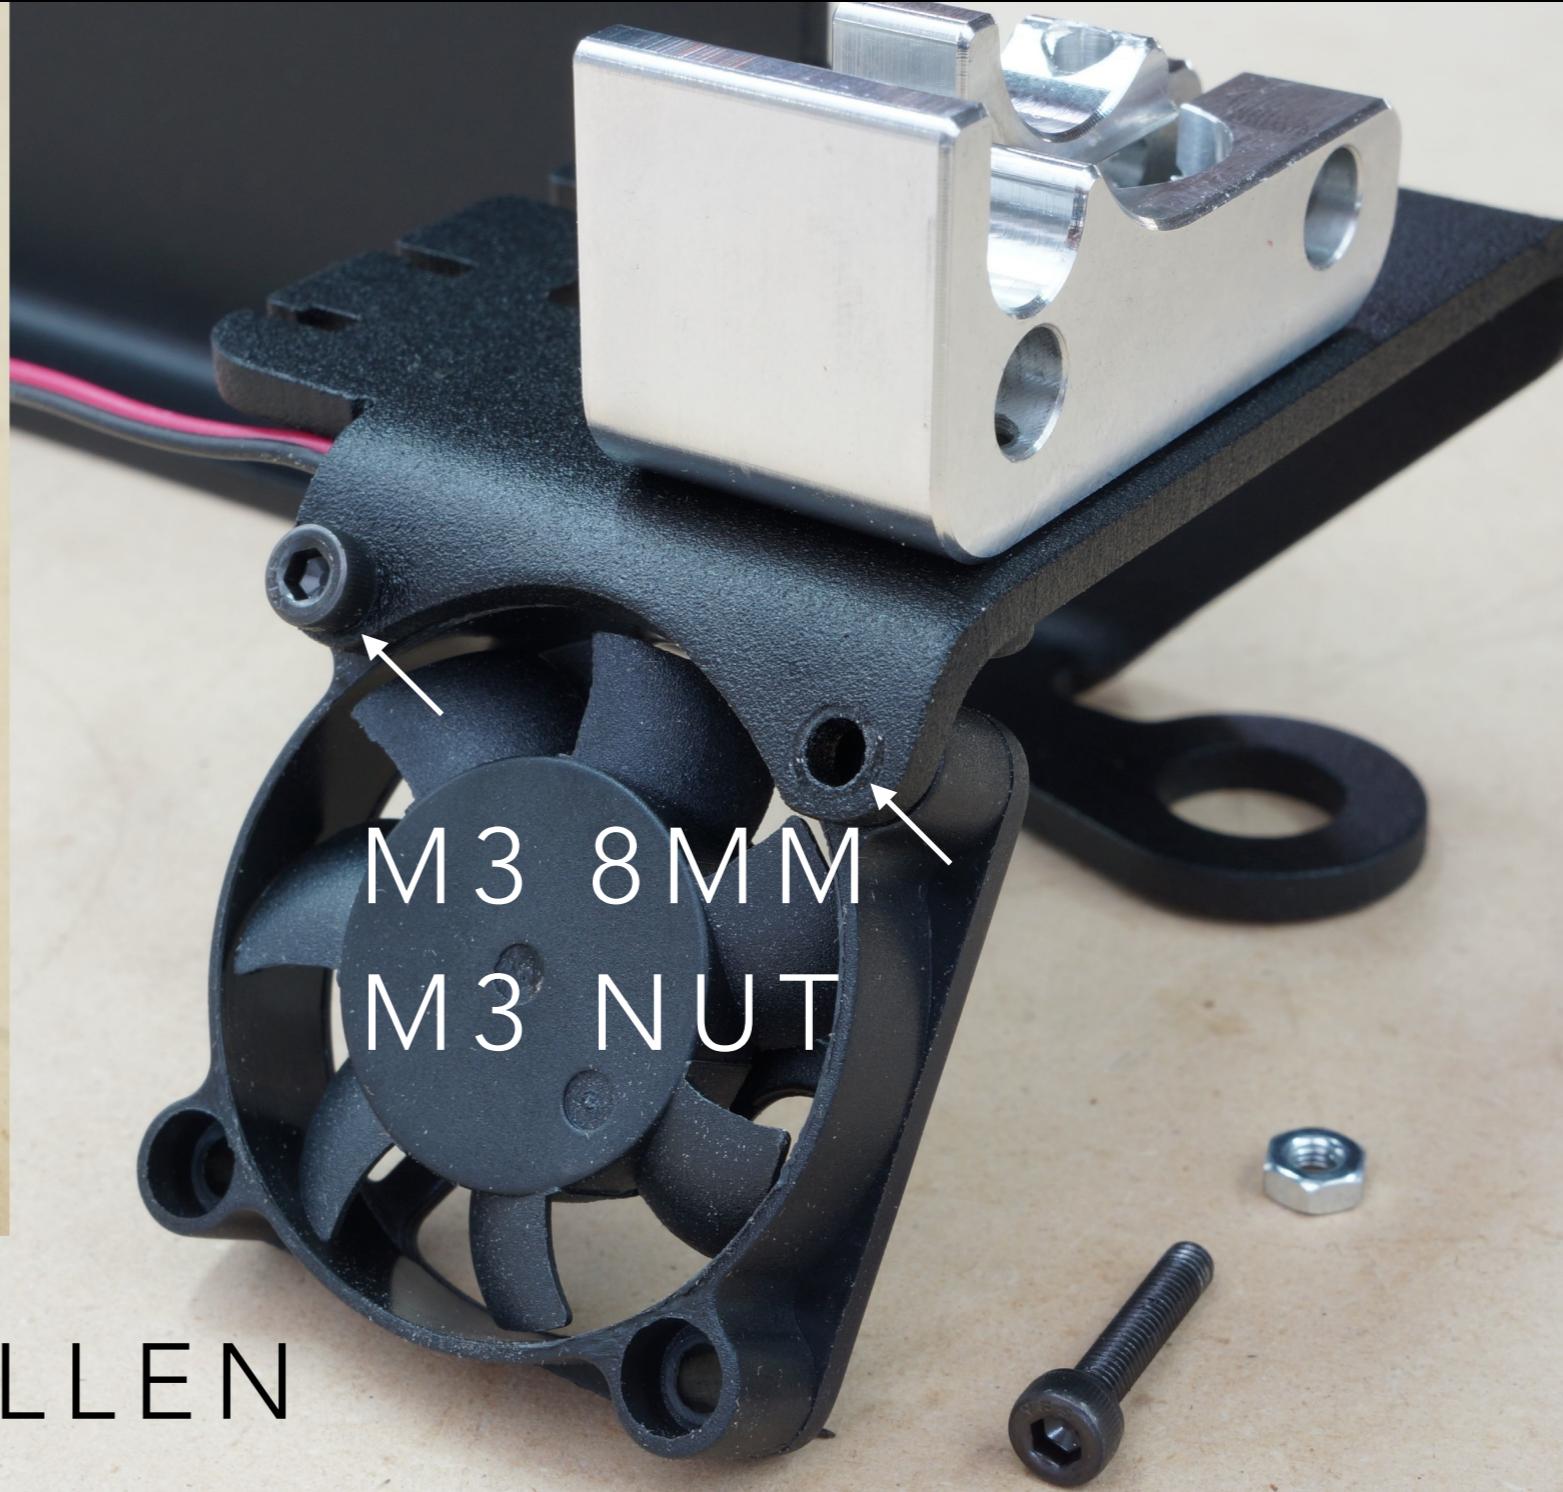


13

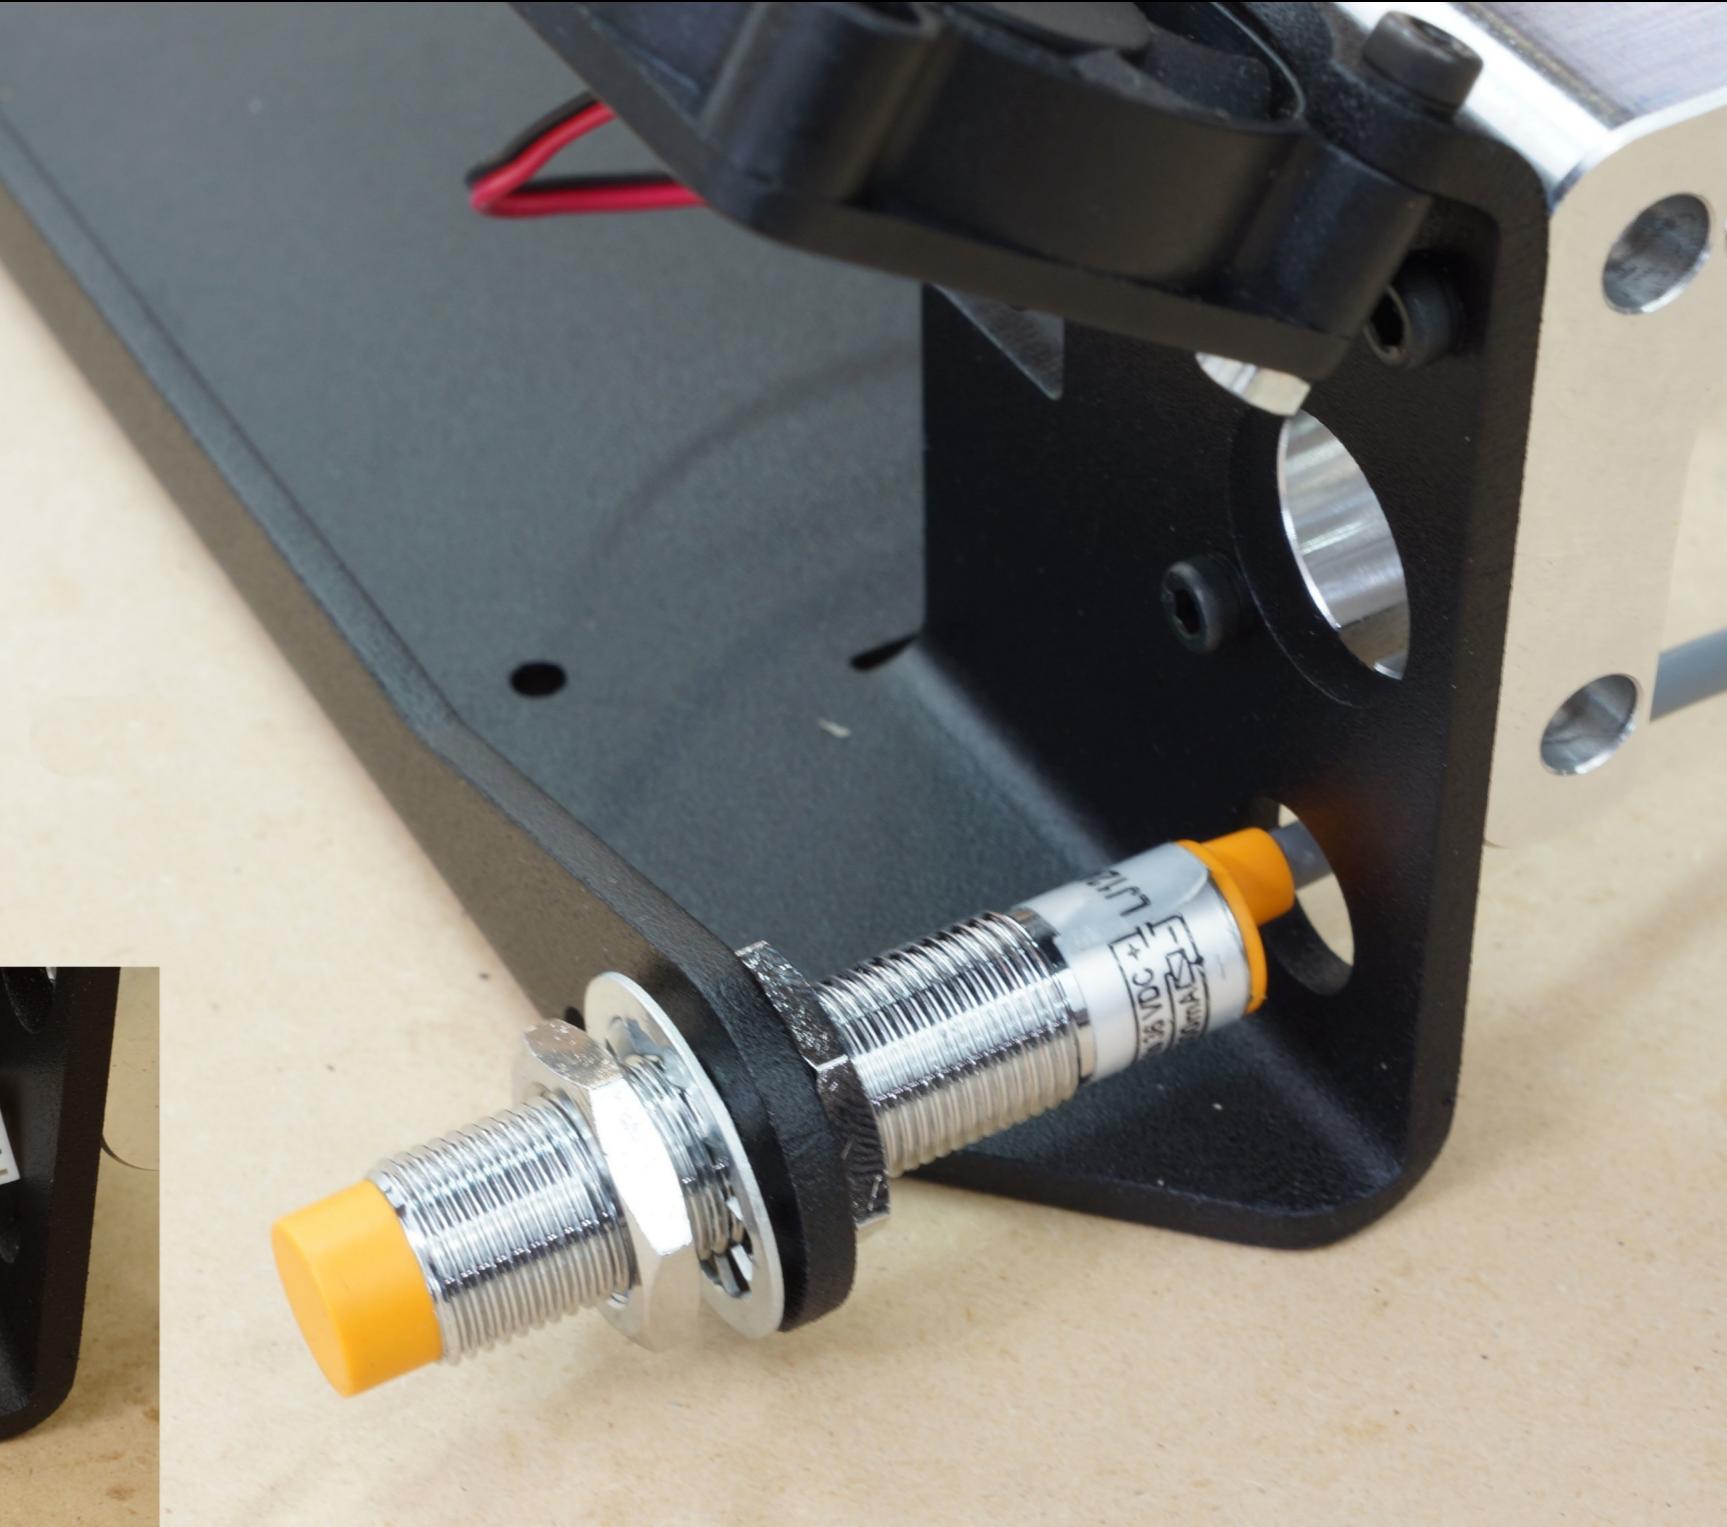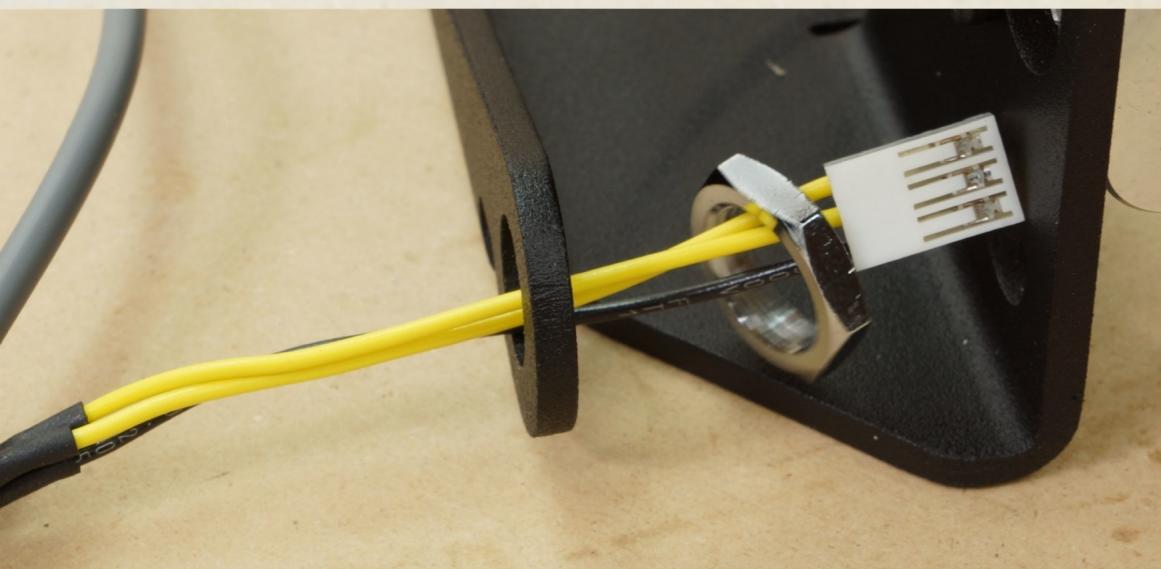

14

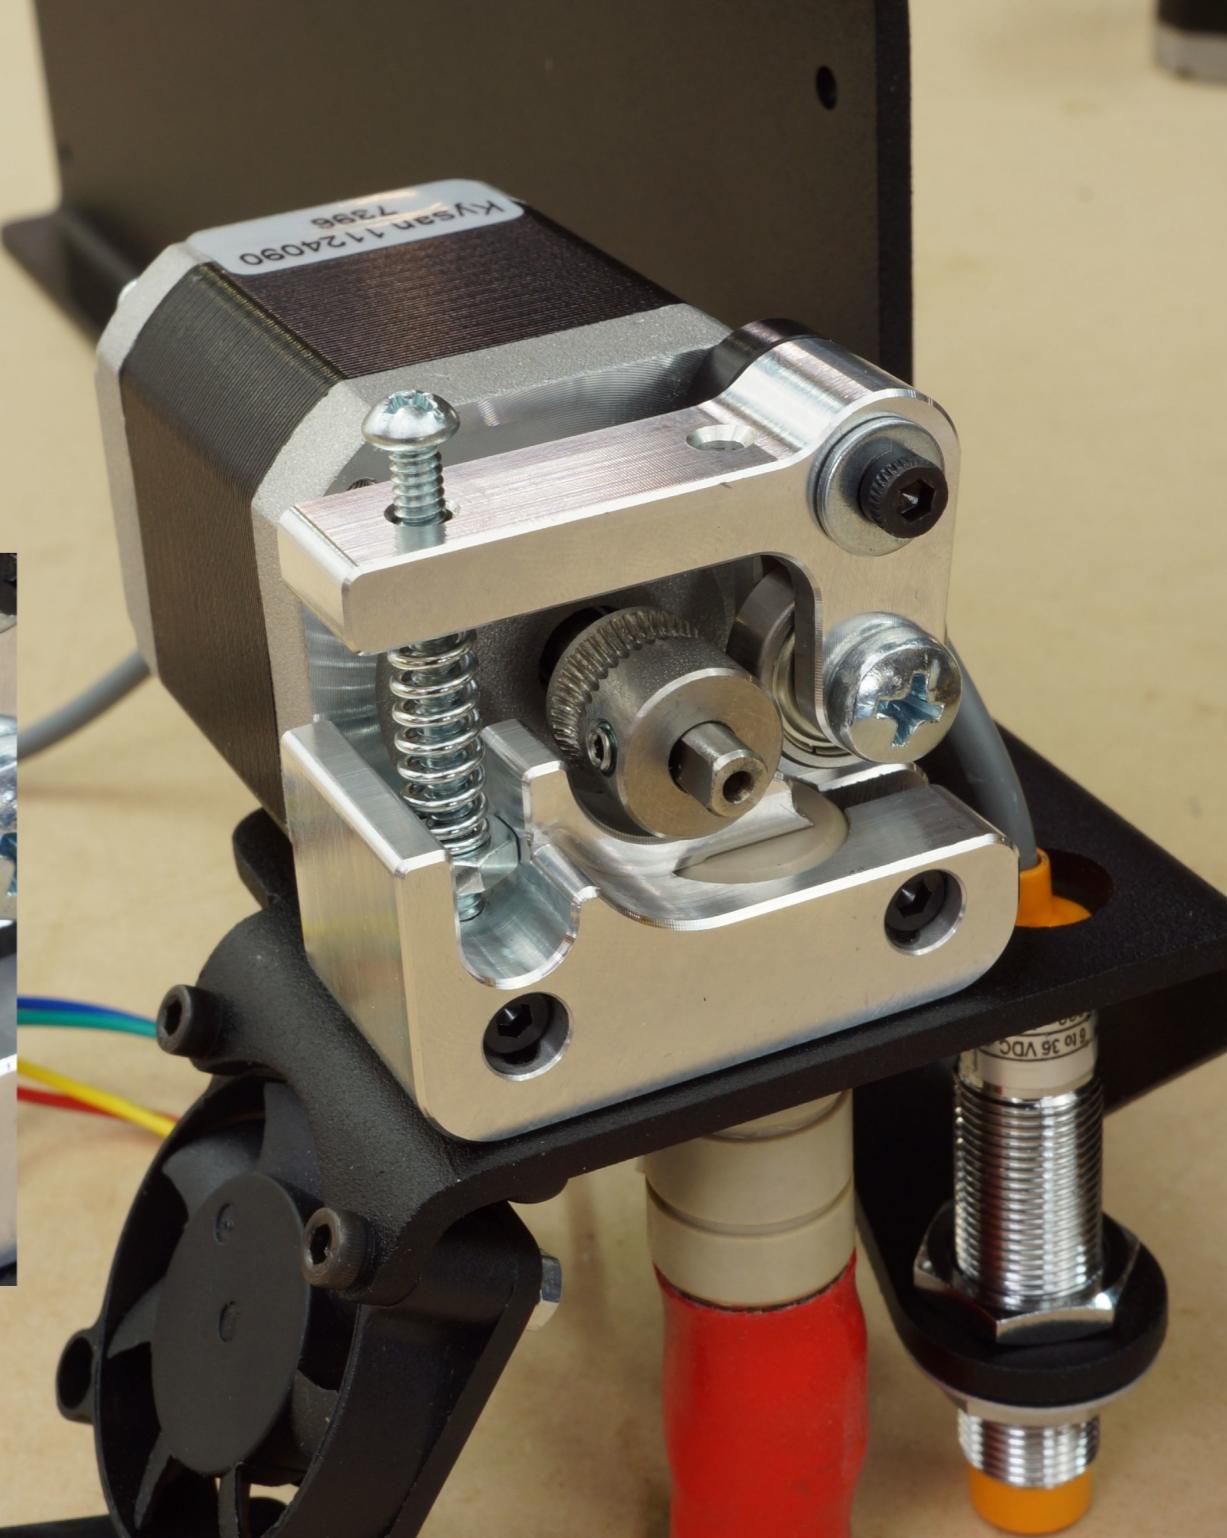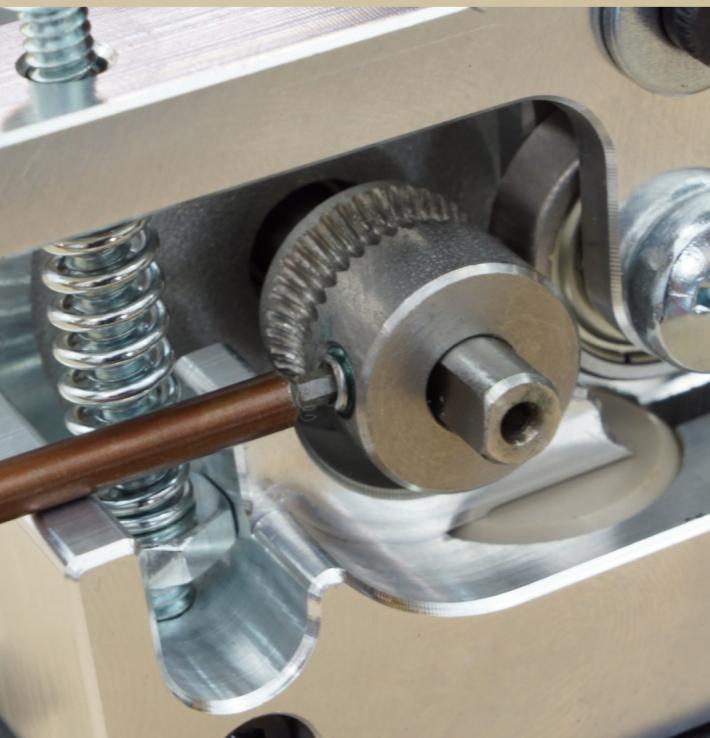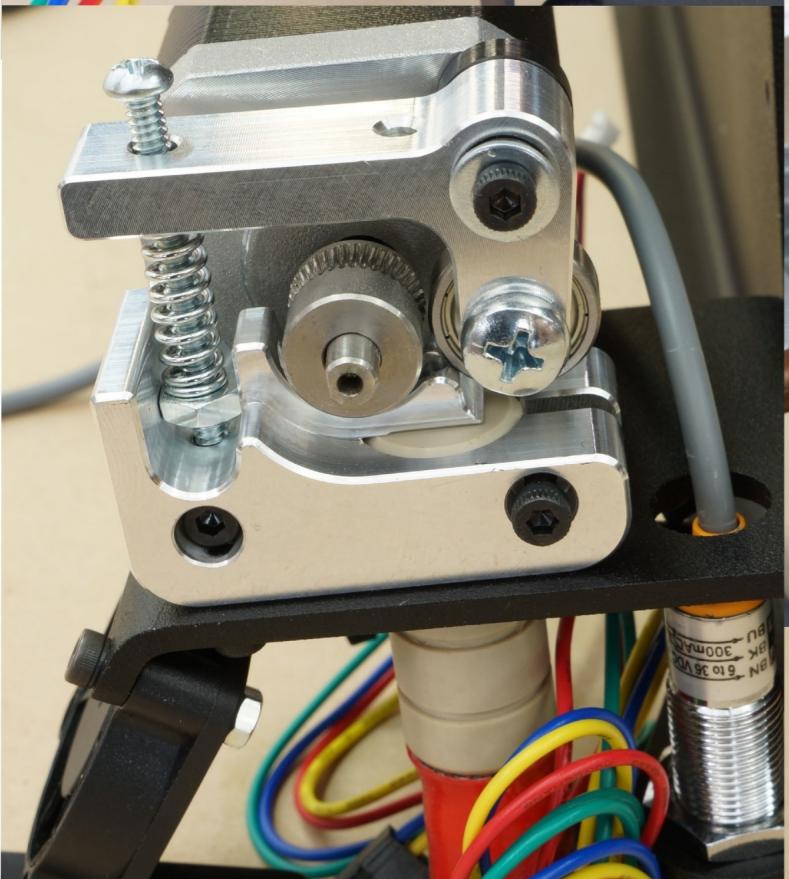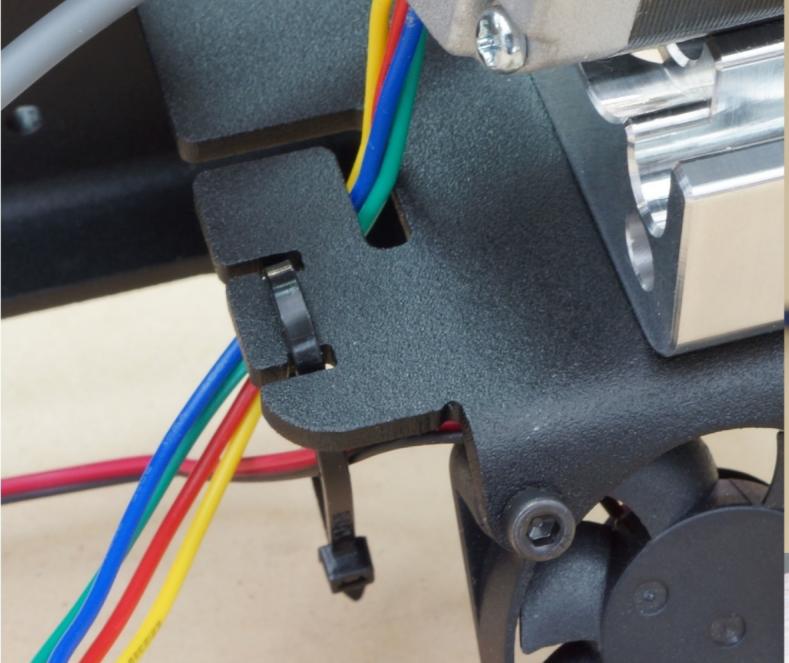

15

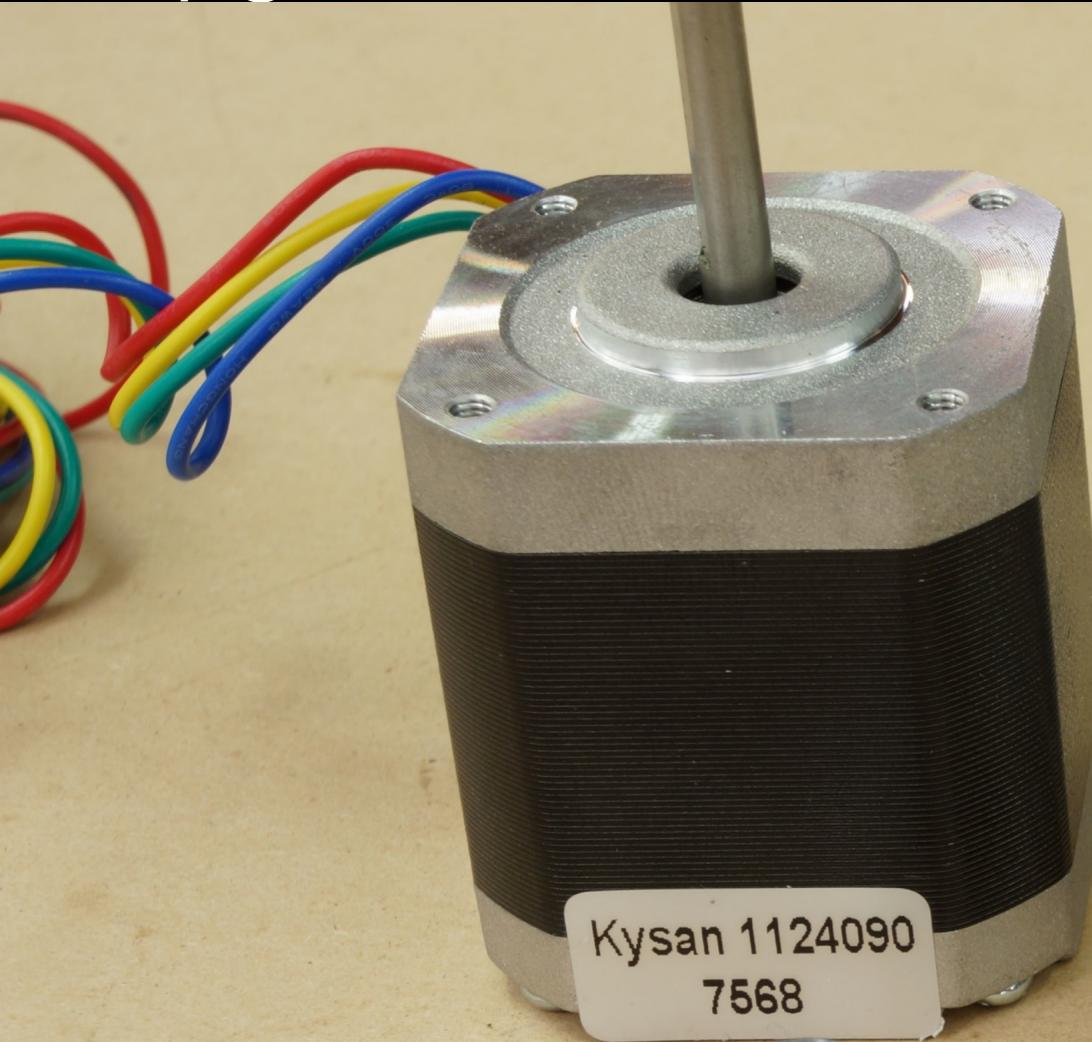

624 BEARINGS



M4 12MM




M2 10MM




M3 22MM



16

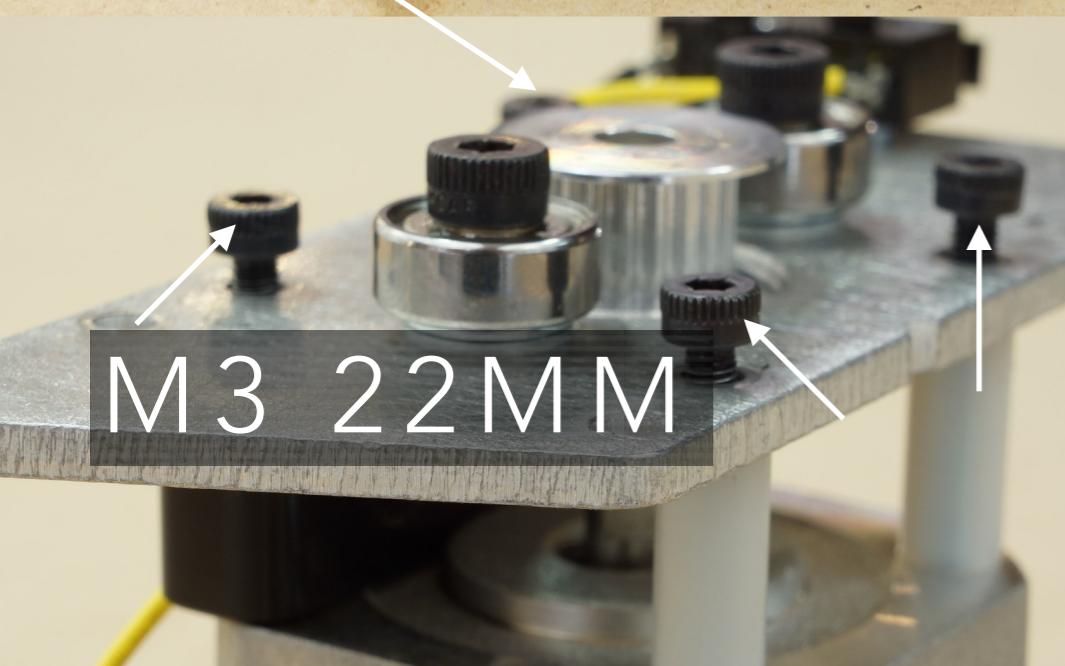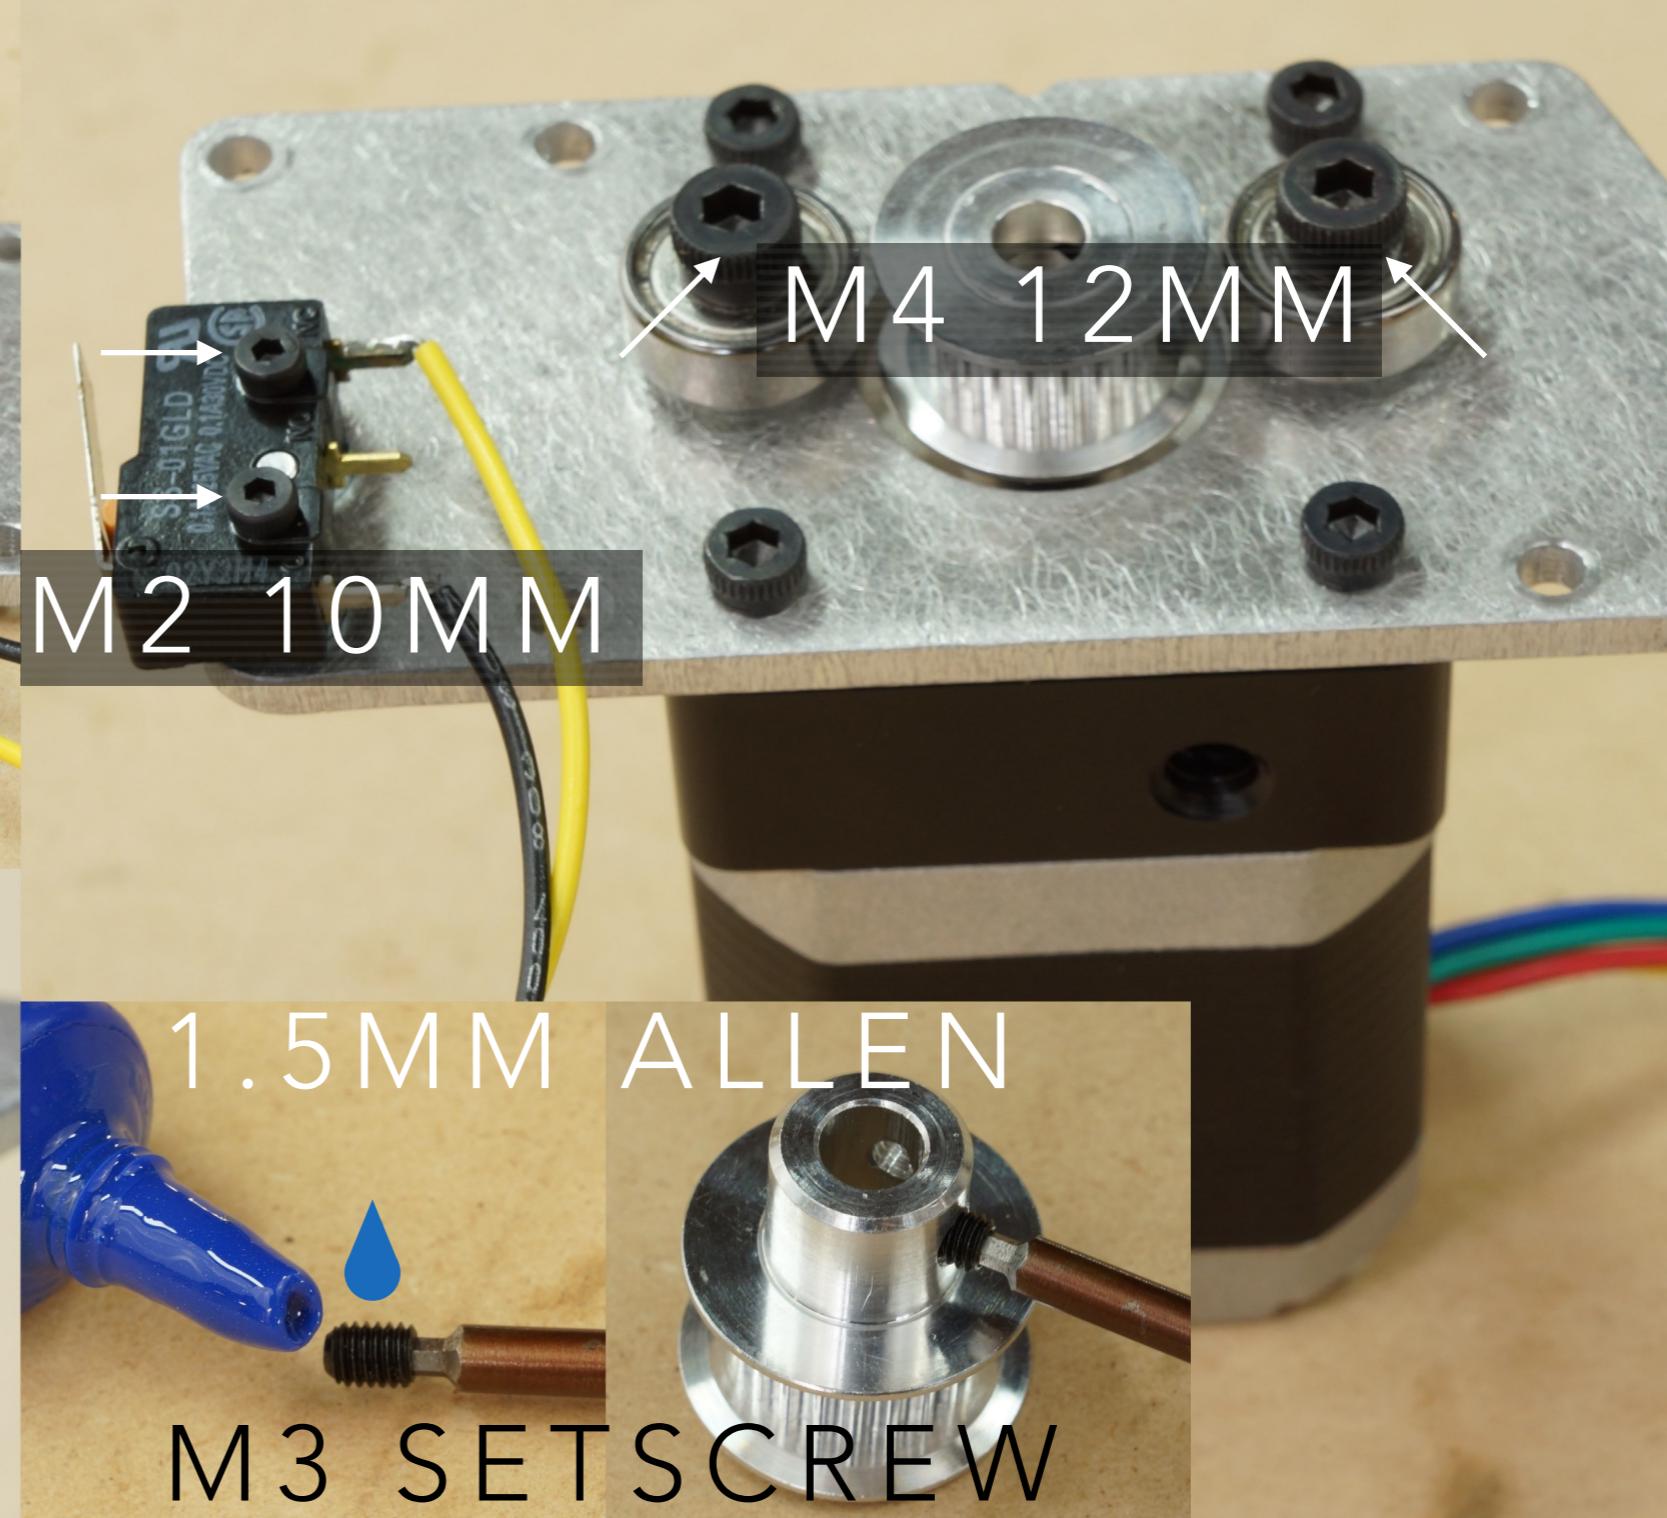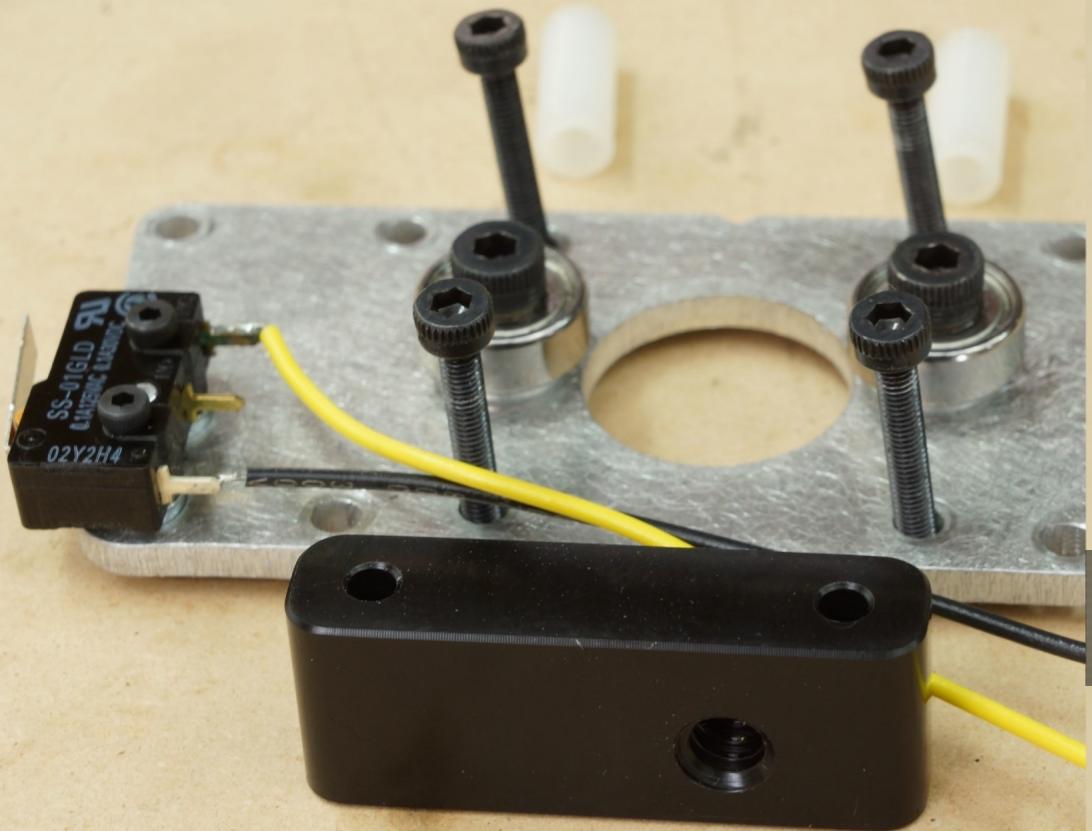

17

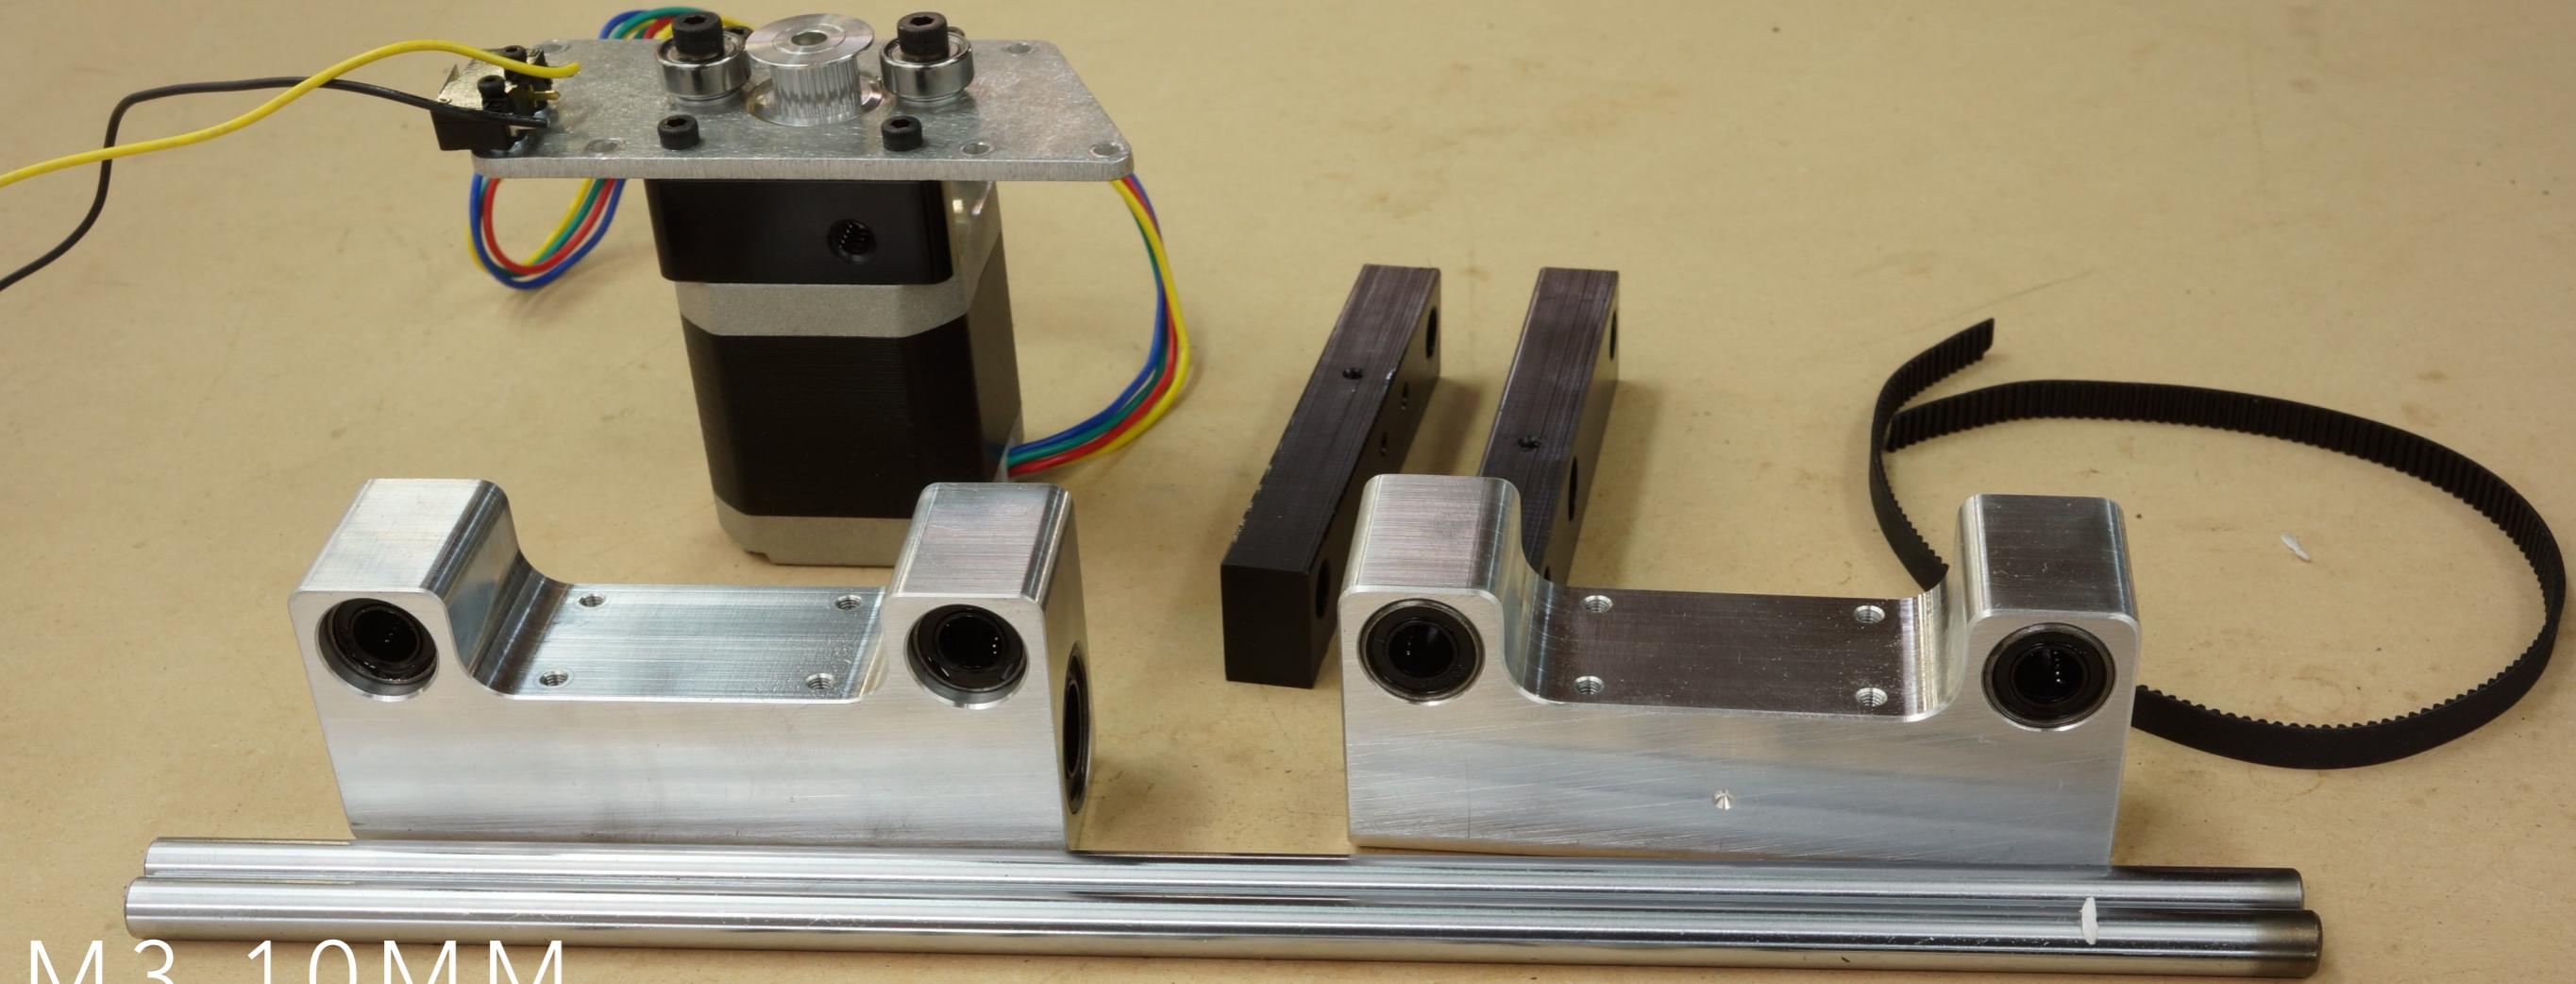

M3 10MM




M3 8MM




↑
M3 22MM



18

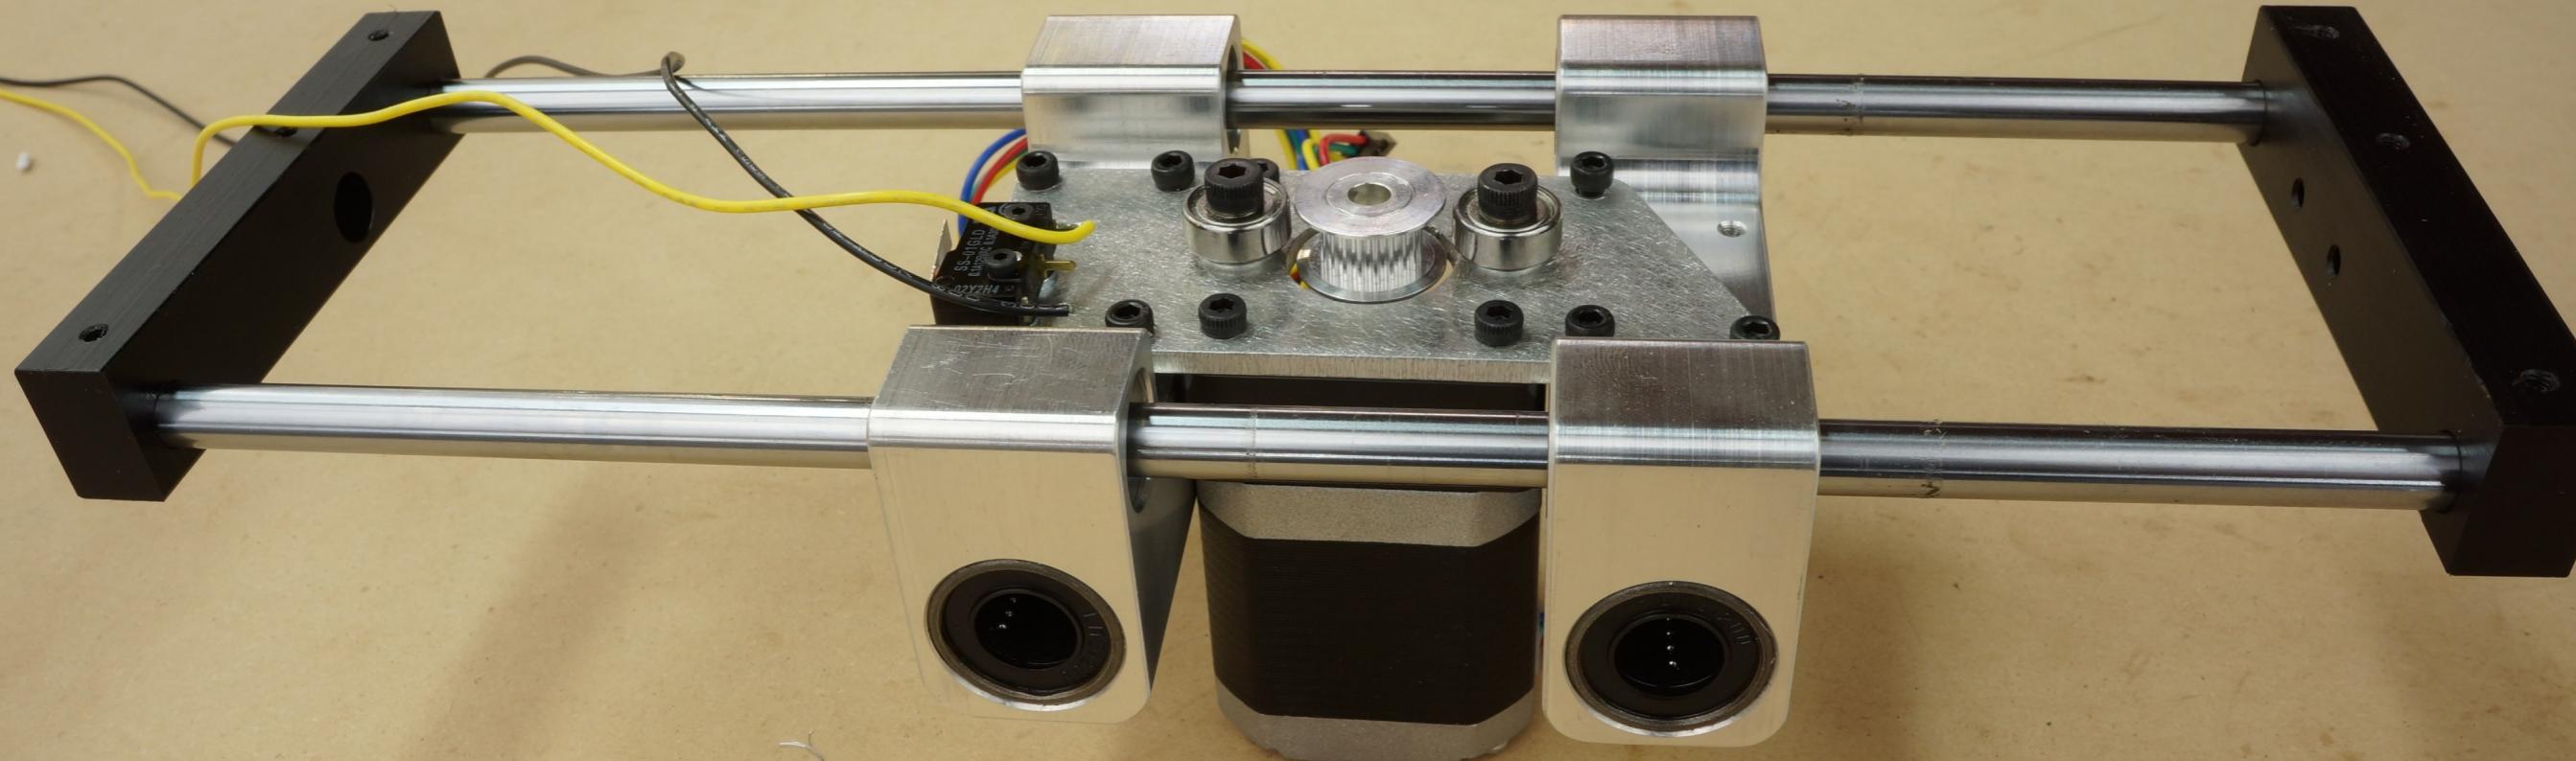


19

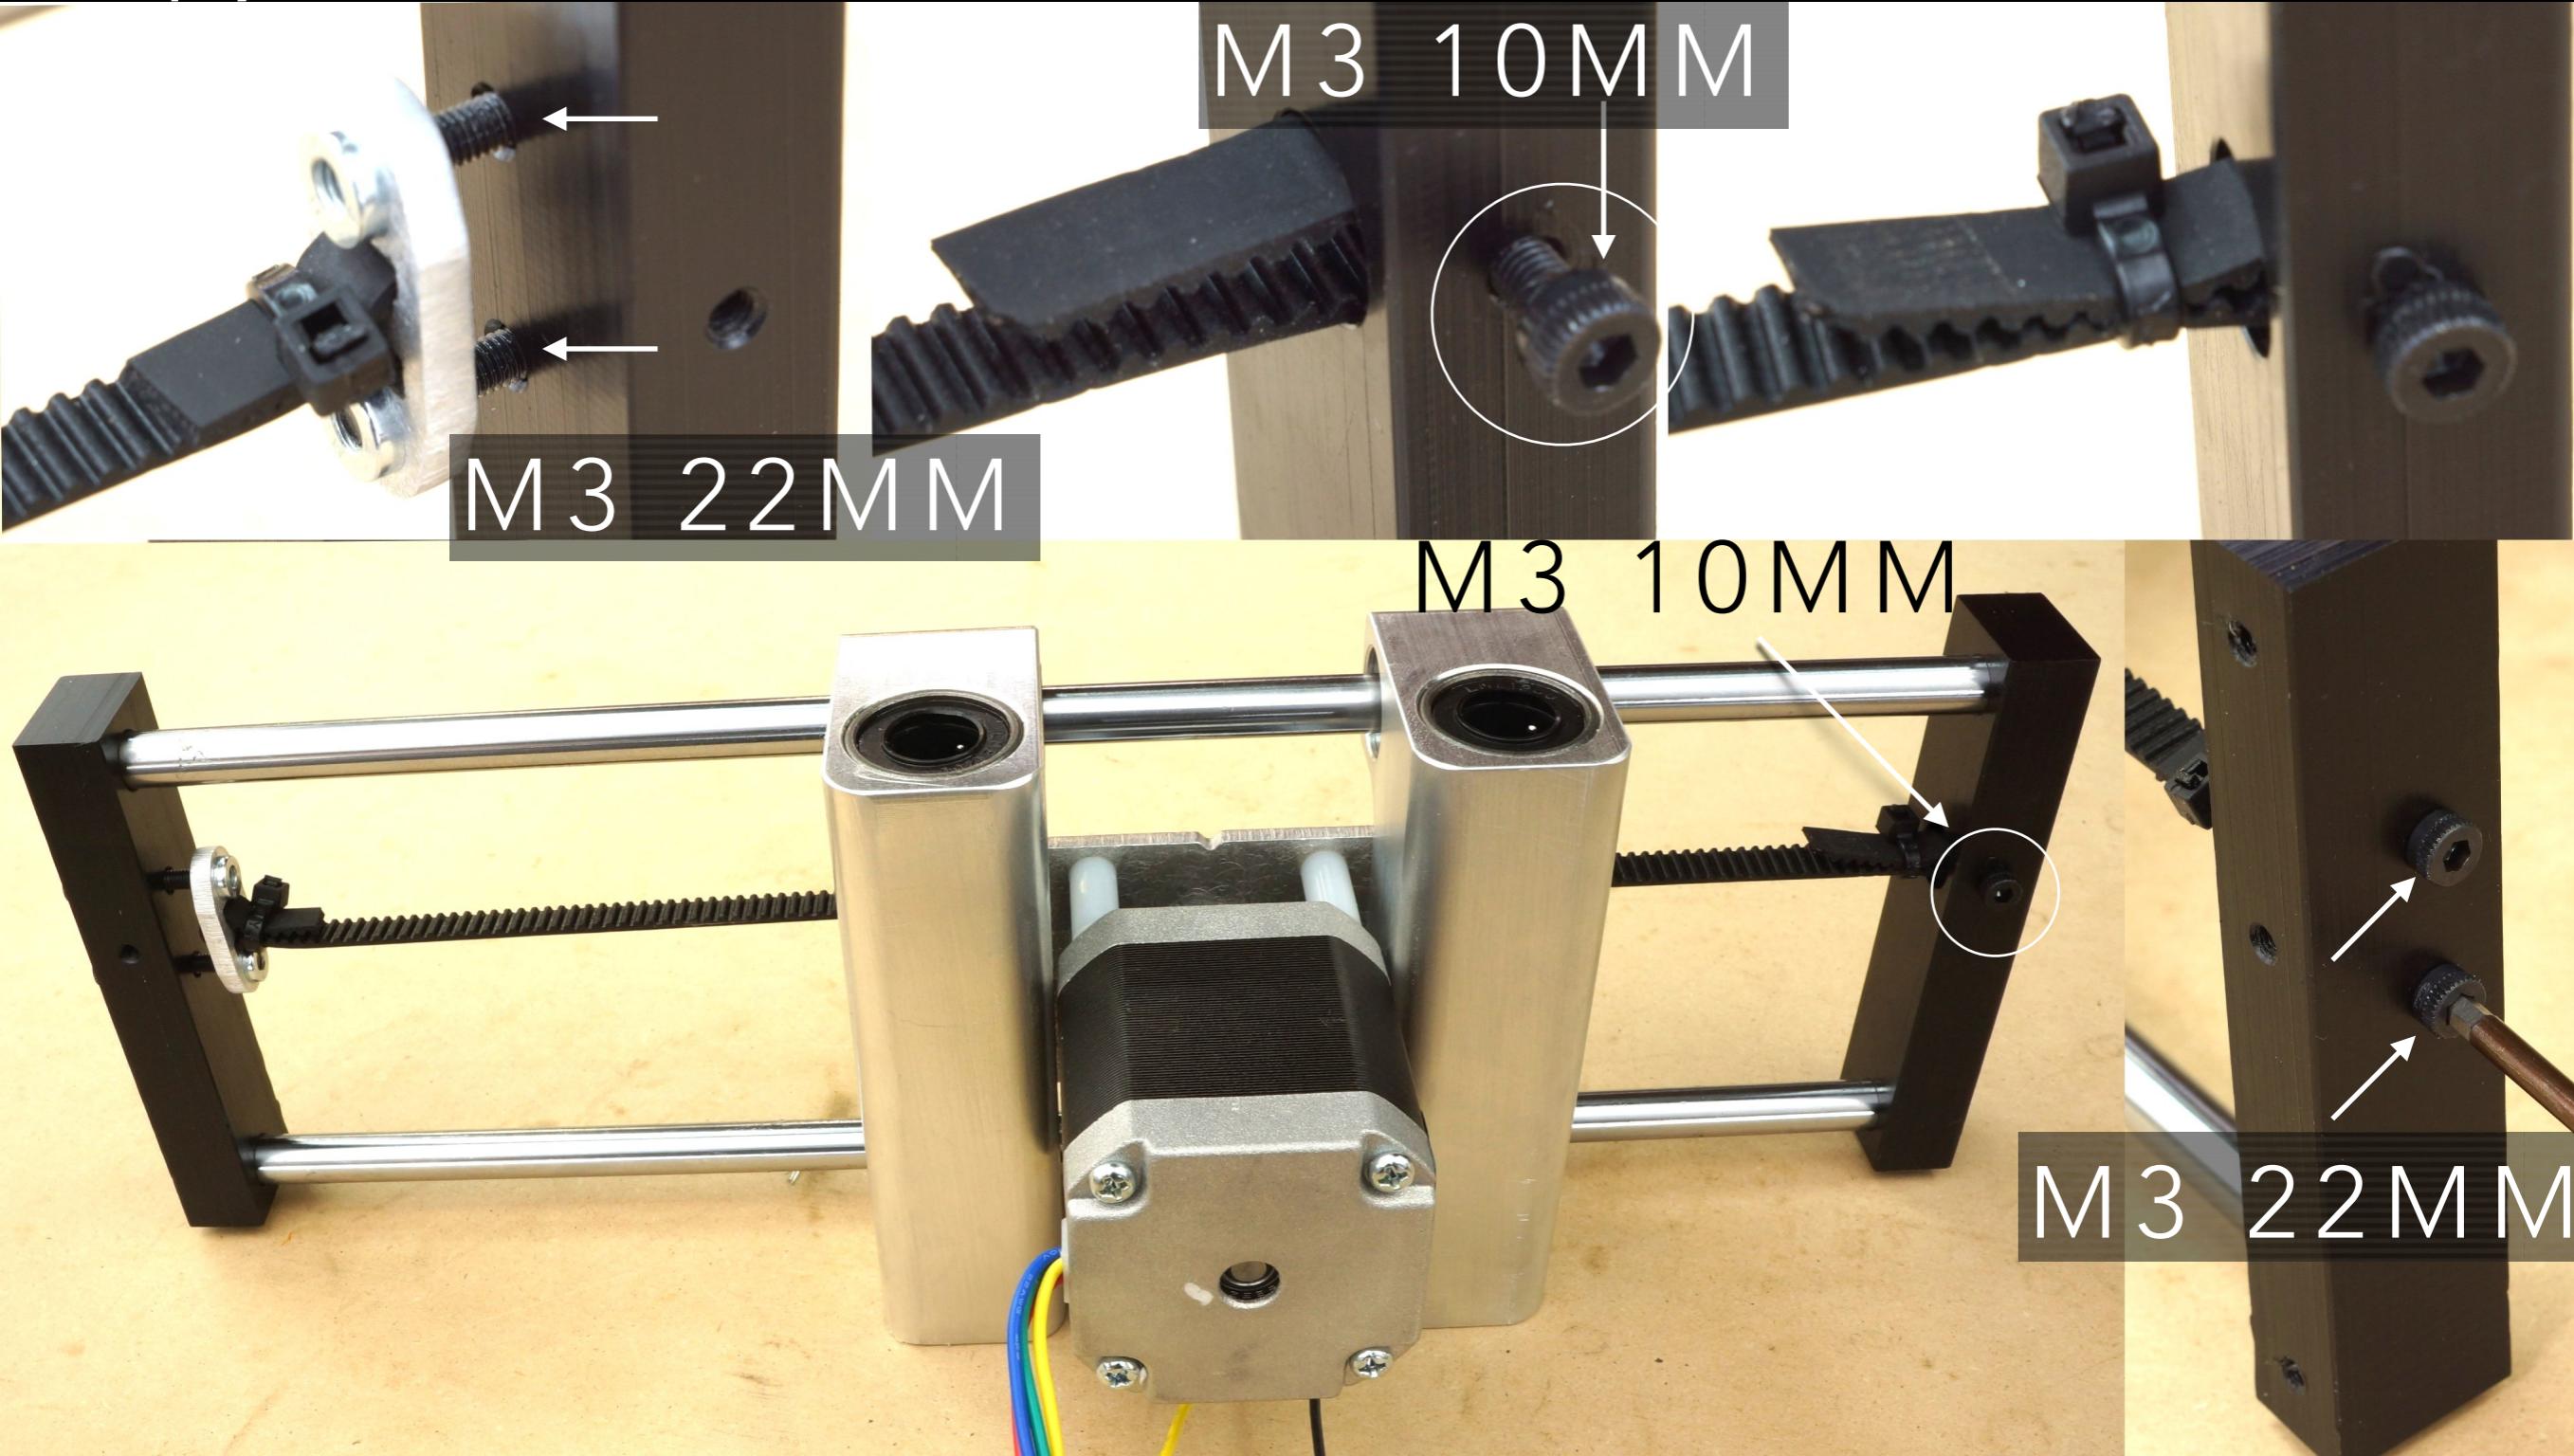


20





21

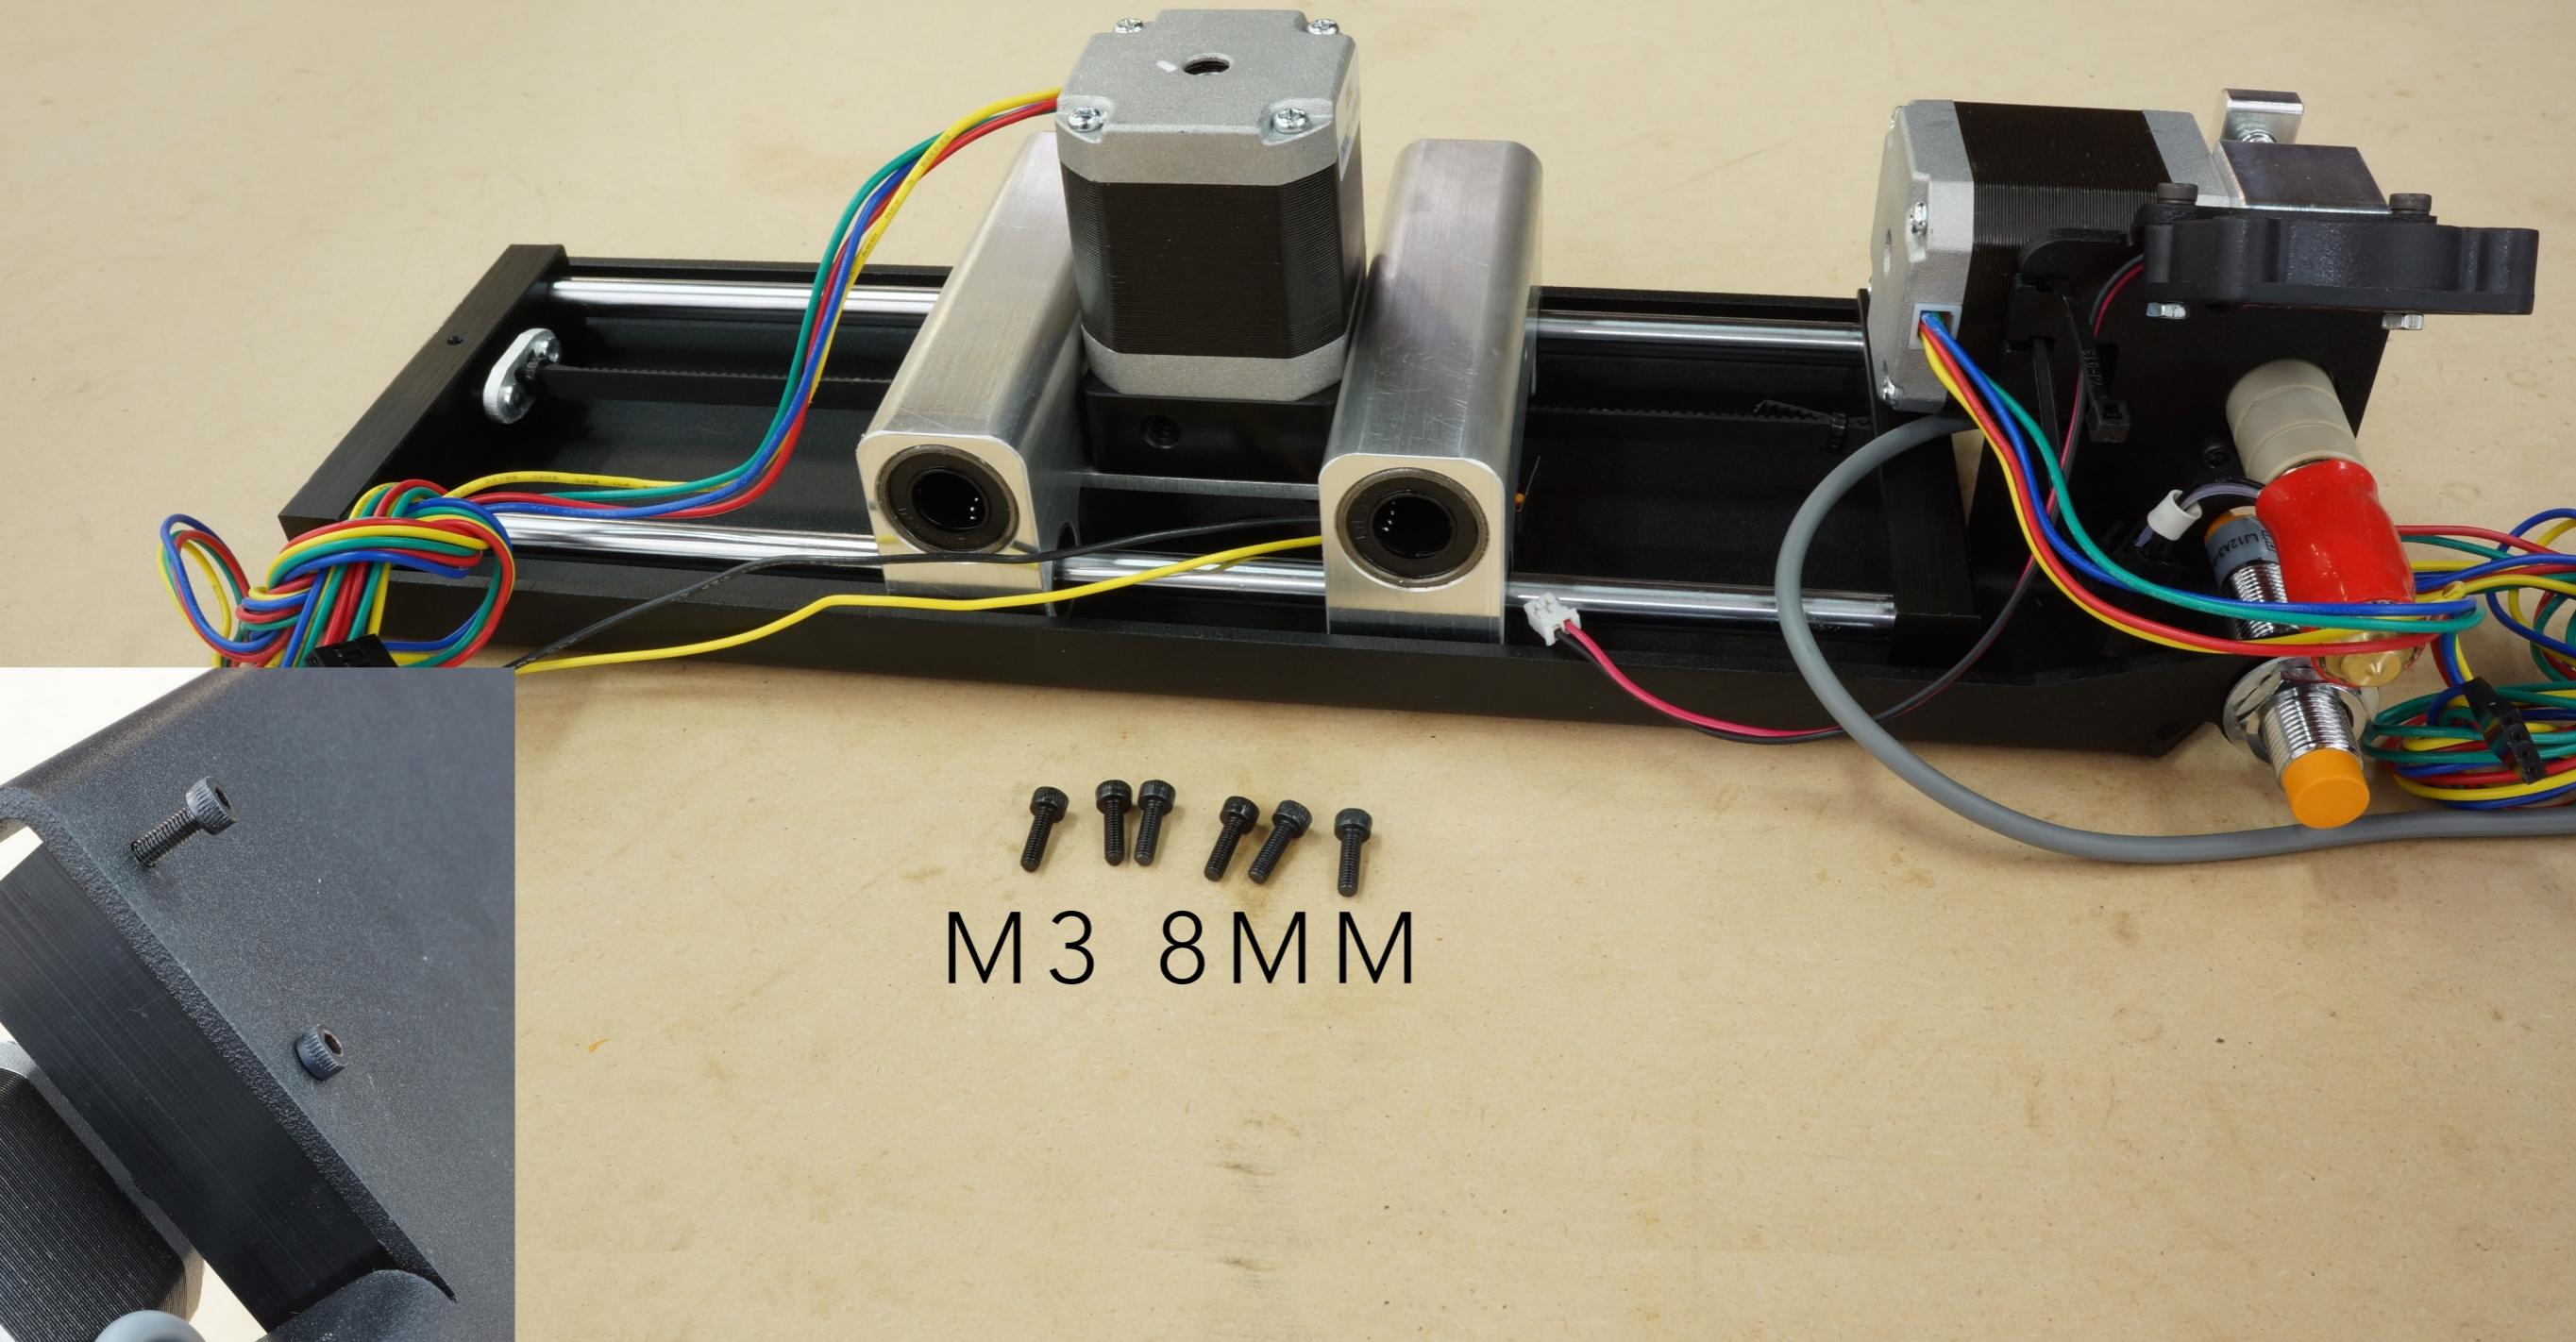


22

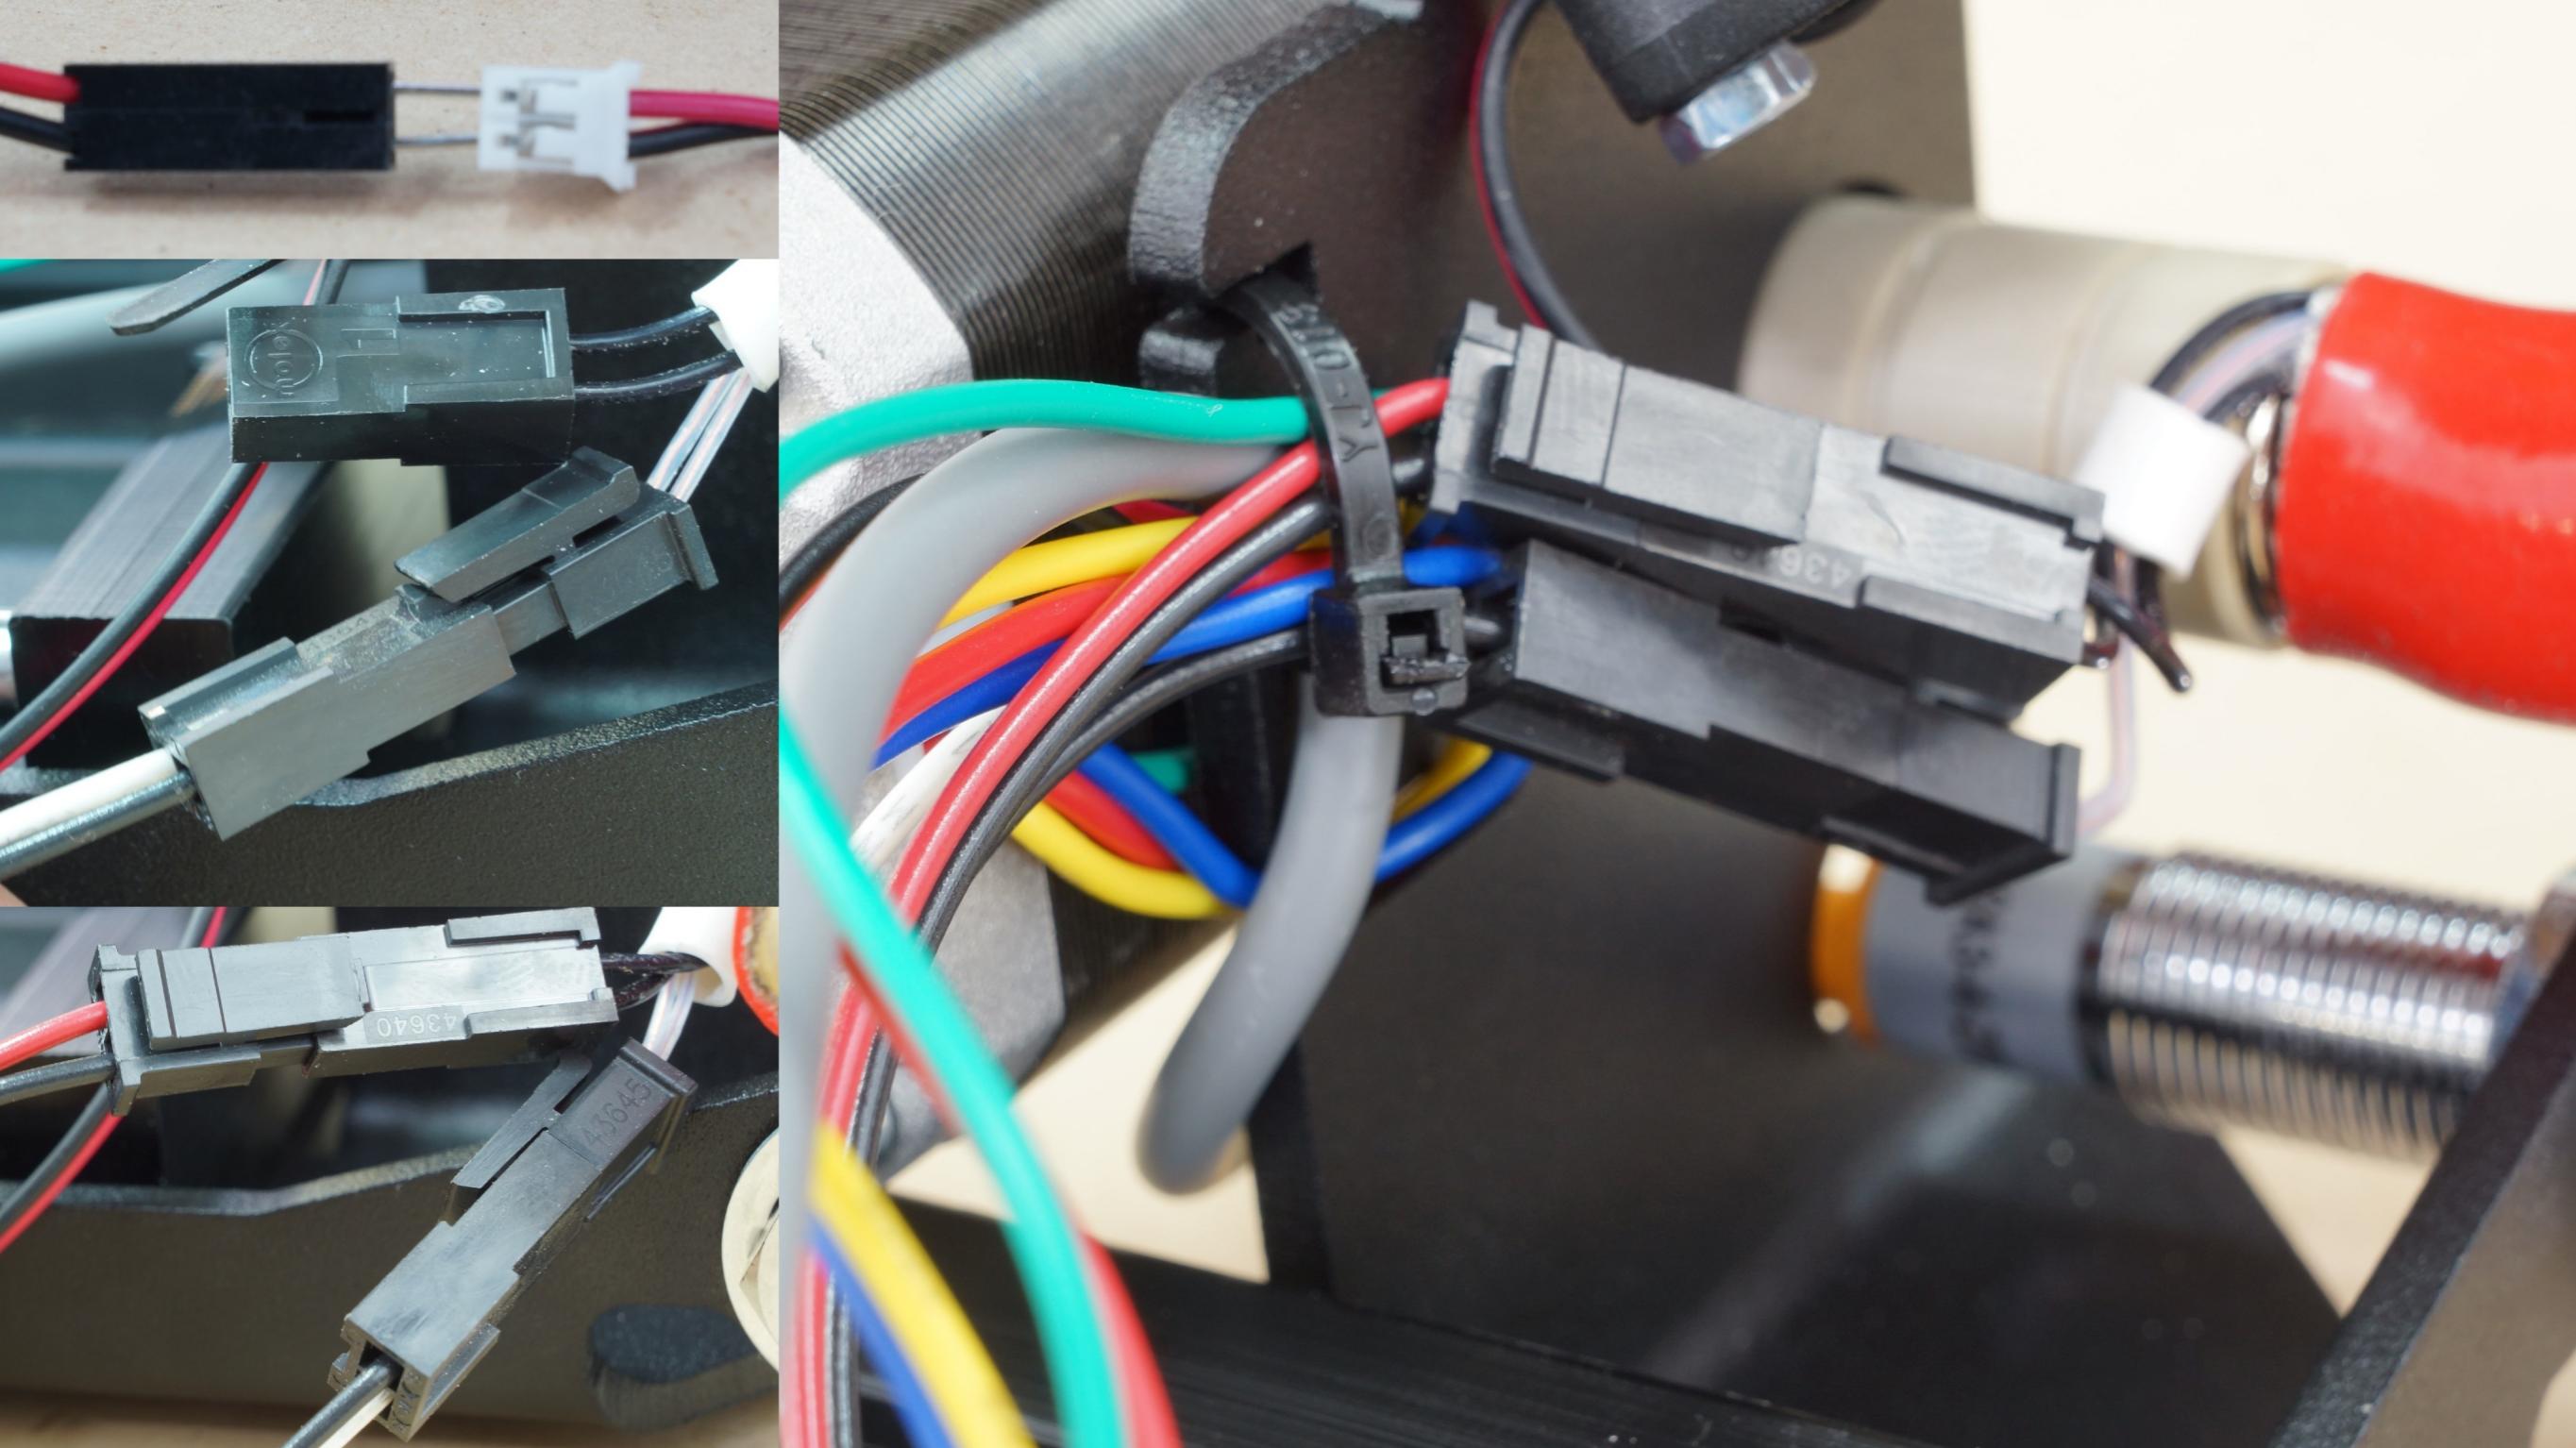


23

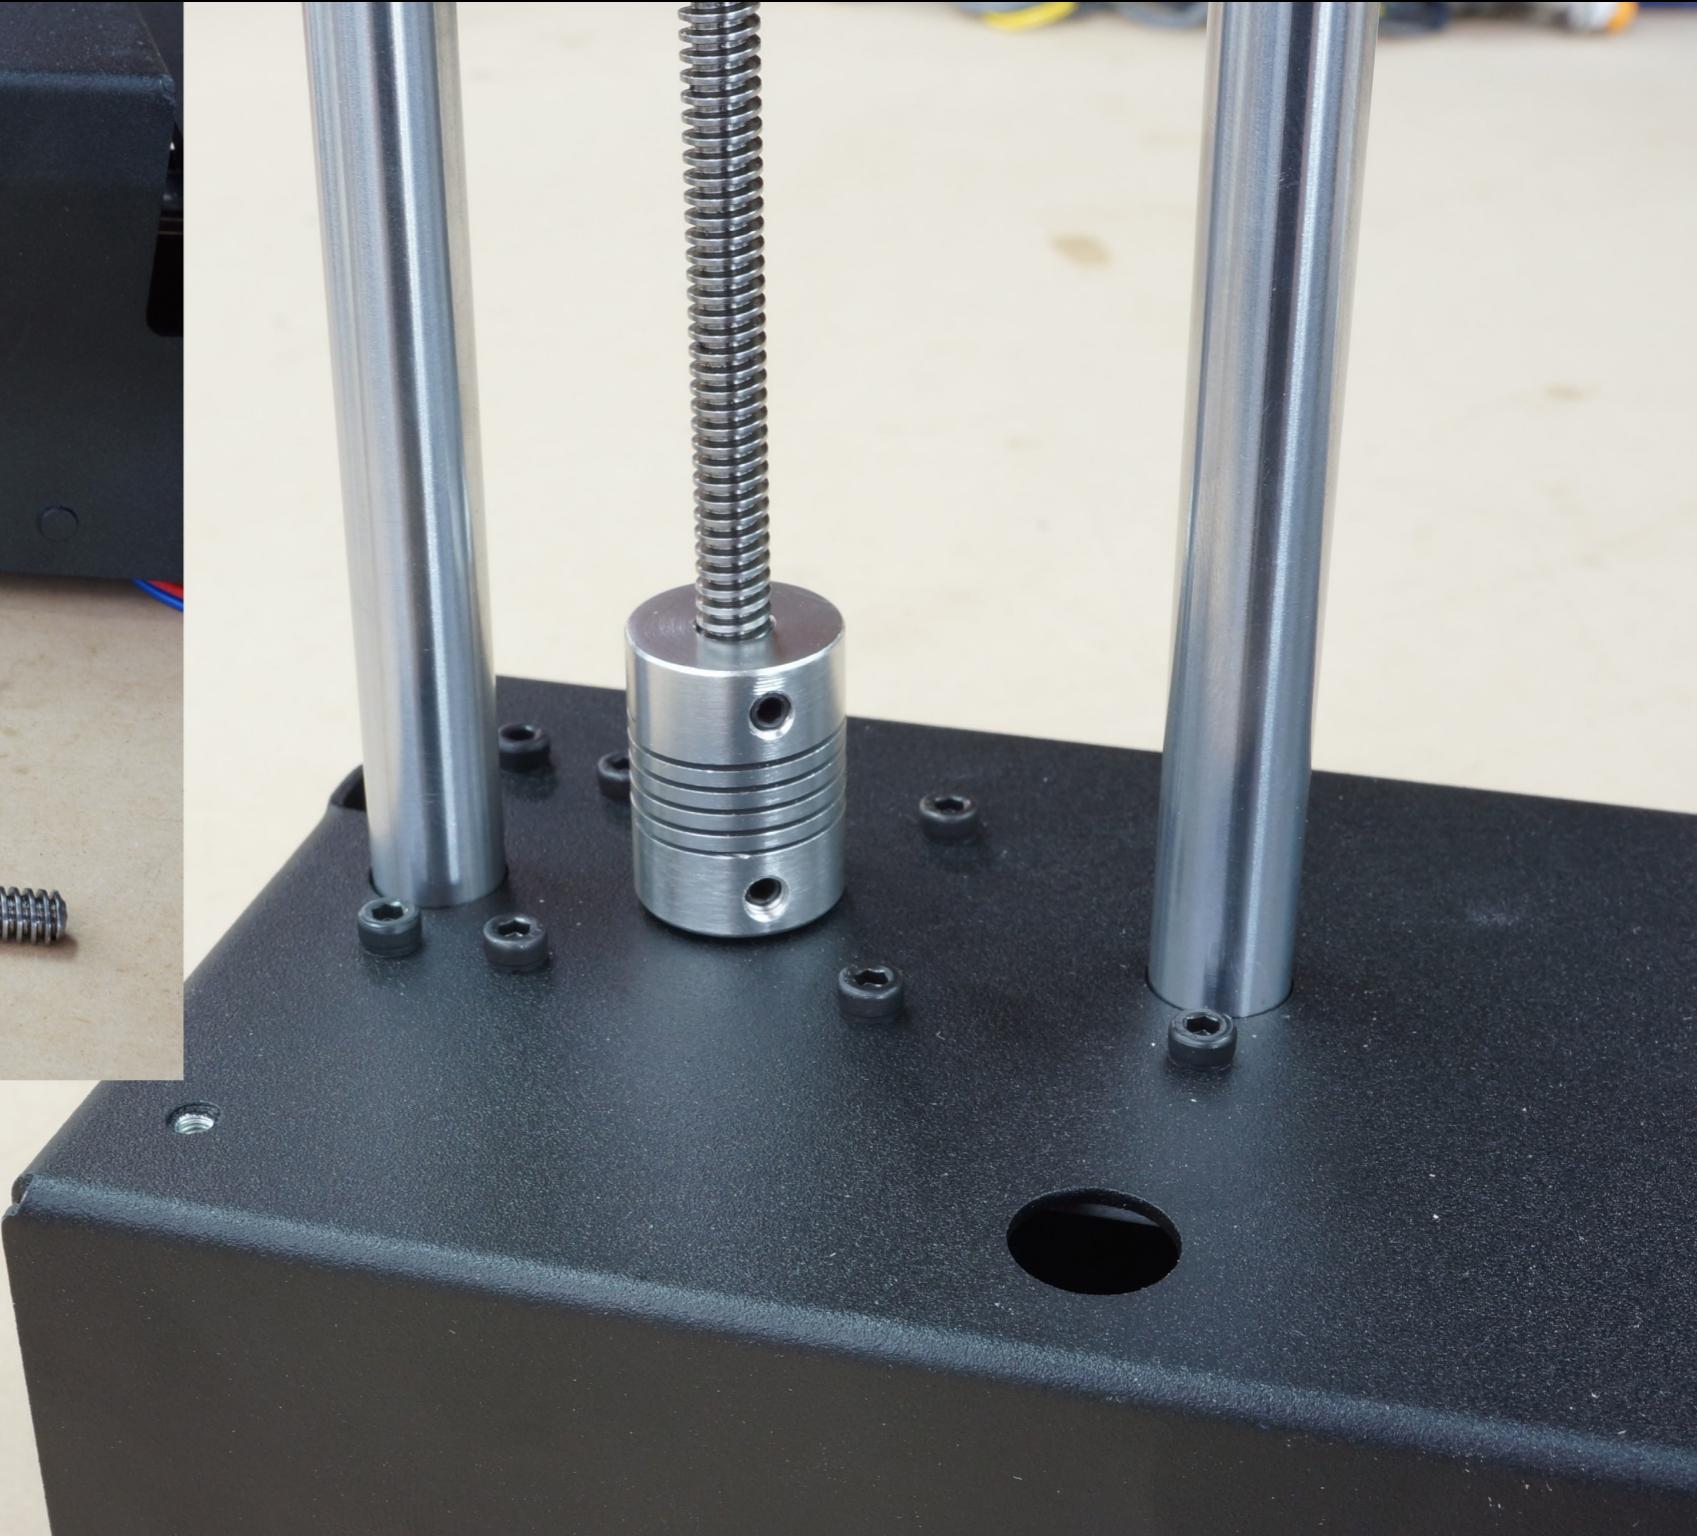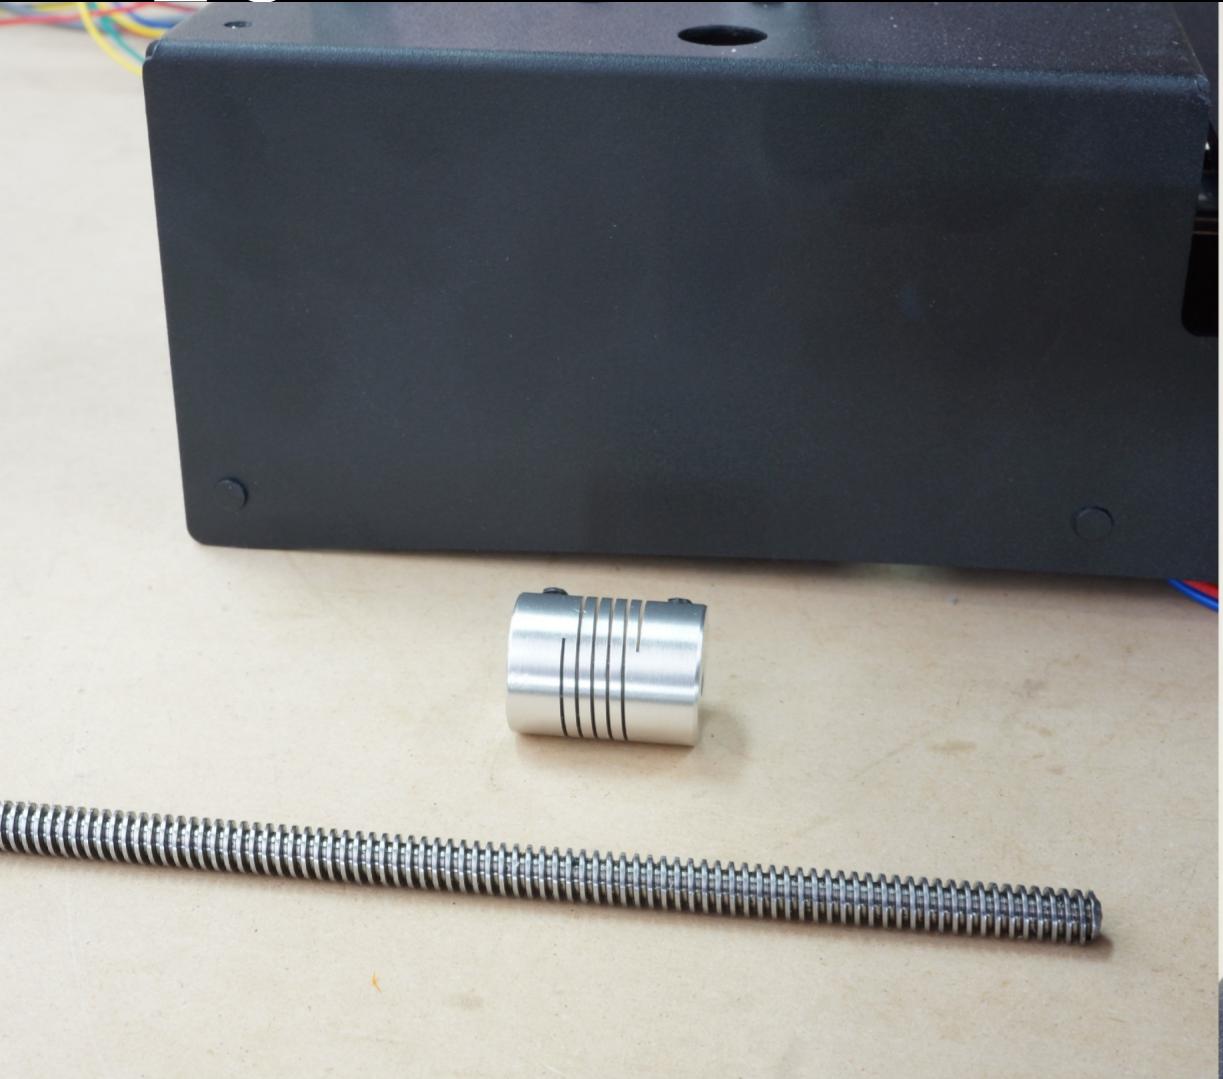



24

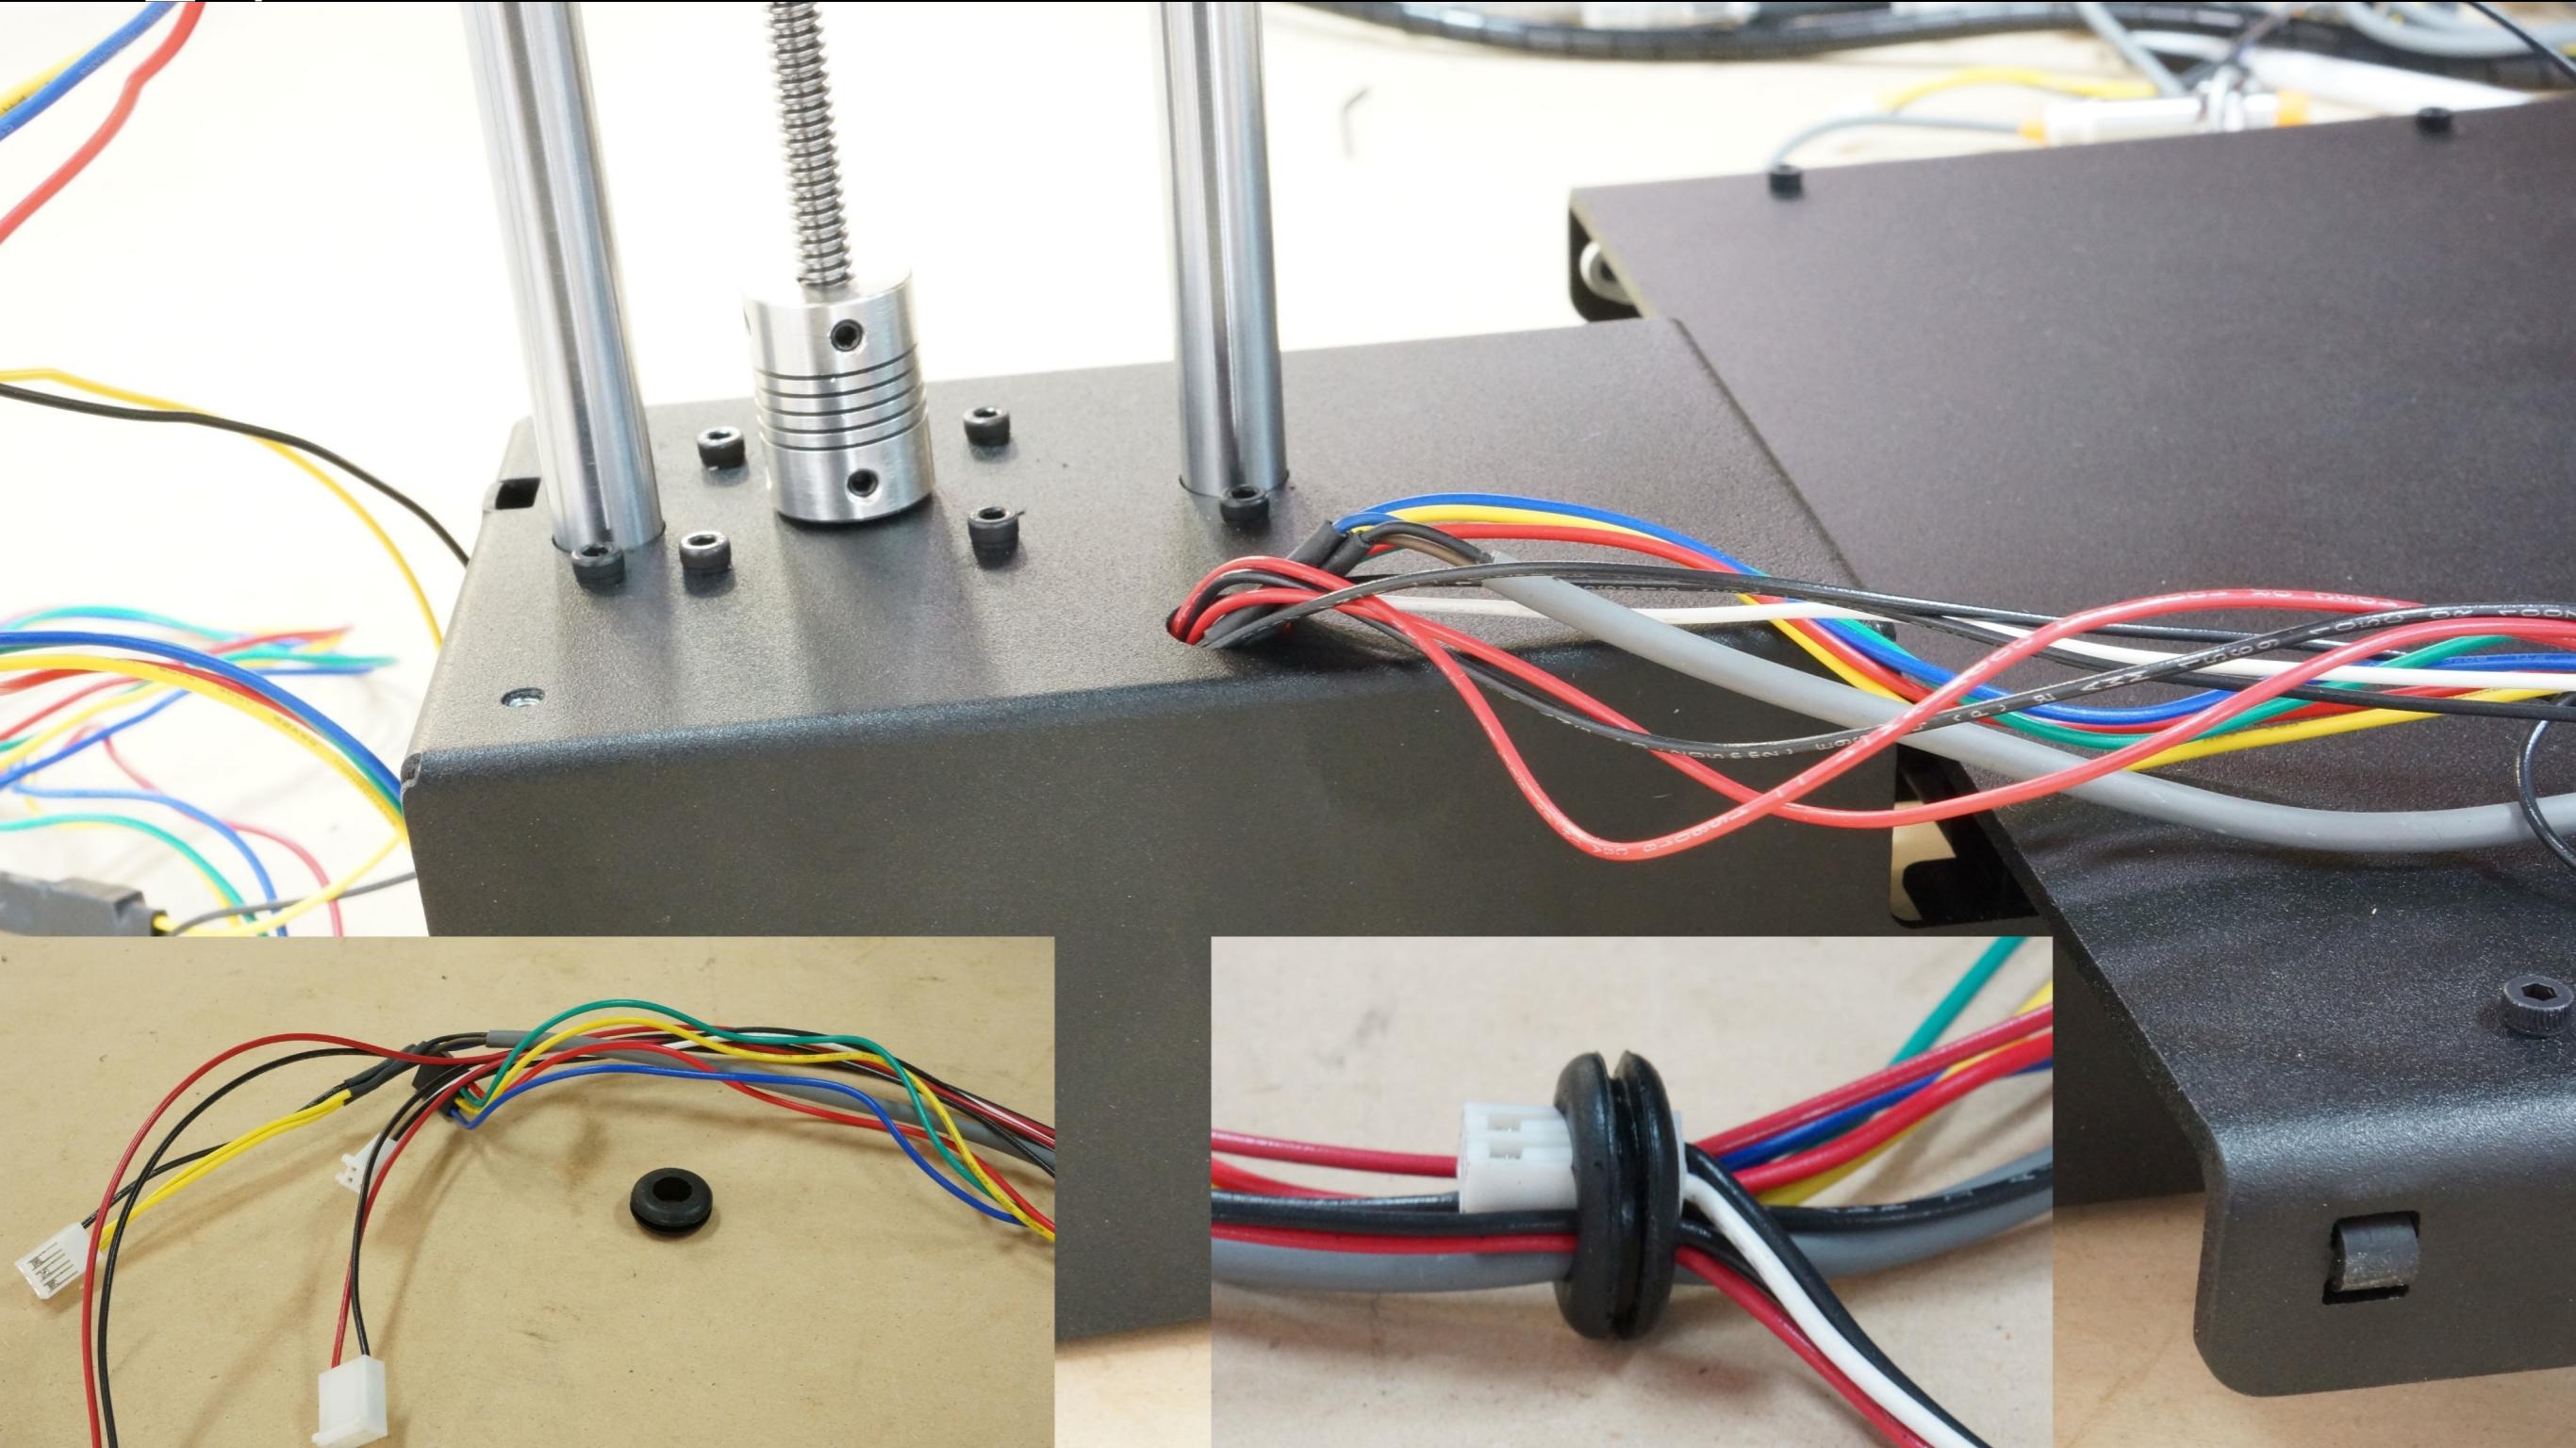

25

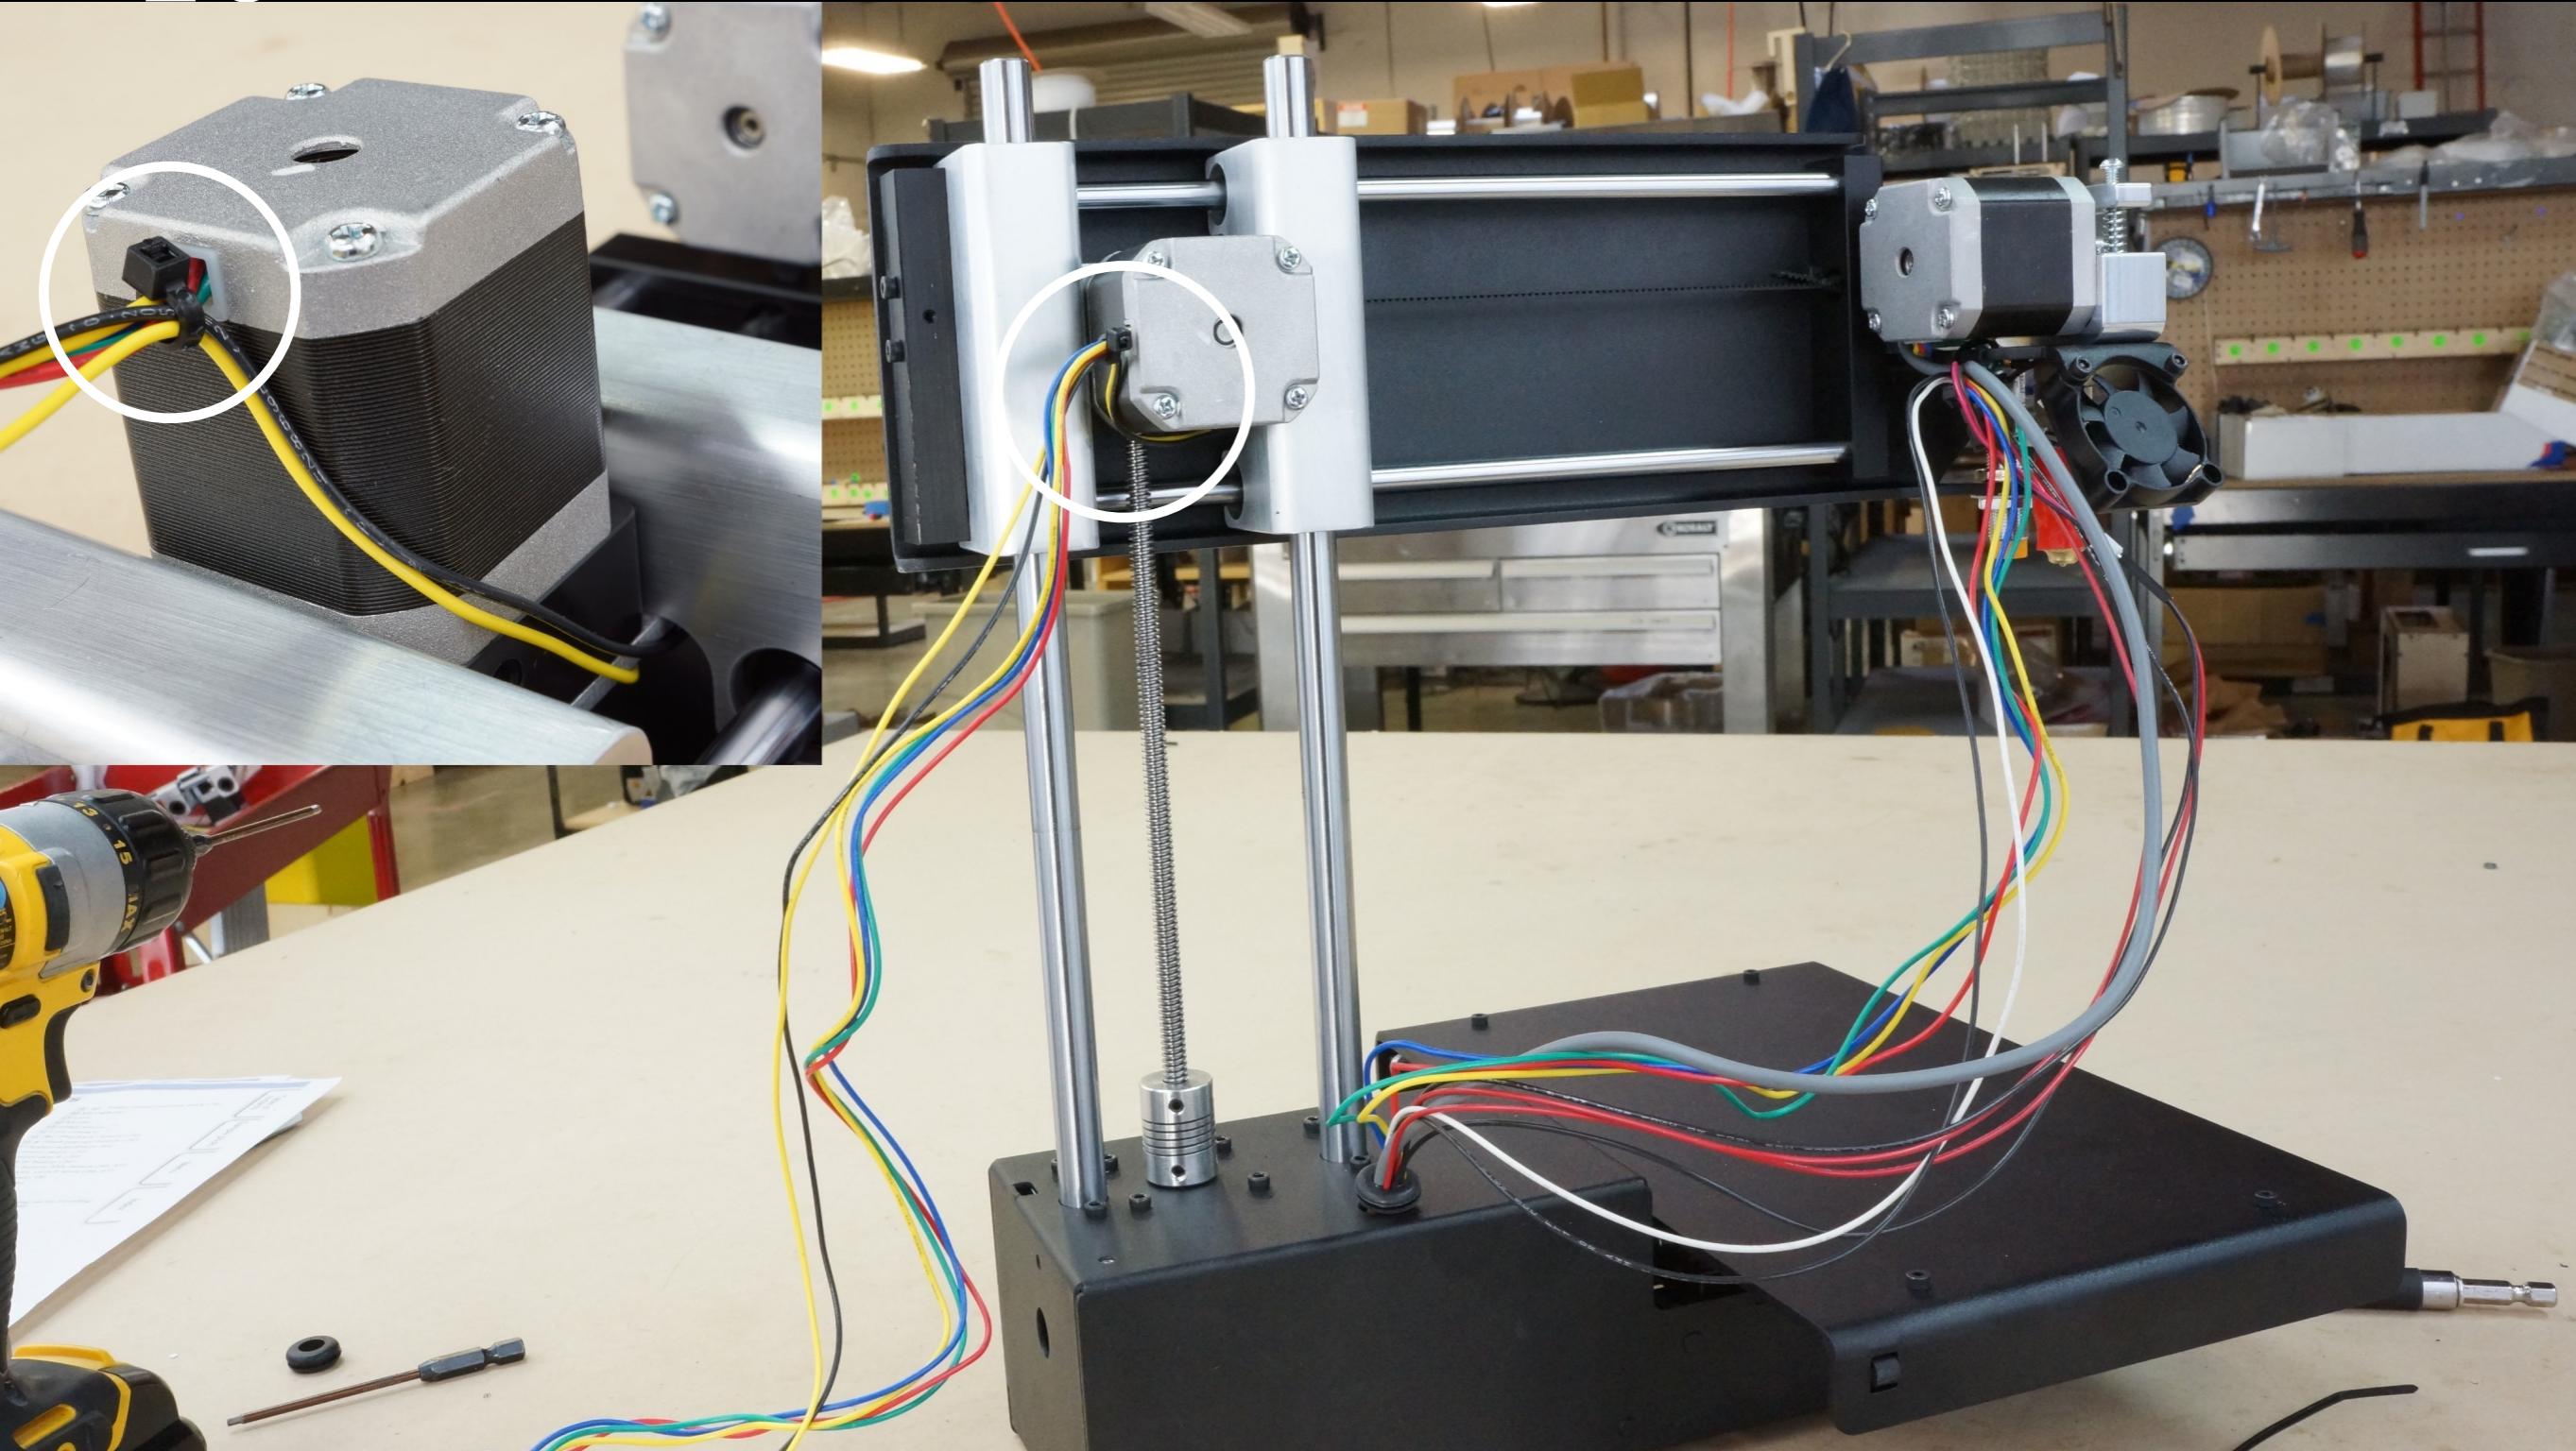

26

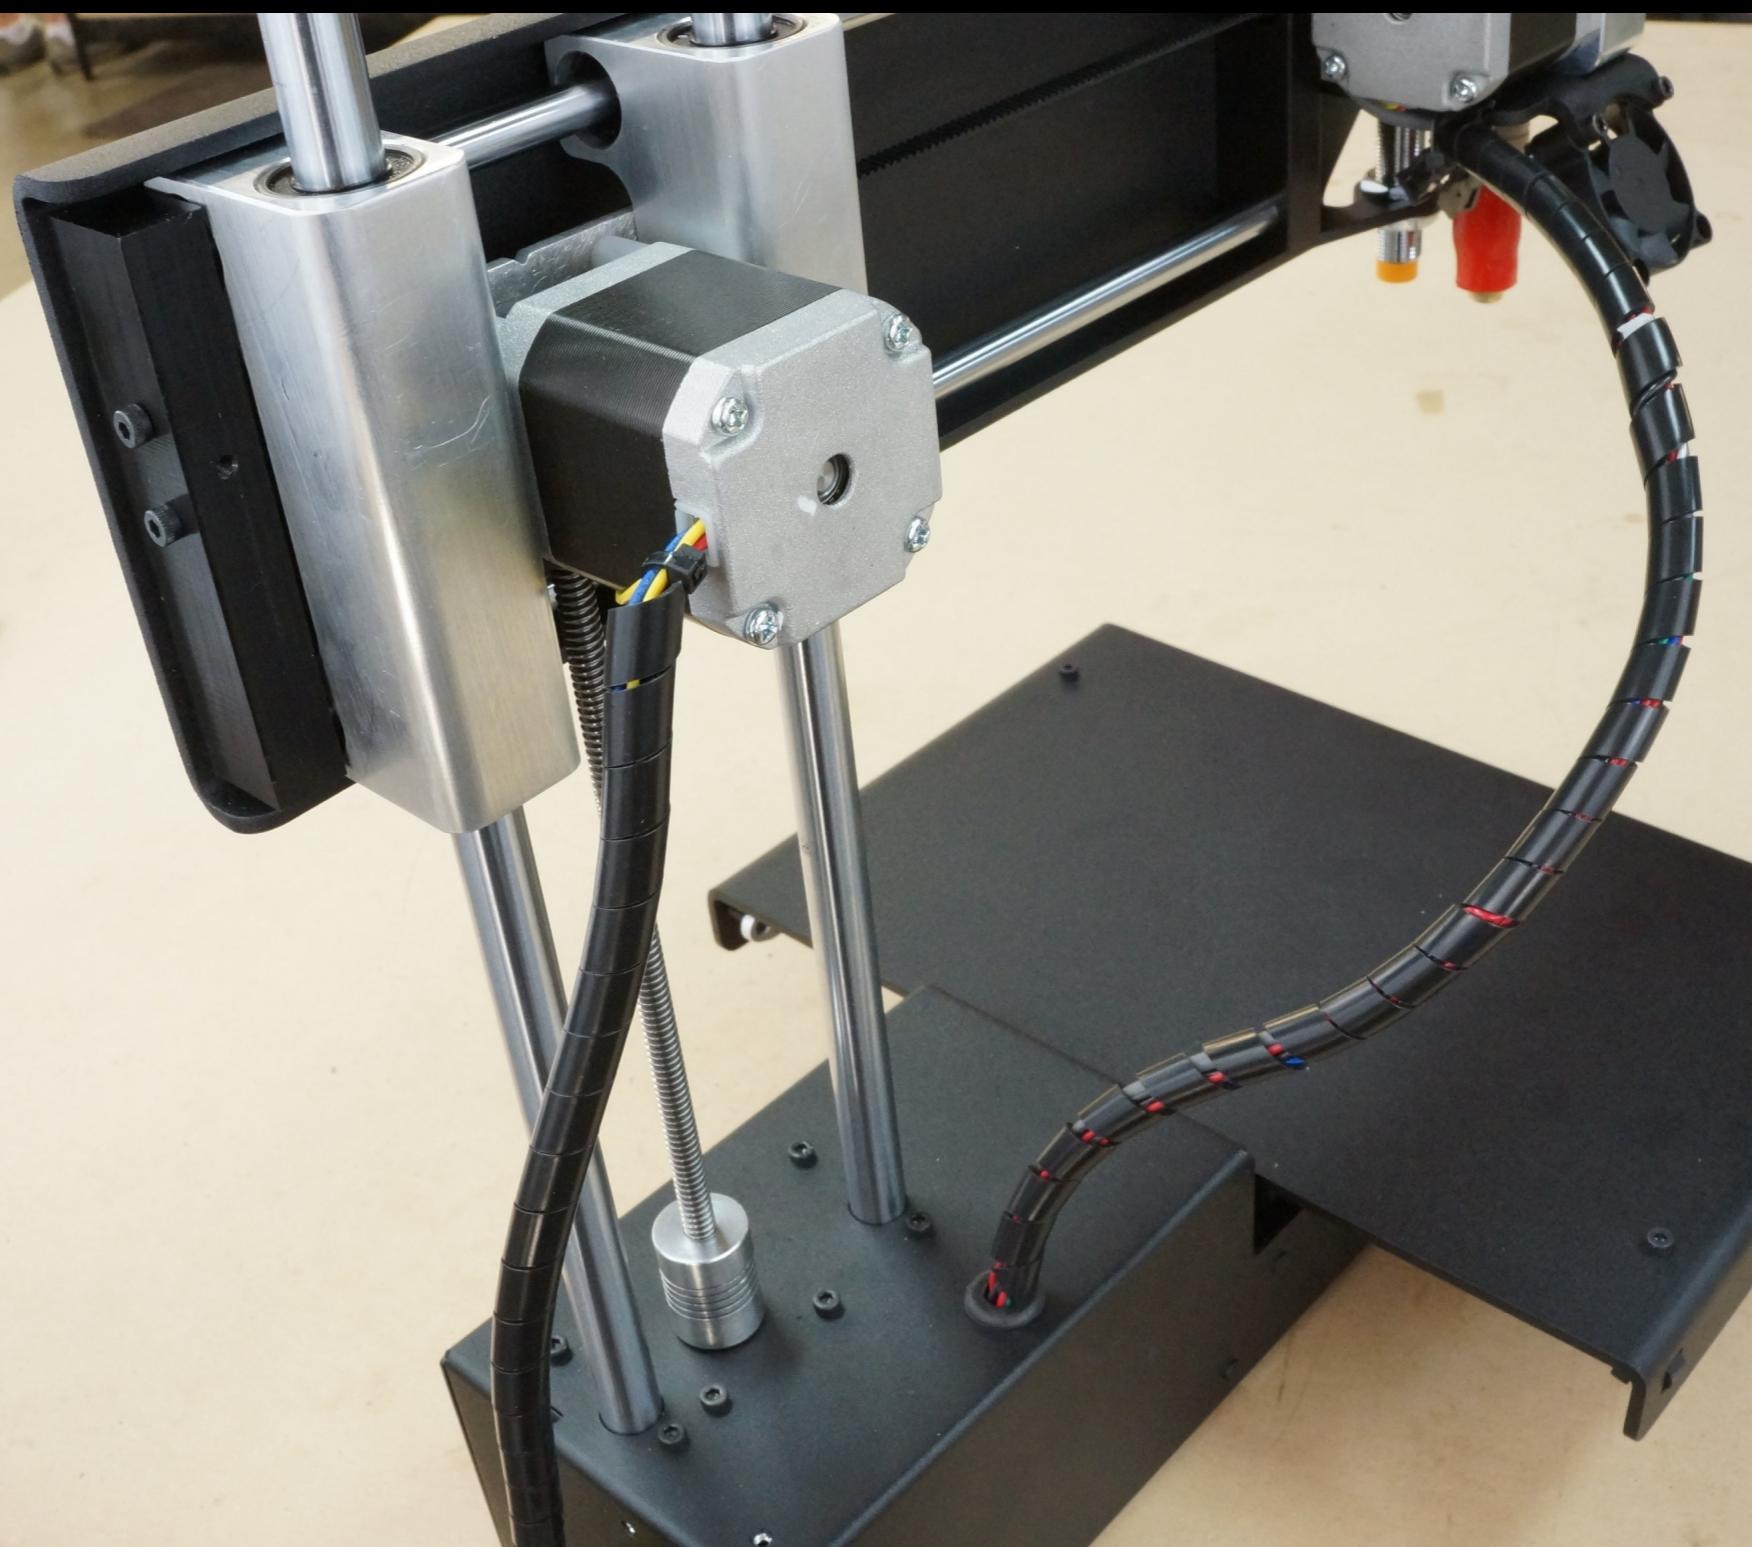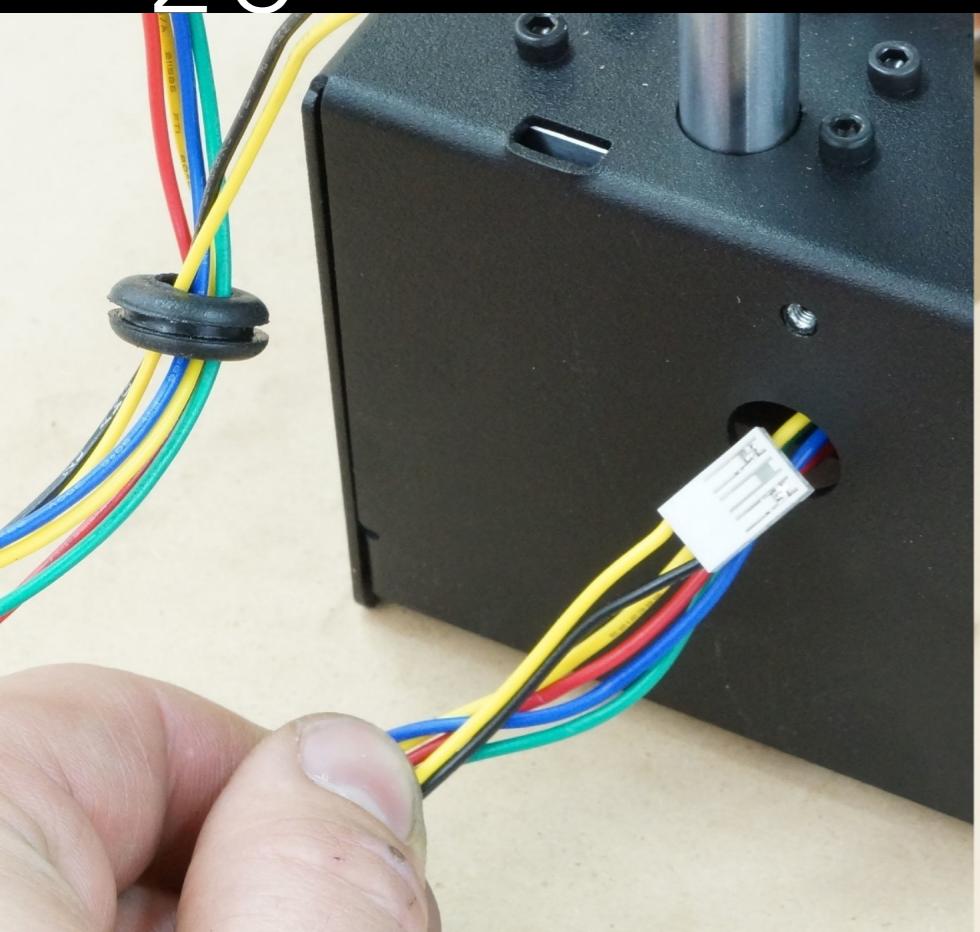

27

Z Y X

X

HOTEND
THERMISTOR



X



HOTEND
THERMISTOR

FAN

E Z Y X



28

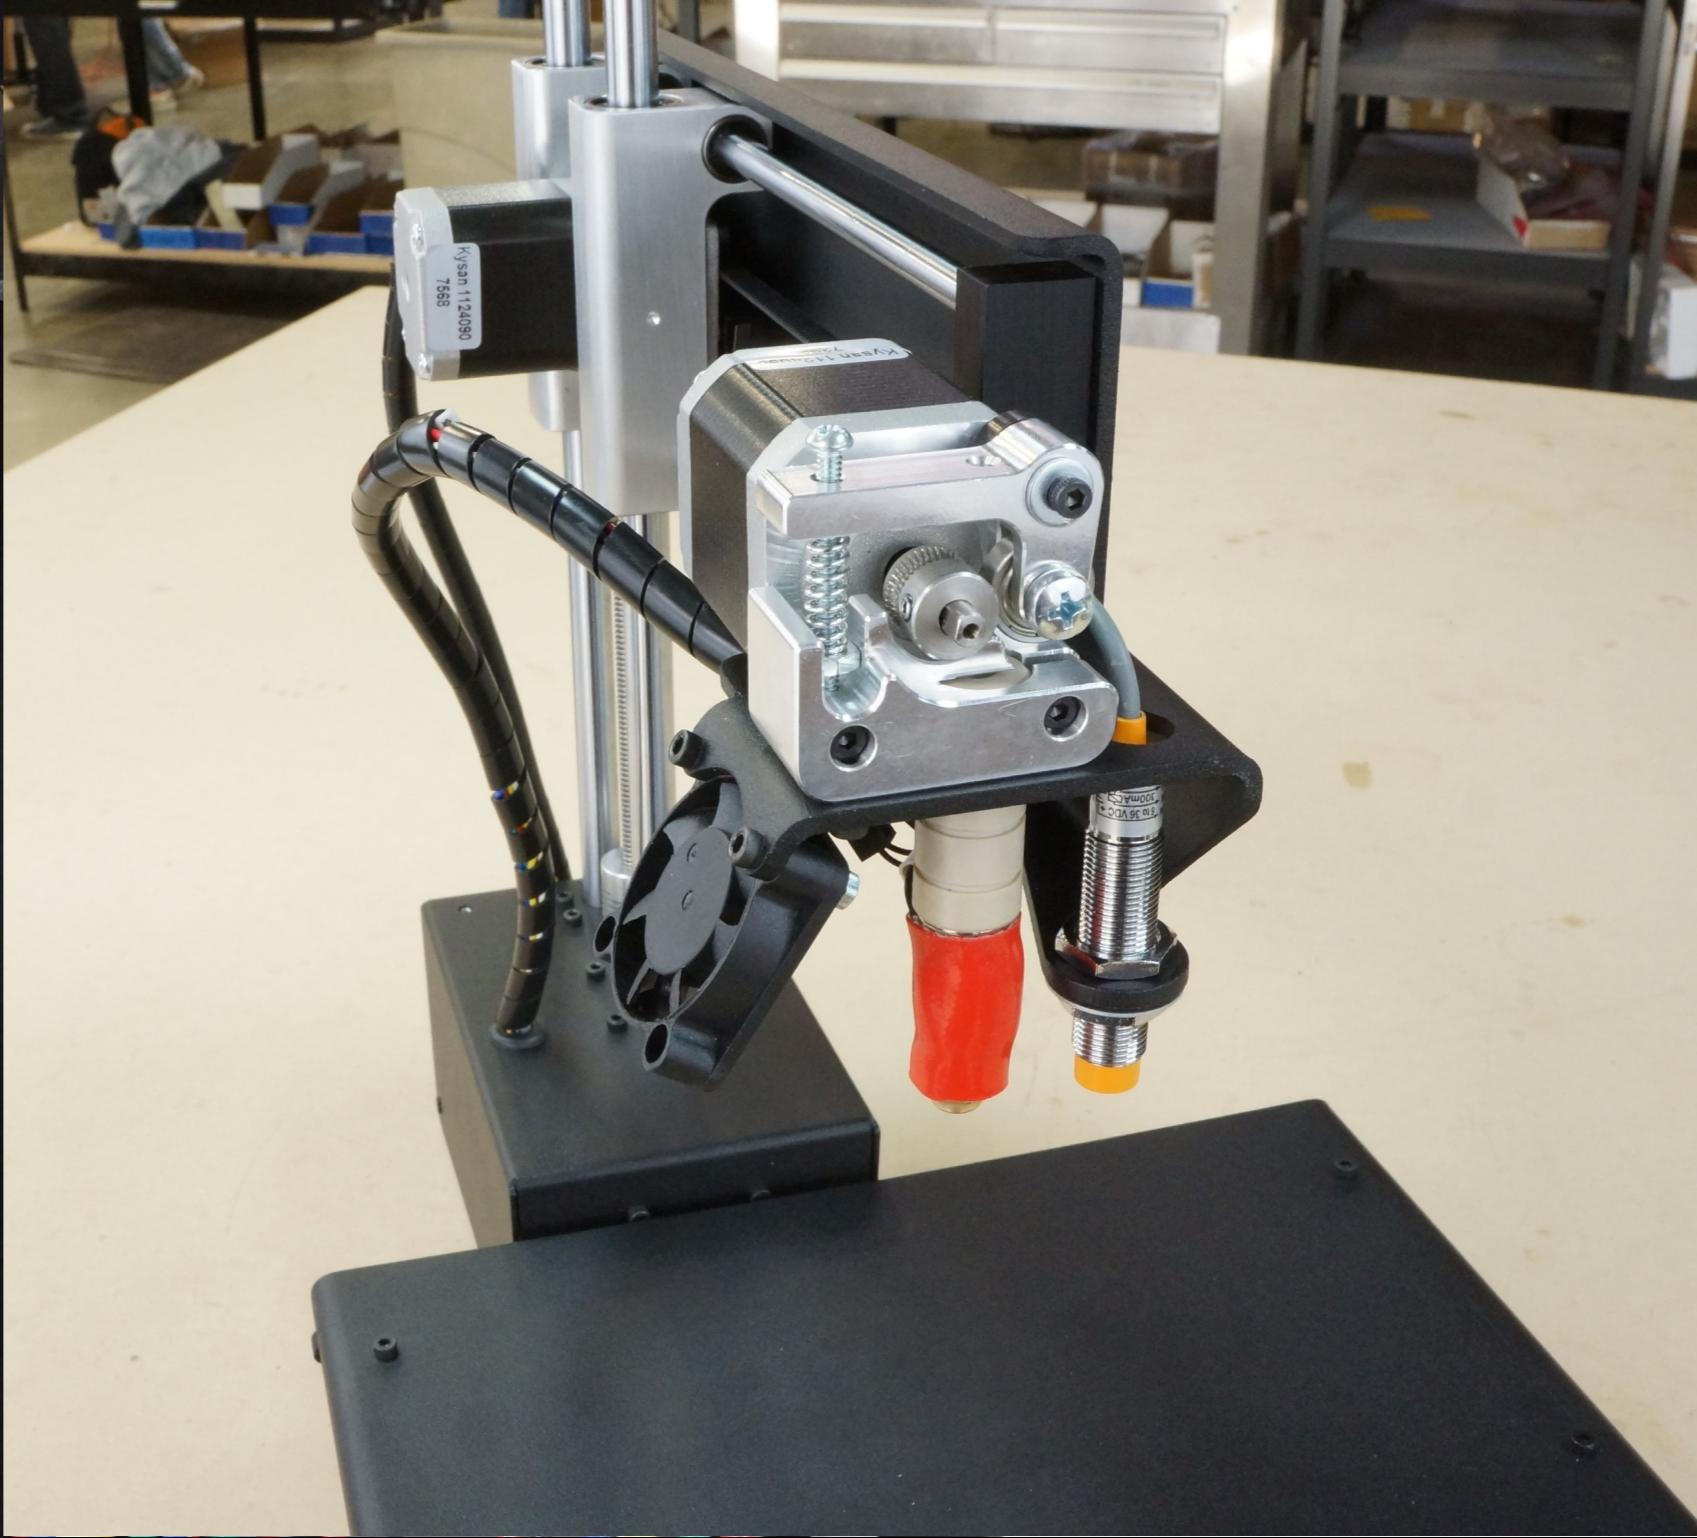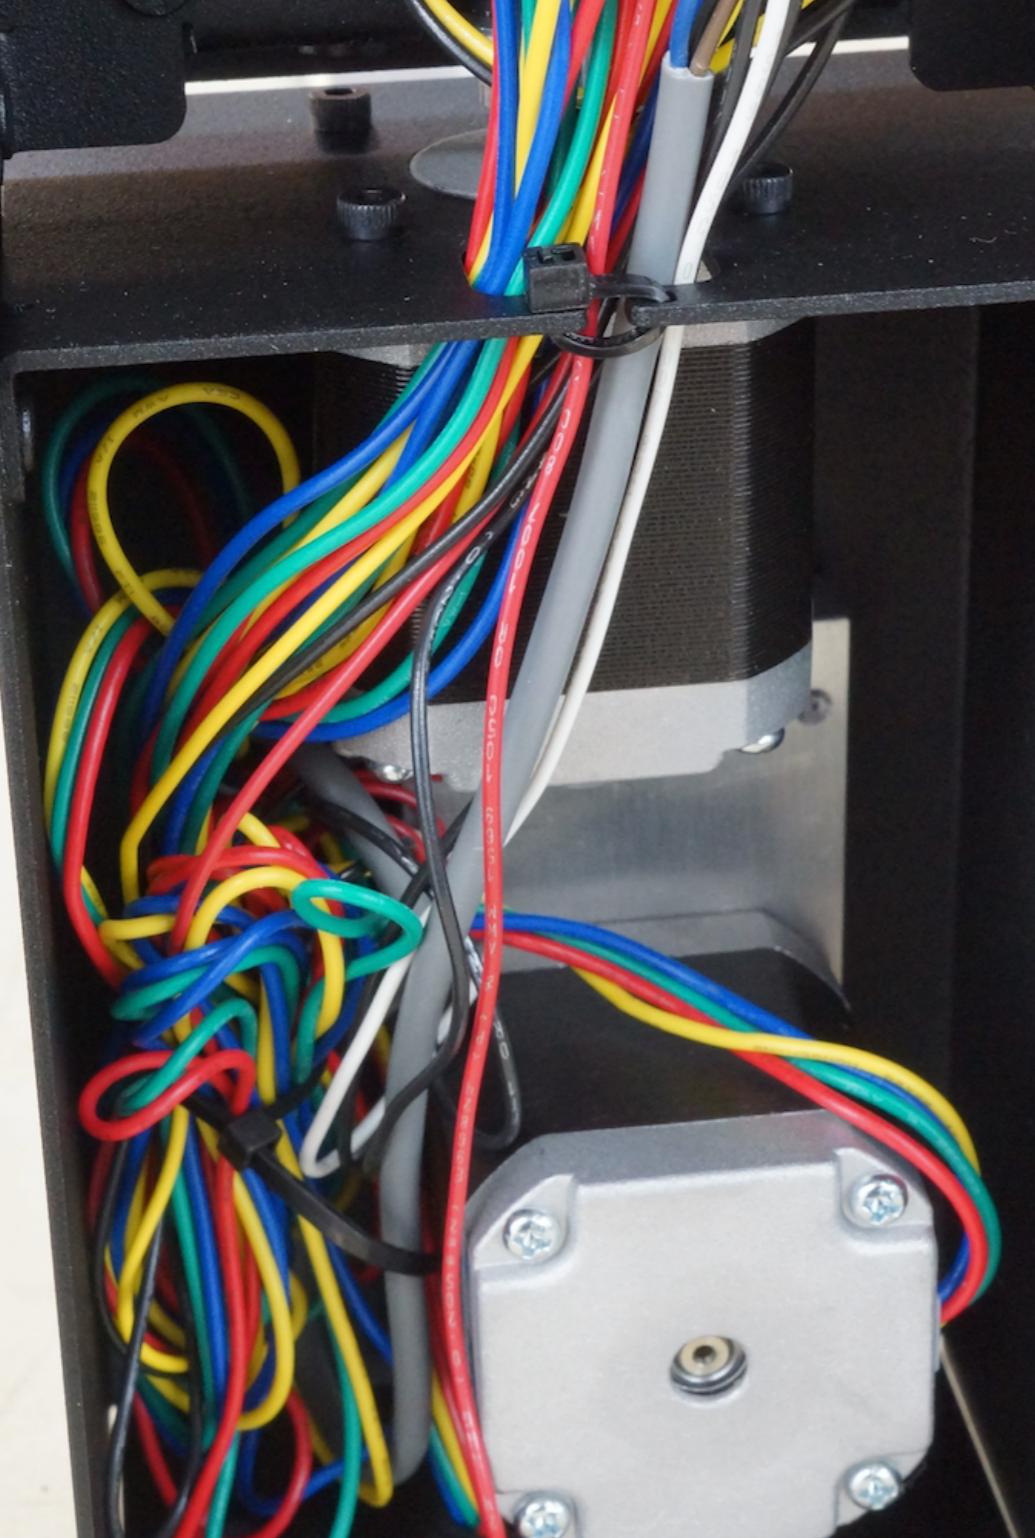

GREAT JOB! YOU DID IT.

THE PRINTRBOT SIMPLE

