
AR42.20-P-0525GH Page 1 of 2

AR42.20-P-0525GH

MODEL 163

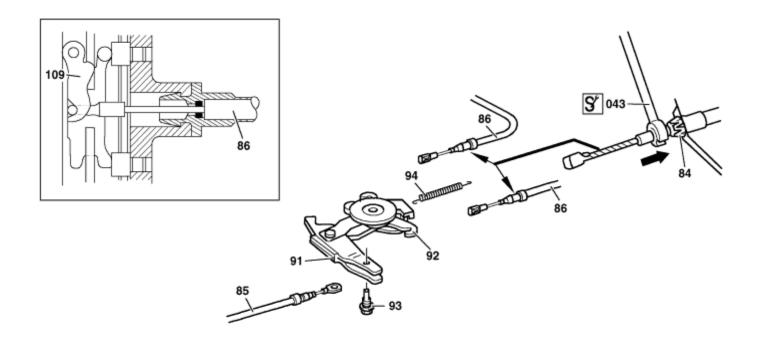

P42.20-0292-09

XX	Removing, installing	
1	Remove and install parking brake brake shoes.	AR42.20-P-0530GH
2	Unhook brake cables (86) from compensating lever (92).	

AR42.20-P-0525GH Page 2 of 2

3	Unhook brake cables (86) from frame floor.	Use unclipping device (043).	<u>129 589 11 63 00</u>
4	Remove brake cable (86) from wheel carrier.		AR42.20-P-0525- 03GH
5	Install in reverse order.		



129 589 11 63 00 Unclipping device