JCLAP · CLAP INSTRUMENT

JSynth

The flocking synth. User Manual



VERSION	FORMAT	PLATFORMS	EDITION
0.8.0	CLAP · Instrument · MPE	macOS · Windows · Linux	October 2026

Contents

01 **Welcome to JSynth** 4
- At a glance 4

02 **Installation** 5
- Requirements 5
- Installing 5
- Outputs 6

03 **Quick Start** 7

04 **The Panel** 8
- Working with the controls 9
- Colours 9
- Panel size 9

05 **How JSynth Works** 10
- One voice 10
- The control rate 10
- The creature 11
- Routes 11
- Quality 11

06 **The Sky** 12
- What you see 12
- Playing the sky 13
- The flock sources 13
- Showing the sky on its own 13

07 **Parts and Playing** 14
- Two parts 14
- Play modes 14
- The part card 15
- MPE and MIDI 15

08 **Oscillators and FM** 17
- An oscillator card 17
- FM 19

09 **Filters and Drive** 20
- FILTER 20
- Filter types 21
- Routing 21
- Drive 21

10 **Envelopes and LFOs** 22
- ENV 22
- MOTION 23
- LFO 24

11 **The Flock** 25
- FLOCK 26
- Behaviours 26
- The lure 27
- Between creatures 27
- Ink and Wake 27

12 **Touch** 28
- TOUCH 28
- The touch chips 28

13 **Modulation: MAP and Routes** 29
- Mapping 29
- Sources 30
- The route list 31
- Routes onto routes 32
- How far a route moves a knob 32

14 **Factory Presets** 33

15 **Sound Design Recipes** 36

A **Appendix: Parameter Reference** 38

B **Appendix: Specifications** 42
- Troubleshooting 42
- Glossary 43

About this manual

Chapters 2 and 3 get you installed and playing in a few minutes. Chapter 4 tours the panel, and Chapter 5 explains how a note becomes a sound, which is the quickest way to understand what every control does. Chapters 6 to 13 cover the sky, the parts and every card on the panel. Chapter 14 lists the factory presets and Chapter 15 has recipes to start from. The appendix lists every parameter with its exact range and default, plus specifications and troubleshooting.

Throughout the manual, control names are set in **bold** and panel labels as they appear on screen, such as **TUNE PULL**. Every control is a host parameter, and every one that moves continuously can be modulated by the host. A tag beside a parameter means:

ROUTE A route can move it, per note, and the host can modulate it per note too.

CHAPTER 01

Welcome to JSynth

A two-part MPE synth where every note is a creature, and the creatures flock.

Play a note on JSynth and a creature hatches in the sky in the middle of the panel. Your note is its **lure**: low notes pull their creatures to the left, high notes to the right, and sliding your finger up an MPE controller lifts it higher. Press harder and the creature flies faster and burns brighter. Let go and it flies off as its sound fades, trailing ink.

While they are held, the creatures do what flocks do. They gather, turn together, keep a little apart, and wander. And because each creature is a voice, how it flies can become how it sounds: how fast it goes, how crowded it is, how near its nearest neighbour is, which way it heads and how much ink it flies through are all modulation sources, as exact as an envelope. Creatures can also hear each other directly. A neighbour's oscillator can frequency-modulate this one, creatures flying the same way drift toward pure intervals, and a hunter that catches its prey rings it.

Underneath is a serious synth. Each of the two parts, **A** and **B**, is its own species with its own patch: three oscillators with analog and FM waves, a 3×3 FM grid, noise, drive, two filters, three envelopes, four LFOs and sixty-four routes. Nothing the flock does reaches the sound unless you route it, so a plain patch is plain.

At a glance

- **Two parts**, layered, split, by velocity, by MPE zone, or crossfaded by expression. Up to 16 voices each.
- **Three oscillators** per voice: sine, triangle, saw, square, pulse, the TX81Z's FM waves and noise, pitched by note, ratio or fixed Hz.
- **A 3×3 FM grid**, phase or exponential, whose diagonal is each oscillator's feedback.
- **Two filters** per voice: SVF up to 48 dB, notch, peak, ladder and comb, in serial, parallel or split.
- **MPE** and CLAP note expressions: strike, press, glide, slide and lift, each with its own curve and smoothing.
- **The flock**: cohesion, alignment, separation, speed, wander, lure and range, with four behaviours: Shoal, Scatter, Hunt and Flee.
- **Eight flock sources** per creature: Speed, Crowd, Nearest, Heading, Caught, Wake, X and Y.
- **Between creatures**: Neighbour FM, Tune Pull and Bite.
- **MAP**: touch a source, drag a knob. No matrix page, and up to 64 routes per part.
- **49 factory presets** from hits to slow swells.

> **THE FLOCK IS THE ENGINE'S**
> The flock flies on the audio thread, at a fixed rate, inside the synth. What you see in the sky is exactly what the voices hear, and a render plays back the same every time from the same start.

CHAPTER 02

Installation

JSynth is a CLAP plug-in. It ships in the JClap bundle alongside the other JClap plug-ins.

Requirements

Plug-in format	CLAP 1.2 (instrument, stereo). Your host must support CLAP, for example Bitwig Studio, REAPER, FL Studio or Studio One.
macOS	Universal binary: macOS 10.15 or later on Intel, 11 or later on Apple Silicon.
Windows	64-bit Windows.
Linux	64-bit, X11.
Controller	Any MIDI keyboard. An MPE controller (a Seaboard, Linnstrument, Osmose or similar) or a host that sends CLAP note expressions brings out the most.

Installing

01 **Download**

Grab the zip for your operating system from the latest release at `github.com/jeffmhopkins/Jclap/releases/latest`. It contains every JClap plug-in.

02 **Copy the plug-in**

Copy `JSynth.clap` (a bundle on macOS) into your CLAP folder:

macOS	`~/Library/Audio/Plug-Ins/CLAP`
Windows	`C:\Program Files\Common Files\CLAP`
Linux	`~/.clap`

03 **Rescan**

Restart your host or rescan plug-ins. In Bitwig Studio this is under *Settings → Locations*. JSynth appears as an instrument.

MACOS: BROWSER DOWNLOADS ARE QUARANTINED

The plug-ins are ad-hoc signed but not notarized, so macOS quarantines files downloaded through a web browser and some hosts (Bitwig among them) silently skip them. The simplest install is from Terminal, since files fetched with `curl` are not flagged:

```
curl -sL https://github.com/jeffmhopkins/Jclap/releases/latest/download/jclap-macOS.zip -o /tmp/jclap.zip
&& mkdir -p ~/Library/Audio/Plug-Ins/CLAP && ditto -x -k /tmp/jclap.zip ~/Library/Audio/Plug-Ins/CLAP
```

If you already downloaded with a browser, clear the flag once after copying:

```
xattr -dr com.apple.quarantine ~/Library/Audio/Plug-Ins/CLAP/*.clap
```

Outputs

JSynth has one note input and three stereo outputs: **Main**, **Part A** and **Part B**. Normally both parts play on Main. Set a part's **Output** to *Own* (a host parameter) and it plays on its own port instead, so you can process the two species separately in your host.

CHAPTER 03

Quick Start

Five minutes from an empty instrument slot to a flock you can hear.

01 **Load JSynth and play**

Put JSynth on an instrument track and play a few notes. Each note hatches a creature at its lure: low notes on the left, high on the right. Hold a chord and watch them gather; let go and they fly off as they fade. No keyboard to hand? Click in the sky: left to right picks the note (C2 to C6), and dragging bends it.

02 **Pick a preset**

Click the preset name in the header to open the menu, grouped from *Hits* through *Plucks*, *Keys*, *Bass and Leads* and *Pads* to slow *Swells*. Or click the arrows, or scroll over the bar, to step through them. Try *Starling Bells*, then *Murmuration Pad*, then *Predator and Prey*.

03 **Let the creatures hear each other**

Load *Init* and turn **OSC 2**'s **LEVEL** up to about half, since Neighbour FM plays through Osc 2. Then open the **FM** tab on the left card and turn up **NEIGHBOUR**. Now hold a chord: when creatures fly close together they frequency-modulate each other, and the sound rings and shifts as the flock moves. Raise **TUNE PULL** too and creatures flying the same way drift into just intonation.

04 **Map a flock source**

Press **MAP** in the header. Click **SPEED** under the sky, then open the **FILTER** tab on the right and drag Filter 1's **CUTOFF** up. A ring in Speed's colour shows the route. Press **MAP** again to finish. Now the faster a creature flies, the brighter it sounds; play harder (Press makes creatures faster) to hear it.

05 **Add a second species**

Set the play mode in the header to **LAYER** and click **PART B**. Part B is a whole second patch, and by default it hunts: its creatures chase part A's. On part B's **FM** tab, raise **BITE**, and every creature B catches rings with its hunter's tone.

06 **Save it**

Click **SAVE** in the preset bar, type a name and press Enter. Your preset appears under *User* in the preset menu. Settings are also saved with your project automatically.

> **TIP**
> Every control has a tooltip. Hover over anything on the panel for a one-line reminder of what it does.

CHAPTER 04

The Panel

The sky fills the middle. The patch sits around it in glass cards, and the cards always edit the part you have chosen.



1. **Preset bar.** Step with the arrows, click the name for the menu, **SAVE** your own.
2. **PART A / PART B.** Which species the cards edit.
3. **Play mode.** Which part each note plays.
4. **MAP.** Turns on mapping: touch a source, drag a knob.
5. **Touch chips.** STRIKE, PRESS, GLIDE, SLIDE, LIFT: sources that light as you play.
6. **Left card.** FLOCK, FM and TOUCH tabs.
7. **The sky.** Both species, their ink, and the links between them. Click to play.
8. **Flock sources.** The creatures' own modulation sources.
9. **RINGS, ROUTES, HIDE.** Lure rings, the route list, and the sky on its own.
10. **Right card.** ENV, MOTION, LFO and FILTER tabs.
11. **Oscillator cards.** OSC 1, 2 and 3: pitch, wave and mix.
12. **Part card.** Voice mode, polyphony, pitch, pan and level, and the output.

Working with the controls

Every knob, switch and menu is a host parameter, so everything can be automated. Knobs work the same everywhere on the panel:

ACTION	ON A KNOB
Drag up / down	Change the value. A popup shows the value while you drag.
Shift + drag	Fine adjustment.
Scroll wheel	Step the value up or down.
Double-click	Reset to the default value.
Right-click	Menu with *Reset to default* and *Enter value…* to type an exact number.

A knob that a route moves draws up to four coloured **route rings** outside its own arc, one per source, each spanning how far that source moves it. In MAP mode, knobs behave differently: see *Chapter 13*.

Colours

Part A is drawn in ● orange and part B in ● blue, in the sky and on the cards. Every modulation source has its own colour, the same on its chip, its route rings and in the route list, and MAP and the route list are ● pink.

Panel size

The panel is 1200 × 780 at 100%. Right-click any empty part of the sky and choose *UI Size* to scale it to 75%, 100%, 125%, 150% or 200%. The size you pick is remembered the next time the editor opens.

CHAPTER 05

How JSynth Works

A note becomes a voice and a creature at once. The voice makes the sound; the creature flies, and how it flies can shape the sound.

One voice

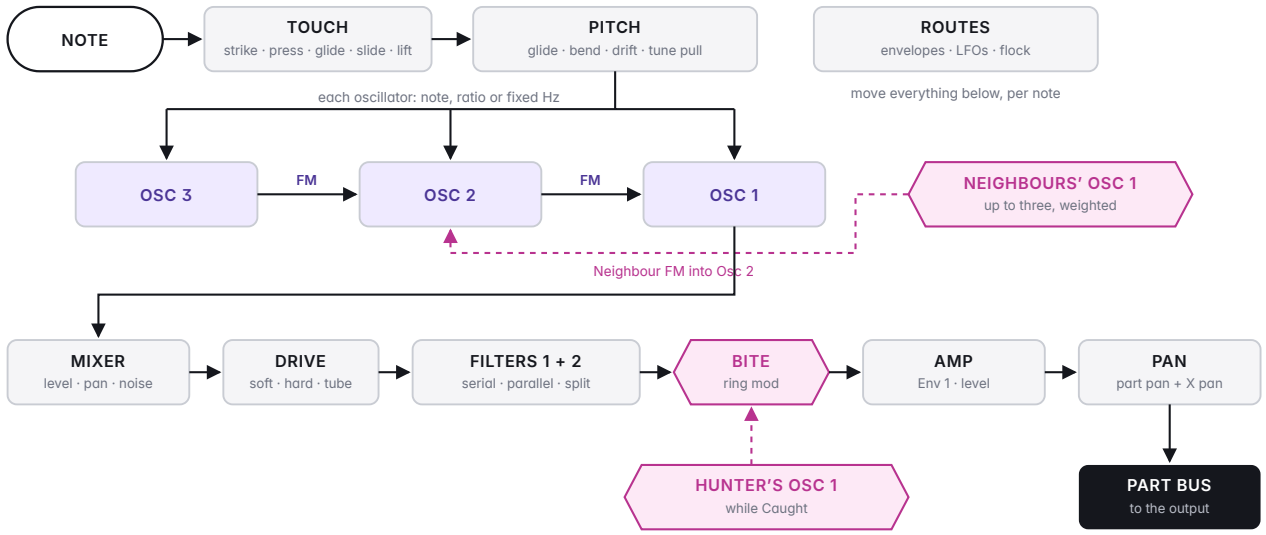


Fig. 5.1 One voice, at the oversampled rate. The pink paths are the couplings to other creatures: a neighbour's Osc 1 into Osc 2, and a hunter's Osc 1 ringing the voice.

Each voice runs three **oscillators**, in the order 3, 2, 1, so Osc 3 can modulate Osc 2, and both can modulate Osc 1, within the same sample. The **FM grid** sets how much each one modulates each other one. The **mixer** sets each oscillator's level and pan and adds noise. Then comes **drive**, then two **filters**, then the **amp**, whose shape is Env 1, and finally the voice's place in the stereo field. Every voice of a part sums to that part's bus, and the two parts sum to the output.

The control rate

Envelopes 2 and 3, the LFOs, the touch, the routes and the flock all work at a control rate of one tick every 32 samples (1,500 a second at 48 kHz). Every value the audio reads ramps smoothly across each tick, so nothing zippers, and knobs are smoothed over 10 ms. The amp envelope runs every sample. Because the ticks are counted across the host's blocks, JSynth sounds the same at any buffer size.

The creature

As a voice starts, its creature hatches at the note's lure. The flock steps 500 times a second. Each step, every creature feels its neighbours (cohesion, alignment, separation), its lure, its own wander, the wind and its wingbeat, and moves. Then the flock works out each creature's eight sources and who can hear whom. Each voice reads its creature's sources smoothly between steps.

Routes

A **route** connects a source to a destination with an amount. Each part has 64 of them. Each tick, every voice works out its routes from its own sources, so the same route can push one note's filter open and leave another's closed: an envelope, a finger's pressure or a creature's speed is always that note's own. A route moves a parameter within its own range, so +100% from a source at full takes any knob from its lowest to its highest.

Quality

The voices run at 2× the host's rate by default, which keeps FM and hard waves clean, and are brought back down by a steep, latency-free filter. The **Quality** parameter (a host setting) chooses 1×, 2× or 4×. 1× saves CPU; 4× is for bright FM at low sample rates.

> **WHERE TO READ MORE**
> `plugins/jsynth/ARCHITECTURE.md` in the source repository walks through every stage with the numbers the code uses.

CHAPTER 06

The Sky

Both species fly here, all the time. The sky is the synth's own flock, drawn as it is.

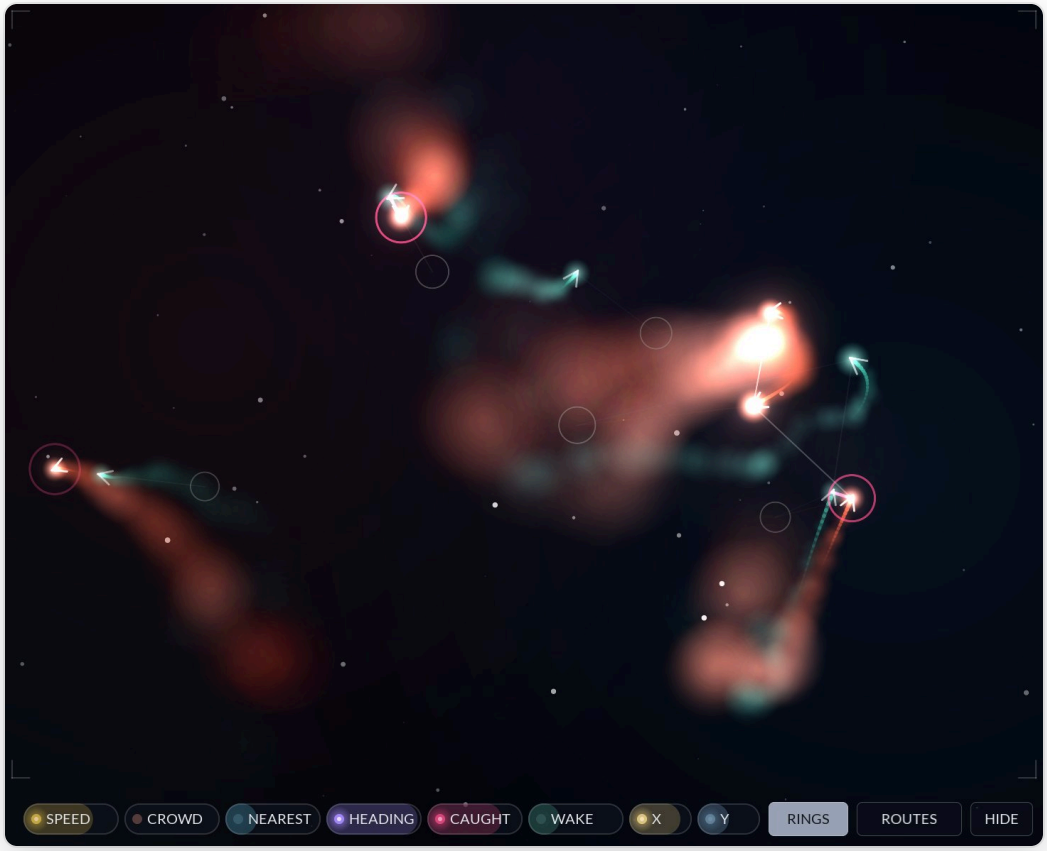


Fig. 6.1 Part A's creatures (orange) and part B's (teal) in a layered patch, with their ink. Faint grey rings are lures; a pink ring marks a creature a hunter has caught; thin lines join neighbours that hear each other.

What you see

Creatures	A glowing body and a pair of wings that beat with its Wingbeat LFO. It is brighter the harder you press, and fades with its sound after you let go. The part you are editing flies in front; the other is dimmed.
Resting creatures	Six per species fly quietly while a part plays nothing, so you can see how it flies before you play. They fade away once you do.
Ink	Every creature sheds ink behind it, which blooms and fades by the part's **TAIL** and **SPREAD**. Creatures flying through ink stir it.
Lure rings	Where each held note pulls its creature, with a faint line to it. **RINGS** under the sky shows or hides them.

Links	A thin line from a creature to the neighbour it hears most, brighter the more **NEIGHBOUR** FM it gets, and a line from a hunter to what it has caught.
Caught	A pink ring around a creature a hunter holds.

Playing the sky

Click anywhere in the sky to play a note: left to right runs from C2 to C6, and how high you click sets Slide. Drag while holding to bend the note and change Slide; let go to release it. The notes play on whichever parts the play mode sends them to, just like notes from your keyboard.

The flock sources

The row of chips under the sky holds each creature's eight sources. Each chip's light shows the newest creature of the part you are editing. They are always each note's own when used in a route.

SOURCE	WHAT IT MEASURES (0 TO 100%)
SPEED	How fast the creature flies, against the fastest it could at full Press.
CROWD	How many neighbours it has, counted smoothly: two close neighbours is full.
NEAREST	How near its nearest neighbour is: 100% is touching, 0 is at the edge of **RANGE** or beyond.
HEADING	How much it flies upward: 100% straight up, 50% level, 0 straight down. Smooth all the way round, so it never jumps.
CAUGHT	Whether a hunter of the other species has it. Rises in about 20 ms, lets go over about half a second.
WAKE	How much ink it is flying into, scaled by the part's **WAKE** knob.
X	Where it is, left (0) to right (100%).
Y	Where it is, bottom (0) to top (100%).

Showing the sky on its own

HIDE folds the cards away so the sky fills the whole panel, which is lovely on a second screen while you play. **SHOW**, in the corner, brings them back.

CHAPTER 07

Parts and Playing

Two species, one keyboard. The header decides which notes go where; the part card sets how each part plays them.




Fig. 7.1 The header: logo, preset bar, PART A / PART B, play mode, MAP and the touch chips.

Two parts

Parts A and B are complete, separate patches with the same controls. **PART A** and **PART B** in the header choose which one the cards show and edit; the sky always shows both. A new instance starts with A shoaling and B hunting it an octave down, so layering them gives you a predator from the start.

Play modes

MODE	WHICH PART PLAYS A NOTE
SINGLE	Part A only. The default.
LAYER	Both, every note.
SPLIT	B below the **Split Key** (C4 by default), A from it up.
MPE ZONES	MPE member channels 2 to 8 play A and 9 to 16 play B. Channel 1 plays both.
VELOCITY	B for notes struck at or above the **Velocity Split** (80), A for softer ones.
EXPRESSION	Both, crossfaded per note by Slide or Press (the **Crossfade Source**): at 0 you hear A, at full you hear B.

Split Key, Velocity Split and Crossfade Source, and each part's Key Low and Key High range, are host parameters. A note outside a part's key range never plays that part.

The part card



CONTROL	RANGE	DEFAULT	WHAT IT DOES
POLY / MONO / LEGATO	`Voice mode`	`Poly`	Mono plays one note at a time and restarts it; Legato glides to a new note without restarting while one is held. Both go back to the last note still held when you let go.
Voices (– 8 +)	`1 – 16`	`8`	Polyphony: how many notes the part sounds at most. The oldest released note is taken first, then the oldest held, with a 3 ms fade.
TRANSP	`±48 st`	`0 (B: -12)`	Transpose, in semitones.
GLIDE	`0 ms – 20 s`	`0`	Portamento time. ROUTE
BEND	`1 – 96 st`	`48 st`	The MPE bend range: how far a finger slides on a member channel.
PAN	`±100%`	`0`	The part's pan. ROUTE
X PAN	`0 – 100%`	`0%`	How far each creature's place in the sky, left to right, pans its voice. At 100% a creature at the left edge plays hard left. ROUTE
LEVEL	`-60 – +6 dB`	`0 dB`	The part's level. ROUTE
WIDTH	`0 – 200%`	`100%`	The whole output's stereo width: 0% is mono, past 100% wider. Shared by both parts.
MASTER	`-60 – +6 dB`	`-6 dB`	The whole output's level. Shared by both parts.

Host parameters that complete the part: **Fine** (±100 cents), **Glide Mode** (Always, or Legato: glide only from a note still held), **Drift** (on the FM tab, a slow random pitch wander per creature), **Velocity** (on the FILTER tab: how much Strike sets the level), **Key Low** and **Key High**, and **Output** (Main or Own).

MPE and MIDI

JSynth takes CLAP notes, plain MIDI and MIDI MPE.

- **Channel 1** is the MPE manager channel and a plain keyboard's channel. Its pitch bend moves every note by the **MGR BEND** range (2 semitones by default, on the TOUCH tab). CC 1 is the Mod Wheel source and CC 64 is sustain. If it sends channel pressure or CC 74, those reach every note too.
- **Channels 2 to 16** are member channels, each carrying one note's own bend (by the part's **BEND** range), pressure and CC 74.

- **CLAP notes** use note expressions instead: tuning, pressure and brightness.

Hosts that support CLAP per-note modulation can also modulate any parameter tagged ROUTE on a single note.

CHAPTER 08

Oscillators and FM

Three oscillators per voice, from soft sines to band-limited saws, and a grid that lets each one modulate the others.



Fig. 8.1 The three oscillator cards along the bottom.

An oscillator card

CONTROL	RANGE	DEFAULT	WHAT IT DOES
NOTE / RATIO / HZ	Pitch mode	Note (Osc 2, 3: Ratio)	**Note** follows the keyboard with an offset; **Ratio** runs at a multiple of the note, the classic FM way; **Hz** holds a fixed frequency whatever you play.
Wave	14 waves	Saw (Osc 2, 3: Sine)	See the table below.
COARSE	±48 st	0	Note mode: the offset in semitones. ROUTE
RATIO	×0.25 – ×16	×1 (Osc 3: ×3)	Ratio mode: the multiple of the note. Routes move it by musical intervals. ROUTE
FREQ	1 Hz – 10 kHz	440 Hz	Hz mode: the fixed frequency. ROUTE
FINE	±100 ct	0	Fine tune, in every mode. ROUTE
SHAPE	0 – 100%	50%	Pulse width for Square and Pulse; for the other waves (except Saw), a phase distortion that squeezes or stretches the first half of the cycle. 50% is the plain wave. ROUTE
LEVEL	0 – 100%	100% (Osc 2, 3: 0%)	How loud it is in the mix. An oscillator at 0 can still modulate others. ROUTE
PAN	±100%	0	Its place in the voice's stereo image. ROUTE


Host parameters per oscillator: **Sync** (Osc 2 and 3 restart with Osc 1), **Retrigger** (On starts each note at **Phase**; Off at a random phase), **Phase** ROUTE, **Bend** (how much the pitch bend moves it, 100% by default) and **Key Track** (Off pitches it from middle C whatever you play).

The waves

WAVE	CHARACTER
Sine	Pure. The classic FM operator.
Triangle	Soft, odd harmonics.
Saw	Bright and full. Band-limited, so it stays clean high up and under FM.
Square, Pulse	Hollow to nasal. Shape sets the width: 10 to 90% for Square, 5 to 50% for Pulse.
Half Sine … Alt Camel	The Yamaha TX81Z's seven other waves: Half Sine, Abs Sine, Quarter, Alt Sine, Alt Half, Camel and Alt Camel. Sines with parts of the cycle cut, folded or doubled, which give FM a whole family of brighter, buzzier tones.
White, Pink	Noise, as an oscillator: it can be filtered, panned and even used as an FM source.

LEFT CARD

FM

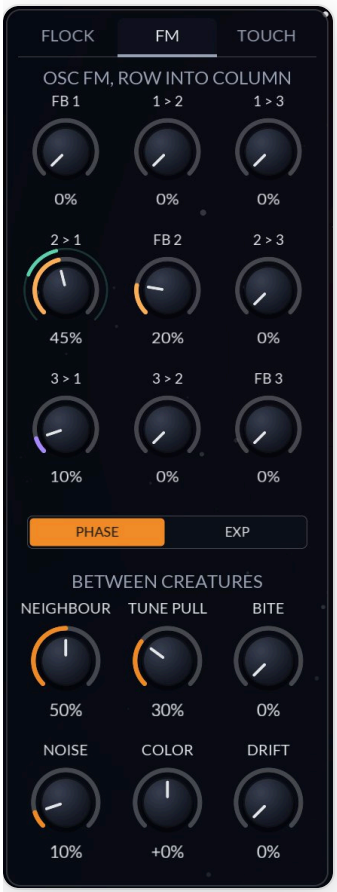

The grid reads **row into column**: the knob in row 2, column 1 (**2 > 1**) is how much Osc 2 modulates Osc 1. The diagonal, **FB 1** to **FB 3**, is each oscillator's feedback on itself. Each knob is squared inside, so the first half of its travel is gentle.

CONTROL	RANGE · DEFAULT	WHAT IT DOES
FB, 1 > 2 … 3 > 2	`0 – 100%` **0%**	The nine cells. ROUTE
PHASE / EXP	`FM type` **Phase**	**Phase** is DX-style phase modulation, bright and stable in pitch. **Exp** moves the pitch itself, up to four octaves either way: growly, and it bends.
NEIGHBOUR	`0 – 100%` **0%**	Neighbours' Osc 1 into this creature's Osc 2. ROUTE
TUNE PULL	`0 – 100%` **0%**	Creatures flying the same way drift toward pure intervals. ROUTE
BITE	`0 – 100%` **0%**	Ring mod while this part's hunters hold their prey. ROUTE
NOISE	`0 – 100%` **0%**	The mixer's noise level. ROUTE
COLOR	`±100%` **0**	Pink (−100%) to white (+100%). ROUTE
DRIFT	`0 – 100%` **0%**	Each creature's own slow wander in pitch, up to ±15 cents. ROUTE

Order and feedback

Within each sample the oscillators run 3, then 2, then 1. So the downward cells (3 > 2, 3 > 1 and 2 > 1) hear this sample's modulator, and the upward ones (1 > 2, 1 > 3, 2 > 3) hear the last sample's. In practice this means you can build any of the classic stacks: 3 > 2 > 1 as a three-operator stack heard on Osc 1, or 2 > 1 and 3 > 1 as two modulators on one carrier. Feedback averages its last two samples, as the DX7 did, so it brightens toward a saw and then a rasp rather than straight into noise.

BETWEEN CREATURES (Neighbour, Tune Pull and Bite) is explained in *Chapter 11*.

CHAPTER 09

Filters and Drive

Two filters per voice, from a clean 48 dB low pass to a ringing comb, after a drive stage.

RIGHT CARD

FILTER



CONTROL	RANGE · DEFAULT	WHAT IT DOES
SERIAL / PARALLEL / SPLIT	`Routing` `Serial`	See below.
Type	`8 types` `Low Pass (F2: Ladder)`	See the table below.
Slope	`12 – 48 dB` `24 dB`	Low, high and band pass only.
CUTOFF	`20 Hz – 20 kHz` `1.26 kHz (F2: 20 kHz)`	For a comb, its tuning. ROUTE
RES	`0 – 100%` `20% (F2: 0%)`	Resonance; for a peak, its boost; for a comb, its feedback. ROUTE
DRIVE	`0 – 100%` `0%`	Saturates the filter's own input. ROUTE
KEY	`0 – 100%` `0%`	Key tracking: at 100% the cutoff moves an octave per octave, around middle C. ROUTE
DRIVE type	`Soft, Hard, Tube` `Soft`	The drive before both filters.
DRIVE	`0 – 100%` `0%`	Up to 24 dB into the shape, with the level brought back down. ROUTE
BALANCE	`±100%` `0`	Filter 1 against Filter 2, in Parallel and Split. ROUTE
VELOCITY	`0 – 100%` `100%`	How much Strike sets the level. At 0 every note plays at full level.

Filter types

TYPE	SOUND
Low Pass	The workhorse: a state variable filter, cascaded for 12, 24, 36 or 48 dB per octave, with a resonance peak up to a whistle.
High Pass	The same, from the other side: thins and brightens.
Band Pass	Only a band around the cutoff. Narrower and more vocal with resonance.
Notch	Cuts a band out. Resonance narrows it. Slope is ignored.
Peak	Boosts a band. Resonance is the boost, up to five times.
Ladder	A four-pole transistor ladder: warm, thick, and it squelches and self-oscillates near full resonance.
Comb +	A short tuned delay with positive feedback: rings at every harmonic of the cutoff, like a plucked string or a tube.
Comb –	Negative feedback: rings at the odd harmonics, hollower, an octave lower.

Routing

Serial Filter 1 into Filter 2. Filter 2 starts as an open ladder, so it changes nothing until you turn it down, and costs nothing while it stays open.

Parallel Both filters hear the whole voice; **BALANCE** crossfades between them.

Split Osc 1 goes to Filter 1, and Osc 2, Osc 3 and the noise to Filter 2. At centre **BALANCE** both are at full; turning it either way turns the other side down.

Drive

The drive sits before the filters. **Soft** is a tanh curve, round and warm. **Hard** clips flat, buzzier. **Tube** is asymmetric, so it adds even harmonics. Its gain is compensated, so turning it up thickens and compresses the sound more than it makes it louder.

CHAPTER 10

Envelopes and LFOs

Three envelopes and four LFOs per voice. Two of the LFOs move the creatures as well as the sound.

RIGHT CARD

ENV



Each envelope draws its shape: drag the points to set **attack**, **decay**, **sustain** and **release**. A dot rides the curve for every sounding note. The chip above each one is its source for MAP and lights as it moves.


ENV 1 AMP is the amp: it shapes every note's level, and it always releases when you let go. **ENV 2** and **ENV 3** are free to route; a new part starts with Env 2 opening Filter 1.

CONTROL	RANGE · DEFAULT	WHAT IT DOES
Attack	`0 ms – 20 s` **`5 ms`**	ROUTE
Decay	`0 ms – 20 s` **`400 ms (2, 3: 300 ms)`**	ROUTE
Sustain	`0 – 100%` **`70% (2, 3: 30%)`**	ROUTE
Release	`0 ms – 20 s` **`300 ms`**	ROUTE
Loop	`Off, Held, Free` **`Off`**	**Held** repeats attack and decay while the note is held. **Free** keeps repeating after you let go too, until the note ends.

Host parameters per envelope: **Delay** and **Hold** (0 ms to 20 s) ROUTE, an **Attack**, **Decay** and **Release Curve** each (−1 to +1), and **Velocity**, how much Strike scales the whole envelope.

RIGHT CARD

MOTION

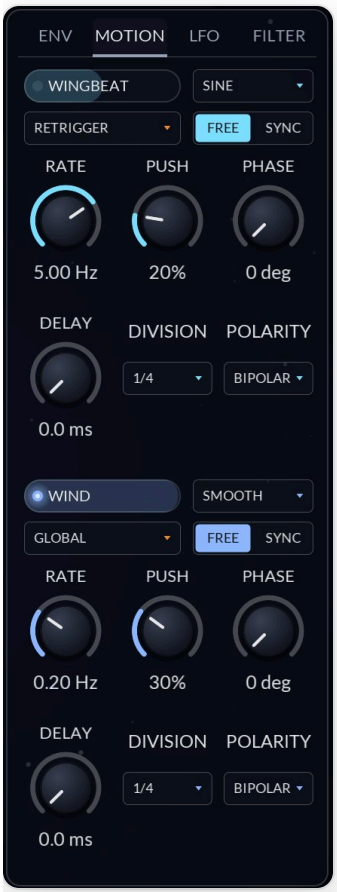

The MOTION tab holds the two LFOs that move the flock. Both are also sources for routes, like any LFO.


WINGBEAT One per creature (5 Hz sine by default). It bobs each creature across its path, by **PUSH**, and beats its wings on screen.

WIND One gust for the whole sky (a slow 0.2 Hz Smooth, Global by default). It pushes every creature of the part the same way, by **PUSH**, from a direction that turns slowly on its own.

CONTROL	RANGE · DEFAULT	WHAT IT DOES
Shape	`Sine, Triangle, Saw, Square, S&H, Smooth` **`Sine (Wind: Smooth)`**	S&H holds a random value per cycle; Smooth glides between random values.
Trigger	`Retrigger, Free, Global` **`Retrigger (Wind: Global)`**	See below.
FREE / SYNC	`Rate or tempo` **`Free`**	Sync follows the host's tempo at **DIVISION**.
RATE	`0.02 – 50 Hz` **`5 Hz (Wind: 0.2 Hz)`**	ROUTE
PUSH	`0 – 100%` **`20% (Wind: 30%)`**	How hard it moves the creatures. ROUTE
PHASE	`0 – 360°` **`0°`**	Where a retriggered cycle starts. ROUTE
DELAY	`0 ms – 20 s` **`0`**	Fades the LFO in after each note starts. ROUTE
DIVISION	`1/32 – 4/1` **`1/4`**	With triplets and dotted values.
POLARITY	`Bipolar, Unipolar` **`Bipolar`**	Bipolar swings both ways around the knob; unipolar only up from it.

RIGHT CARD

LFO

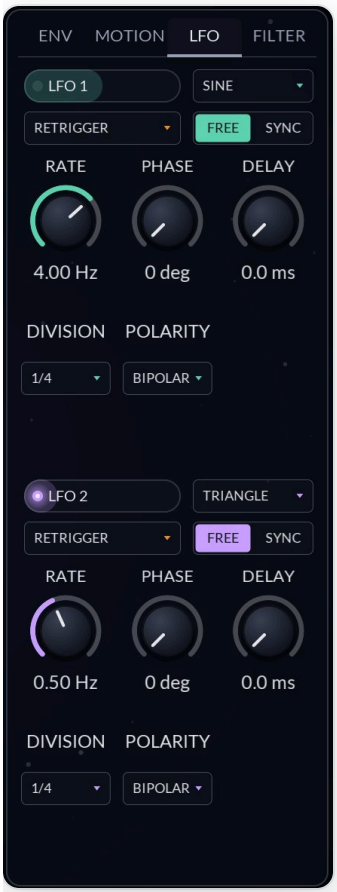

LFO 1 (4 Hz sine) and **LFO 2** (0.5 Hz triangle) are plain LFOs that only modulate. They have the same controls as the MOTION LFOs, without Push.

TRIGGER

Retrigger Each note's LFO starts at Phase. Notes are in step with how you play them.

Free Each note's LFO picks up where the part's running LFO is, so notes are in step with each other.

Global One LFO for the whole part. Every note hears the same value; a route can't change its rate per note.

> **VIBRATO**
> Route LFO 1 to the part's **Fine** at a few percent for vibrato, and set its **DELAY** so it arrives once the note has settled. Map Press onto that route's amount and the vibrato follows your finger.

CHAPTER 11

The Flock

How each species flies, and what flying near another creature does to its sound.

LEFT CARD

FLOCK



CONTROL	RANGE · DEFAULT	WHAT IT DOES
Behaviour	`Shoal, Scatter, Hunt, Flee` **`Shoal (B: Hunt)`**	See below.
COHESION	`0 – 100%` **`50%`**	Pull toward the middle of the neighbours. ROUTE
ALIGN	`0 – 100%` **`50%`**	Turn to fly the way the neighbours fly. ROUTE
SEPARATE	`0 – 100%` **`40%`**	Keep clear of the nearest. ROUTE
SPEED	`0 – 100%` **`40% (B: 55%)`**	Top speed. Press raises it further, up to 80% more. ROUTE
WANDER	`0 – 100%` **`20%`**	Each creature's restlessness, and how far it roams around its lure. ROUTE
LURE	`0 – 100%` **`60%`**	How hard your note pulls its creature. Low lets the flock take over. ROUTE
RANGE	`0 – 100%` **`35%`**	How near counts as a neighbour. ROUTE
TAIL	`0 – 100%` **`50%`**	How long the ink lasts, about 0.3 to 3 seconds. ROUTE
SPREAD	`0 – 100%` **`50%`**	How far the ink blooms as it ages. ROUTE
WAKE	`0 – 100%` **`20%`**	How strongly ink registers on the Wake source. ROUTE
SIZE	`0 – 100%` **`50%`**	How big the sky is. A bigger sky makes creatures relatively smaller and slower, so flocks spread out. Shared.
WALLS	`Soft, Wrap, Open` **`Soft`**	Soft turns creatures back near the edge; Wrap carries them round to the other side; Open lets them fly well past it first. Shared.
LURE X, LURE Y	`Pitch, Strike, Press, Slide, Lift, Random, Centre` **`Pitch, Slide`**	What places a note's lure along each axis.

Behaviours

Shoal Flies with its own kind: cohesion, alignment and separation as set.

Scatter Keeps apart: cohesion pushes creatures away from their neighbours' middle instead of toward it.

Hunt Chases the nearest creature of the other species. A hunter that gets close enough catches it, which turns on the prey's Caught source and its Bite. Everything shies away from hunters a little.

Flee Runs hard from the other species, whatever it is doing.

The lure

A held note pulls its creature toward a point that roams slowly around the lure, on a leash: loose near the lure, so the flock and the wander shape the path there, and firm when the creature strays. Each creature roams on its own two slow orbits, so no two trace the same path. **LURE X** and **LURE Y** choose what places the lure: by default low notes sit left and high notes right (Pitch, over four octaves from C2, and bend moves it), and more Slide sits higher. Try Lure Y on *Press* to make pressing harder send creatures upward, or Lure X on *Random* to scatter a chord across the sky.

Between creatures

Three knobs on the **FM** tab connect the flock to the sound directly. All start at 0, so the flock changes nothing until you ask it to.

NEIGHBOUR Each creature listens to up to three neighbours of its own species, weighted by how near they are, and their Osc 1 frequency-modulates its Osc 2. A tight flock rings; a loose one is clean. When a creature gains or loses a neighbour, the change fades in over about 10 ms, so it never clicks. For it to be heard, Osc 2 must be in the sound: give it level, or route it into Osc 1 on the FM grid.

TUNE PULL For each neighbour heading within 30° of the same way, the creature is pulled toward the nearest just interval from that neighbour's pitch (unison, minor third, major third, fourth, fifth, major sixth, octave), up to ±30 cents at 100%, over about 150 ms. Chords played on a flock that flies together settle into just intonation; break formation and they drift back.

BITE While one of this part's hunters holds a creature of the other species, the hunter's Osc 1 ring-modulates it, by Bite times how caught it is. Set Bite on the hunting part. Because Caught lets go over half a second, each bite rings out as the prey escapes.

Ink and Wake

Every creature leaves ink behind it, more the brighter it is. The ink fades with **TAIL** and blooms with **SPREAD**. The **Wake** source is how much ink a creature is flying into, read just ahead of it: the other species' ink fully and its own kind's a little less. So Wake rises when a creature crosses another's path or follows a flock, and a route from Wake makes a sound that reacts to where the flock has been.

CHAPTER 12

Touch

Five dimensions of every note, each shaped and smoothed, each a source.

LEFT CARD

TOUCH



TOUCH	WHERE IT COMES FROM
STRIKE	How hard the note was struck: its velocity.
PRESS	Pressure: MPE channel pressure or the CLAP pressure expression. It also makes the creature faster and brighter.
GLIDE	The finger's bend, as −100% to +100% of the bend range.
SLIDE	Up and down the key: MPE CC 74 or the CLAP brightness expression.
LIFT	How fast the note was released: its release velocity.

Each has a **CURVE** (−1 to +1): positive bows it up, so it responds more early in the travel, and negative bows it down. And a **SMOOTH** time (8 ms by default, 2 ms for Glide so slides track the finger), which irons out a controller's steps.

CONTROL	RANGE · DEFAULT	WHAT IT DOES
ROUND	`0 – 100%` **`0%`**	Glide Rounding: once a finger stops sliding, pull its pitch toward the nearest semitone, by this much. While the finger moves, the pitch follows it exactly.
ROUND TIME	`0 ms – 20 s` **`150 ms`**	How long that pull takes.
MGR BEND	`1 – 96 st` **`2 st`**	The bend range of the MPE manager channel (channel 1), which bends every note.

The touch chips

The five chips in the header light as you play, showing the newest note of the part you are editing. In MAP mode they are sources like any other: touch **PRESS** and drag a knob to make pressure move it.

> **NO MPE CONTROLLER?**
> Strike and Lift come from any keyboard. A plain keyboard's channel pressure is Press for every note, and its pitch wheel bends every note by MGR BEND. In the sky, a click sets Slide by how high you click and dragging bends.

CHAPTER 13

Modulation: MAP and Routes

There is no matrix page. Touch a source, drag a knob.

Mapping

01 **Press MAP**
The button lights pink, the source chips pulse, and the sky says *MAP: touch a source, then drag a knob*.

02 **Touch a source**
Click any source chip: the touch chips in the header, the envelope and LFO chips on the right card, or the flock's under the sky. It lights, and the sky tells you to drag a knob.

03 **Drag a knob**
Drag any knob up or down to set how much the source moves it, from −100% to +100%. A ring in the source's colour shows how far it reaches. Drag more knobs to send the same source to them too, or touch another source.

04 **Press MAP again**
To finish. Knobs go back to setting their own values.



Fig. 13.1 MAP with SPEED armed. The pink ring on the flock's SPEED knob is the route a new part starts with, from Press.

IN MAP MODE, WITH A SOURCE ARMED	ON A KNOB
Drag	Set that source's amount on this knob. A route dragged back to 0 is removed.
Double-click	Flip the route's sign.
Right-click	Remove the route. With no source armed, removes every route to that knob.

Each knob shows up to four route rings. Nearly every knob on a part's cards can take routes: the flock's knobs, the FM grid, the envelopes and LFOs, the filters and the oscillators. The exceptions are Transpose, the part's Bend range, Velocity, and the shared ones: Size, Width, Master and the TOUCH card.

Sources

SOURCE	VALUE
Env 1, 2, 3	0 to 100%, each note's own.
Wingbeat, Wind, LFO 1, 2	−100% to +100% (or 0 to 100% when Unipolar). Per note unless Global.
Strike, Press, Slide, Lift	0 to 100%, each note's own.
Glide	−100% to +100%: the note's bend.
Key	The note: −100% four octaves below middle C, 0 at middle C, +100% four octaves above.
Speed … Y	The flock's eight, 0 to 100% (Chapter 6).

SOURCE	VALUE
Random	A new value per note, −100% to +100%.
Mod Wheel	CC 1 on channel 1.
Macro 1 to 4	Four host parameters, for automation or a controller.

Key, Random, Mod Wheel and the macros have no chip on the panel; choose them in the route list.

The route list

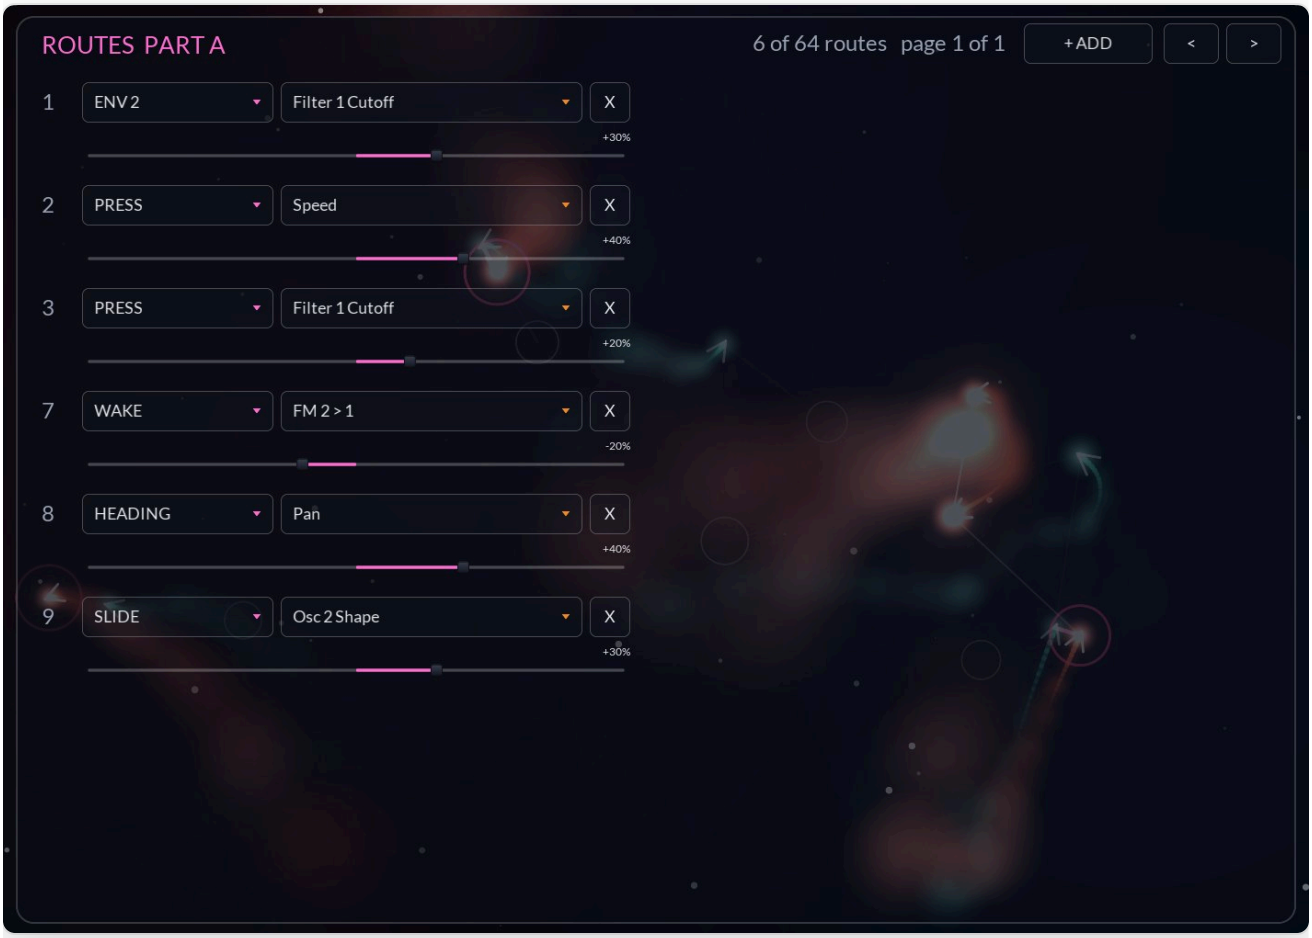


Fig. 13.2 ROUTES: every route of the part in use, with its source, destination and amount.

ROUTES under the sky opens the list of the part's routes in use, sixteen to a page. Each row has the source, the destination and the amount; change any of them here. **+ ADD** starts a new route (Env 2 onto Filter 1 Cutoff, at 0) to edit, and **X** removes one. The arrows turn the pages. Each part has 64 routes; the list shows how many are used.

The list reaches what MAP can't: sources without a chip, and destinations with no knob on the panel, such as an oscillator's Phase, an envelope's Delay and Hold, and every route's own amount.

Routes onto routes

A route's amount is itself a destination. Route Press onto the amount of a route from LFO 1 to Fine, and the vibrato deepens as you press. Routes onto amounts are worked out first, so they always take effect on the same tick.

How far a route moves a knob

A route moves a parameter within its own range: +100% from a source at full moves a knob from its lowest setting to its highest, and +10% moves it a tenth of the way. Routes add together, and the result stops at the knob's ends. Ratio moves by musical intervals, so a small route onto Ratio detunes evenly at every setting.

CHAPTER 14

Factory Presets

Forty-nine sounds in six families, from hits gone in a fraction of a second to swells that take seconds to arrive.

The preset bar works like JVerb's: the arrows step through the presets, scrolling over the bar does too, and clicking the name opens the menu by category. **SAVE** saves the current sound under a name of your own. A factory preset sets every parameter it doesn't mention to its default, so nothing from the last sound (a route, say) carries over. Within each category, the presets run from a plain patch with no routes up to ones the flock plays.

8 PRESETS

Hits

Gone in a fraction of a second.

Wood Block	A sine with a ×2.76 modulator, 70 ms.
Glass Tick	A sine with a ×7 modulator.
Marimba	×4 and ×10 partials; Env 3 and Strike bring in the ×10.
Steel Drum	×3 and ×2 modulators, slightly detuned, opened by Env 3 and Strike.
Log Drum	Self-feedback and a pitch drop that goes further the harder you strike.
Fireflies	Half Sine blips; a fast, scattered flock with short ink, spread wide.
Metal Rain	Inharmonic ×3.73 and ×7.11, scattered; each note detuned at random.
Hunter Clicks	Layer: A flees, B hunts an octave up with Bite and Neighbour FM.

8 PRESETS

Plucks

Struck, ringing out over a second or two.

Sine Pluck	One sine, no routes.
Nylon	Saw through a key-tracked low pass, Env 2 on the cutoff.
Harp	1:1 FM with a long ring.
Koto	×3 modulator with feedback.
Synth Pluck	Saw and detuned pulse through a resonant filter; Slide on resonance.
Bell Pluck	×3.5 and ×7; Press deepens the upper FM.
Starling Bells	Neighbour FM, Tune Pull and a cohesive flock; Crowd deepens the FM.
Dripping Ink	Long, wide ink; Wake, Speed and Heading play the filter and FM.

8 PRESETS

Keys

Played like a keyboard: organs held, pianos and mallets dying away.

Sine Organ	Three sine drawbars, no routes.
Tonewheel	The organ with feedback grit and vibrato.
Celesta	A sine with a ×7 modulator and a long decay.
Clav	Narrow pulse through a resonant filter.
Vibes	×4 FM with tremolo.
Tine Piano	A DX-style electric piano: a 1:1 pair and a ×14 tine.
Suitcase Pressure	The piano with Press on the bark and Slide on the tremolo's pan.
Mallet Flock	Layer: vibes and an upper shoal with Neighbour FM and Tune Pull.

8 PRESETS

Bass and Leads

Held, speaking at once.

Sine Bass	A sine an octave down with a little feedback.
FM Bass	1:1 FM with feedback on the modulator.
Saw Lead	Two detuned saws, delayed vibrato.
Reed	Pulse with a slow attack; Press opens the filter.
East Coast Brass	Feedback-driven 1:1 FM with a slow swell of brightness.
Pressure Lead	Press opens the FM and the vibrato; Slide adds grit.
Shark Bass	Split at C3: below, a hunting saw-and-pulse bass with Bite; Speed opens its filter.
Predator and Prey	Layer: A flees, B hunts an octave down; every catch opens A's filter.

9 PRESETS

Pads

Rising in under a second, held.

Sine Pad	Two detuned sines panned apart, no routes.
Warm Analog	Saw pair through a low pass, a slow Env 2.
Glass Pad	×3 and ×0.5, LFO 1 on the FM.
Wind Choir	Saws and noise through a band pass; a strong wind on the cutoff.
String Machine	Three saws with slow detune LFOs; Press opens the filter.
Murmuration Pad	Saws, an aligned flock spread wide; Heading pans each voice.
Pressure Front	Press opens 2:1 FM, with Neighbour FM.

Ink Ribbons	Long ink and a loose lure; Wake plays cutoff and FM.
Murmuration Riot	Layer: a fast FM shoal opened by Press, Speed, Crowd and Wake, and driven ladder hunters that bite.

8 PRESETS

Swells

Seconds to arrive.

Slow Sine	Two sines over three seconds, no routes.
Bowed Glass	2:1 FM that blooms with a slow Env 3.
Tidal Strings	Saws, a slow Env 2 on the cutoff, LFO 2 on the pan.
Dawn Chorus	Vibrato that arrives once the note has bloomed.
Deep Current	A sub through a resonant, tube-driven ladder; Slide drives it harder.
Aurora	A slow FM shoal with Tune Pull; Heading on the FM, Y on the cutoff.
Storm Front	Saw and noise through a comb in a strong wind; Wind, Wake and Speed on the filters.
Murmuration Storm	Layer: a saw shoal with Neighbour FM and Tune Pull, and FM hunters.

> INIT
> *Init* is every parameter at its default: a saw through a low pass on part A, with the three starting routes (Env 2 and Press on the cutoff, Press on the flock's speed).

Your presets

User presets are small text files ending `.jspreset`, saved in:

macOS	`~/Library/Application Support/JSynth/Presets`
Windows	`%APPDATA%\JSynth\Presets`
Linux	`~/.config/JSynth/Presets (or $XDG_CONFIG_HOME/JSynth/Presets)`

Copy them between machines freely. A preset from a newer JSynth loads in an older one with any parameters it doesn't know skipped.

CHAPTER 15

Sound Design Recipes

Starting points that show off what the flock can do. Each starts from Init unless it says otherwise.

DX electric piano

Two sines, a 1:1 pair for the body and a ×14 for the bark.

```
Osc 1 Sine · Osc 2 Sine Ratio ×1 Level 0
Osc 3 Sine Ratio ×14 Level 0
Env 1 A 1 ms D 5 s S 0 R 400 ms
Env 2 → FM 2 > 1 +30% · Env 3 (D 60 ms) → FM 3 > 1 +35%
Strike → FM 2 > 1 +20% · Filter 1 open
```

Or load *Tine Piano*.

A flock that rings

Neighbours modulate each other, so a held chord shimmers as it gathers and breaks.

```
Osc 2 Sine Ratio ×3.5 · FM 2 > 1 40%
NEIGHBOUR 70% · TUNE PULL 40% · COHESION 70%
Crowd → FM 2 > 1 +30%
X PAN 60%
```

Or load *Starling Bells*.

Predator and prey

Two species; every catch rings and opens the prey's filter.

```
Play mode LAYER
A: Flee · Caught → F1 Cutoff +60%
B: Hunt · Speed 70% · Pulse · BITE 90% · Transp -12
```

Or load *Predator and Prey*.

Ink-stirred pad

The sound follows where the flock has been.

```
Osc 1 Alt Sine · FB 1 25%
TAIL 100% · SPREAD 90% · WAKE 80% · LURE 35%
Wake → F1 Cutoff +50% · Wake → FM 2 > 1 +40%
```

Or load *Ink Ribbons*.

Wind through a choir

One gust for the whole sky, heard in the filter.

```
Saws, Noise 35% · F1 Band Pass, Res 40%
Wind Push 90% · Wind Rate 0.1 Hz
Wind → F1 Cutoff +40% · Slide → F1 Res +30%
```

Or load *Wind Choir*.

Pressure vibrato

Vibrato only where you press, arriving after the note settles.

```
LFO 1 5.5 Hz, DELAY 350 ms
Route LFO 1 → Fine at 0
Press → that route's amount +6%
```

As in *Pressure Lead*.

A stereo murmuration

The flock spreads a pad across the speakers as it turns.

```
Two saws, detuned · ALIGN 80% · SPEED 25%
X PAN 80% · DRIFT 15%
Heading → Pan +60%
```

Or load *Murmuration Pad*.

Struck drum

A pitch drop that goes further the harder you hit.

```
Osc 1 Sine · FB 1 15% · Env 1 D 300 ms S 0
Env 3 (D 45 ms) → Osc 1 Ratio +10%
Strike → that route's amount +10%
```

Or load *Log Drum*.

APPENDIX A

Parameter Reference

Every parameter JSynth exposes to the host. Part parameters exist once for each part, named "A ..." and "B ..." in the host.

GLOBAL

PARAMETER	RANGE	DEFAULT
Play Mode	Single, Layer, Split, MPE Zones, Velocity, Expression	Single
Split Key	C-1 – G9	C4
Velocity Split	1 – 127	80
Crossfade Source	Slide, Press	Slide
Quality	1x, 2x, 4x	2x
Master Level	−60 – +6 dB	−6.0 dB
Output Width	0 – 200%	100%
Manager Bend Range	1 – 96 st	2 st
Glide Rounding	0 – 100%	0%
Rounding Time	0 ms – 20 s	150 ms
Macro 1 – 4	0 – 100%	0%
Strike ... Lift Curve	−1 – +1	+0.00
Strike ... Lift Smoothing	0 ms – 20 s	8.0 ms (Glide 2.0 ms)
Size	0 – 100%	50%
Walls	Soft, Wrap, Open	Soft

VOICE (PER PART)

PARAMETER	RANGE	DEFAULT	
Level	−60 – +6 dB	0.0 dB	ROUTE
Pan	−100% – +100%	+0%	ROUTE
X Pan	0 – 100%	0%	ROUTE
Transpose	−48 – +48 st	+0 st (B: −12 st)	
Fine	−100 – +100 ct	+0 ct	ROUTE
Key Low, Key High	C-1 – G9	C-1, G9	
Polyphony	1 – 16	8	

PARAMETER	RANGE	DEFAULT	
Voice Mode	Poly, Mono, Legato	Poly	
Glide	0 ms – 20 s	0.0 ms	ROUTE
Glide Mode	Always, Legato	Always	
MPE Bend Range	1 – 96 st	48 st	
Drift	0 – 100%	0%	ROUTE
Velocity	0 – 100%	100%	
Output	Main, Own	Main	

OSCILLATORS (PER PART: OSC 1, 2, 3)

PARAMETER	RANGE	DEFAULT	
Wave	Sine, Triangle, Saw, Square, Pulse, Half Sine, Abs Sine, Quarter, Alt Sine, Alt Half, Camel, Alt Camel, White, Pink	Saw (Osc 2, 3: Sine)	
Shape	0 – 100%	50%	ROUTE
Pitch Mode	Note, Ratio, Fixed	Note (Osc 2, 3: Ratio)	
Coarse	−48 – +48 st	+0 st	ROUTE
Fine	−100 – +100 ct	+0 ct	ROUTE
Ratio	×0.25 – ×16	×1 (Osc 3: ×3)	ROUTE
Fixed	1 Hz – 10 kHz	440 Hz	ROUTE
Sync	Off, On	Off	
Retrigger	Off, On	On	
Phase	0 – 360°	0°	ROUTE
Bend	0 – 100%	100%	
Key Track	Off, On	On	
Level (mixer)	0 – 100%	100% (Osc 2, 3: 0%)	ROUTE
Pan (mixer)	−100% – +100%	+0%	ROUTE

FM, NOISE AND DRIVE (PER PART)

PARAMETER	RANGE	DEFAULT	
FM Feedback 1 – 3, FM 1 > 2 … 3 > 2	0 – 100%	0%	ROUTE
FM Type	Phase, Exponential	Phase	
Noise Level	0 – 100%	0%	ROUTE
Noise Color	−100% – +100%	+0%	ROUTE
Drive Type	Soft, Hard, Tube	Soft	

PARAMETER	RANGE	DEFAULT	
Drive	0 – 100%	0%	ROUTE

FILTERS (PER PART: FILTER 1, 2)

PARAMETER	RANGE	DEFAULT	
Filter Routing	Serial, Parallel, Split	Serial	
Filter Balance	-100% – +100%	+0%	ROUTE
Type	Low Pass, High Pass, Band Pass, Notch, Peak, Ladder, Comb +, Comb –	Low Pass (F2: Ladder)	
Slope	12, 24, 36, 48 dB	24 dB	
Cutoff	20 Hz – 20 kHz	1.26 kHz (F2: 20.00 kHz)	ROUTE
Resonance	0 – 100%	20% (F2: 0%)	ROUTE
Drive	0 – 100%	0%	ROUTE
Key Track	0 – 100%	0%	ROUTE

ENVELOPES (PER PART: ENV 1, 2, 3)

PARAMETER	RANGE	DEFAULT	
Delay	0 ms – 20 s	0.0 ms	ROUTE
Attack	0 ms – 20 s	5.0 ms	ROUTE
Hold	0 ms – 20 s	0.0 ms	ROUTE
Decay	0 ms – 20 s	400 ms (Env 2, 3: 300 ms)	ROUTE
Sustain	0 – 100%	70% (Env 2, 3: 30%)	ROUTE
Release	0 ms – 20 s	300 ms	ROUTE
Attack, Decay, Release Curve	-1 – +1	+0.00	
Loop	Off, Held, Free	Off	
Velocity	0 – 100%	0%	

LFOS (PER PART: WINGBEAT, WIND, LFO 1, LFO 2)

PARAMETER	RANGE	DEFAULT	
Shape	Sine, Triangle, Saw, Square, S&H, Smooth	Sine (Wind: Smooth, LFO 2: Triangle)	
Rate	0.02 – 50 Hz	5.00, 0.20, 4.00, 0.50 Hz	ROUTE
Sync	Off, On	Off	
Division	1/32 – 4/1	1/4	
Trigger	Retrigger, Free, Global	Retrigger (Wind: Global)	

PARAMETER	RANGE	DEFAULT	
Phase	0 – 360°	0°	ROUTE
Delay	0 ms – 20 s	0.0 ms	ROUTE
Polarity	Bipolar, Unipolar	Bipolar	
Push (Wingbeat, Wind)	0 – 100%	20%, 30%	ROUTE

FLOCK (PER PART)

PARAMETER	RANGE	DEFAULT	
Behaviour	Shoal, Scatter, Hunt, Flee	Shoal (B: Hunt)	
Cohesion	0 – 100%	50%	ROUTE
Alignment	0 – 100%	50%	ROUTE
Separation	0 – 100%	40%	ROUTE
Speed	0 – 100%	40% (B: 55%)	ROUTE
Wander	0 – 100%	20%	ROUTE
Lure	0 – 100%	60%	ROUTE
Range	0 – 100%	35%	ROUTE
Neighbour FM	0 – 100%	0%	ROUTE
Tune Pull	0 – 100%	0%	ROUTE
Bite	0 – 100%	0%	ROUTE
Tail Length	0 – 100%	50%	ROUTE
Tail Spread	0 – 100%	50%	ROUTE
Wake	0 – 100%	20%	ROUTE
Lure X, Lure Y	Pitch, Strike, Press, Slide, Lift, Random, Centre	Pitch, Slide	

ROUTES (PER PART: ROUTE 1 – 64)

PARAMETER	RANGE	DEFAULT	
Source	Off and 27 sources	Off (1–3: Env 2, Press, Press)	
Destination	160 destinations	Filter 1 Cutoff (2: Speed)	
Amount	-100% – +100%	+0% (1–3: +30, +40, +20%)	ROUTE

APPENDIX B

Specifications

Format	CLAP 1.2 instrument. Features: instrument, synthesizer, stereo.
Ports	One note input (CLAP, MIDI and MIDI MPE; CLAP preferred). Three stereo outputs: Main, Part A, Part B.
Platforms	macOS universal (10.15+ Intel, 11+ Apple Silicon), Windows (64-bit), Linux (64-bit).
Latency	None.
Parts	Two, each a complete patch and a species in the flock.
Voices	Up to 16 per part (40 slots in all, so stolen notes fade out in 3 ms). Mono and Legato with a note stack.
Oscillators	3 per voice, 14 waves, double-precision phase. Saw, square and pulse band-limited by polyBLEP.
FM	3 × 3 grid including feedback; phase or exponential. Plus Neighbour FM from up to three neighbours.
Filters	2 per voice: TPT state variable (12–48 dB), notch, peak, 4-pole ZDF ladder, comb ±. Serial, parallel or split.
Modulation	3 DAHDSR envelopes with curves and loop, 4 LFOs, 5 touch dimensions, 8 flock sources, key, random, mod wheel, 4 macros. 64 routes per part.
Oversampling	1×, 2× (default) or 4×, decimated by polyphase IIR half-bands.
Control rate	Every 32 samples, ramped per sample. The flock steps at 500 Hz. Renders are identical at any buffer size.
Parameters	All automatable except the route sources, destinations and Quality. Continuous ones accept CLAP modulation; route destinations accept it per note (note id, key, channel or port).
State	Saved with the host project, including the preset name. States from older and newer builds load, with unknown parameters skipped and missing ones at their defaults.
Panel	1200 × 780 at 100%; 75%, 100%, 125%, 150% and 200%.
Threading	The audio thread never allocates, locks or waits on the panel after activation.

Troubleshooting

SYMPTOM	WHAT TO CHECK
JSynth doesn't appear in my host (macOS)	The download is probably quarantined. See the warning in Chapter 2, then rescan plug-ins.
Only part A plays	The play mode is **SINGLE**. Choose **LAYER** or another mode in the header. Check each part's Key Low and Key High too.

SYMPTOM	WHAT TO CHECK
Turning up the flock knobs changes nothing in the sound	By design: the flock only reaches the sound through routes and the three BETWEEN CREATURES knobs. Map a flock source, or raise **NEIGHBOUR**.
NEIGHBOUR makes no difference	It modulates Osc 2. Give Osc 2 some **LEVEL**, or route it into Osc 1 with **2 > 1**. Creatures also have to be near each other: raise **RANGE** or **COHESION**, and play more than one note.
BITE does nothing	Bite is set on the hunting part, and needs the hunter's Osc 1 and a prey of the other species: play mode LAYER (or any mode that plays both), one part on **Hunt**.
Notes are out of tune	Check **TUNE PULL** (just intervals are up to 30 cents from equal temperament), **DRIFT**, and a route onto Fine or Ratio. An MPE controller sends bend per note at the part's **BEND** range, which must match the controller's (48 semitones is the MPE standard).
Pitch bend is far too wide on a plain keyboard	A plain keyboard is on channel 1, which bends by **MGR BEND** (2 semitones). If its notes come on other channels, they are taken as MPE member channels and bend by **BEND**.
Notes cut off when I play a lot	The part is at its polyphony and the oldest notes are being taken. Raise the voices count on the part card (up to 16).
My user presets are missing	Check the preset folder for your OS (Chapter 14). Files must end in `.jspreset`.

Glossary

Creature A note, as it flies in the sky. Each sounding voice has one.

Species A part. Each part's creatures flock with their own kind.

Lure Where a held note pulls its creature.

Boids The classic flocking model (Craig Reynolds, 1986): cohesion, alignment and separation.

MPE MIDI Polyphonic Expression: each note on its own MIDI channel, so each can bend and be pressed on its own.

FM Frequency modulation: one oscillator wobbling another's phase or pitch at audio rate, for bright, bell-like and metallic tones.

Ratio An oscillator's frequency as a multiple of the note's.

Just interval An interval from a simple whole-number ratio, such as 3:2 for a fifth. They beat less than equal-tempered ones.

Route A source, a destination and an amount.

Ring modulation Multiplying two signals, for clangorous sum-and-difference tones.



JSynth

THE FLOCKING SYNTH · V0.8.0

github.com/jeffmhopkins/Jclap