
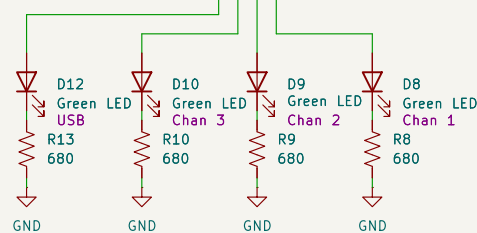


The diagram shows a 10MHz VCO circuit. It starts with an SMA connector (J1) with pins 1 and 2. Pin 1 is connected to a diode (D1, PESD5V0H1BSF) and a capacitor (C5, 1nF, 50V NP0). The other end of C5 is connected to a resistor (R5, 10k) and a resistor (R11, 10k). The other end of R5 is connected to a +3V3 supply and a capacitor (C4, 2.2uF, 10V). The other end of R11 is connected to the 10MHz VCO component. The VCO component is also connected to a 10MHz VCO component. The circuit is grounded at multiple points, including the SMA connector, the diode, the capacitors, the resistors, and the VCO component. Test points TP1 and TP2 are marked with red X's.

[illegible]


Id: 1/5

Protected Input

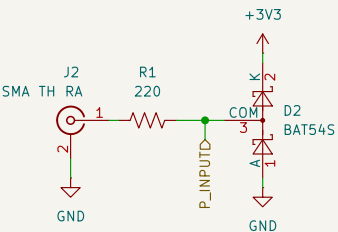


Sheet: /Input 1/ File: input.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.3	Id: 2/5	

Protected Input

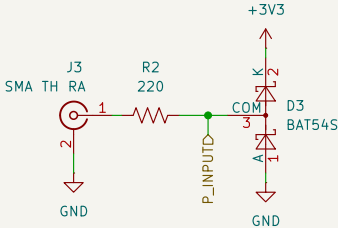


Sheet: /Input 2/ File: input.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.3	Id: 3/5	

Protected Input

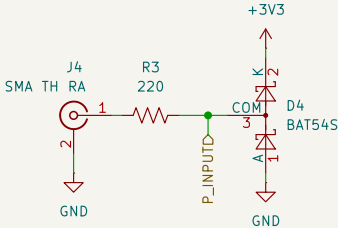

Sheet: /Input 3/ File: input.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.3	Id: 4/5	

Protected Input

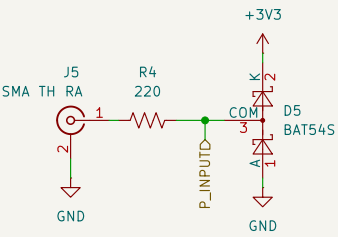

Sheet: /Input 4/ File: input.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.3	Id: 5/5	