


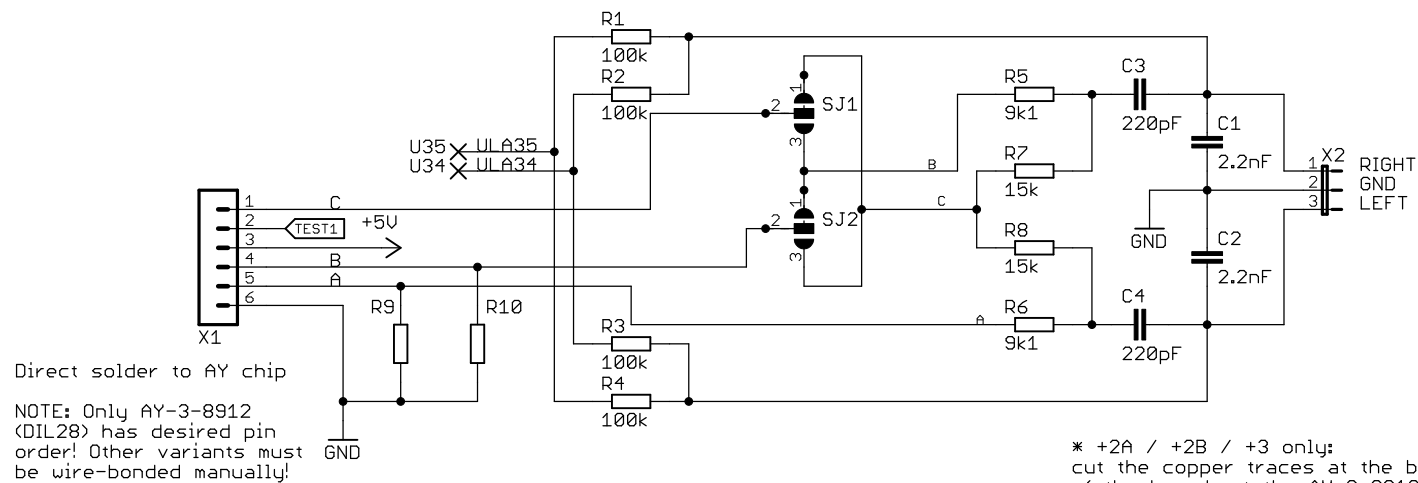

MODEL	R9, R10
+2A/+3	2K2
+2B	820R

	*ACB	-ABC
SJ1	1-2	2-3
ch. C	CENTER	RIGHT
SJ2	1-2	2-3
ch. B	RIGHT	CENTER

* +2A / +2B / +3 only:
cut the copper traces at the bottom of the board, at the AY-3-8912 location to separate A, B, C channels.
(Or possibly bend IC pins and pull out of socket)

* ULA pins (U34, U35; order does not matter)
- For +2B:
solder one wire on C202 (lower pin) and 2nd one on C204 (right pin)
- For +2A / +3 mainboard:
left leg of R63 and right leg of R64