

Dispensing agar into multiwell plates

Ida Barlow¹

¹Imperial College London





ABSTRACT


Protocol for pouring agar into 96 well plates using Integra VIAFILL dispenser. Agar should be prepared in advance, and kept in 60°C waterbath until ready to dispense, and whilst dispensing. The X, Y, Z positions for dispensing can be adjusted according to the multiwell plates being used.

MATERIALS

Whatman UNIPLATE 96-Well Clear Microplates WHAT7701-1651 VWR international Ltd

Configure Integra VIAFILL

- 1 Prepare a 250ml bottle of hot milliQ water in the microwave and keep in the waterbath along with the agar. The water is important to have on hand in case of tubing blockages.
- 2 Insert large cassette into the machine
- 3 Configure X, Y, and Z settings for the multiwell plate by clicking on tool symbol -> stage alignment.

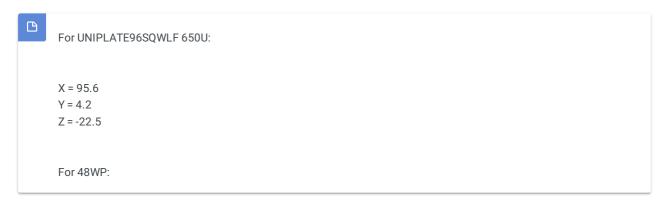

- 3.1 Put the plate into the stage and then press 'Move' so that the plate moves so that it is under the dispensing cassette.
- 3.2 Use the up and down arrows to move the pipette tip so that they hover just over the plate and make note of the height (this will be entered into the dispensing program at a later step). Press 'Fast/Slow' button to switch between fast and slow movements.
- 3.3 Use the X, Y arrows to move the plate so that the pipette tips are centered in the middle of column 5.

3.4	Save all settings.	
4	Exit settings by pressing the back button	
Dispensing Agar		
5	Press on the program you wish to use (see later for configuring your own program)	
6	Make sure that the correct cassette is listed and change if necessary	
7	Select the volume you wish to dispense	
	For 96WP: 150 μL	
8	Select 'set height' and set the appropriate height for tip height (usually all the same)	
9	Place the end of the tubing from the casettee into the agar that is being kept warm in the water bath	
10	Press 'Prime' to prime the tubing and allow to finish so that agar flows from the pipette tips.	
	IMPORTANT: Once the agar is in the tubing it is important to act quickly to avoid agar solidifying and causing blockages. If you are particularly concerned about agar cooling in the tubing, wrap the tubing in aluminium foil to keep hot.	
	step case	
	Unblocking the tubing	
	If the tubing does block, clear the blockage by 'reverse priming' as much of the agar as possible.	
	Then place tube ends in the hot water and prime continuously with hot water until the water runs all the way through.	
	If you are having trouble getting the water through, squeeze and massage parts of the tubing where you can see blockages to force the agar along and allow the water to pass.	
	Once all cleared, 'reverse prime', and reprime with the agar	
11	Place a clean plate in the stage	

Press run and then plate should fill with agar

12

13	Repeat steps 11-12 until all the plates have been filled.	
	Little drops of agar can solidify on the tip ends. It is often good to remove these drops using a pipette tip every few runs so that blockages do not occur.	
Cleaning the cassette		
14	'Reverse prime' all the agar	
15	Place the tubing ends into the hot water.	
16	Prime so that the water runs through and clears all the agar	
17	Reverse prime to remove the water	
18	Release tension from the tubing and remove cassette	
19	Double wrap the cassette in aluminium foil for autoclaving	
(cc) BY	This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits ricted use, distribution, and reproduction in any medium, provided the original author and source are credited	