



2019



Geoff Baldwin¹, Traci Haddock-Angelli², Jacob Beal³, Ari Dwijayanti¹, Marko Storch¹, Natalie Farny³, Richard Tennant³, Paul Rutten³

¹Imperial College London, ²iGEM, ³iGEM Measurement Committee







ABSTRACT

Plate readers report fluorescence values in arbitrary units that vary widely from instrument to instrument. Therefore absolute fluorescence values cannot be directly compared from one instrument to another. In order to compare fluorescence output of test devices between teams, it is necessary for each team to create a standard fluorescence curve. Although distribution of a known concentration of GFP protein would be an ideal way to standardize the amount of GFP fluorescence in our E. coli cells, the stability of the protein and the high cost of its purification are problematic. We therefore use the small molecule fluorescein, which has similar excitation and emission properties to GFP, but is cost-effective and easy to prepare. (The version of GFP used in the devices, GFP mut3b, has an excitation maximum at 501 nm and an emission maximum at 511 nm; fluorescein has an excitation maximum at 494 nm and an emission maximum at 525nm).

You will prepare a dilution series of fluorescein in four replicates and measure the fluorescence in a 96 well plate in your plate reader. By measuring these in your plate reader, you will generate a standard curve of fluorescence for fluorescein concentration. You will be able to use this to convert your cell based readings to an equivalent fluorescein concentration. Before beginning this protocol, ensure that you are familiar with the GFP settings and measurement modes of your instrument. You will need to know what filters your instrument has for measuring GFP, including information about the bandpass width (530 nm / 30 nm bandpass, 25-30 nm width is recommended), excitation (485 nm is recommended) and emission (520-530 nm is recommended) of this filter.

Note: The iGEM Abs600 (OD) calibration protocol with microspheres calibration method is a pre-requisite for carrying out this protocol. You will need data from that calibration to analyse the results of this protocol.

EXTERNALLINK

https://2019.igem.org/Measurement



GUIDELINES

For a full set of calibrations, you should run two protocols: this fluorescence calibration curve with fluorescein, and the Abs600 (OD) calibration with microspheres.

Before beginning these protocols, please ensure that you are familiar with the measurement modes and settings of your instrument. For all of these calibration measurements, you must use the same plates and volumes that you will use in your cell-based assays. You must also use the same settings (e.g., filters or excitation and emission wavelengths) that you will use in your cell-based assays. If you do not use the same plates, volumes, and settings, the calibration will not be valid.

Make sure to record all information about your instrument to document your experiment. If your instrument has variable temperature settings, the instrument temperature should be set to room temperature (approximately 20-25 C) for all measurements.

MATERIALS TEXT

PBS

Fluorescein is provided in the iGEM Measurement Kit. The 96-well plate should preferably be black with a clear flat bottom.


BEFORE STARTING

Read through this entire protocol carefully before you start your experiment and prepare any materials you may need.


Note: The iGEM Abs600 (OD) calibration protocol with microspheres calibration method is a pre-requisite for carrying out this protocol. You will need data from that calibration to analyse the results of this protocol.


Prepare the fluorescein stock solution

1 Spin down fluorescein kit tube to make sure pellet is at the bottom of tube



2 Prepare 10x fluorescein stock solution (100 μ M) by resuspending fluorescein in 1mL of 1X PBS

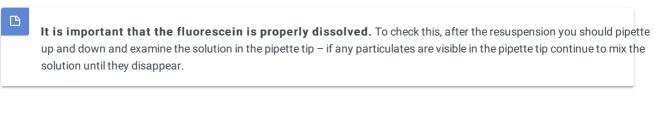




3 Dilute the 10X fluorescein stock solution with 1X PBS to make a 1X fluorescein solution with concentration 10 μ M: 100 μ L of 10X fluorescein stock into 900 μ L 1X PBS

Prepare the serial dilutions of fluorescein

4 Accurate pipetting is essential. Serial dilutions will be performed across columns 1-11. **Column 12 must contain PBS buffer only.**Initially you will setup the plate with the fluorescein stock in column 1 and an equal volume of 1X PBS in columns 2 to 12.

You will perform a serial dilution by consecutively transferring 100 µl from column to column with good mixing.

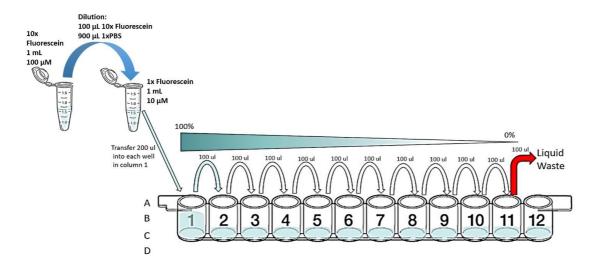

- 5 Add 100 μl of 1X PBS into wells A2, B2, C2, D2....A12, B12, C12, D12
- 6 Add 200 μl of fluorescein 1X stock solution into A1, B1, C1, D1
- 7 Transfer 100 μl of fluorescein stock solution from A1 into A2
- 8 Mix A2 by pipetting up and down 3x and transfer 100 μl into A3
- 9 Mix A3 by pipetting up and down 3x and transfer 100 μl into A4
- 10 Mix A4 by pipetting up and down 3x and transfer 100 μ l into A5
- 11 Mix A5 by pipetting up and down 3x and transfer $100 \mu l$ into A6
- 12 Mix A6 by pipetting up and down 3x and transfer 100 μ l into A7
- 13 Mix A7 by pipetting up and down 3x and transfer 100 μl into A8


Mix A8 by pipetting up and down 3x and transfer 100 μl into A9

14		
15	Mix A9 by pipetting up and down 3x and transfer 100 μl into A10	
16	Mix A10 by pipetting up and down 3x and transfer 100 μ l into A11	
17	Mix A11 by pipetting up and down 3x and transfer 100 μl into liquid waste	
	Take care not to continue serial dilution into column 12	
18	Repeat dilution series for rows B, C, D	
Mea	sure fluorescence	
19	Measure fluorescence of all samples in instrument. Ensure that any automatic gain setting is off (if your instrument has one). If you will be using your data in conjuction with measurements from the Abs600 OD protocol, make sure you use the same instrument settings for both protocols.	
9.1	Calibration Protocol - Particle Standard Curve with Microspheres by Paul Rutten, The University of Oxford	Obtain the tube labeled "Silica Beads" from the Measurement Kit and vortex vigorously for 30 seconds.
	300µl Silica beads	
	Microspheres should NOT be stored at 0°C or below, as freezing affects the properties of the microspheres. If y believe your microspheres may have been frozen, please contact the iGEM Measurement Committee for a replacement (measurement@igem.org).	
9.2	Immediately pipet 100 μ L microspheres into a 1.5 mL eppendorf tube	
9.3	Add 900 μL of ddH $_2$ O to the microspheres	
	ddH20	

19.5 Accurate pipetting is essential. Serial dilutions will be performed across columns 1-11. Column 12 must contain ddH_2O only.

Initially you will setup the plate with the microsphere stock solution in column 1 and an equal volume of 1x ddH₂O in columns 2 to 12.

You will perform a serial dilution by consecutively transferring 100 µl from column to column with good mixing.

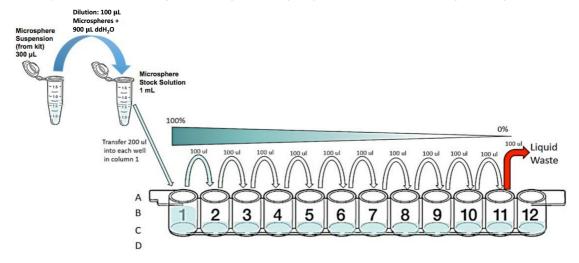

- 19.6 Add 100 μ l of ddH $_2$ O into wells A2, B2, C2, D2....A12, B12, C12, D12
- 19.7 Vortex the tube containing the stock solution of microspheres vigorously for 10 seconds
- 19.8 Immediately add 200 μl of microspheres stock solution into A1
- 19.9 Transfer 100 μl of microsphere stock solution from A1 into A2
- 9.10 Mix A2 by pipetting up and down 3x and transfer 100 μl into A3
- **9.11** Mix A3 by pipetting up and down 3x and transfer 100 μl into A4
- 9.12 Mix A4 by pipetting up and down 3x and transfer 100 μl into A5
- 9.13 Mix A5 by pipetting up and down 3x and transfer 100 μl into A6
- 9.14 Mix A6 by pipetting up and down 3x and transfer 100 μl into A7

S protocols.io 5 08/04/2019

Mix A7 by pipetting up and down 3x and transfer 100 μl into A8 9.15 Mix A8 by pipetting up and down 3x and transfer 100 μl into A9 9.16 Mix A9 by pipetting up and down 3x and transfer 100 μl into A10 9.17 Mix A10 by pipetting up and down 3x and transfer 100 μ l into A11 9.18 Mix A11 by pipetting up and down 3x and transfer 100 μ l into liquid waste 9.19 Take care not to continue serial dilution into column 12 Repeat dilution series for rows B, C, D .20 **IMPORTANT!** 9.21 Re-Mix (pipette up and down) each row of your plate immediately before putting in the plate reader! (This is important because the beads begin to settle to the bottom of the wells within about 10 minutes, which will affect the measurements.) Take care to mix gently and avoid creating bubbles on the surface of the liquid 9.22 Measure OD₆₀₀ of all samples in instrument 9.23 Record the data in your notebook 9.24 Import data into this Excel sheet: ■ iGEM Data Analysis Template - Particle Standard Curve - v1.xlsx 9.25 You have now completed this calibration protocol Record the data in your notebook. Also record the gain setting that you used in your instrument, if available. Please note your standard curve 20 should still work well even if a few of your measurements are saturing the instrument

Import data into this Excel sheet provided (fluorescein standard curve tab):

21 iGEM Data Analysis Template - Fluorescence Standard Curve - v1.xlsx

Congratulations!

22 You have now completed this calibration protocol

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited