AUTHORISED REPRESENTATIVE / DISTRIBUTED BY:
ROHEE MEDIC SDN BHD
Prioritize Your Health

REV.01

COVID-19/hMPV/RSV/ADV/Flu A&B/ hPIV1+3/hPIV2/MP/RhV

Antigen Combo Rapid Test Kit

10-in-1 *combination test kit, detect COVID-9/hMPV/RSV/ ADV/Flu A&B/hPIV1+3/hPIV2/ MP/RhV all at once.*

METHODOLOGY
Using the principle of double antibody sandwich method.

OPERATION
Simple operation, easy to interpret, sampling and testing can be done anytime.

DETECTION
The detection is fast, the result can be interpreted in 15 minutes.

ACCURACY
High sensitivity and specificity.

rohee.medic@gmail.com +6016-252 3011 MDA registration no: IVDC3608225-210153

AUTHORISED REPRESENTATIVE / DISTRIBUTED BY:
ROHEE MEDIC SDN BHD
Prioritize Your Health

RESULT INTERPRETATION

COVID-19/hMPV

C, COV, hMPV	C, COV, hMPV	C, COV, hMPV	C, COV, hMPV
COVID-19 Positive	hMPV Positive	Negative	Invalid

RSV/ADV

C, RSV, ADV	C, RSV, ADV	C, RSV, ADV	C, RSV, ADV
RSV Positive	ADV Positive	Negative	Invalid

Flu A&B

C, Flu B, Flu A	C, Flu B, Flu A	C, Flu B, Flu A	C, Flu B, Flu A
Flu B Positive	Flu A Positive	Negative	Invalid

hPIV1+3/hPIV2

C, hPIV1+3, hPIV2	C, hPIV1+3, hPIV2	C, hPIV1+3, hPIV2	C, hPIV1+3, hPIV2
hPIV1+3 Positive	hPIV2 Positive	Negative	Invalid

MP/RhV

C, MP, RhV	C, MP, RhV	C, MP, RhV	C, MP, RhV
MP Positive	RhV Positive	Negative	Invalid

OPERATION STEPS

1

Wash your hands

2

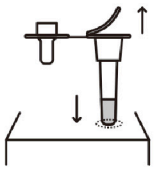

Tear the aluminium foil on the extraction buffer tube. Place extraction tube into box tube stand.

3

Open the swab package and take out the swab. Note: Do not touch the swab tip with finger.

4

Tilt your head back slighty. Insert the swab about 1.5 to 2.5cm into one nostril. Gently rotate the swab at least 5 times against the nasal wall.

5

Insert the same swab about 1.5 to 2.5cm into the second nostril. Again, gently rotate the swab at least 5 times against the nasal wall.

6

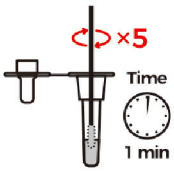

Place the swab in the extraction tube and rotate the swab against the walls of the tube 5 times. Allow the swab to stand in the extraction buffer tube for 1 minute.

7

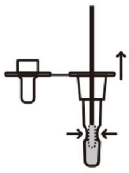

Remove the swab while squeezing the sides of the tube to extract the liquid from the swab.

8

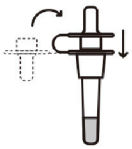

Press the nozzle cap tightly onto the tube.

9

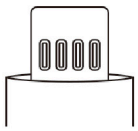

Open the foil pouch and take out the test device.

10

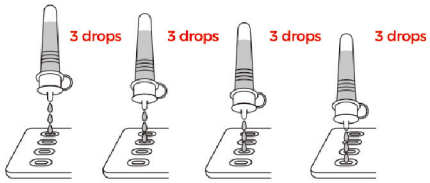

3 drops must be added to the four specimen wells.

11



Read the result at 15 minutes. Do not interpret the result after 20 minutes.

rohee.medic@gmail.com
+6016-252 3011
MDA registration no: IVDC3608225-210153