



1200 Southeast Ave
Tallmadge Ohio 44278

Summit Brake Lock Part # SUM-760000

Congratulations on the purchase of your Summit Brake Lock. Your system includes a stainless steel nickel-plated corrosion resistant valve assembly that guarantees superior reliability and extended durability.

Important Information:

Carefully read these instructions before installing your Summit Brake Lock. If you are not qualified or experienced at performing this type of installation, it is highly recommended that you have the Summit Brake Lock installed by a qualified automotive mechanic. These instructions contain warnings that must be observed otherwise your vehicle could be rendered unsafe and as a result possible serious injury to you and your car could occur.

The Summit Brake Lock solenoid valve is designed to be installed in the front brake system for racing and can also be used in the rear brake system for momentary (maximum of 60 seconds) hill holding. In these conditions, the solenoid valve should not interfere with normal brake operation.

All fittings and brake lines may be purchased from your local parts store, and only SAE approved seamless steel brake lines with double flared ends should be used. **Do not use copper tubing.** Brake lines are available in a variety of lengths and come pre-assembled with tube nuts. Use only brake lines that are of the correct size and length. **Do not cut or alter tubing.** We strongly recommend the Summit Line Lock Installation Kit, SUM-G3904. Use the precut template gauge (supplied in kit) to determine the proper size of fittings and brake line required for installation.

Use Teflon tape on threaded fittings. **If you use Teflon thread sealer, take extra care not to get any inside the lines otherwise contamination can and will occur.**

To be street legal, the rear brake lights must operate when the brake system is under pressure. Therefore, a pressure-operated switch must be installed if the Summit Brake Lock defeats the purpose/function of the stock rear brake light switch. See section #7 of **Electrical Installation** before proceeding. (Not required for off-road use and NHRA drag racing venues.)

Safety Precautions:

The Summit Brake Lock is designed primarily for high performance racecars to momentarily (maximum of 60 seconds) keep the front brakes engaged while staging for a drag race. It will not safely function as a long-term brake holding device. It should only be used on domestic cars and light duty (no more than 3/4 ton rated) trucks using a



Adjustable Fuel Line for Dual Feed Holleys


SUM-G3120

Pat. No. 325,386

Your new Summit fuel line adjusts in length to fit all Holley dual feeds; from a single 750 Holley dual feed to an 850 with a Weber power plate to a Tunnel Ram with 2 in-line single inlet carbs. Its gauge, placed between your in-line fuel filter and your carburetor, allows you to tell when your fuel filter is clogged and lets you adjust your fuel pressure regulators for stumble-free delivery to the carburetor. The gauge fits beneath the lowest profile air cleaner and the fuel line can be bent up or down for easier reading. The gauge can be installed in either of two places on the line and a screw plug is supplied to close off the unused installation point.

For clean installation and the best possible fuel delivery from your Summit fuel line, follow these installation tips:

1. This is a universal fuel line. On the shortest applications, such as Tunnel Rams, about 1/2" of line extends into the filter housing and could hit the filter. It should be cut off so that it doesn't affect fuel delivery.
2. It's recommended that you use teflon tape on the threaded areas of all fittings for a better seal on the threads. This includes the fuel pressure gauge. (Don't let the teflon tape extend past the fuel fitting threads. It may cut and enter the fuel system.)
3. This fuel system is for gasoline vehicles only and should not be used with nitromethane or alcohol.
4. The screw-in gauge uses an NPT fitting. Once it's installed, it can't be loosened without leaking. Carefully rotate the gauge until it's snug and in position for easy reading. Start the car and check for leaks. If it leaks, further tighten the gauge. Teflon tape is highly recommended on the gauge threads for proper sealing.

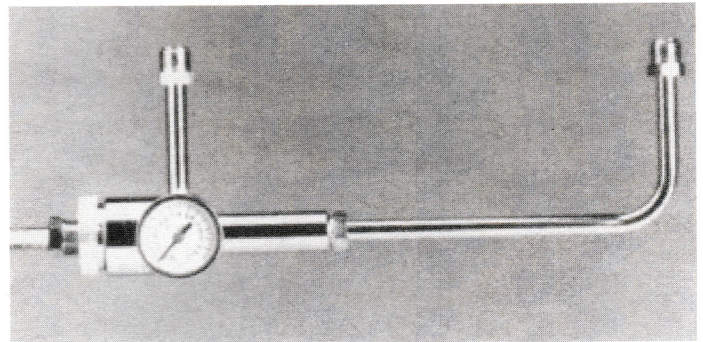

5. To prevent damage, use the square part of the brass fitting to thread in the gauge. Do not use the housing as a handle.
6. To avoid marring the chrome, use a tubing wrench to tighten all fittings.
7. A replacement O-ring and filter kit part number SUM-G3121 is available from Summit Racing Equipment to rebuild the soft parts and maintain your new fuel line. Fuel pressure gauge part number SUM-3122 is also available.

NOTE: Rapid gauge fluctuation may indicate that the fuel pump (mechanical or electrical) is defective. If this occurs, it may be necessary to replace the fuel pump.

Questions? Call our Tech Line 1-330-630-0240