
QUICK START GUIDE

NI sbRIO-9651

System on Module Development Kit

The NI sbRIO-9651 System on Module (SOM) development kit includes the sbRIO-9651 SOM and a reference carrier board. Use this document to help you get started with setting up the system and reviewing an example LabVIEW project.


Parts Locator Diagram

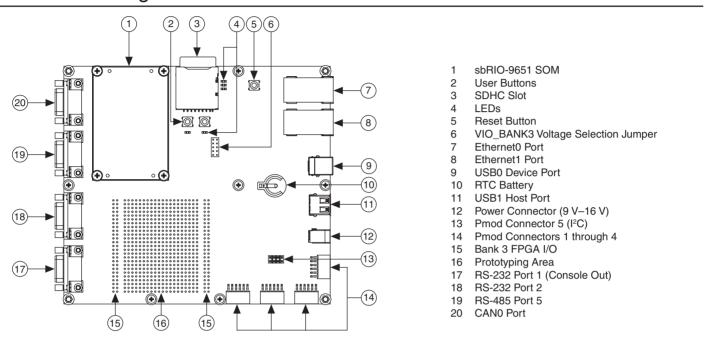



The following figure shows the connections and interfaces between the sbRIO-9651 SOM and the reference carrier board.

Legend■ Fixed behavior signals■ User-defined FPGA signals■ Power signals

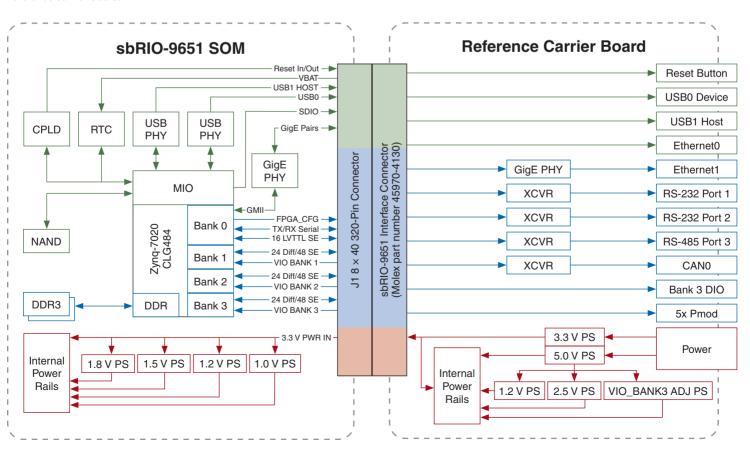

Getting Started with the sbRIO-9651 SOM Development Kit

Complete the following steps to get started with the sbRIO-9651 SOM and the reference carrier board, including setting up your hardware and reviewing an example LabVIEW project that includes an sbRIO-9651 SOM target.



Note Refer to the documentation listed in the Where to Go Next section of this document for additional sbRIO-9651 SOM resources.

Installing Required Software

Install or verify that you have installed the following software:

- LabVIEW 2014 or later
- LabVIEW Real-Time Module 2014 or later
- LabVIEW FPGA Module 2014 or later
- NI-RIO Device Drivers August 2014 or later

Connecting Power

- Ensure that your included 12 V power supply is disconnected from an AC power source.
- Connect the power supply to the Power (9 V-16 V) terminal on the reference carrier board.
- Plug in the power supply to the AC power source.

3 Connecting to a Computer

To connect with USB:

- Connect one end of the included USB cable to the USB0 Device port on the reference carrier board.
- Connect the other end of the USB cable to a computer.

To connect with Ethernet:

- Connect a standard Category 5 (CAT-5) or better Ethernet cable to the Ethernet0 port on the reference carrier board.
- Connect the other end of the Ethernet cable to an Ethernet hub or to a computer.

When you power up the device, it attempts to initiate a DHCP network connection. If the device cannot initiate a DHCP connection, it connects to the network with a link-local IP address with the form 169.254.x.x.

c. In Measurement & Automation Explorer (MAX), configure network settings for the device. Refer to the MAX Help for CompactRIO and Single-Board RIO for more information about configuring network settings in MAX.

4 Reviewing Example Software

- a. In LabVIEW, open the sbRIO-9651 SOM reference carrier board example project, located at \labview\ examples\CompactRIO\Chassis Specific\ sbRIO-9651 CRB Getting Started\ sbRIO-9651 CRB Getting Started.lvproj.
- Expand the sbRIO-9651 Socket (DevKit) item and review the LabVIEW FPGA I/O items defined for the sbRIO-9651 SOM development kit.



Note The socketed component-level IP (CLIP) for the reference carrier board, located at <National Instruments>\shared\CompactRIO\CLIPs\ sbRIO-9651\DevKit\DevKit.cfg, defines the I/O configuration used in this application. When you are ready to create a carrier board for your own application, you can use the development kit CLIP definition as a starting point for a new CLIP.

- Open the sbRIO-9651 CRB Getting Started.vi file in the project and review the block diagram.
- Compile the VI and download it to the flash memory of the sbRIO-9651 SOM. Refer to the Downloading an FPGA VI to the Flash Memory of an FPGA Target topic in the LabVIEW Help (FPGA Module) for more information.



Note When you create your own CLIP and define processor peripherals (such as secondary Ethernet, CAN, or additional serial ports), you must compile your FPGA VI and download it to the flash of the sbRIO-9651 SOM. This ensures that the driver for the peripheral can load properly at boot time.

Where to Go Next

Refer to the following additional resources as you design, prototype, and implement your sbRIO-9651 SOM application.



NI sbRIO-9651 System on Module OEM Device Specifications—Device and peripheral requirements for the sbRIO-9651 SOM.



NI sbRIO-9651 System on Module Carrier Board Design Guide-Recommendations and constraints for designing a custom carrier board.



LabVIEW Help—Information about configuring sbRIO-9651 SOM targets in LabVIEW and compiling, downloading, and running FPGA VIs.



NI Single-Board RIO CLIP Generator Help—Reference for the sbRIO CLIP Generator application.



ni.com/singleboard/setup-Tutorials, demos, and videos for getting started with NI sbRIO devices.



ni.com/training—Online or classroom training and certifications.



ni.com/support—Discussion forums, example code, and other helpful resources

Legend



PDF located at ni.com/manuals



Help available in-product



Online at ni.com

Refer to the NI Trademarks and Logo Guidelines at ni.com/trademarks for information on National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help» Patents in your software, the patents . txt file on your NI product. Refer to the Export Compliance Instruments Patent Notice at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the Export Compliance Information at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2014 National Instruments. All rights reserved

