

Product description

—


Cornix wireless detachable ergonomic keyboard

Cornix is a fully wireless, detachable ergonomic keyboard from keyworks. It features:

Wireless split design: All Wireless split design, left and right hand and host are wireless connection

- Dual-mode connectivity: Bluetooth and USB are supported
- Advanced Features: Macros, Home row modifier, combo, etc.

RGB lights: two RGB lights on each hand to indicate different states

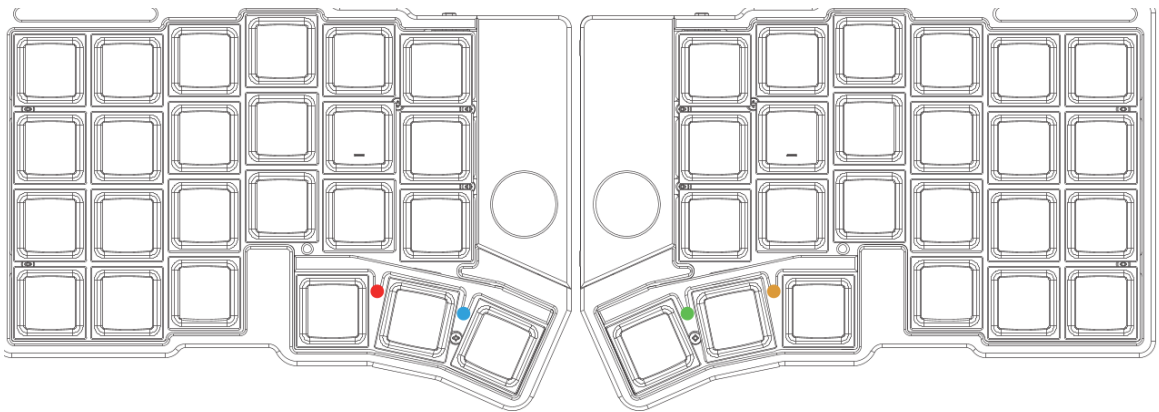

Product diagram

Indicator light

Cornix has 4 lights (2 on the left and 2 on the right) that indicate the Bluetooth channel status and battery status of the keyboard

Left-hand lights:

Left side light

Main prompt Bluetooth connection status

- Green/red/blue corresponds to 1/2/3 of the Bluetooth channel
- Indicator light means Bluetooth searching when breathing

Left side light


Right side light

- When the light is always on and off, it means Bluetooth is connected

Right Light =

Left hand and right hand connection status and battery status

- A red light flashes when the keyboard is low on power
- When the keyboard is charging, breathe in the green light

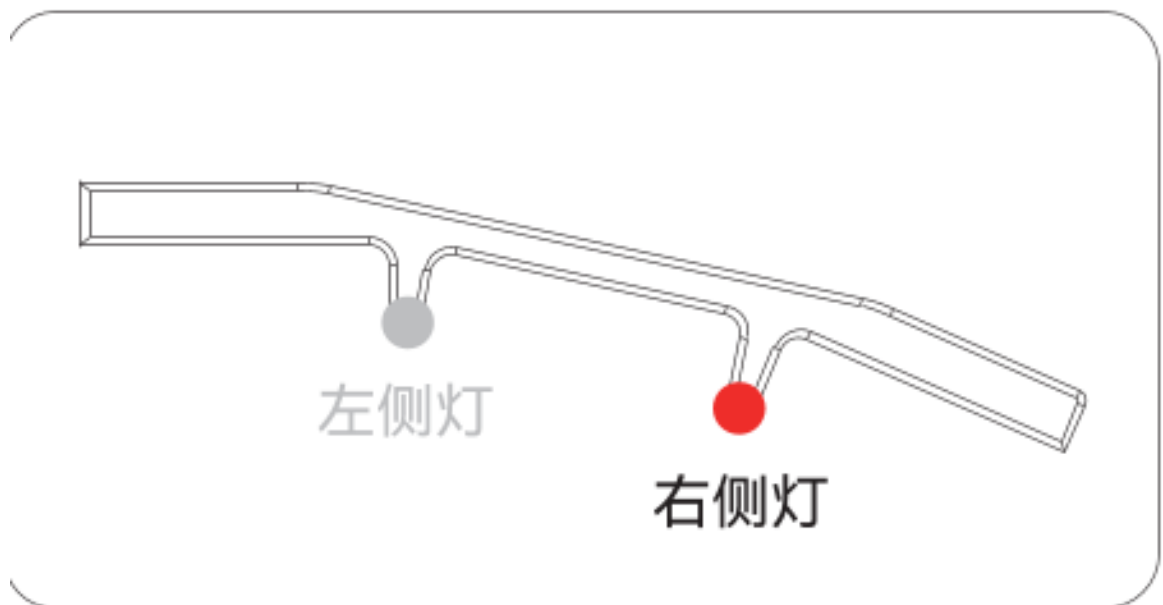


- When you lose contact with your right hand, breathe with a blue light
- On successful contact with the right hand, the blue light turns on and then off

Right-hand lights:

Left side light


Main indication of power quantity of equipment

- A red light flashes when the keyboard is low on power

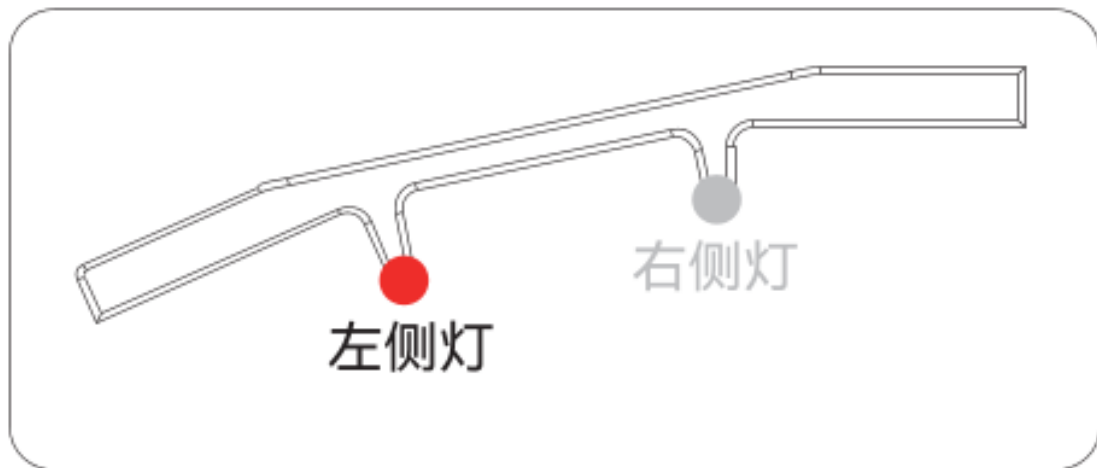

- When the keyboard is charging, breathe in the green light

The right side light indicates the connection between the right hand and the left hand. When the connection between the right hand and the left hand is lost, breathe the blue light. When the connection between the right hand and the left hand is successful, the blue light turns on and then turns off

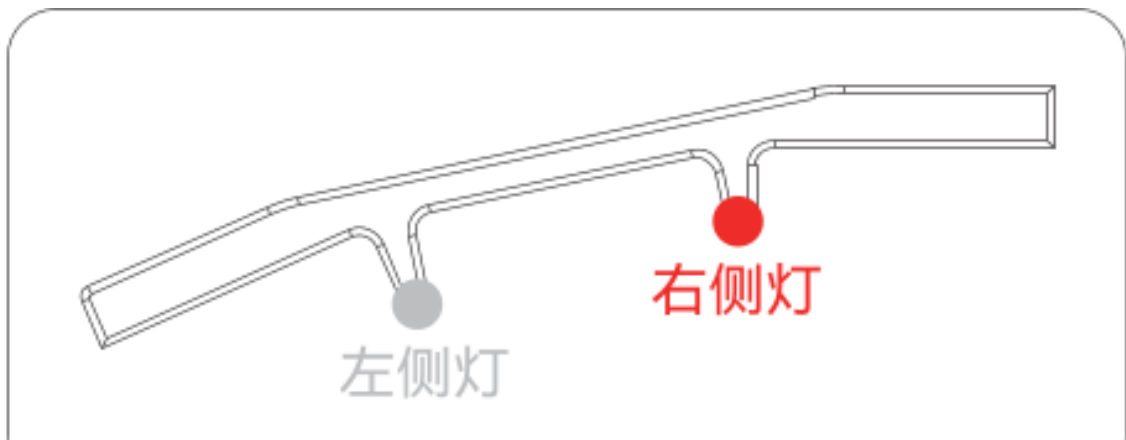

Modify the keystrokes

Cornix supports wired and wireless Vial change key manual using the web Vial change key, Vial software change key operation consistent

To change keys:

1. Go to <https://vial.rocks>
2. Click on "Start Vial" in the center of the screen and select "Cornix"(wired mode) or "Unknown device (000000000000)"(wireless mode) in the pop-up window at the top left

The wireless mode change button may cause a connection error due to signal interference. If the connection fails, try again or switch to wired mode. The change button works in both wired and wireless mode.



Click Device → Connect

3. After waiting for a successful connection, you can enter the driver page to customize the button function

Mode of connection

—

Cornix supports 3-channel Bluetooth and wired mode to connect devices

USB connection

Connect your left hand to your computer or other device through a USB cable

Bluetooth connection

Cornix supports up to 3 Bluetooth devices. How to switch:

Under Vial's User tab, use BT0/BT1/BT2 to switch devices

The default configuration is: Mo (3) + Caps/Shift/CTRL

Switch the connection mode

Cornix has two“Priority modes”: USB First and Bluetooth first. The default setting is“USB first”

USB priority mode:

When connecting your left hand to your computer via USB: Cornix automatically switches to USB mode, and Bluetooth doesn't work


Bluetooth priority mode:

When connecting the left hand to the computer via Bluetooth: Cornix will keep the Bluetooth connection in preference. Even if the computer is connected with a USB cable, the USB cable will only be used for charging and will not establish a wired connection with the computer

When the left hand is not Bluetooth connected to the computer: if Cornix has a USB connection to the computer, a wired connection is established.

Switch the connection mode

Cornix if you want to Switch between the two priority modes, you can use vial to change the key to Switch the connection mode. This key is the "Switch Output" button on the User tab, press to switch priority mode

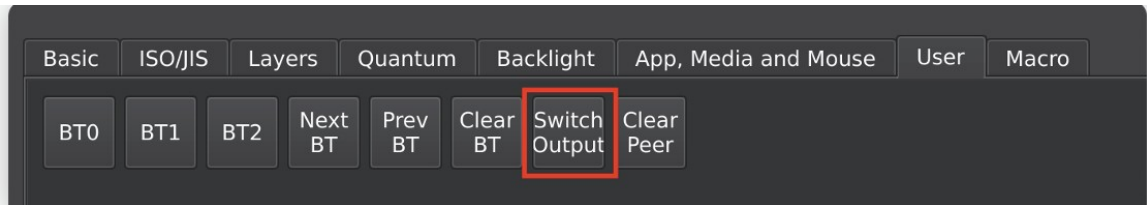

Device hibernation

Cornix goes to sleep automatically when it is not used for a long period of time

When a device is connected

The Bluetooth connection is maintained when the device is in hibernation, and the button is not lost when the device wakes up

On the air

After hibernation, press any letter key to wake up. After waking up, Cornix can be searched in Bluetooth device


Automating pairing

- The left and right hands are automatically paired when the machine is turned on for the first time, without manual settings
- once paired, the connection will be made automatically each time the phone is turned on

De-pairing

Open Vial and go to the User tab

2. Set any key to the Clear Peer key

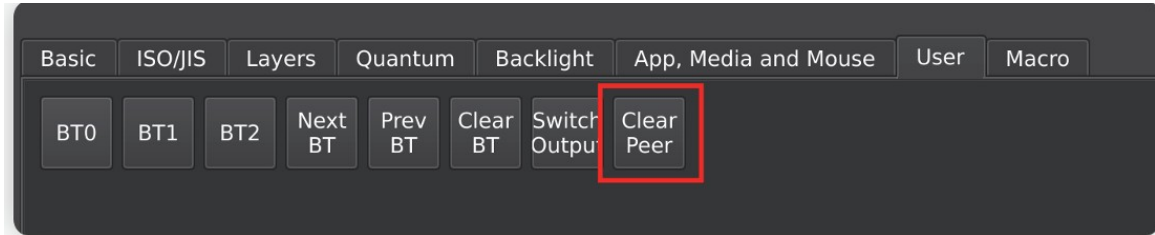

3. Hold down the Clear Peer key for more than 8 seconds, and your left and right hands will disengage

4. To prevent the pairing from happening again, you must restart the keyboard:

- Disconnect the USB connection
- Turn off the power
- Wait 3 seconds to turn the power back on

Re-pair

After restarting, the disassociated right and left hands will automatically enter search mode and match automatically when the machine is turned on

Firmware update


Cornix will continue to update its firmware features after the initial release of the firmware, allowing users to do so themselves

1. In the computer's Bluetooth interface, set the forget (delete) keyboard. This is because updating the firmware removes all paired hosts, so you need to remove the keyboard on the host side first.

2. Connect your left hand with a USB cable and open <https://vial.rocks>

3. Select Cornix and connect

4. In the security tab above, select Reboot to bootloader:

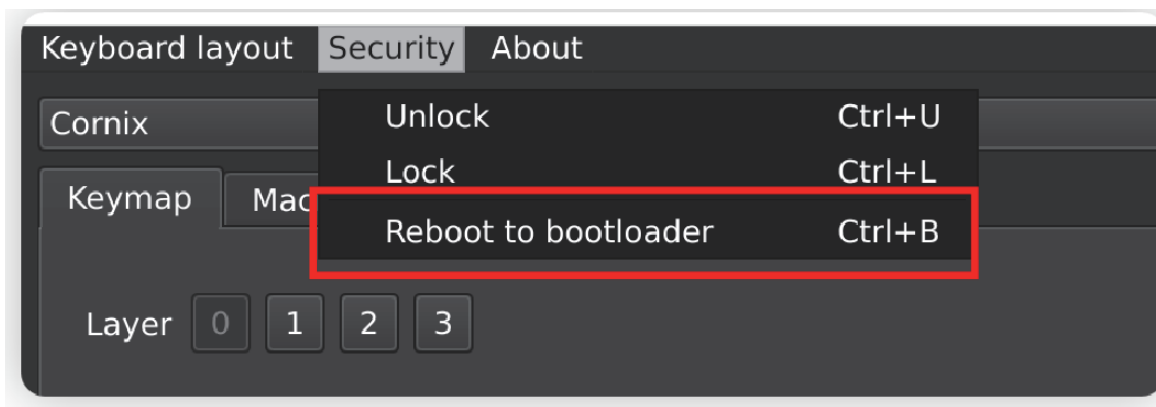

4. When the keyboard restarts, a USB stick named Cornix (or Corne-adj UST) pops up. 5. Drag the UF2 firmware onto the drive and wait for the drive to pop up

6. Re-pair keyboards

Reset and burn

(left and right hand)

Cornix also supports reset keystrokes to burn updates to the firmware, making it much easier than entering a firmware burn

1. You will first need to prepare cornix firmware updates to the operating computer and prepare tools such as tweezers or card pins



2. Connect the keyboard with a USB cable, use tweezers to quickly double-click the reset button twice, and a USB drive named Cornix will appear on your computer



3. Will be prepared in advance for the UF2 firmware (left-hand firmware for left, right-hand firmware for the right) into the U disk just appeared, until the progress bar after burning success

