

Centration Chart

camberPure
Limitless clarity


Artisan
LAB NETWORK

**YOUNGER
OPTICS**
The Optical Lens Innovators

iot
See the difference

HOW TO MEASURE FRAME WRAP / ZTILT

Place the frame, top side down, over the highlighted gray frame image. Ensure the frame is placed as it is shown in the picture. Record the angle of frame wrap from the extreme right side of where the lens ends, not where the frame ends.

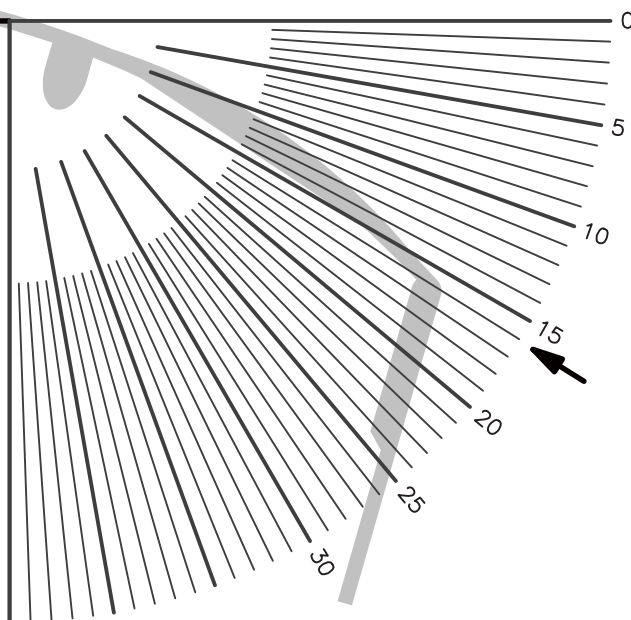

PLEASE NOTE:

This chart will not work as a measurement tool unless printed at exactly 1 to 1 scale. Be sure that your print options are set to page scaling: none. DO NOT select "fit to printable area".

1 cm




DEFAULT PERSONALIZATION PARAMETERS

Wrap	Panto	Vertex
5°	12°	14 mm

ENGRAVING INDEX

M = Material (Lens Refraction Index) ADD = Addition Power

Product	Design Code
CamberPure	CPure

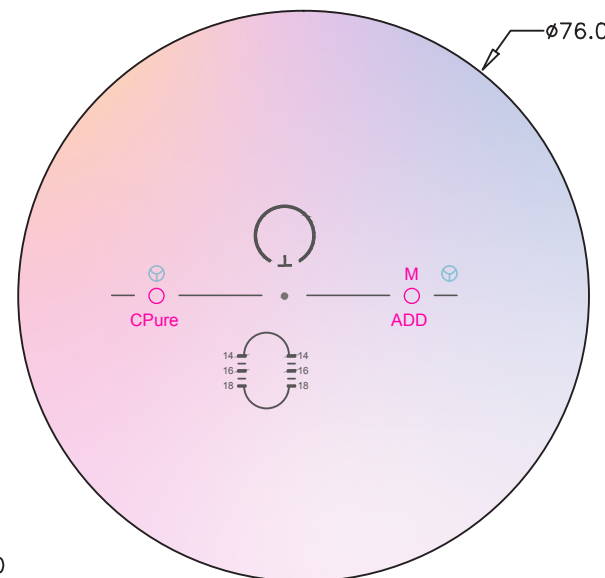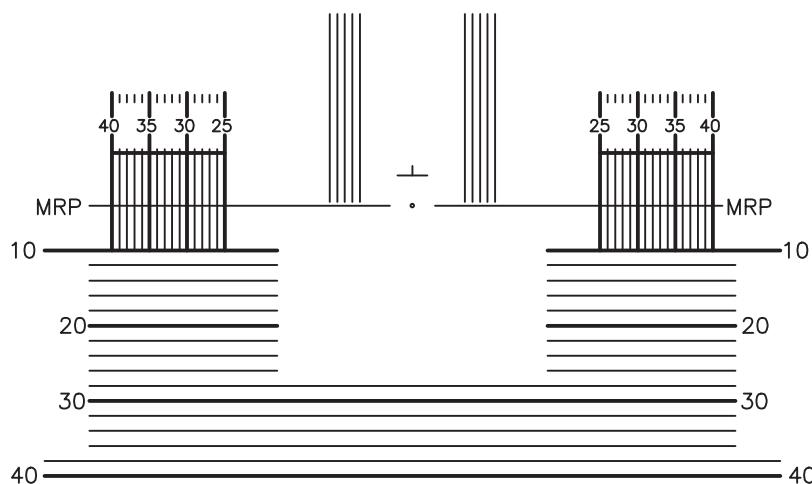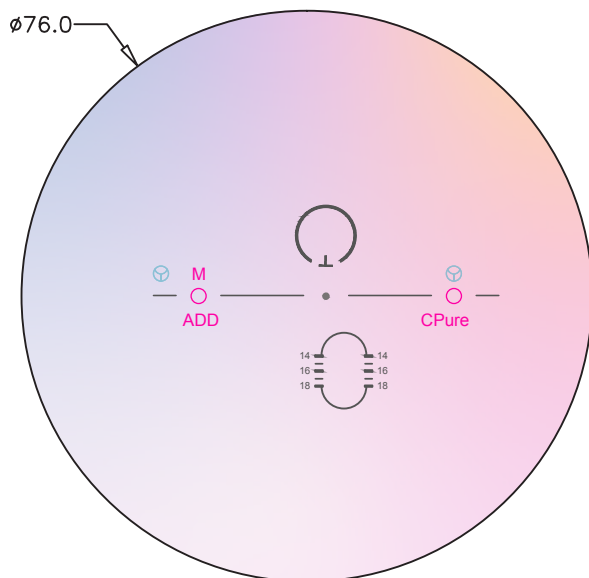

CamberPure lenses are only compatible with Camber semi-finished aspheric lens blanks. Drop = 4 mm. MFHs are 14, 15, 16, 17, and 18 mm. Contact your laboratory for more information.