

U7 plug (27256 socket)

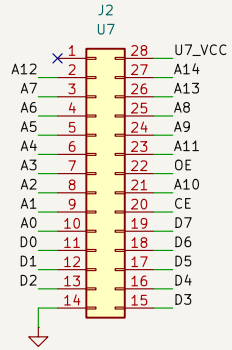


Plug into U7 (A4 board), notch to pin 1.
Pin 1 = VPP on a 27256: not used.
Pin 28 = VCC on a 27256: unverified
on the A4 board, see JP1.

Flash – SST39SF040

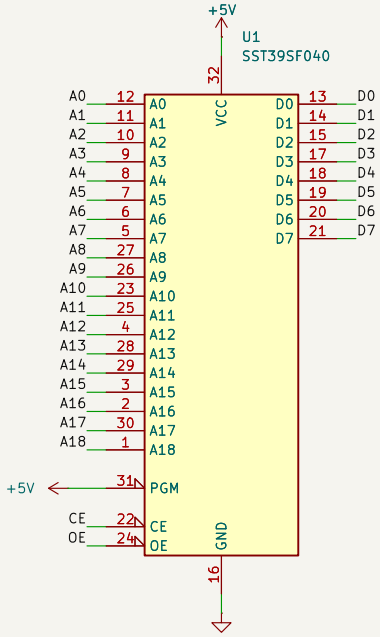


WE# (PGM) tied high: never written in circuit.
Program the chip in a TL866 (minipro -p SST39SF040).

Power / bank select

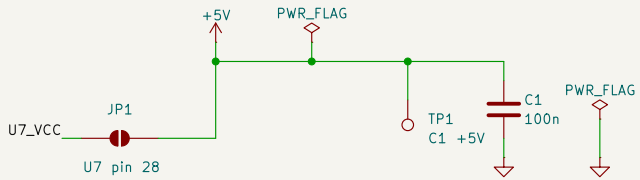

JP1 open as built: bridge it only after
U7 pin 28 measures +5 V (meter on, chip out).
Otherwise wire TP1 to the + end of the
meter's C1 (as the hand-wired chip).
C1: decoupling at U1 pin 32.

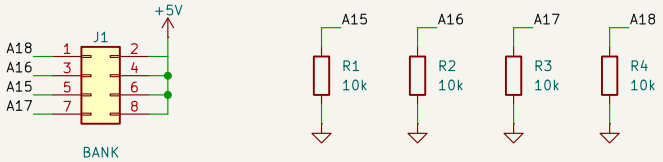

Jumper on J1 (A to 5V) = address bit 1. No jumpers = bank 0.
Bank n = 32K block n of the chip ($n x 8000).
u7fixed_512K.bin repeats the image in all 16 banks.

Sheet: /
File: U7-Flash-Adapter.kicad_sch

Title: HP 3456A U7 Flash Adapter

Size: A4	Date: 2026-10-24	**Rev: 1.0**
KiCad E.D.A. 10.0.3		Id: 1/1