

SA06T-01

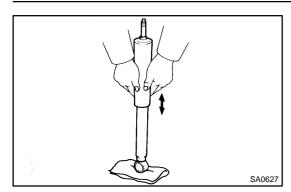

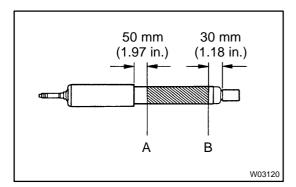

INSPECTION

1. INSPECT OPERATION OF SHOCK ABSORBER

- (a) With pushing the shock absorber, check that the pull throughout the stroke is even, and there is no abnormal resistance or noise.
- (b) Gas Filled Type:Fully push the shock absorber in fully and release it.Check that it returns at a constant speed throughout.

HINT:

If the shock absorber is the gas filled type, this information will be engraved on the exterior of the outer shell.

2. GAS FILLED TYPE:

DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole 2 - 3 mm (0.079 - 0.118 in.) in diameter at the location shown in the illustration (A - B) to release the gas inside.

NOTICE:

- · When drilling, chips may fly out, work carefully.
- The gas is colorless, odorless, and non-poisonous.

2002 4RUNNER (RM887U)

Author: Date: 1295