

BWMCS Series



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:

Hardware & Parts List

Basic Wall Mount Computer Station



















Additional Tools Required















Support:


Assembly Step-byStep

Basic Wall Mount Computer Station

Step

Pre-mark Mounting Holes

Use Base to premark places where holes will be drilled to either use toggler or bolts to secure to the wall.

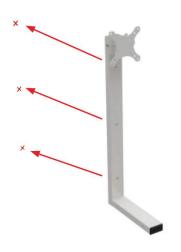

Step

A: Drill a 1/2" hole. Slide Metal Anchor of Toggler through hole. Minimum clearance behind wall is 1-7/8".



B: Pull end of Toggler until Metal Anchor is flush against inside of wall. Push Plastic Collar into wall to lock in place.



C: Snap exposed material off, flush with Plastic Collar.





Install Togglers


Metal Anchor

NOTE: Extra Toggle Bolts are provided



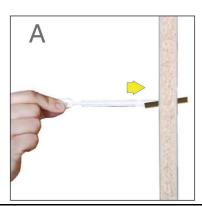

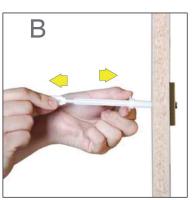

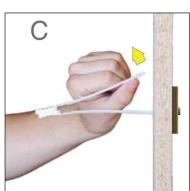












Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Assembly Step-byStep

Basic Wall Mount Computer Station

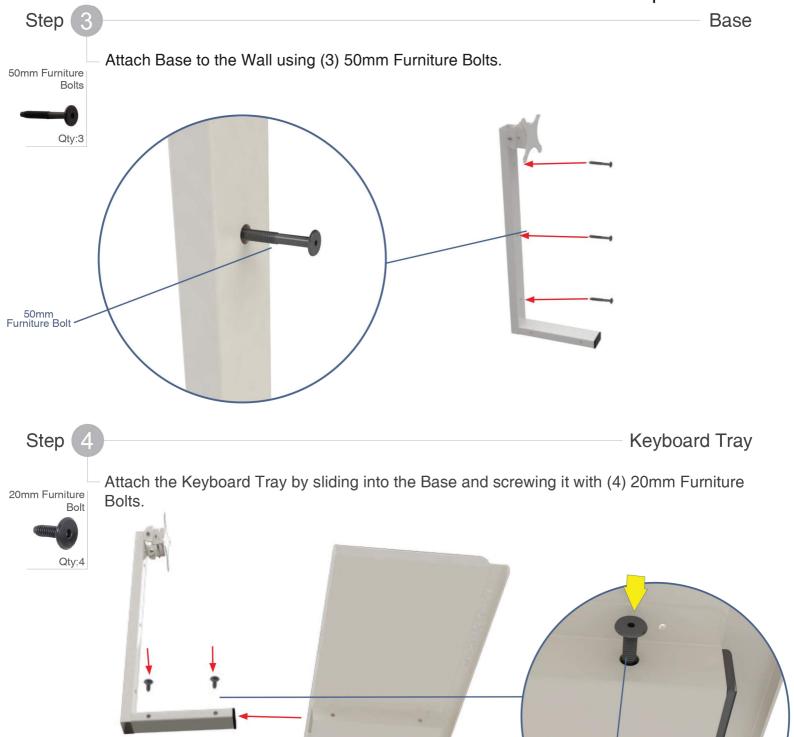












Support:

20mm Furniture Bolt

Assembly Step-byStep

Basic Wall Mount Computer Station

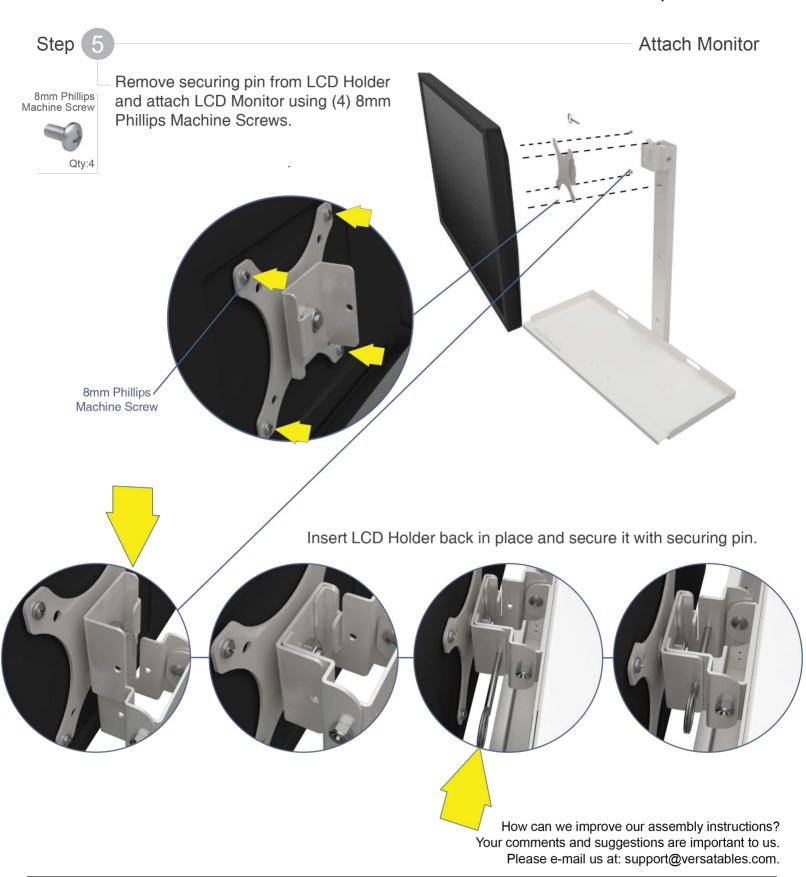











Support: Local: 310-