

Ultra Flat Wall Mount UFWM Series

Assembly Instructions



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Hardware & Parts List

Ultra Flat Wall Mount






















CPU HOLDER

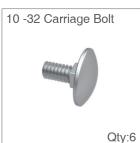

12 SS Washer





Additional Tools Required







Qty:6










Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Exploded View Ultra Flat Wall Mount

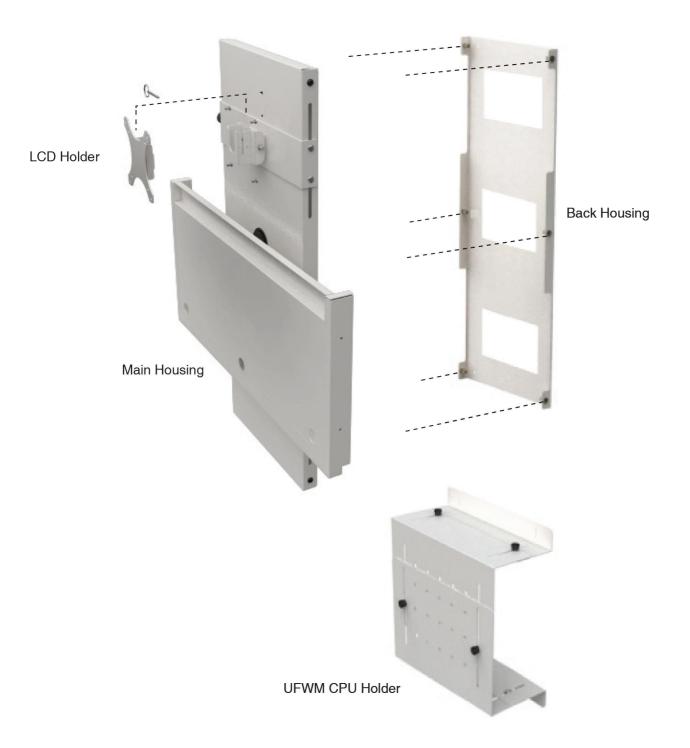











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

Ultra Flat Wall Mount

Step

1

Remove Back Housing

Remove Back Housing By
Unscrewing 12m Button
Head Screws.

NOTE: For easy assembly,
position Keyboard Tray
as shown (all the way in
the up position). Hold the
Main Housing at base of
Keyboard Tray.

Hold Here


Step

2

Pre-mark Mounting Holes

Use the Back Housing to pre-mark on the wall four mounting holes.

NOTE: Consider Keyboard and Monitor position when installing Housing to achieve your needed height.

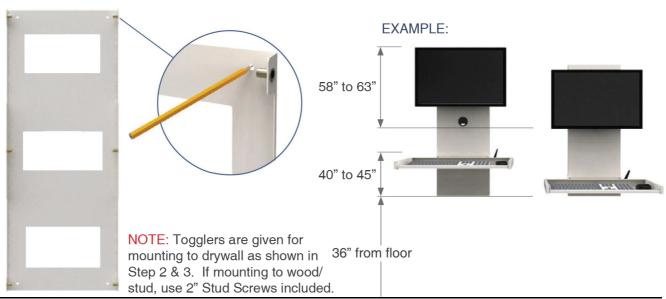



VersaTables.com 14105 Avalon Blvd. Los Angeles, CA 90061









Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Ultra Flat Wall Mount

Step

Install Togglers

Toggler Qty:6 A: Drill a 1/2" hole. Slide Metal Anchor of Toggler through hole. Minimum clearance behind wall is 1-7/8".


B: Pull end of Toggler until Metal Anchor is flush against inside of wall. Push Plastic Collar into wall to lock in place.


C: Snap exposed material off, flush with Plastic Collar.








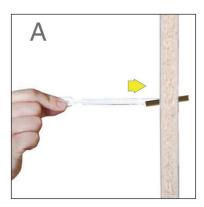

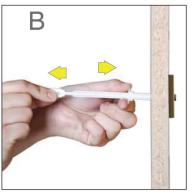

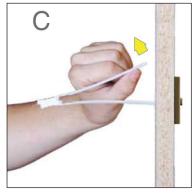



Attach Back Housing to wall using 50mm Furniture Bolts.













Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

Fast Shipping

Ultra Flat Wall Mount




Attach Main Housing



Qty:6

Attach Main Housing to Back Housing using 12mm Button Head Screw.

NOTE: For easy assembly, position Keyboard Tray as shown (all the way in the up position). Hold the Main Housing at base of Keyboard Tray.

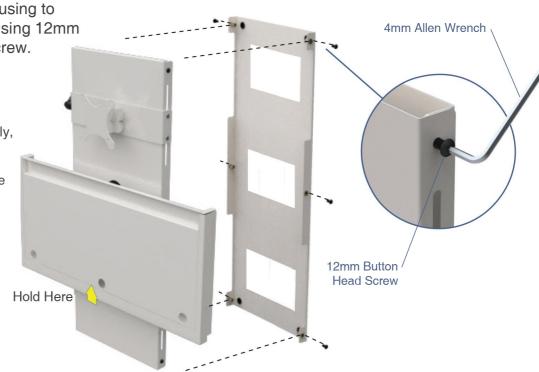










Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Ultra Flat Wall Mount

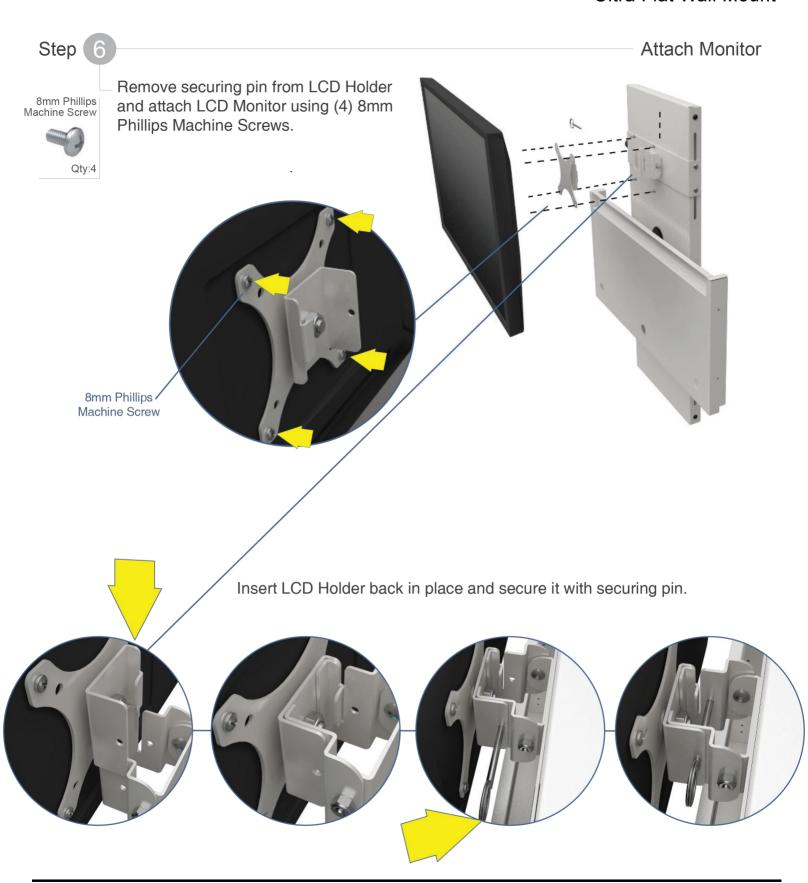











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109




Secure L Panels.

10/32 x 3/8 Carriage Bolt

Use (2)10-32 x 3/8 Carrige Bolts, (2) 10/32 Thumb Nuts and (2) 12 SS Washers on Upper and Lower L Panel Assembly.




Qty:4

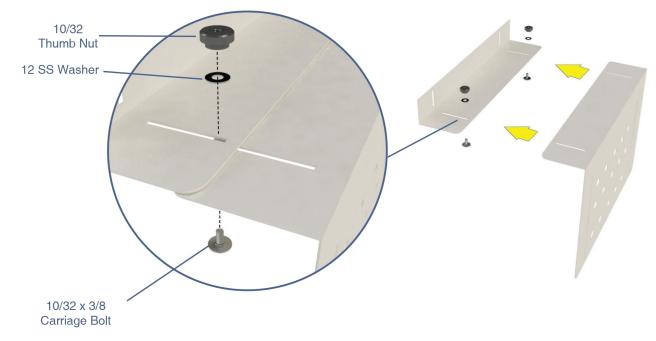

Step

Use (2)10-32 x 3/8 Carrige Bolts, (2) 10/32 Thumb Nuts and (2) 12 SS Washers.



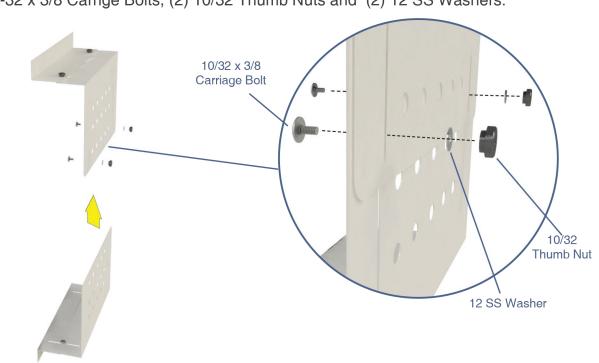












Support:

Secure L Panel Assemblies.

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

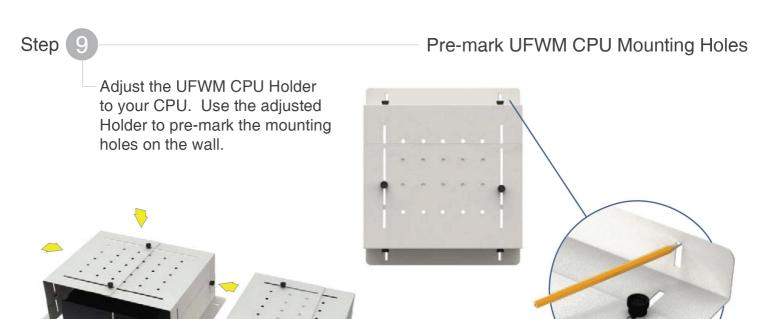


Step 10 **Install Togglers**

Install Togglers into wall. (See Step 3.)

Step

Attach UFWM CPU Holder to wall using 50mm four 50mm Furniture Bolts. Furniture Bolt

> NOTE: Use slot for final adjustments once attached to wall.

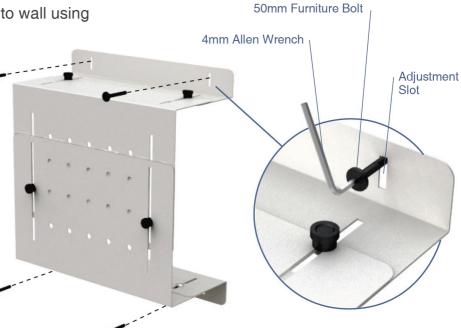



Qty:4









Support: Local: 310-353-7100 Toll Free: 888-929-0322

Install UFWM CPU Holder

Fax: 310-353-7109 Support@VersaTables.com