



Wireless Bridge

Quick Start Guide

NEED HELP?

Please scan the QR code on the right with your phone to get easy-to-follow guides, video tutorials, and quick solutions to common issues!



Easy Manage with Your Phone

Scan the QR code to download the app, add your router, and enjoy effortless remote management!



For End User




For Partner




See Far, Go Further

UD44847B


PRODUCT INTRODUCTION

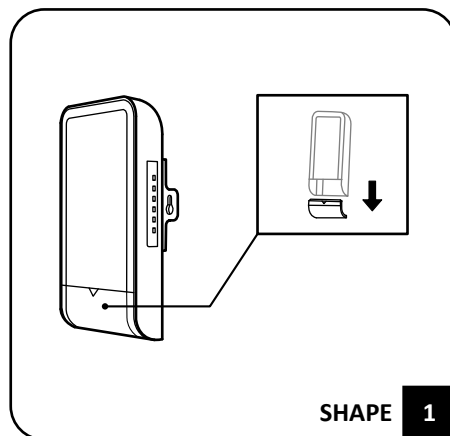

SHAPE 1

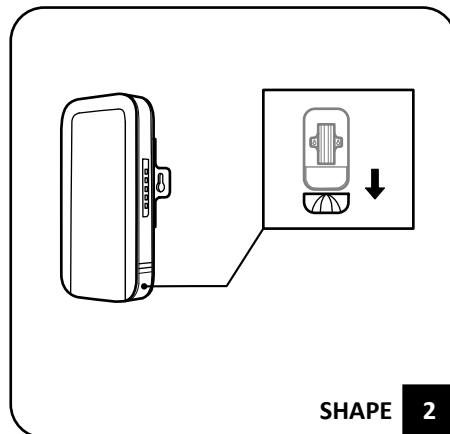

SHAPE 2

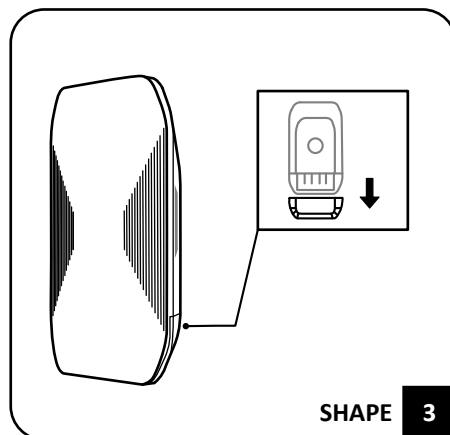

SHAPE 3

	LAN	LAN	PWR

Power

- Solid Green:** The device is powered on normally.
- Unlit:** No power supply connected or power supply is abnormal.

LAN

- Solid Green:** The port is connected.
- Flashing Green:** The port is transmitting data. The faster the indicator flashes, the greater the transmission rate is.
- Unlit:** The port is disconnected or connection is abnormal.

Signal Strength

- Solid Red, Yellow, and Green:** The wireless signal is strong.
- Solid Red and Yellow, unlit Green:** The wireless signal is normal.
- Solid Red, unlit Yellow and Green:** The wireless signal is weak. Please adjust the position and direction of the device.
- Unlit:** The devices are not matched.

Reset	1	2	3	4

1 Reset

Long press for 4 sec to restore the device to factory settings.

2 AP/CPE DIP Switch & SSID

AP/CPE DIP Switch: Switch up/down or left/right to set the device as AP or CPE.

SSID: Switch up/down to set a 4-character SSID. The CPE will connect to the AP when its SSID matches the AP's.

3 DC Port

Use the attached power adapter to connect the DC port to socket.

4 Power Input/Output & LAN


Power Input: Adaptive RJ45 port, also can be used as a PoE input port.

Power Output: Adaptive RJ45 port, also can be used as a PoE output port.

LAN: Adaptive RJ45 port. Connect to network devices via an Ethernet cable.


INSTALLATION

Installation of Ball Joint Bracket for SHAPE 3

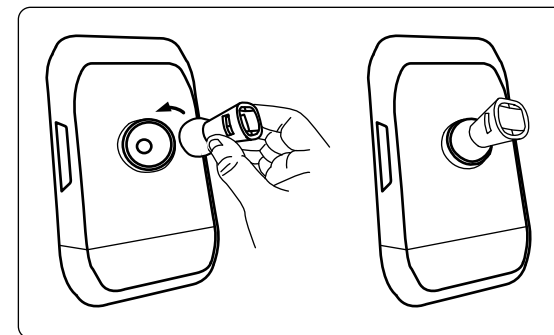

1


Align the ball head component with the bracket on the back of the device, place it in, and ensure it fits perfectly.

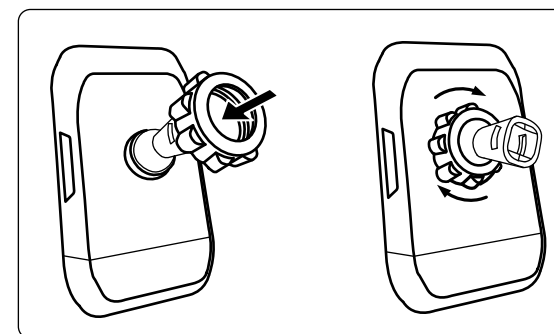

2


Place the locking nut onto the ball head component, tighten it by hand all the way down.

Pole Mount

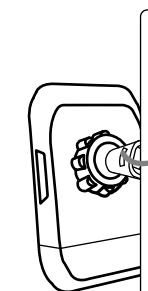


Fasten the ball joint to the pole using hose clamp.

Wall Mount

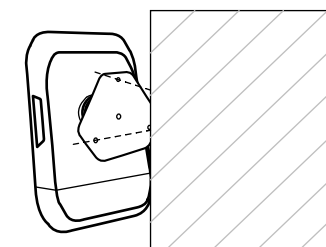

Secure the device to the wall or ceiling using the triangle mounting plate and tighten the screws.

INSTALLATION

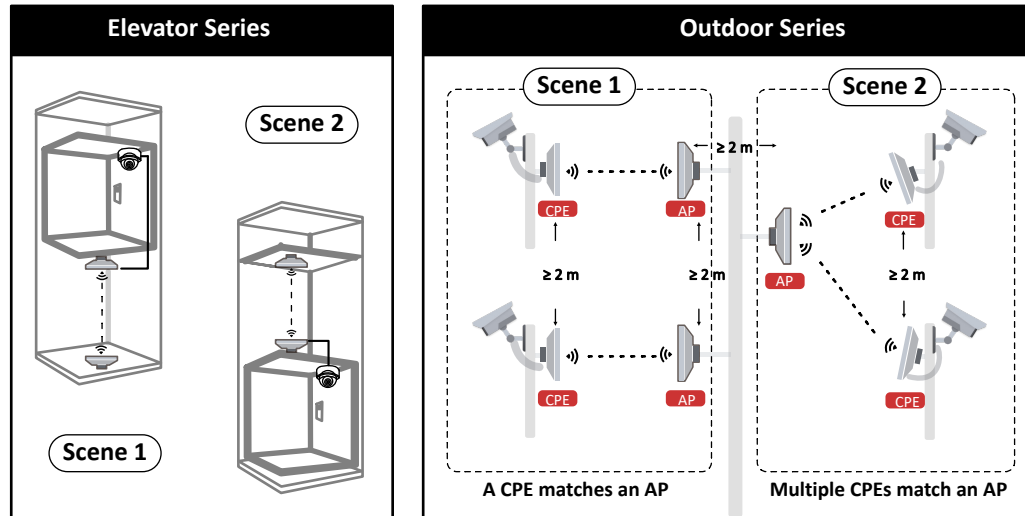


TIPS

- The optimal installation distance between the AP and CPE devices should not exceed the **declared distance** to ensure transmission speed.
- The AP and CPE surfaces with brand Logos should be placed **face to face** without any obstacles.
- Set aside at least **50 cm** distance between the device and the wall.
- The max. angle of deviation should within the declared angle.
- At least **2 m** distance should be kept between two adjacent AP devices.



SETUP PREPARATION


- Ensure that all network bridges are powered on.
- Connect the AP to the uplink switch or gateway.
- Ensure that the uplink device is connected to the external network.
- The HPP app has been downloaded on the mobile phone.

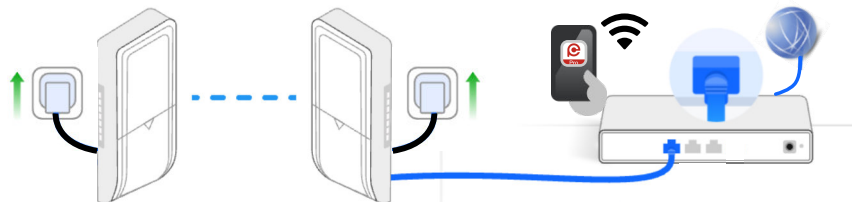


PAIR & SETUP

STEP 1 Batch Pair


- Select Toolkit → More → Wireless Bridges Pairing

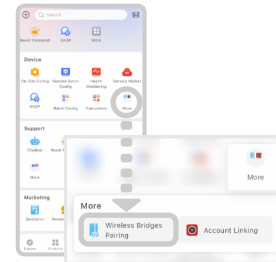


- Connect your phone to management Wi-Fi signal of the network bridge device. The Wi-Fi name and default password are as follows:

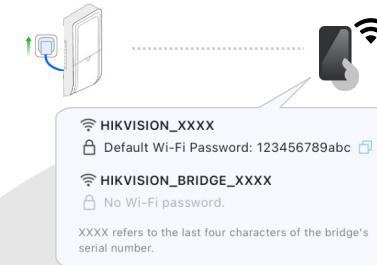

- Active device and set the device password.
- Select the CPE wireless bridges to be paired and configure the pairing settings.

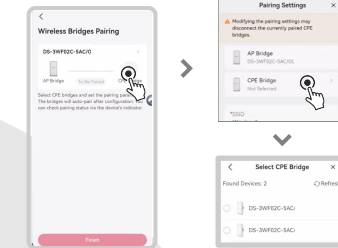

- The CPE bridges will automatically pair and connect with the AP bridge.


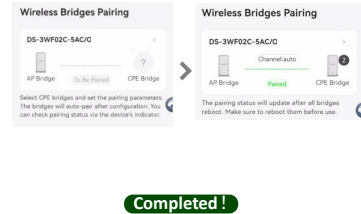


STEP 2 Add to Site

With Router

Connect your phone to router's Wi-Fi signal and batch add all wireless bridges to the site.

Scan the QR code on the cover to view detailed video instructions.

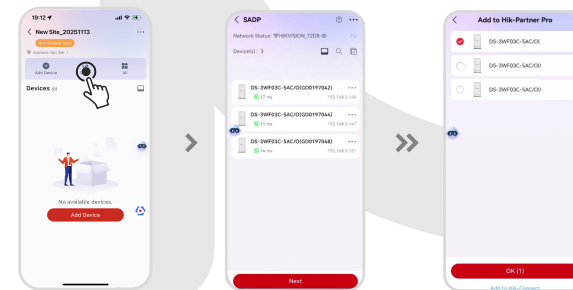
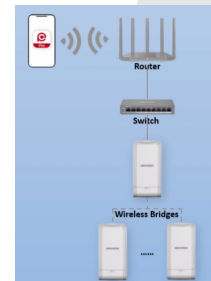


Using the SADP tool to add all bridges to the site at once.

Without Router

Connect your phone to management Wi-Fi signal of each bridge and add them to the site one by one.

Scan the QR code on the cover to view detailed video instructions.

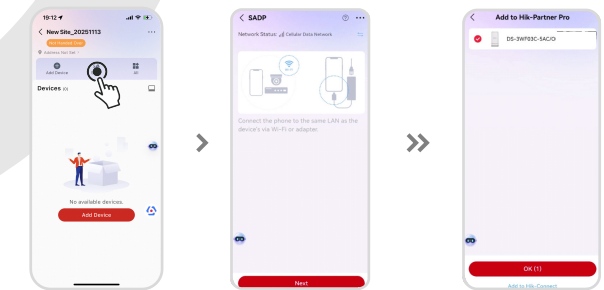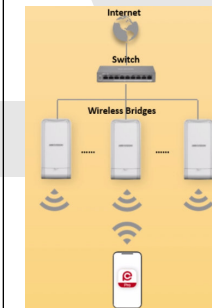

Using the SADP tool to add all bridges to the site one by one.