Neutron Transport

Justin Pounders

March 9, 2016

Contents

1	Fundamental Concepts and Variables		
	1.1	Neutron Density	2
	1.2	Neutron Flux	2
	1.3	Neutron Current	2
2	The	e Transport Equation	3
	2.1	Boundary Conditions	4
	2.2	Initial Condition	4
	2.3	Existence of a Steady-State Solution	4
	2.4	What just happened?	5
	2.5	Solving the Transport Equation	6
3	The	e Multigroup Approximation	6
4	Nui	merical Solutions of the Mutligroup Equation	8
	4.1	The Spherical Harmonics Method	9
	4.2	The Discrete Ordinates Method	10
	4.3	Spatial Discretization of the Discrete Ordinates Equations	11
	4.4	Solving the Discrete Ordinates Equation	13
	4.5	Inner (Scattering) and Outer (Fission) Iterations	13
	At t	his point we have characterized neutron-nucleus interactions and described the physics of a neutron-	tron

At this point we have characterized neutron-nucleus interactions and described the physics of a neutron slowing down from high (fission) energies to low (thermal) energies in the presence of moderators and resonance absorbers. We will now proceed to a full description of neutron transport, the goal of which is to describe how neutrons are distributed through space and energy as a function of time.

1 Fundamental Concepts and Variables

We know that a scattering reaction will tend to change the kinetic energy of a neutron and the direction in which it is traveling. Thus our attempt to describe the distribution of neutrons must take into account space (where neutrons are), energy (how fast they are moving), angle (in what direction they are moving) and time. This collection of independent variables is called the *phase space* of neutron transport.

The space parameter will be denoted by the variable \mathbf{r} . While it is possible to represent this vector in any number coordinate systems, we will focus on Cartesian systems so that space can be represented by vectors of the form $\mathbf{r} = x\mathbf{i} + y\mathbf{j} + z\mathbf{k}$. In three-dimensional (Cartesian) space the differential space element is a differential volume dV = dxdydz.

A neutrons direction (or angle) at a given point is given by the unit vector Ω . The definition and properties of Ω is given in the "Mathematical Odds and Ends" appendix accompanying these notes. The angle Ω can be described in terms of its projections along each of three Cartesian coordinate axes, Ω =

 $\Omega_x \mathbf{i} + \Omega_y \mathbf{j} + \Omega_z \mathbf{k}$, or in terms of the polar and azimuthal angles θ and φ , $\mathbf{\Omega} = \sin \theta \cos \varphi \mathbf{i} + \sin \theta \sin \varphi \mathbf{j} + \cos \theta \mathbf{k}$. In three dimensions the differential solid angle is $d\mathbf{\Omega} = \sin \theta d\varphi d\theta$.

1.1 Neutron Density

Because there is such a high density of neutrons in a reactor and their collisions are probabilistic, it is infeasible to determine the location and velocity of every single neutron, nor would such an abundance of information be particularly useful. Instead we will attempt to determine the *expected* number of a neutrons within differential space, angle and energy elements as a function of time:

$$n(\mathbf{r}, \mathbf{\Omega}, E, t)dVd\mathbf{\Omega}dt. \tag{1}$$

The function $n(\mathbf{r}, \mathbf{\Omega}, E, t)$ in this quantity is the neutron angular density. We may also define the neutron scalar density as the expected number of neutrons in all directions, $n(\mathbf{r}, E, t) = \int_{4\pi} n(\mathbf{r}, \mathbf{\Omega}, E, t) d\mathbf{\Omega}$.

1.2 Neutron Flux

We know that the reaction rate density (i.e., the number of neutron interactions per unit volume per unit time) is the product of the nuclelar density, the microscopic cross section for the reaction, the neutron speed and the neutron density. The product of the first two parameters is called the macroscopic cross section, while the product of the latter two parameters is called the neutron flux. If we write the neutron flux to explicitly include variation with respect to angle then we have the angular neutron flux, $\psi(\mathbf{r}, \mathbf{\Omega}, E, t) = v(E)n(\mathbf{r}, \mathbf{\Omega}, E, t)$. If we integrate over all angles then we have the scalar neutron flux, $\phi(\mathbf{r}, E, t) = \int_{4\pi} \psi(\mathbf{r}, \mathbf{\Omega}, E, t)$.

Knowing the angular and scalar fluxes is valuable because it enables us to compute reaction rates, including the rate at which energy is produced from fission reactions. An intuitive interpretation of these functions, however, is not immediately evident. Recall that the neutron *speed* is the differential path length divided by a differential unit of time. The product of the neutron density with speed (i.e., flux) is therefore the *total path length* traversed by all neutrons per unit volume per unit time. Thus multiplying flux by the macroscopic cross section (probability of interaction per unit path length) gives us interactions per unit volume per unit time. The *angular* flux is the total path length of all the neutrons moving along a given direction; the *scalar* flux is the total path length of all the neutrons regardless of direction.

1.3 Neutron Current

If we multiply the angular neutron density by the vector velocity then we get the angular neutron current: $\mathbf{J}(\mathbf{r}, \mathbf{\Omega}, E, t) = \mathbf{v}(\mathbf{\Omega}, E) n(\mathbf{r}, \mathbf{\Omega}, E, t)$. Integrating this variable over all angles provides a vector-valued quantity which is usually just called neutron current: $\mathbf{J}(\mathbf{r}, E, t) = \int_{4\pi} \mathbf{v}(\mathbf{\Omega}, E) n(\mathbf{r}, \mathbf{\Omega}, E, t) d\mathbf{\Omega}$. Noting $\mathbf{v}(\mathbf{\Omega}, E) = \mathbf{\Omega} v(E)$ permits writing the current in terms of the angular neutron flux.

The neutron current is a useful quantity because it allows us to calculate the net rate at which neutrons are "flowing" through a surface. In particular, the rate at which neutrons with energy E are crossing a differential surface with area dA and unit normal vector \mathbf{n} is given by

$$dA\left(\mathbf{n}\cdot\mathbf{J}(\mathbf{r},E,t)\right). \tag{2}$$

Occasionally it is useful to represent the total number of neutrons passing in to or out from a system through a surface. At a point, these quantities are called the partial currents. The incoming and outgoing partial currents can be expressed as follows:

$$j^{+}(\mathbf{r}, E, t) = \int_{\mathbf{n} \cdot \mathbf{\Omega} > 0} \mathbf{n} \cdot \mathbf{\Omega} \psi(\mathbf{r}, E, t) d\mathbf{\Omega} \to \text{outgoing partial current}, s$$
 (3)

$$j^{-}(\mathbf{r}, E, t) = -\int_{\mathbf{n} \cdot \mathbf{\Omega} < 0} \mathbf{n} \cdot \mathbf{\Omega} \psi(\mathbf{r}, E, t) d\mathbf{\Omega} \to \text{incoming partial current.}$$
 (4)

Table 1: Basic quantities in neutron transport

1				
Angular density	$n(\mathbf{r}, \mathbf{\Omega}, E, t)$			
Angular flux	$\psi(\mathbf{r}, \mathbf{\Omega}, E, t) = v(E)n(\mathbf{r}, \mathbf{\Omega}, E, t)$			
Scalar flux	$\phi(\mathbf{r}, E, t) = \int_{4\pi} \psi(\mathbf{r}, \mathbf{\Omega}, E, t) d\mathbf{\Omega}$			
Current	$\mathbf{J}(\mathbf{r}, E, t) = \int_{4\pi}^{\pi} \mathbf{\Omega} \psi(\mathbf{r}, \mathbf{\Omega}, E, t)$			

Note that the *net* number of neutrons passing through this surface (per unit area) then becomes $j^+ - j^- = \mathbf{n} \cdot \mathbf{J}$.

2 The Transport Equation

A transport equation for neutrons can be obtained by performing a neutron balance about an element $dV d\Omega dE dt$ in phase space. We make the following assumptions

- 1. Neutrons travel in straight line between collisions.
- 2. Neutron exists as points in space, with negligible size.
- 3. Neutron-neutron interactions can be neglected.
- 4. Neutron-nucleus interactions occur instantaneously.
- 5. The material is isotropic.
- 6. When scattering, the deflection of a neutron's trajectory from Ω' to Ω is a function of the cosine of the angle between the original and final unit directions, i.e. $\Omega' \cdot \Omega$.

We will make several additional assumptions at this point that, while not necessary, are very accurate and lead to a simpler form of the transport equation.

- 1. Fission neutrons are emitted isotropically in the LAB.
- 2. The average number fission neutrons is independent of the energy of the neutron that caused the fission.
- 3. The only reaction that generates neutrons if fission.

In reality, assumptions 2 and 3 will lead to small errors in the transport solution, but typically the cross sections to account for these effects implicitly. Specifically the quantity $\nu\Sigma_f(E)$ is usually treated as a single quantity so that the energy variation of ν is embedded in $\Sigma_f(E)$. With regards to assumption 3, some highly excited heavy nuclei may exist two or three neutrons, leading to (n,2n) or (n,3n) reactions. The additional neutrons in this case can be accounted for by normalizing the overall scattering to the average number of neutrons emitted, which will be very close to one.

The final form of the transport equation given these assumptions is

$$\frac{1}{v}\frac{\partial\psi}{\partial t} + \mathbf{\Omega}\cdot\nabla\psi + \Sigma\psi = \int_0^\infty dE' \int_{4\pi} \Sigma_s(\mathbf{r}, E' \to E, \mathbf{\Omega}' \cdot \mathbf{\Omega})\psi(\mathbf{r}, \mathbf{\Omega}', E', t)
+ \frac{\chi(E)}{4\pi} \int_0^\infty dE' \int_{4\pi} \nu\Sigma_f(\mathbf{r}, E')\psi(\mathbf{r}, \mathbf{\Omega}', E', t) + q_{\text{ext}}(\mathbf{r}, \mathbf{\Omega}, E, t).$$
(5)

For completeness, consider the transport equation to be solved for a region V so that $\mathbf{r} \in V$. We will also take $E \in [0, \infty]$, although in practice a maximum and minimum energy are adopted so that the flux is negligible outside of the that interval.

As with any mathematical model, we must consider under what conditions our transport equation has a viable solution. To answer this question rigorously one should turn to the tools and theory of mathematics. Arguments based on physics intuition, however, will lead largely to the same conclusions given sufficient clarity of thought. We will therefore focus on intuitive arguments.

2.1 Boundary Conditions

As with any differential equation, we must supply appropriate boundary conditions. Let us presently denote the boundary of V by ∂V . When solving the neutron transport equation for the angular flux, the boundary condition specifies the number of neutrons *entering* the system. There are several ways to provide this boundary source. The simplest is the *fixed flux* boundary condition, which has the following form:

$$\psi(\mathbf{r}, \mathbf{\Omega}, E, t) = \psi_{\text{inc}}(\mathbf{r}, \mathbf{\Omega}, E, t)$$
(6)

where ψ_{inc} is given a function for $\mathbf{r} \in \partial V$ and $\mathbf{\Omega} \cdot \mathbf{n} < 0$ with \mathbf{n} the outward unit normal vector on the surface ∂V . If $\psi_{\text{inc}} = 0$ then we have the *vacuum* condition, which means that there are no incoming neutrons.

Most reactors exhibit a high degree of spatial repetition, fuel rods in an assembly lattice being the prime example. A common approximation in modeling a single fuel rod is to assume that the lattice repeats infinitely in the radial directions. Thus each fuel rod looks like every other fuel rod. This form of symmetry can be exploited by placing mirror boundary conditions known as *specular reflection* between the rods. In this type of reflection we have

$$\psi(\mathbf{r}, \mathbf{\Omega}, E, t) = \psi(\mathbf{r}, \mathbf{\Omega}', E, t) \tag{7}$$

where Ω is the incoming direction corresponding to mirror reflection of Ω' outgoing direction. Mathematically this means $\Omega \cdot \mathbf{n} = -\Omega' \cdot \mathbf{n}$ and $(\Omega \times \Omega') \cdot \mathbf{n} = 0$.

Vaccum and specular reflection boundary conditions are by far the most common. Other possible boundary conditions are *white reflection*, in which outgoing neutrons are distributed uniformly across all incoming directions, and periodic boundary conditions, which account for translational and rotational symmetry.

2.2 Initial Condition

Because the transport equation, as it is written, is time-dependent, we must also supply an initial condition. The initial condition is simply

$$\psi(\mathbf{r}, \mathbf{\Omega}, E, 0) = \psi_0(\mathbf{r}, \mathbf{\Omega}, E) \tag{8}$$

with ψ_0 a given function for $\mathbf{r} \in V$.

2.3 Existence of a Steady-State Solution

We often want to determine the "steady-state" flux solution for a system that is in some form of equilibrium. In general, Eq. (5) may or may not have a steady-state solution. The complicating factor is fission. If more neutrons are begin created from fission than lost by all capture and leakage, then the chain reaction will drive the neutron population perpetually upward. If the opposite is true then the neutron population will rapidly decrease. Thus steady-state is only obtained when there is a *precise* balance between production and loss.

If neutron loss (by leakage or capture) is much more likely than neutron production by fission (called a sub-critical configuration), then we will have a steady-state solution as long as the external source term,

q is non-zero. These problems are called *fixed-source* problems, and include accelerator systems, radiation shielding, and sub-critical reactors as a characteristic examples. If q = 0 then there will be only the trivial solution.

In reactor design and analysis, however, we frequently want to determine the steady-state power distribution corresponding to a "critical reactor" in which neutron production is exactly balanced by neutron loss. In this case the external source of neutrons, $q(\mathbf{r}, \Omega, E, t)$, is either zero or negligible, and the transport equation becomes

$$\mathbf{\Omega} \cdot \nabla \psi(\mathbf{r}, \mathbf{\Omega}, E) + \Sigma(\mathbf{r}, \mathbf{\Omega}) \psi(\mathbf{r}, \mathbf{\Omega}, E) = \int_0^\infty dE' \int_{4\pi} \Sigma(\mathbf{r}, E' \to E, \mathbf{\Omega}' \cdot \mathbf{\Omega}) \psi(\mathbf{r}, \mathbf{\Omega}', E') + \frac{\chi(E)}{4\pi} \int_0^\infty dE' \int_{4\pi} \nu \Sigma_f(\mathbf{r}, E') \psi(\mathbf{r}, \mathbf{\Omega}', E').$$
(9)

As it is written, Eq. (9) will practically *never* have a solution. Any imbalance in the transport equation, whether due to the physical configuration, cross section uncertainties, or numerical error, will cause the equation to be unsolvable because no corresponding steady-state solution exists. Solvability exists at the infinitesimal point where all of the cross section values align to produce a precisely balanced system. Numerically there is no hope in finding this magical point.

We may not be able to model the reactor precisely enough to determine a steady-state solution, but we can look for a solution that is "close" to a steady-state solution. This is accomplished by introducing a scaling factor, typically on the fission term. Calling this scaling factor λ the transport equation becomes

$$\mathbf{\Omega} \cdot \nabla \psi(\mathbf{r}, \mathbf{\Omega}, E) + \Sigma(\mathbf{r}, E)\psi(\mathbf{r}, \mathbf{\Omega}, E) = \int_0^\infty dE' \int_{4\pi} \Sigma_s(\mathbf{r}, E' \to E, \mathbf{\Omega}' \cdot \mathbf{\Omega})\psi(\mathbf{r}, \mathbf{\Omega}', E') + \lambda \frac{\chi(E)}{4\pi} \int_0^\infty dE' \int_{4\pi} \nu \Sigma_f(\mathbf{r}, E')\psi(\mathbf{r}, \mathbf{\Omega}', E').$$
(10)

The factor λ adds a "knob" so that we can dial-in a solution that approximates the reactor's steady-state, given that our naive numerical model has no chance of being precise enough. The closer λ is to one, the closer we are to a legitimate steady-state solution. It is common to call the inverse of λ the effective multiplication factor, or $k_{\text{eff}} = \lambda^{-1}$, because it represents the rate at which the neutron population would be increasing (or multiplying) if this system were "real." Inspection of Eq. (10) reveals that it is in fact a generalized eigenvalue problem with λ the eigenvalue. The equation may be massaged into a traditional eigenvalue problem with k_{eff} the eigenvalue. We will discuss this further at a later time.

A final practical consideration is that the eigenvalue form of the transport equation is homogeneous and linear in the angular flux. This means that the angular flux can be arbitrarily scaled and the solution remains valid. (This is the typical behavior of eigenvalue problems.) Thus to determine a *unique* solution, we must provide an additional constraint. Typically the total reactor power fulfills this requirement.

2.4 What just happened?

It is very easy at this point to be temporarily blinded by the sudden onslaught of mathematical technicality that has attacked our transport equation. It is worth a moments time to consider what happens in a real reactor so that we remain somewhat oriented with respect to reality. If you have not been previously exposed to reactor physics or reactor operations (or have not paid attention to such discussions) then some of the following must be taken initially on faith.

First, in the previous section we painted a very bleak picture of a steady-state reactor being balanced on a precipice between explosion and stagnation. Commercial reactors, however, are designed to inherently be quite stable beasts. One of the most important stabilizing factors has already been introduced in these notes, which is the Doppler broadening of capture cross sections. If a reactor is generating more neutrons from fission than are being lost, then the neutron population will increase and the fission reaction rate will follow in lock-step. As power increases temperature will rise. You have seen that increasing the

temperature of an isotope with capture resonance will increase the capture rate of neutrons. This increase in capture rate will naturally arrest a modest increase in power and bring the system into steady-state at a naturally-attained equilibrium temperature. The same sequence will happen in the opposite direction for a decreasing neutron population. A second stabilizing effect occurs when, as in the case of modern commercial reactors, the coolant serves double-duty as the moderator. As temperature increases, the moderator density decreases, often leading decrease in the thermalization of neutrons.

We now see that obtaining a "real" steady-state solution would require solving not just the transport equation, but heat transfer and likely fluid dynamics equations as well. Moreover introducing temperature (and density) as variables leads to nonlinearities in the transport equation. In short, the not-so-simple transport equation just become orders of magnitude more challenging to solve. So instead, how about we hold temperature constant (say at an average value), then solve the transport equation approximately by scaling fission to account for the fact that we are neglecting stabilizing feedback mechanisms. The eigenvalue approach should look quite appealing at this point!

2.5 Solving the Transport Equation

Finding a closed-form solution of the transport equation is impossible for all but the simplest of cases. In practice we must adopt both physical and numerical approximations. Following is a partial list of complications we should expect.

- 1. Most mathematical theory deals with either partial differential equations or integral equations. The transport equation is an *integro-differential* equation containing both an integral and gradient term.
- 2. The dimensionality of the phase space is quite high. Three dimensions in space, two in angle, one in energy and one in time leads to a seven-dimensional space in the most general setting. Numerically this will generate a very large number of unknowns that must be solved.
- 3. The energy dependence of the cross sections is very complex because of resonances. Representing these cross sections numerically a very large number of discretization points.
- 4. The size of virtually all reactors is much greater than the neutron mean-free-path. Thus any spatial discretization must include a large number of points.

On the other hand, the transport equation is linear, so if we can manage the *size* of the problem then we shouldn't loose too much sleep. Given advances in modern computing, we are able to calculate much larger and more accurate transport solutions than ever before. Nevertheless, solving large transport problems is very challenging. Our goal presently is not to explore the computational approaches to this problem in any significant detail, but rather present an overview of the approximations and strategies that are made to solve neutron transport for reactor physics analyses.

3 The Multigroup Approximation

In the previous section we examined the behavior of neutrons with respect to the energy variable. The neutron balance equation we derived there was actually the transport equation for an infinitely large, homogeneous region. Under those conditions, $\nabla \psi = \mathbf{0}$, and the flux did not depend on angle because of rotational symmetry. We will now introduce an approximation that will lead to a simpler energy landscape so that we can devote more attention to spatial variations of the neutron flux.

The multigroup approximation attempts to simplify the energy-dependent description of neutron transport by binning neutrons to "groups" based on their energy. To begin, pick a set of energy group boundaries,

$$E_G < E_{G-1} < E_{G-2} < \dots < E_q < \dots < E_2 < E_1 < E_0.$$
 (11)

Note that (for historical reasons) E_0 is the highest energy, while E_G is the lowest energy. Energy group g is defined by the interval $[E_q, E_{q-1}]$.

Next, integrate the transport equation over a single energy group. We may use any of variant of the transport equation. Going with the eigenvalue form [Eq. (10)] produces an equation that can be written

$$\mathbf{\Omega} \cdot \nabla \psi_g(\mathbf{r}, \mathbf{\Omega}) + \Sigma_g(\mathbf{r}) \psi_g(\mathbf{r}, \mathbf{\Omega}) = \sum_{g'=1}^G \int_{4\pi} \Sigma_{g' \to g}(\mathbf{r}, \mathbf{\Omega}' \cdot \mathbf{\Omega}) \psi_g'(\mathbf{r}, \mathbf{\Omega}') d\mathbf{\Omega}'
+ \lambda \frac{\chi_g}{4\pi} \sum_{g'=1}^G \int_{4\pi} \nu \Sigma_{f,g'}(\mathbf{r}) \psi_g'(\mathbf{r}, \mathbf{\Omega}') d\mathbf{\Omega}'.$$
(12)

where we have defined

$$\psi_g(\mathbf{r}, \mathbf{\Omega}) = \int_{E_g}^{E_{g-1}} dE \psi(\mathbf{r}, \mathbf{\Omega}, E), \tag{13}$$

$$\Sigma_g(\mathbf{r}) = \frac{\int_{E_g}^{E_{g-1}} dE \Sigma(\mathbf{r}, E) \psi(\mathbf{r}, \mathbf{\Omega}, E)}{\int_{E_g}^{E_{g-1}} dE \psi(\mathbf{r}, \mathbf{\Omega}, E)},$$
(14)

$$\nu \Sigma_{f,g}(\mathbf{r}) = \frac{\int_{E_g}^{E_{g-1}} dE \nu \Sigma_f(\mathbf{r}, E) \psi(\mathbf{r}, \mathbf{\Omega}, E)}{\int_{E_g}^{E_{g-1}} dE \psi(\mathbf{r}, \mathbf{\Omega}, E)},$$
(15)

$$\chi_g = \int_{E_g}^{E_{g-1}} dE \chi(E), \tag{16}$$

$$\Sigma_{g'\to g}(\mathbf{r}, \mathbf{\Omega}' \cdot \mathbf{\Omega}) = \frac{\int_{E_g}^{E_{g-1}} dE \int_{E_{g'}}^{E_{g'}} dE' \Sigma_s(\mathbf{r}, E' \to E, \mathbf{\Omega}' \cdot \mathbf{\Omega}) \psi(\mathbf{r}, \mathbf{\Omega}, E)}{\int_{E_g}^{E_{g-1}} dE \psi(\mathbf{r}, \mathbf{\Omega}, E)}.$$
(17)

The above parameters are called the multigroup constants and Eq. (12) the multigroup transport equation. The benefit of the multigroup equation is that if we can calculate the multigroup constants, we can obtain a flux solution by solving the G coupled group equations for ψ_g rather than the transport equation that depends continuously on energy. If G is chosen to be smaller than the number of points required to represent the most complex cross section (which is often in thousands), then we have simplified the

to represent the most complex cross section (which is often in thousands), then we have simplified the computational task of solving the transport equation. In practice, G may be be as large as a few hundred to as few as two.

Of course there is a catch-22 in that we need the detailed flux spectrum, $\psi(\mathbf{r}, \mathbf{\Omega}, E)$, to calculate the group constants, but if we had the detailed flux spectrum then we could immediately calculate the group fluxes! This is where an approximation is leveraged to maximize accuracy in the energy variable at the expense of the spatial variable. Because most reactors feature regular arrays of fuel rods, symmetry can be used to simplify the transport problem. Often a reactor physics calculations begins by solving the transport equation with 100's or 1000's of energy grid points in an infinite medium (0D), infinitely tall cylinder (1D) or occasionally a square pin-cell (2D). Reflective boundary conditions around the simplified problem introduce an approximation, but if the neutron spectrum changes slowly with respect to space then the approximation is reasonable because the spectrum is only used as a weighting function to generate the multigroup cross sections. In the past when computing power was scarce, the spectrum was obtained not by solving the transport equation, but simply by gluing a fission spectrum, a 1/E intermediate spectrum and a thermal spectrum together.

Once an appropriate spectrum has been used to generate the multigroup constants, one may attempt to solve the transport equation for more complex geometries because the burden of excessive energy complexity has been lightened. A single assembly calculation may use tens to a few hundred energy groups; a full-core calculation may use as few as two energy groups.

4 Numerical Solutions of the Mutligroup Equation

The multigroup approximation effectively handles the energy dependence of the transport equation (given a suitably accurate weighting spectrum for the cross section collapsing.) There are several ways to discretize the equation with respect to angle. In what follows we will look at the spherical harmonics (or P_N) and discrete ordinates (or S_N) approaches. For simplicity our discussion will be limited to one spatial dimension. Adopting the z direction (aligned with the \mathbf{k} unit direction) as the dimension of choice, the multigroup transport equation becomes

$$\mu \frac{\partial \psi_g(z,\mu)}{\partial z} + \Sigma_g(z)\psi_g(z,\mu) = \sum_{g'=1}^G \int_{-1}^1 \Sigma_{g'\to g}(z,\mu_0)\psi_g'(z,\mu')d\mu'$$
(18)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^G \int_{-1}^1 \nu \Sigma_{f,g'}(z) \psi_g'(z,\mu') d\mu'.$$
 (19)

Note that in obtaining this equation we have set $\frac{\partial \psi}{\partial x} = \frac{\partial \psi}{\partial y} = 0$, integrated over all azimuthal angles, and set $\mu = \cos \theta$ where $\theta \in [0, \pi]$ is the polar angle. We have additionally defined $\mu_0 = \mathbf{\Omega} \cdot \mathbf{\Omega}' = \cos \theta_0$ as the cosine of the scattering deflection angle.

Before presenting the angular treatment of the transport equation, let's first consider a practical treatment of the scattering cross section angular dependence. As discussed in the appendix, the Legendre polynomials provide a basis for representing functions defined on the interval [-1,1]. Because $\theta_0 \in [0,\pi]$, the scattering cross section is just such a function when the position and group indices are fixed. Specifically, let

$$\Sigma_{g' \to g}(z, \mu_0) = \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \Sigma_{g' \to g}^{\ell}(z) P_{\ell}(\mu_0)$$
 (20)

where $P_{\ell}(\mu_0)$ is the ℓ^{th} Legendre polynomial. Multiplying this equation by $P_{\ell'}(\mu_0)$, integrating over μ_0 , and applying the orthogonality relationship leads to

$$\Sigma_{g'\to g}^{\ell}(z) = \int_{-1}^{1} P_{\ell}(\mu_0) \Sigma_{g'\to g}(z, \mu_0) d\mu_0.$$
 (21)

The $\Sigma_{g'\to g}^{\ell}(z)$ coefficients are called the scattering moments.

Inserting the scattering kernel expansion into the transport equation provides

$$\mu \frac{\partial \psi_g(z,\mu)}{\partial z} + \Sigma_g(z)\psi_g(z,\mu) = \sum_{g'=1}^G \sum_{\ell=0}^\infty \frac{2\ell+1}{2} \int_{-1}^1 \Sigma_{g'\to g}^\ell(z) P_\ell(\mu_0) \psi_g'(z,\mu') d\mu'$$
 (22)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^G \int_{-1}^1 \nu \Sigma_{f,g'}(z) \psi_g'(z,\mu') d\mu'.$$
 (23)

Using the addition theorem of Legendre polynomials allows us to write the polynomial μ_0 as the product of polynomials in μ and μ' :

$$\mu \frac{\partial \psi_g(z,\mu)}{\partial z} + \Sigma_g(z)\psi_g(z,\mu) = \sum_{g'=1}^G \sum_{\ell=0}^\infty \frac{2\ell+1}{2} \Sigma_{g'\to g}^{\ell}(z) P_{\ell}(\mu) \int_{-1}^1 P_{\ell}(\mu') \psi_{g'}(z,\mu') d\mu'$$
 (24)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^G \int_{-1}^1 \nu \Sigma_{f,g'}(z) \psi_{g'}(z,\mu') d\mu'.$$
 (25)

4.1 The Spherical Harmonics Method

The spherical harmonics are a set of functions that provide a basis for representing functions that exist on a spherical surface. Given that the unit direction Ω sweeps out the surface a sphere, they can be used as a basis for representing the angular dependence of the neutron flux in three dimensions. In one dimension, the spherical harmonics can be integrated down to the Legendre polynomials, which provide a polynomial basis for functions defined on the interval [-1,1]. The angular flux in one spatial dimension is a function of the cosine μ , which takes values between -1 and 1; thus the μ -dependence of the angular flux may be represented by a Legendre polynomial expansion.

Specifically, let

$$\psi_g(z,\mu) = \sum_{n=0}^{\infty} \frac{2n+1}{2} \psi_{g,n}(z) P_n(\mu). \tag{26}$$

Orthogonality of the polynomials reveals that

$$\psi_{g,n}(z) = \int_{-1}^{1} \psi_g(z,\mu) P_n(\mu). \tag{27}$$

Before going any further note that we can use this definition of flux moments to simplify Eq. (25):

$$\mu \frac{\partial \psi_g(z,\mu)}{\partial z} + \Sigma_g(z)\psi_g(z,\mu) = \sum_{g'=1}^G \sum_{\ell=0}^\infty \frac{2\ell+1}{2} \Sigma_{g'\to g}^\ell(z)\psi_{g',\ell}(z)P_\ell(\mu) + \lambda \frac{\chi_g}{2} \sum_{g'=1}^G \nu \Sigma_{f,g'}(z)\psi_{g',0}(z)$$
(28)

where we have used the fact that $P_0(\mu) = 1$. Now insert the flux expansion into Eq. (28) to obtain

$$\sum_{n=0}^{\infty} \frac{2n+1}{2} \left[\mu \frac{\partial \psi_{g,n}(z)}{\partial z} P_n(\mu) + \Sigma_g(z) \psi_{g,n}(z) P_n(\mu) \right] = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \Sigma_{g'\to g}^{\ell}(z) \psi_{g',\ell}(z) P_{\ell}(\mu) + \lambda \frac{\chi_g}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g'}(z) \psi_{g',0}(z).$$
(29)

Using the recurrence relationship for the Legendre polynomials in the first term leads to

$$\sum_{n=0}^{\infty} \frac{2n+1}{2} \left\{ \left[\frac{(n+1)}{2n+1} P_{n+1}(\mu) + \frac{n}{2n+1} P_{n-1}(\mu) \right] \frac{\partial \psi_{g,n}(z)}{\partial z} + \Sigma_g(z) \psi_{g,n}(z) P_n(\mu) \right\}
= \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \Sigma_{g'\to g}^{\ell}(z) \psi_{g',\ell}(z) P_{\ell}(\mu)
+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g'}(z) \psi_{g',0}(z).$$
(30)

We will again summon orthogonality to simplify this equation. Multiplying by $P_{n'}(\mu)$, integrating over all μ , then writing n instead of n' for notational aesthetic leads to

$$\frac{n}{2n+1} \frac{\partial \psi_{g,n-1}(z)}{\partial z} + \frac{n+1}{2n+1} \frac{\partial \psi_{g,n+1}(z)}{\partial z} + \Sigma_g(z)\psi_{g,n}(z) = \sum_{g'=1}^G \Sigma_{g'\to g}^n(z)\psi_{g',n}(z) + \lambda \chi_g \delta_{n,0} \sum_{g'=1}^G \nu \Sigma_{f,g'}(z)\psi_{g',0}(z). \tag{31}$$

Note that this equation represents not one but an infinite series of coupled equations. Because we have neither infinite time nor infinite resources with which to solve such a set of equations, it is universal practice to truncate the flux expansion at some finite value, say N. The implicit approximation is that $\psi_{n,g}(z) \approx 0$ for n > N. We call the resulting finite sequence of equations the P_N equations.

A charming effect of the Legendre polynomial recurrence relation is that each equation is only coupled to the equations immediately preceding and following it in the n sequence. The index n represents an increasing order of anisotropy in the angular flux. If the flux were truly isotropic then the solution to the single equation corresponding to N=0 would solve the transport equation exactly. The N=1 solution adds a component of anisotropy linear in μ . Because the n^{th} Legendre polynomial is a degree-n polynomial, the n^{th} term in the flux expansion represents an \$n\$-degree polynomial representation of anisotropy. The higher values of n are also more oscillatory because the Legendre polynomial $P_n(\mu)$ has all n roots in the interval [-1,1].

The set of (N+1) P_N equations are not complete until boundary conditions are specified. Each of the equations is a first-order partial differential equation, thus we require N+1 boundary conditions. In one spatial dimension we have two boundaries, and because it seems rational to have the same number of conditions on each boundary we limit ourselves to even numbers of equations $(P_1, P_3, P_5, \text{ etc.})$.

Boundary conditions in P_N theory are complicated by the fact that we are not solving for the flux directly but rather the flux moments. For reflecting surfaces the angular flux should be an even function of μ , thus the odd flux moments should vanish. (The curious reader may confirm that odd-degree Legendre polynomials are odd functions on the interval [-1,1].) This provides the (N+1)/2 conditions for each reflecting boundary surface.

If there are no neutrons entering a surface (the vacuum condition) then the angular flux corresponding to directions entering the system should be zero. It is not possible to rigorously enforce this condition in P_N theory. A reasonable approach, however, is to require that, for example, on the right-most boundary of a one-dimensional system (say at z = b),

$$\int_{-1}^{0} P_n(\mu) \psi_g(z_b, \mu) d\mu = 0 \tag{32}$$

for odd i. In P_1 theory, observe that this requirement becomes

$$\int_{-1}^{0} \mu \psi_g(b, \mu) d\mu = 0, \tag{33}$$

which is equivalent to requiring the incoming partial current, $j_g^-(z_b)$, to be zero. Expanding the flux we see that

$$\int_{-1}^{0} \mu \left[\frac{1}{2} \psi_{g,0}(z_b) + \frac{3}{2} \mu \psi_{g,1}(z_b) \right] d\mu = -\frac{1}{4} \psi_{g,0}(z_b) + \frac{1}{2} \psi_{g,1}(z_b) = 0.$$
 (34)

We will revisit this result when derive diffusion theory.

4.2 The Discrete Ordinates Method

Rather than expanding the angular flux in a series of Legendre polynomials, the discrete ordinates approximation to the transport equation attempts a more direct approach of angular discretization. The method begins by selecting a set of M discrete directions (or ordinates). In one dimension the only angular variable is the polar angle, so we may select a set

$$\mu_1 < \mu_2 < \ldots < \mu_M$$

where, as usual, $\mu_m = \cos \theta_m$ for a discrete polar angle θ_m .

We now evaluate the transport equation, Eq. (25), at each of the discrete directions, producing

$$\mu_{m} \frac{\partial \psi_{g,m}(z)}{\partial z} + \Sigma_{g}(z)\psi_{g,m}(z) = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \Sigma_{g'\to g}^{\ell}(z) P_{\ell}(\mu_{m}) \int_{-1}^{1} P_{\ell}(\mu')\psi_{g'}(z,\mu') d\mu'$$
(35)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^G \int_{-1}^1 \nu \Sigma_{f,g'}(z) \psi_{g'}(z,\mu') d\mu'$$
 (36)

where $\psi_{g,m}(z) \equiv \psi_g(z,\mu_m)$. To complete the discretization we must approximate the angular integrals appearing in the scattering and fission terms on a discrete basis. The fact that we have already selected the set of points μ_i suggests that a numerical quadrature would be appropriate. Thus for each ordinate μ_m we assign a corresponding weight w_m so that

$$\int_{-1}^{1} f(\mu)d\mu \approx \sum_{m=1}^{M} f(\mu_m)w_m$$

for a suitably "well-behaved" function $f(\mu)$. The transport equation now becomes

$$\mu_{m} \frac{\partial \psi_{g,m}(z)}{\partial z} + \Sigma_{g}(z)\psi_{g,m}(z) = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \Sigma_{g'\to g}^{\ell}(z) P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m})\psi_{g',m'}(z) w_{m'}$$
(37)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g'}(z) \sum_{m'=1}^{M} \psi_{g',m'}(z) w_{m'}.$$
 (38)

Eq. (38) is the discrete ordinates transport equation, also known as the S_N equation, where N is the number of discrete directions, which in this case we have called M. The discrete ordinates equation has been completely discretized with respect to the angular variable. The discrete angular fluxes $\psi_{g,m}(z)$ can be solved by simultaneously solving the GM equations represented by Eq. (38).

The selection of the μ_m and w_m parameters comprising the discrete ordinates approximation has an important effect on the accuracy of the solution. Selecting these parameters from the Gauss-Legendre quadrature (where the μ_m are the roots of the Legendre polynomial $P_M(\mu)$) is a common choice that produces a high order of accuracy.

4.3 Spatial Discretization of the Discrete Ordinates Equations

At this point we have discretized the energy and angle variables using the multigroup and P_N or S_N methods, respectively. The only phase variable that has not been discretized is the spatial variable. In this section we will complete the phase space discretization of the discrete ordinates equation by introducing a spatial discretization.

Because we are considering only 1D domains in a Cartesian space, our geometry is simply a closed interval [a, b]. (Theoretically we could also choose an infinite or semi-infinite interval in which one or both end points go to infinity. This is sometimes done when studying cosmic particle transport.) The interval [a, b] can be discretized by defining a set of contiguous, non-overlapping regions whose union is equal to the interval. This is called a partition of the interval, but it is really just a mathematically formal way of saying that we chop the interval into lots of little intervals. Let's call each one of these regions a cell and define z_i as the center of cell i, as shown in Figure 1. The boundaries of cell i we'll call $z_{i-1/2}$ (on the left) and $z_{i+1/2}$ (on the right) so that the width of the cell is $\Delta z_i = z_{i+1/2} - z_{i-1/2}$. If the cells are numbered sequentially from 1 to I then we will have $z_{1/2} = a$ and $z_{I+1/2} = b$, the boundaries. We will finally assume that cross sections are spatially constant within each cell and write $\Sigma_g(z)$ as $\Sigma_{g,i}$ for $z \in [z_{i-1/2}, z_{i+1/2}]$.

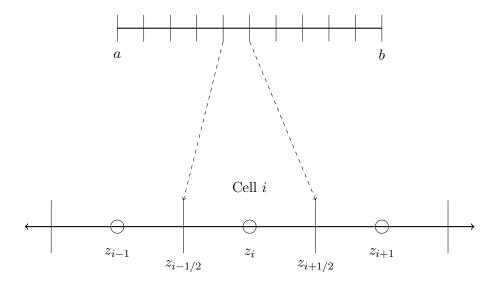


Figure 1: Neutron-nucleus collision in LAB coordinates.

Next integrate the discrete ordinates transport equation (38) over cell i. The result is

$$\mu_{m} \left[\psi_{g,m}(z_{i+1/2}) - \psi_{g,m}(z_{i-1/2}) \right] + \Sigma_{g,i} \int_{z_{i-1/2}}^{z_{i+1/2}} \psi_{g,m}(z) dz = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \int_{z_{i-1/2}}^{z_{i+1/2}} \psi_{g',m}(z) dz + \lambda \frac{\chi_{g}}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g',i} \sum_{m'=1}^{M} w_{m'} \int_{z_{i-1/2}}^{z_{i+1/2}} \psi_{g',m'}(z) dz.$$

$$(40)$$

Next we will shift notation by defining $\psi_{g,m,i\pm 1/2} = \psi_{g,m}(z_{i\pm 1/2})$. We will also define the cell-averaged flux as $\psi_{g,m,i} = \frac{1}{\Delta z_i} \int_{z_{i-1/2}}^{z_{i+1/2}} \psi_{g,m}(z) dz$. The transport equation then becomes

$$\mu_{m} \left[\psi_{g,m}(z_{i+1/2}) - \psi_{g,m}(z_{i-1/2}) \right] + \sum_{g,i} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{G} \sum_{\ell=0}^{M} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) \sum_{m'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{m'} \psi_{g',m',i} \Delta z_{i} = \Delta z_{i} \sum_{g'=1}^{M} P_{\ell}(\mu_{m}) w_{$$

$$+ \Delta z_i \lambda \frac{\chi_g}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g',i} \sum_{m'=1}^{M} w_{m'} \psi_{g',m',i}.$$
 (42)

Alas, this is a fully discrete form of the transport equation. If we have I spatial cells, however, then the total number of unknowns for each group and discrete ordinate will be the number of cell-interface fluxes (minus the incoming boundary) plus the number of cell-averaged fluxes, for a total of 2I. To be able to solve this set of equations we need to introduce auxiliary equations relating the cell interface and average fluxes. In the diamond-difference formulation of the discrete ordinates equation we assume the relationship

$$\psi_{g,m,i} = \frac{1}{2} \left(\psi_{g,m,i-1/2} + \psi_{g,m,i+1/2} \right) \tag{43}$$

for each cell.

4.4 Solving the Discrete Ordinates Equation

Eqs. (42) and (43) provide a sufficient number of linear, algebraic equations to solve for all of the unknowns $\psi_{g,m,i}$ and $\psi_{g,m,i\pm 1/2}$. There is an efficient way to solve these equations short of simply throwing everything into a gigantic matrix known as *sweeping*, although to be fair, sweeping is really just a matrix factorization based as much on intuition as mathematics.

To describe the sweeping algorithm let us temporarily assume that the scattering and fission sources are known and lumped into an effective source term,

$$q_{g,m,i} = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_m) \sum_{m'=1}^{M} P_{\ell}(\mu_m) w_{m'} \psi_{g',m',i}$$
(44)

$$+ \lambda \frac{\chi_g}{2} \sum_{g'=1}^{G} \nu \Sigma_{f,g',i} \sum_{m'=1}^{M} w_{m'} \psi_{g',m',i}$$
(45)

so that the transport equation becomes

$$\mu_m \left[\psi_{q,m}(z_{i+1/2}) - \psi_{q,m}(z_{i-1/2}) \right] + \sum_{q,i} \psi_{q',m',i} \Delta z_i = \Delta z_i q_{q,m,i}. \tag{46}$$

Recall that boundary conditions in transport theory consist of specifying the angular flux entering a system. Thus presently we must specify $\psi_{g,m,1/2}$ for $\mu_m > 0$ and $\psi_{g,m,I+1/2}$ for $\mu_m < 0$.

A transport sweep consists of starting at a boundary then solving for all downstream neutron fluxes in a particular direction. For example if we pick a direction $\mu_m > 0$ then we should start at the left boundary and sweep to the right, cell by cell. As we encounter each cell we know from the previous cell the value of $\psi_{g,m,i-1/2}$. To determine the $\psi_{g,m,i}$ we use the diamond difference relation to eliminate $\psi_{g,m,i+1/2}$ from the transport equation. The result is

$$\psi_{g,m,i} = \frac{q_{g,m,i}\Delta z_i + 2\psi_{g,m,i-1/2}}{\sum_{g,i}\Delta z_i + 2\mu_m}.$$
(47)

Once this cell-averaged flux has been computed we may again call on the diamond difference relationship to calculate the flux on the cell's right boundary,

$$\psi_{a,m,i+1/2} = 2\psi_{a,m,i} - \psi_{a,m,i-1/2}.\tag{48}$$

The flux $\psi_{g,m,i+1/2}$ is then becomes the *left* boundary flux of the *next* cell, and the sweep continues. The same procedure holds for $\mu_m < 0$, but the sweep is in the opposite direction.

4.5 Inner (Scattering) and Outer (Fission) Iterations

In the previous discussion we assumed that the scattering and fission sources were known. In reality they are not, as they both depend on the angular flux which is the solution itself. This discrepancy is treated through a nesting of iterations. Algorithm 1 shows the most common implementation of this nesting, where inner scattering iterations converge the scattering source and outer fission iterations converge the fission source. The fission iteration in this case is actually a *power iteration*, used to converge the eigenvalue λ . ("Power iteration" refers to a specific numerical method for calculating eigenvalues, not the reactor power.)

Algorithm 1 Transport Solution

```
1: Initialize \psi_{q,m,i} (initial guess)
  2: \lambda^{(0)} = 1.0
  3: for j = 1, 2, \dots do
                                                                                                                                                                                                                                                ▶ Fission iteration
                  Set q_{g,m,i}^{f,(j)} = \lambda^{(j-1)} \frac{\chi_g}{2} \sum_{g'=1}^G \nu \sum_{f,g',i} \sum_{m'=1}^M w_{m'} \psi_{g',m',i}

Set F(j) = 2 \sum_{i=1}^I \Delta z_i \sum_{g=1}^G q_{g,m,i}^{f,(j)}
  5:
                  for k = 1, 2, ... do

Set q_{g,m,i}^{s,(k)} = \sum_{g'=1}^{G} \sum_{\ell=0}^{\infty} \frac{2\ell+1}{2} \sum_{g'\to g,i}^{\ell} P_{\ell}(\mu_m) \sum_{m'=1}^{M} P_{\ell}(\mu_m) w_{m'} \psi_{g',m',i}

Solve TE with q_{g,m,i} = q_{g,m,i}^{s,(k)} + q_{g,m,i}^{f,(j)}
If \max_{g,m,i} \left| q_{g,m,i}^{s,(k)} - q_{g,m,i}^{s,(k-1)} \right| < \varepsilon_s then terminate scattering iter.

⊳ Scattering iteration

  6:
  7:
  8:
  9:
                   end for
10:
                  If \max_{g,m,i} \left| q_{g,m,i}^{f,(j)} - q_{g,m,i}^{f,(j-1)} \right| < \varepsilon_f then terminate fission iter. Set \lambda^{(j)} = \lambda^{(j-1)} \frac{F^{(j-1)}}{F^{(j)}}
11:
12:
13: end for
```