



**DEPARTAMENTO DE ELETRÓNICA, TELECOMUNICAÇÕES
E INFORMÁTICA**

LICENCIATURA EM ENGENHARIA DE COMPUTADORES E INFORMÁTICA

ANO 2025/2026

REDES DE COMUNICAÇÕES II

LABORATORY GUIDE NO. 1:

INTERIOR GATEWAY IP ROUTING

In this Laboratory Guide:

- all routers should use the IOS image 15.1(4) of routers 7200 (provided in the elearning page of RC II) configured with two network adapters:
 - C7200-IO-2FE in slot 0, providing 2 FastEthernet routing interfaces: f0/0 and f0/1
 - PA-2FE-TX in slot 1, providing 2 FastEthernet routing interfaces: f1/0 and f1/1
- all switches should use the basic Ethernet Switch available in GNS3

1. Initial network setup + VRRP


Consider the following network setup composed of 6 routers, seven IP transit networks (one IP network per point-to-point link between routers) and 3 stub networks (one IP network per switch). Create a GNS3 template with all equipment and all links. Then, run the template.

On each interface of each router:

- configure an IP address (following the IP network addresses in the figure) with the host part of the address given by the number of the router name (for example, interface f1/0 of router R3 is configured with the command `ip address 192.0.35.3 255.255.255.0`)
- activate the interface (command `no shutdown`)

Then, on each PC, configure its IP address (following the IP network addresses in the figure) and the IP address of its default gateway in the following way:

- the host part of the IP address is equal to 100 for all PCs (for example, PC1 with 192.1.1.100)
- the default gateway of PC1, PC2 and PC3 is R2, R5 and R5, respectively.

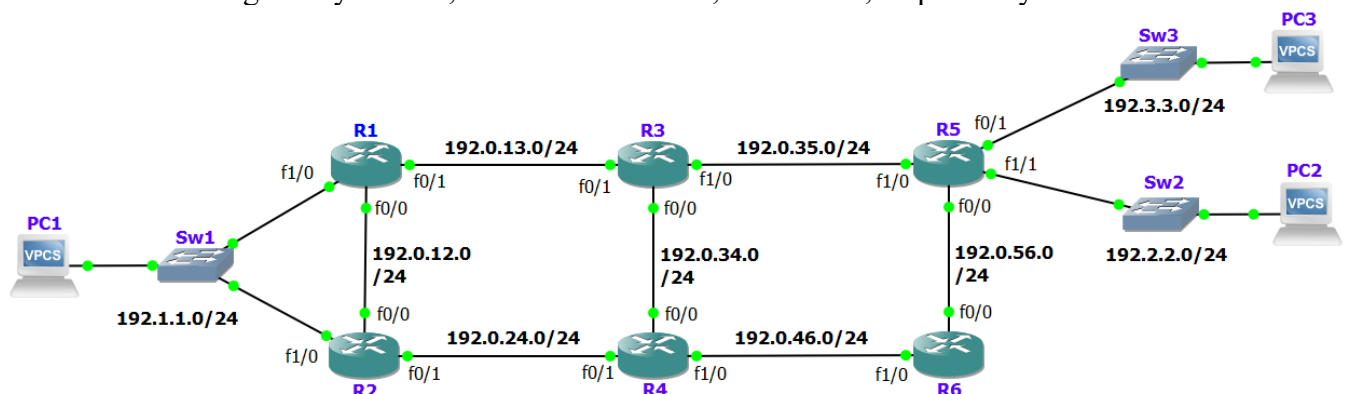

Configuration of IP address and default gateway in PC1:

```
PC1> ip 192.1.1.100/24 192.1.1.2
PC1> save
```

Check the resulting configuration:

```
PC1> show ip
```

- 1.a.** Check the IP routing table of each router. Verify that, on each router, its routing table includes all directly connected IP networks (if not, there are configuration errors that must be identified and corrected) and does not include any remote IP network.

Check in router R1 the complete IP routing table:

```
R1# show ip route
```

Check in router R1 the IP routing table without the Link IP addresses:

```
R1# show ip route | exclude L
```

- 1.b.** First, start a never-ending ping command at PC1 to the address of the interface f0/0 of router R1 (at PC1, run `ping 192.0.12.1 -t`). Then, shut down the interface f1/0 of router R2 (simulating a link failure). Check that the ping connectivity fails and explain why.

o pc1 deixou de ter uma default gateway, logo deixou de poder
comunicar com dispositivos fora da sua rede local.

- 1.c. Activate the interface `f1/0` of router R2 (i.e., run `no shutdown` on the interface) and check that the ping connectivity is recovered. Then, stop the previous never-ending ping command (by inserting `Ctrl+C` at PC1).
- 1.d. Configure the Virtual Router Redundancy Protocol (VRRP) in the interfaces `f1/0` of both routers R1 and R2 to provide a virtual default gateway address 192.1.1.254 to the LAN of Sw1. Use the default VRRP priority value in R2 and use the VRRP priority value 80 in R1. IMPORTANT: you must also change the default gateway address of PC1 to 192.1.1.254.

Configuration of VRRP in the interface `f1/0` of router R1:

```
R1# configure terminal
R1(config)# interface f1/0
R1(config-if)# vrrp 1 ip 192.1.1.254
R1(config-if)# vrrp 1 priority 80    (to change the default value 100)
R1(config-if)# end
R1# write
```

- 1.e. Start a Wireshark capture in link PC1-Sw1 and do not stop until it is explicitly requested. By analyzing the VRRP packets, explain how VRRP works and what is the current master virtual default gateway.
- 1.f. Shutdown interface `f1/0` of router R2 (simulating a link failure). Analyze the VRRP messages and identify the resulting master virtual default gateway. **O master é o R1**
- 1.g. Activate the interface `f1/0` of router R2. Analyze the VRRP messages and identify the resulting master virtual default gateway. **O master volta a ser o R2 porque a conexão foi reestabelecida.**
- 1.h. Start a never-ending ping command at PC1 to the address of the interface `f0/0` of router R1. Run the following steps:
 - (a) shutdown the interface `f1/0` of router R2,
 - (b) wait for 15 seconds,
 - (c) activate again the interface `f1/0` of router R2.

Stop the never-ending ping command in PC1. Stop the Wireshark capture and analyze the ICMP packets. Through the analysis of the ICMP messages, explain what happened to the connectivity of the ping command after step (a) and after step (c).

IMPORTANT: Save the current GNS3 template to be used as the initial setup of Sections 2 and 3.

1 e. São trocados frequentemente pacotes vrrp entre os routers configurados com esse protocolo para assegurar que se mantêm ativos. É definida uma gateway virtual e atribuída aos dispositivos nessa rede e os routers são configurados em termos de prioridade: master, o router que é a default gateway dos dispositivos e backup, o router que assume a função de gateway caso o master falhe. Nesse caso, a gateway deixa de ser através da interface física do master e passa a ser feita pela interface virtual do router de backup.

O master atual é o R2.

2 b. The port number is 520, on both. the origin ip is the ip of the router interface on the lan 192.1.1.0. the destination ip is 224.0.0.9 on both (multicast address).

c. RIP response messages. request messages are only sent when something changes in the topology or when the routers are started.

Laboratory Guide No. 1

2 d. The protocol is configured with split horizon. in R1 DV, the network 192.0.12.0 has a metric of 1 because, if R2 uses R1 as a next hop neighbor router, it has to hop once to reach the network. its the same for the other entries of R1 and R2.

2. IP routing based on RIP version 2

Open the GNS3 template saved in Section 1 and save it as a new template. Run the new template and activate the RIPv2 routing protocol only in routers R1 and R2. On each router of these routers, include in the RIP process all directly connected IP networks.

Activation of RIPv2 in router R1:

```
R1# configure terminal
R1(config)# router rip
R1(config-router)# version 2
R1(config-router)# network 192.1.1.0
R1(config-router)# network 192.0.12.0
R1(config-router)# network 192.0.13.0
R1(config-router)# end
R1# write
```

Check the resulting configuration:

```
R1# show configuration
```

2 a. o R1 adiciona à sua routing table a rede que o R2 conhece (está diretamente conectado a / interface f01 do R2) e as vias (suas interfaces) que dispõe para chegar ao R2
É uma rede transit pois, na mesma, é partilhada routing information sobre R1 e R2. numa stub isso não seria possível (essa troca de informação não aconteceria e as interfaces dos routers seriam definidas como passive interfaces para os protocolos nao as usarem para troca de informação de routing)

2.a. Analyze the IP routing tables of all routers. Justify the entries added by RIP in routers R1 and R2. Is the network 192.1.1.0/24 a transit or a stub network for the RIP protocol?

Start two Wireshark captures: one in link PC1-Sw1 and another in link R1-R2. Stop the captures when you have at least a total of 6 RIPv2 messages on each capture.

IMPORTANT NOTE ON THE FORWARDING OF MULTICAST FRAMES IN A SWITCH: By default, an Ethernet frame for a multicast address is treated by a Switch in the same way as a frame for the broadcast address: the frame is forwarded by the Switch to all ports, except the incoming port.

Based on the observed RIPv2 messages in the two captures:

- 2.b.** Check that RIP runs over UDP (what are the port numbers?) which runs over IPv4 (what are the origin and destination IP addresses?).
- 2.c.** Check the type of observed RIP messages and how periodically they are sent by each router.
- 2.d.** Analyze the distance vector sent in the RIP messages by each router on each link. Is the protocol configured with or without split-horizon? Justify each network and associated metric of the distance vector announced by R1 and by R2.

Configure the interfaces f1/0 of both routers R1 and R2 as passive interfaces for the RIP protocol.

Configuration of interface f1/0 as a passive interface for RIP in router R1:

```
R1# configure terminal
R1(config)# router rip
R1(config-router)# passive-interface f1/0
R1(config-router)# end
R1# write
```

2 e. Its a stub network, because there are passive interfaces and that network is a terminal network. there aren't any other networks connected to that one.

2.e. Analyze the IP routing tables of routers R1 and R2. Justify again the entries added by RIP. In this case, is the network 192.1.1.0/24 a transit or a stub network? Why?

Again, start two Wireshark captures: one in link PC1-Sw1 and another in link R1-R2. Stop the captures when you have at least a total of 6 RIPv2 messages on the capture in link R1-R2.

2.f. Do you capture any RIP message in link PC1-Sw1? Why? Analyze and justify the distance vectors sent in the RIP messages observed in link R1-R2.

Activate the RIPv2 routing protocol in all other routers (i.e., R3, R4, R5 and R6). Include all directly connected IP networks in the RIP process of routers R3, R4 and R6. On the other hand, include only the networks 192.0.35.0/24 and 192.0.56.0/25 in the RIP process of router R5.

2 g. As redes dos sw 2 e 3 só são reconhecidas pelo r5 pois estas não foram adicionadas ao protocolo rip do r5. Logo os outros routers não reconhecem essas redes.

- 2.g.** Analyze the IP routing tables of all routers. Verify that each router always selects the next-hop neighbor routers providing the minimum number of hops to each known remote IP network. Verify also that the IP networks of Sw2 and Sw3 are only known by router R5 and explain why.

Configure router R5 to announce itself to all other RIP routers as the destination of a default RIP route. Check (through ping) that PC1 has connectivity with both PC2 and PC 3 (if not, there are configuration errors that must be identified and corrected).

Configuration of router R5 as the destination of a default RIP route:

```
R5# configure terminal
R5(config)# router rip
R5(config-router)# default-information originate
R5(config-router)# end
R5# write
```

- 2.h.** Analyze the IP routing tables of all routers. Justify the new entries on the routing tables due to the configuration of the default RIP route.

a new entry was created on the router's routing table for the default RIP route. Information sent to any network which isn't on the routers routing tables is sent through that route.

3. IP routing based on OSPF version 2

Open the GNS3 template saved in Section 1 and save it as a new template. Run the new template and activate the OSPFv2 routing protocol in all interfaces of routers R1 and R2. Consider all interfaces in OSPF Process No. 1 and in the backbone area (i.e., area 0).

Activation of OSPFv2 in all interfaces of router R1 with OSPF Process No. 1 and area 0:

```
R1# configure terminal
R1(config)# interface f0/0
R1(config-if)# ip ospf 1 area 0
R1(config-if)# interface f0/1
R1(config-if)# ip ospf 1 area 0
R1(config-if)# interface f1/0
R1(config-if)# ip ospf 1 area 0
R1(config-if)# end
R1# write
```

Check the resulting configuration:

```
R1# show configuration
```

- 3.a.** Analyze the IP routing tables of all routers. Justify the entries added by OSPF in routers R1 and R2. Is the network 192.1.1.0/24 a **transit** or a stub network? **transit. R1 and R2 can share routing information.**

Configure the interfaces f1/0 of both routers R1 and R2 as passive-interfaces for the OSPF protocol.

Configuration of interface f1/0 as a passive-interface for OSPF Process No. 1 in router R1:

```
R1# configure terminal
R1(config)# router ospf 1
R1(config-router)# passive-interface f1/0
R1(config-router)# end
R1# write
```

3b. Stub, R1 and R2 can NOT share routing information and this network is now a terminal network

- 3.b.** Analyze the IP routing tables of routers R1 and R2. Justify again the entries added OSPF. In this case, is the network 192.1.1.0/24 a transit or a **stub** network? Why?

Start a Wireshark capture in link R1-R2 and stop when 6 OSPF messages are captured. Analyze the captured OSPF messages to answer **3.b**, **3.c** and **3.d**.

- 3.b.** Check that OSPF runs over IPv4 (what are the origin and destination IP addresses?). **origin ip: r1 or r2 destination ip: 224.0.0.5**
- 3.c.** Justify the type of observed OSPF messages and how periodically they are sent by each router.
- 3.d.** What is the OSPF Router ID of routers R1 and R2? Which router is the Designated Router and the Backup Designated Router on link R1-R2? How is reliability guaranteed by the content of these messages? **R_ID_R1: 192.1.1.1; R_ID_R2: 192.1.1.2**
- 3.e.** Run on router R1 and router R2 the commands: **DR: R1; BDR: R2**
- ```
show ip ospf interface brief
show ip ospf neighbor
```
- when exchanging hello packets, the routers maintain their LSDBs up to date and have information about every router with OSPF and know how to get there**

and verify that the information shown by these commands confirms your conclusions in **3.d**.

To analyze the LSAs (in this case, Router Link States and the Net Link States) database information, run on router R1 and on router R2 the commands:

```
show ip ospf database
show ip ospf database router
show ip ospf database network
```

- 3.f.** Verify that the information shown in both routers is the same and explain why. Based on this information:

- (a) justify the number of Router Link States and Net Link States,
- (b) verify that the information represents the network topology associated with R1 and R2,
- (c) justify the router advertiser of each LSA,
- (d) verify that the default OSPF cost of each interface agrees with the costs of the IP routing tables observed in **3.b**.

Activate the OSPFv2 routing protocol in all other routers (i.e., R3, R4, R5 and R6). Include all interfaces in the OSPF process of routers R3, R4 and R6. On the other hand, include only the interfaces f0/0 and f1/0 in the OSPF process of router R5. Again, consider the interfaces in the OSPF Process No. 1 and in the backbone area (i.e., area 0).

- 3.g.** Analyze the IP routing tables of all routers. Verify that each router always selects the next-hop neighbor routers providing the minimum cost paths to each known remote IP network. Verify also that the IP networks of Sw2 and Sw3 are only known by router R5 and explain why.
- 3.h.** Check the Router Link State of router R5 (in any router) and justify why the IP networks of Sw2 and Sw3 are not learned by the other routers.

Start a Wireshark capture in link R1-R2 and stop it only when explicitly requested. Then, change the OSPF cost of interface f1/0 of router R3 to the value of 3.

Configuration of the OSPF cost on interface f1/0 of router R3:

```
R3# configure terminal
R3(config)# interface f1/0
R3(config-if)# ip ospf cost 3
R3(config-if)# end
R1# write
```

- 3.i.** Analyze and justify: (a) the changes in the IP routing tables of routers R1 and R2, (b) the OSPF packets captured in link R1-R2 during the network changes.

Now, shut down the interface f1/0 of router R4 (simulating a link failure).

**IMPORTANT NOTE ON OSPF CONCERNING THE AGE OF LSAs:** Each LSA has an age, which indicates whether the LSA is still valid (once the LSA reaches the age of 1 hour, it is discarded). During the aging process, the router advertiser of each LSA sends a refresh packet every 30 minutes (whether there has been a change in the network topology or not) to prevent the LSA from being discarded by all other routers. On the other hand, if an existing LSA is no longer valid, its router advertiser sends the LSA with an age of 1 hour so that the LSA is immediately discarded by all other routers.

- 3.j.** Again, analyze and justify: (a) the changes in the IP routing tables of routers R1 and R2, (b) the OSPF packets captured in link R1-R2 during the network changes.

Stop the Wireshark capture running in link R1-R2 Change again the OSPF cost of interface f1/0 of router R3 to the default value of 1 and activate the interface f1/0 of router R4, to reach the network state in 3.g.

Then, configure router R5 to announce itself to all other OSPF routers as the destination of a default OSPF route:

```
R5# configure terminal
R5(config)# router ospf 1
R5(config-router)# default-information originate always
R5(config-router)# end
R5# write
```

Check (through ping) that all pairs of PCs have connectivity between them (if not, there are configuration errors that must be identified and corrected).

- 3.k.** Analyze the IP routing tables of routers R1 and R2. Justify the new entries due to the configuration of the default OSPF route. Based on the type of external route (E1 or E2) added in the IP routing tables, explain their cost values in the two routers.
- 3.l.** Run command `show ip ospf database` (in any router) and identify the new type of LSA associated with the external route.

Reconfigure the default OSPF route announcement in R5 to consider an external cost of 3:

```
R5# configure terminal
R5(config)# router ospf 1
R5(config-router)# default-information originate always metric 3
R5(config-router)# end
R5# write
```

- 3.m.** Analyze the IP routing tables of routers R1 and R2. Justify the entries due to the reconfiguration of the default OSPF route.
- 3.n.** Run command `show ip ospf database` (in any router) and analyze the changes in the LSA associated with the external route.

Reconfigure the default OSPF route announcement in R5 to announce an external route of type E1:

```
R5# configure terminal
R5(config)# router ospf 1
R5(config-router)# default-information originate always metric-type 1
R5(config-router)# end
R5# write
```

- 3.o.** Analyze the IP routing tables of routers R1 and R2. Justify the entries due to the reconfiguration of the default OSPF route.
- 3.p.** Run command `show ip ospf database` (in any router) and analyze the changes in the LSA associated with the external route.

**IMPORTANT:** Save the current GNS3 template to be used as the initial setup of Sections 4 and 5.




## 4. IPv6 routing based on OSPF version 3

Open the GNS3 template saved in Section 3 and save it as a new template. Run the new template (recall that this template has OSPFv2 running in all routers for IPv4 routing) and configure the global IPv6 addresses as specified in the next figure (where IPv6 routing is supported only by routers R1, R3 and R5).

Like in IPv4 addressing, use the number of the router name as the host part of the IPv6 addresses in the interfaces of the routers (for example, interface f1/0 of router R3 is configured with the IPv6 address 2001:0:35::3/64) and use 100 as the host part of the IPv6 addresses of the PCs (for example, PC1 is configured with the address 2001:1:1::100/64).

You need also to activate the IPv6 routing in routers R1, R3 and R5.

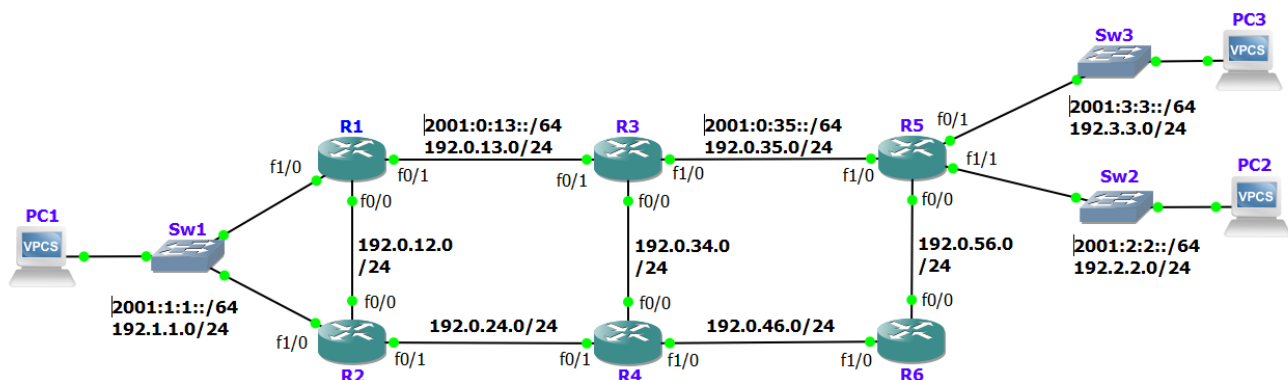

IPv6 routing activation and interface address configuration in router R1:

```
R1# configure terminal
R1(config)# ipv6 unicast-routing
R1(config)# interface f1/0
R1(config-if)# ipv6 address 2001:1:1::1/64
R1(config-if)# interface f0/1
R1(config-if)# ipv6 address 2001:0:13::1/64
R1(config-if)# end
R1# write
```

Configuration of the IPv6 address in PC1:

```
PC1> ip 2001:1:1::100/64
PC1> save
```

Check the resulting configuration:

```
PC1> show ipv6
```

**4.a.** Check the IPv6 routing table of routers R1, R3 and R5. Verify that, on each router, its routing table includes the directly connected IPv6 networks and does not include any remote IP network.

Check in router R1 the complete IPv6 routing table:

```
R1# show ipv6 route
```

Check in router R1 the IPv6 routing table without the Link IPv6 addresses:

```
R1# show ipv6 route | exclude L
```

**4.b.** Run the command `show ipv6 interface brief` on routers R1, R3 and R5 and check that besides the global IPv6 address, a link-local IPv6 address is also automatically configured to each interface.

Activate the OSPFv3 routing protocol in routers R1, R3 and R5. Include all IPv6 interfaces in the OSPF process of routers R1 and R3. On the other hand, include only the interface f1/0 in the OSPF process of router R5. Consider the interfaces in the OSPF Process No. 1 and in the backbone area (i.e., area 0)

Activation of OSPFv3 in all IPv6 interfaces of router R1 with OSPF Process No. 1 and area 0:

```
R1# configure terminal
R1(config)# interface f0/1
R1(config-if)# ipv6 ospf 1 area 0
R1(config-if)# interface f1/0
R1(config-if)# ipv6 ospf 1 area 0
R1(config-if)# end
R1# write
```

Check the resulting configuration:

```
R1# show configuration
```

- 4.c.** Analyze the IPv6 routing tables of routers R1, R3 and R5. Justify the OSPF entries that were added by the OSPFv3 protocol and their costs. What are the IPv6 addresses of the next-hop routers in the OSPF entries?

Now, configure router R5 to announce itself to all other OSPFv3 routers as the destination of a default OSPF route:

```
R5# configure terminal
R5(config)# ipv6 router ospf 1
R5(config-rtr)# default-information originate always
R5(config-rtr)# end
R5# write
```

- 4.d.** Check (through ping) that there is IPv6 connectivity between all PCs. Analyze the IPv6 routing tables of routers R1 and R3. Justify the new entries due to the configuration of the default OSPF route. Based on the type of external route (E1 or E2) inserted in the IPv6 routing tables, explain their cost values in the two routers.


To analyze the LSAs database information, run on routers R1, R2 and R3 the commands:

```
show ipv6 ospf database
show ipv6 ospf database router
show ipv6 ospf database net
show ipv6 ospf database prefix
show ipv6 ospf database link
```

- 4.e.** First, check that the IDs of the LSAs are based on the IPv4 addresses selected as Router ID by the routers. Verify also that the information shown in the routers is the same concerning the Router LSAs, the Net LSAs, the Intra Area Prefix LSAs and the AS External LSAs. On the other hand, the Link (Type-8) LSAs are different on different routers.
- 4.f.** Then, based on the information shown, check that:
- there are 3 Router LSAs, one per IPv6 router
  - there are 2 Net LSAs, one per IPv6 transit network
  - there are 3 Intra Area Prefix LSAs, one per global IPv6 prefix (each IPv6 prefix is announced by the Designated Router of the connection where the IPv6 prefix is used)
  - there is 1 AS External LSA, corresponding to the configured default OSPF route
  - the Link LSAs contain the link-local and global IPv6 prefixes of the router (where you see the information) and of its neighbor routers

## 5. IP routing with different routing domains

Open the GNS3 template saved in Section 3 and save it as a new template. Run the new template (recall that this template has OSPFv2 running in all routers for IPv4 routing). Next, the aim is to have 2 routing domains (one RIP domain and one OSPF domain) and one boundary router (router R3) connecting the two domains as illustrated in the next figure.

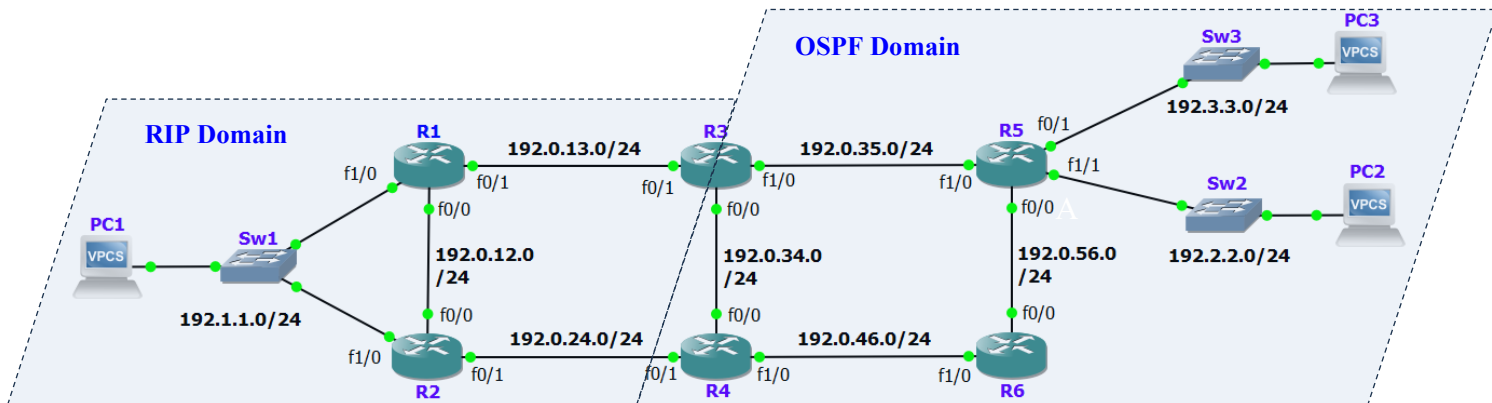

To reach this setting, change the routing configuration of the routers in the following way:

Routers R4, R5 and R6:

- keep the current configuration (which includes the default OSPF route configured in R5)

Router R3:

- remove interface f0/1 from the OSPF Process No. 1
- activate RIPv2 including only the directly connected network 192.0.13.0 in the RIP process

Routers R1 and R2

- eliminate the OSPF Process No. 1
- activate RIPv2 including all directly connected IP networks
- configure interfaces f1/0 as passive-interfaces for the RIP protocol

Removal of interface f0/1 from the OSPF Process No. 1 in router R3:

```
R3# configure terminal
R3(config)# interface f0/1
R3(config-if)# no ip ospf 1 area 0
R3(config-if)# end
R3# write
```

Elimination of OSPF Process No. 1 in router R1:

```
R1# configure terminal
R1(config)# no router ospf 1
R1(config)# end
R1# write
```

**5.a.** Analyze the IP routing table of all routers and justify why:

- a router in one domain only learns the remote IP networks of its domain and following the metrics of the domain's routing protocol,
- router R3 learns all remote IP networks including the default route towards router R5.

In router R3, redistribute the networks learned by RIP into the OSPF protocol:

```
R3# configure terminal
R3(config)# router ospf 1
R3(config-router)# redistribute rip subnets
R3(config-router)# end
R3# write
```

- 5.b.** Analyze the IP routing table of all routers. Check that the IP routing table of the routers in the RIP domain do not change (why?). Check which type of external routes are inserted in the routers of the OSPF domain and what are their external cost values.

In R3, redistribute all individual networks learned by OSPF into RIP with an external cost of 1:

```
R3# configure terminal
R3(config)# router rip
R3(config-router)# no auto-summary
R3(config-router)# redistribute ospf 1 metric 1
R3(config-router)# end
R3# write
```

- 5.c.** Check (through ping) that there is connectivity between all PCs. Analyze the IP routing table of all routers. Check that the IP routing table of the routers in the OSPF domain do not change (why?). Justify how the networks of the OSPF domain are learned in the routers of the RIP domain.

In router R3, eliminate the previous redistribution from OSPF into RIP and configure router R3 to announce itself to all other RIP routers as the destination of a default RIP route:

```
R3# configure terminal
R3(config)# router rip
R3(config-router)# no redistribute ospf 1 metric 1
R3(config-router)# default-information originate
R3(config-router)# end
R3# write
```

- 5.d.** Check again that there is connectivity between all PCs. Analyze the IP routing table of all routers. Check that the IP routing table of the routers in the OSPF domain do not change (why?). Justify how the routers of the RIP domain forward the IP packets for networks outside their domain.
- 5.e.** Compare the two previous routing solutions (the one in **5.c** with the one in **5.d**). In practice, what is the one that you would recommend?