



0


- Search Adafruit
- [SHOP](#)
- [BLOG](#)
- [LEARN](#)
- [FORUMS](#)
- [VIDEOS](#)
- [SIGN IN](#)
- [CLOSE MENU](#)

0 Items

[Sign In](#)



- [SHOP](#)
- [BLOG](#)
- [LEARN](#)
- [FORUMS](#)
- [VIDEOS](#)
- [ADABOX](#)

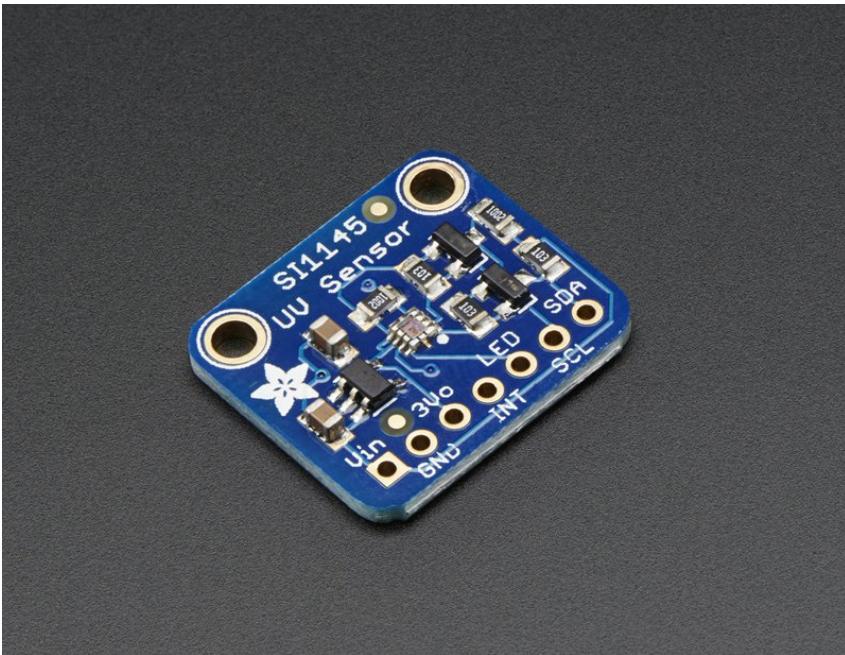

[Adafruit SI1145](#) [Breakout Board - UV](#) [index / IR / Visible](#) [Sensor](#)

[A tutorial to help you get started](#)
with the SI1145 light sensor


- [Overview](#)
- [What is the UV Index?](#)
- [Breakout Pinouts](#)
- [Flora Pinouts](#)
- [Wiring and Test](#)
- [Downloads](#)
- [Features](#)
- [Featured Products](#)
- [Multiple Pages](#)
- [Download PDF](#)

Contributors


[lady ada](#)
Feedback? Corrections?
[SENSORS](#) / [LIGHT ARDUINO COMPATIBLES](#) / [ADAFRUIT FLORA BREAKOUT BOARDS](#)

Overview


by [lady ada](#)

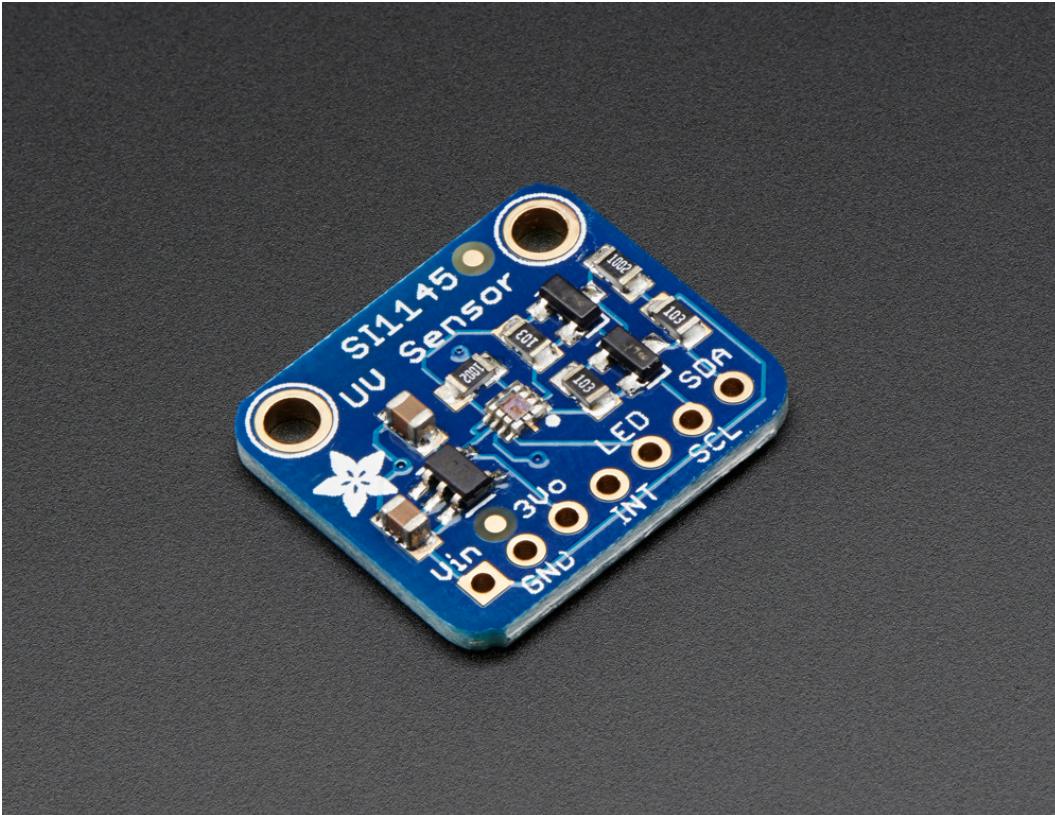

Remember when you were a kid and there was a birthday party at the pool and your parents totally embarrassed you by slathering you all over with sunscreen and you were all "MOM I HAVE ENOUGH SUNSCREEN" and she wouldn't listen? Well, if you had this UV Index sensor connected up to an Arduino you could have said "According to this calibrated SI1145 sensor from SiLabs, the UV index right now is 4.5 which means I do not need more sunscreen" and she would have been so impressed with your project that you could have spent more time splashing around.

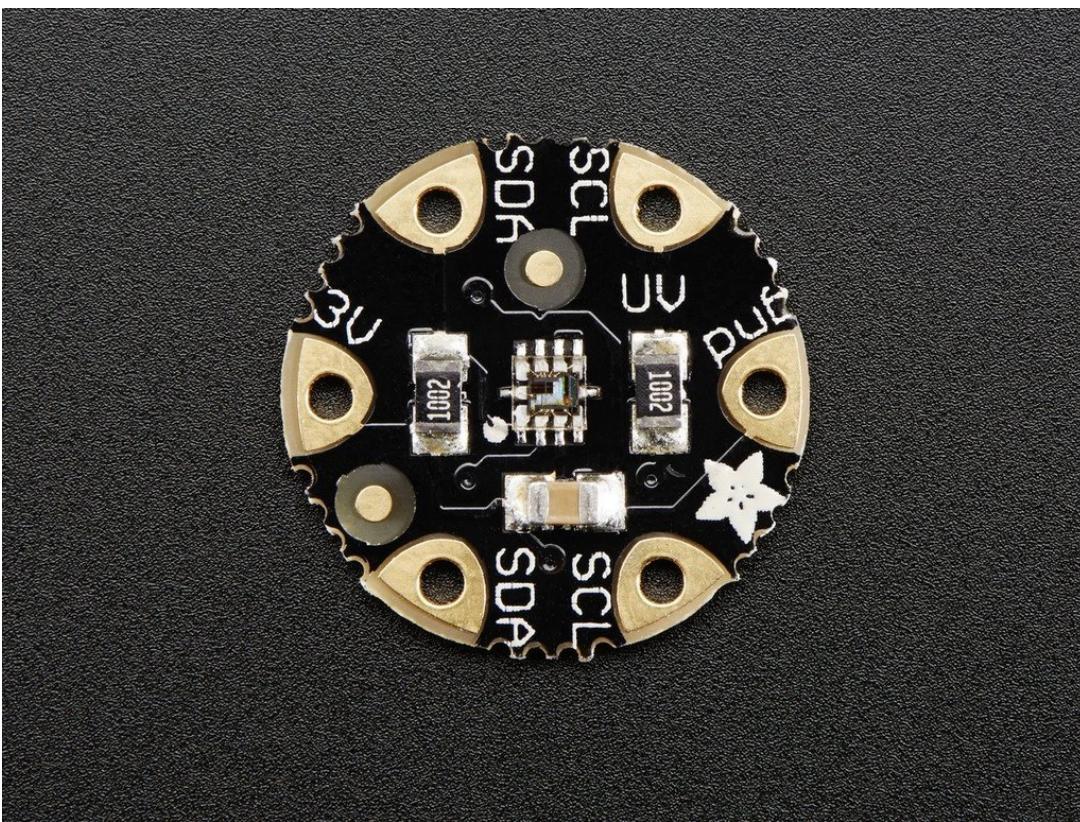

The SI1145 is a new sensor from SiLabs with a calibrated light sensing algorithm that can calculate UV Index. It doesn't contain an actual UV sensing element, instead it approximates it based on visible & IR light from the sun. We took this outside a couple days and compared the calculated UV index with the news-reported index and found it was very accurate! It's a digital sensor that works over I2C so just about any microcontroller can use it. The sensor also has individual visible and IR sensing elements so you can measure just about any kind of light - we only wrote our library to printout the 'counts' rather than the calculate the exact values of IR and Visible light so if you need precision Lux measurement check out the TSL2561. If you're feeling really advanced, you can [connect up an IR LED](#) to the LED pin and use the basic proximity sensor capability that is in the SI1145 as well.

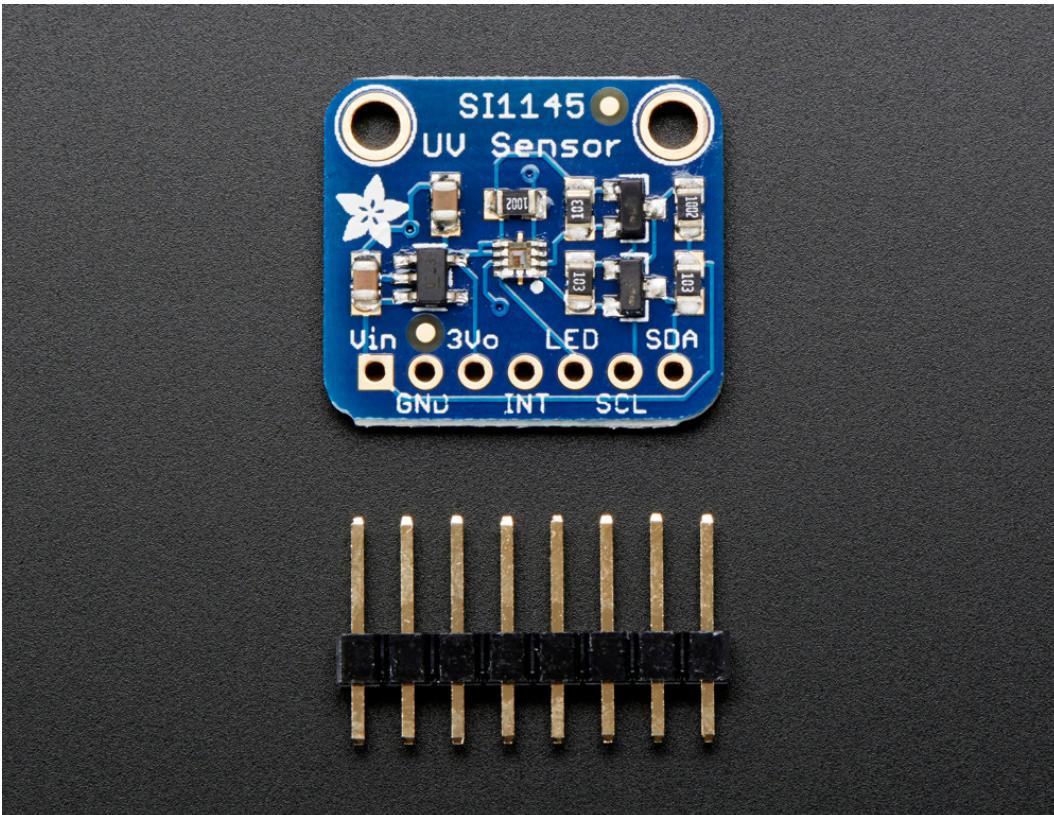

We wrapped this nice little sensor up on a PCB with level shifting and regulation circuitry so you can safely use it with 3 or 5V microcontrollers. If you are using an Arduino, we've got a lovely library already written up with example code so you can quickly read sensor readings and the UV index in under 10 minutes. Each order comes with one fully assembled and tested PCB breakout and a small piece of header. You'll need to solder the header onto the PCB but it's fairly easy and takes only a few minutes even for a beginner.

What is the UV Index?

by [lady ada](#)



UV light is light in the "ultra violet" spectrum, beyond the violet part of visible light. Even though UV is not visible to human eyes it does effect the eyes and skin! UV light is what lets us produce vitamin D, which is essential for humans. But it can also burn skin - what we call a sunburn.

We can measure UV in mW per area, but that's a little tough to keep in your head, especially if the area value is in cm or m or ft. To make it easier for people to track UV safety, the WHO came up with the UV index.

The SI1145 is calibrated to transmit the UV index based on the visible & IR light received, but what do those numbers mean?

As you're probably aware of - if you have lighter skin, you are more likely to get burned. So it's important to watch the UV index and wear sunscreen, hats, and sunglasses when the UV index gets above 4 or so!

[\(UV index text below from epa.gov\)](#)

0 to 2: Low

A UV Index reading of 0 to 2 means low danger from the sun's UV rays for the average person.

- Wear sunglasses on bright days.
- If you burn easily, cover up and use broad spectrum SPF 30+ sunscreen.
- Watch out for bright surfaces, like sand, water and snow, which reflect UV and increase exposure.

3 to 5: Moderate

A UV Index reading of 3 to 5 means moderate risk of harm from unprotected sun exposure.

- Stay in shade near midday when the sun is strongest.
- If outdoors, wear protective clothing, a wide-brimmed hat, and UV-blocking sunglasses.
- Generously apply broad spectrum SPF 30+ sunscreen every 2 hours, even on cloudy days, and after swimming or sweating.
- Watch out for bright surfaces, like sand, water and snow, which reflect UV and increase exposure.

6 to 7: High

A UV Index reading of 6 to 7 means high risk of harm from unprotected sun exposure. Protection against skin and eye damage is needed.

- Reduce time in the sun between 10 a.m. and 4 p.m.
- If outdoors, seek shade and wear protective clothing, a wide-brimmed hat, and UV-blocking sunglasses.
- Generously apply broad spectrum SPF 30+ sunscreen every 2 hours, even on cloudy days, and after swimming or sweating.
- Watch out for bright surfaces, like sand, water and snow, which reflect UV and increase exposure.

8 to 10: Very High

A UV Index reading of 8 to 10 means very high risk of harm from unprotected sun exposure. Take extra precautions because unprotected skin and eyes will be damaged and can burn quickly.

- Minimize sun exposure between 10 a.m. and 4 p.m.
- If outdoors, seek shade and wear protective clothing, a wide-brimmed hat, and UV-blocking sunglasses.
- Generously apply broad spectrum SPF 30+ sunscreen every 2 hours, even on cloudy days, and after swimming or sweating.
- Watch out for bright surfaces, like sand, water and snow, which reflect UV and increase exposure.


11 or more: Extreme

A UV Index reading of 11 or more means extreme risk of harm from unprotected sun exposure. Take all precautions because unprotected skin and eyes can burn in minutes.

- Try to avoid sun exposure between 10 a.m. and 4 p.m.
- If outdoors, seek shade and wear protective clothing, a wide-brimmed hat, and UV-blocking sunglasses.
- Generously apply broad spectrum SPF 30+ sunscreen every 2 hours, even on cloudy days, and after swimming or sweating.
- Watch out for bright surfaces, like sand, water and snow, which reflect UV and increase exposure.

Breakout Pinouts

by [lady ada](#)

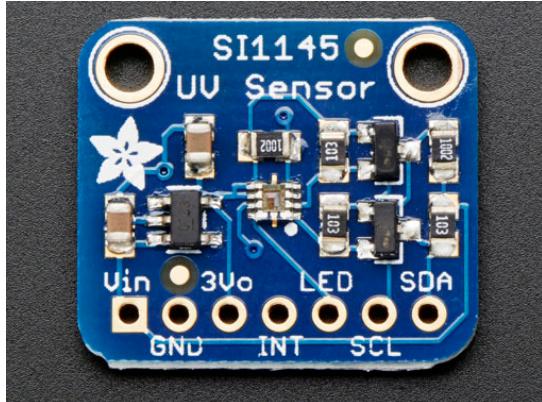

The SI1145 is an I2C sensor, so there are not a lot of pins to worry about.

Power Pins

You can power the SII145 from 3 to 5VDC, there's an onboard level shifter to safely bring the voltage down to 3.3V.

- **Vin** - this is the input to the voltage regulator. Power with 3-5VDC. Has reverse-polarity protection.
- **GND** - this is the signal and power ground pin, connect to your microcontroller ground pin
- **3vo** - this is the output from the onboard regulator. If you need a clean 3.3VDC, you can draw up to 100mA from this pin.

Extra Pins

These are pins that you don't need to connect to but can if you want to use the more advanced features of the chip.

- **INT** - this is the interrupt output from the chip, with a 10K pullup to 3.3V. You can check this pin to see when the next set of conversions are done. Our library doesn't use it
- **LED** - if you'd like to try using the proximity capabilities of the SI1145, you can tie an IR LED to this pin. Any IR LED will do. It's an open collector pin, so connect the cathode (-) pin to this pin, and the anode (+) pin of the LED to 3 to 5VDC. It can sink up to 300mA in a spike so be aware of that if using this pin


I2C Pins

So you want to actually read the sensor data, these are the pins to use! This sensor uses classic I2C so any I2C-capable microcontroller can use it. These pins are level shifted so you can use 3 or 5V logic safely. There's 10K pullups on both pins. You can share the i2c pins with many other sensors as long as they do not use the same address - the SI1145 uses 7-bit address **0x60**

- **SCL** - this is the i2c clock pin, connect to your microcontroller I2C clock master pin.
- **SDA** - this is the i2c data pin, connect to your microcontroller I2C data master pin.

Flora Pinouts

by [lady ada](#)

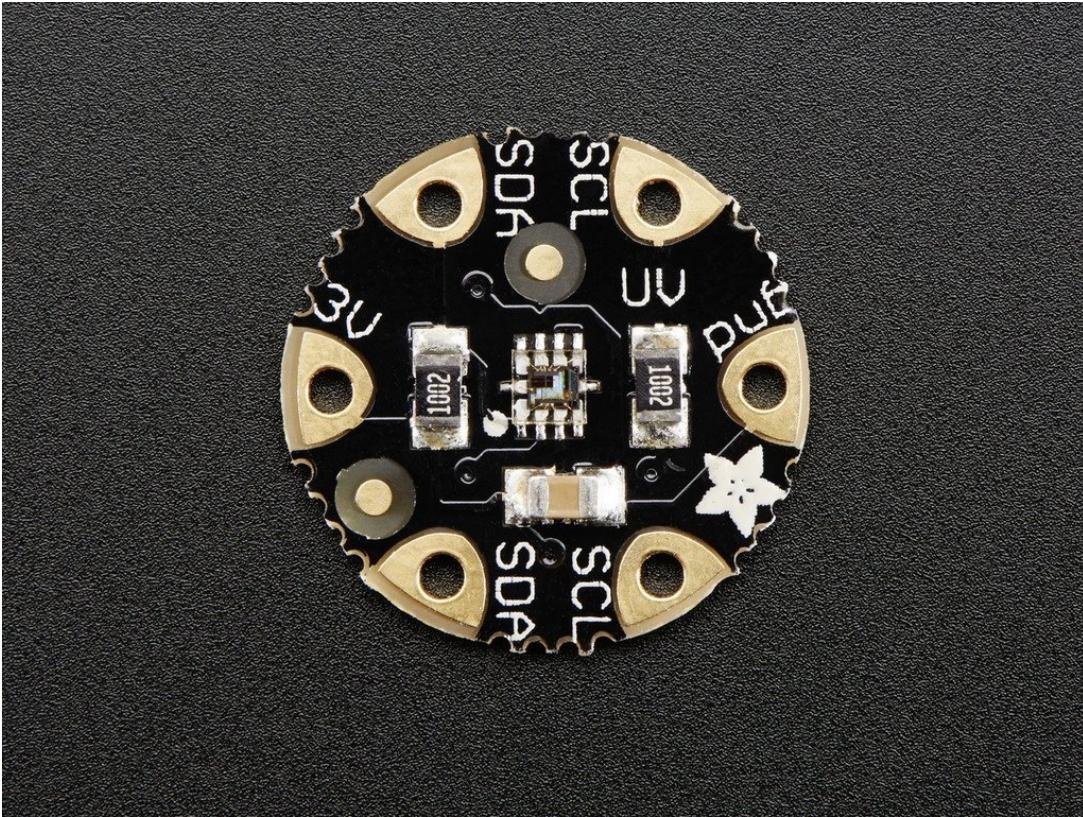

The Si1145 is an I2C sensor, so there are not a lot of pins to worry about.

Power Pins

You must power the Si1145 from 3.3 VDC.

- **3V** - this is the input to the sensor. Power with 3.3 VDC.
- **GND** - this is the signal and power ground pin, connect to your microcontroller ground pin

I2C Pins

So you want to actually read the sensor data, these are the pins to use! This sensor uses classic I2C. There's 10K pullups on both pins. You can share the i2c pins with many other sensors as long as they do not use the same address - the SI1145 uses 7-bit address **0x60**



- **SCL** - this is the i2c clock pin, connect to your Flora I2C clock master pin.
- **SDA** - this is the i2c data pin, connect to your Flora I2C data master pin.

Wiring and Test

by [lady ada](#)


Breakout Assembly


If you are using the breadboard version, you'll need to install some headers

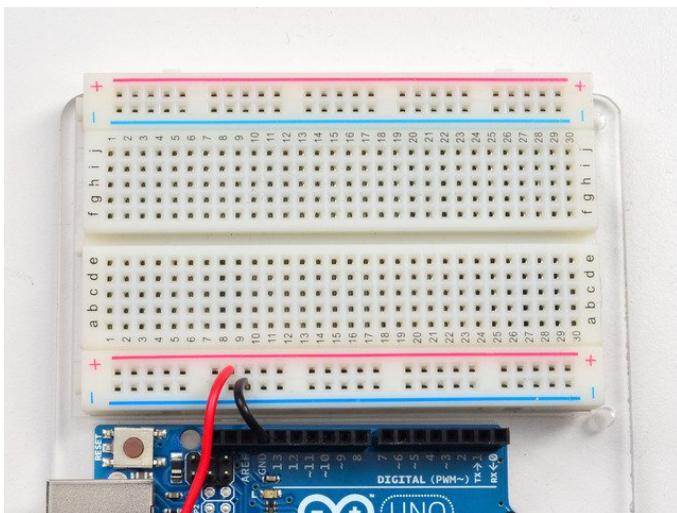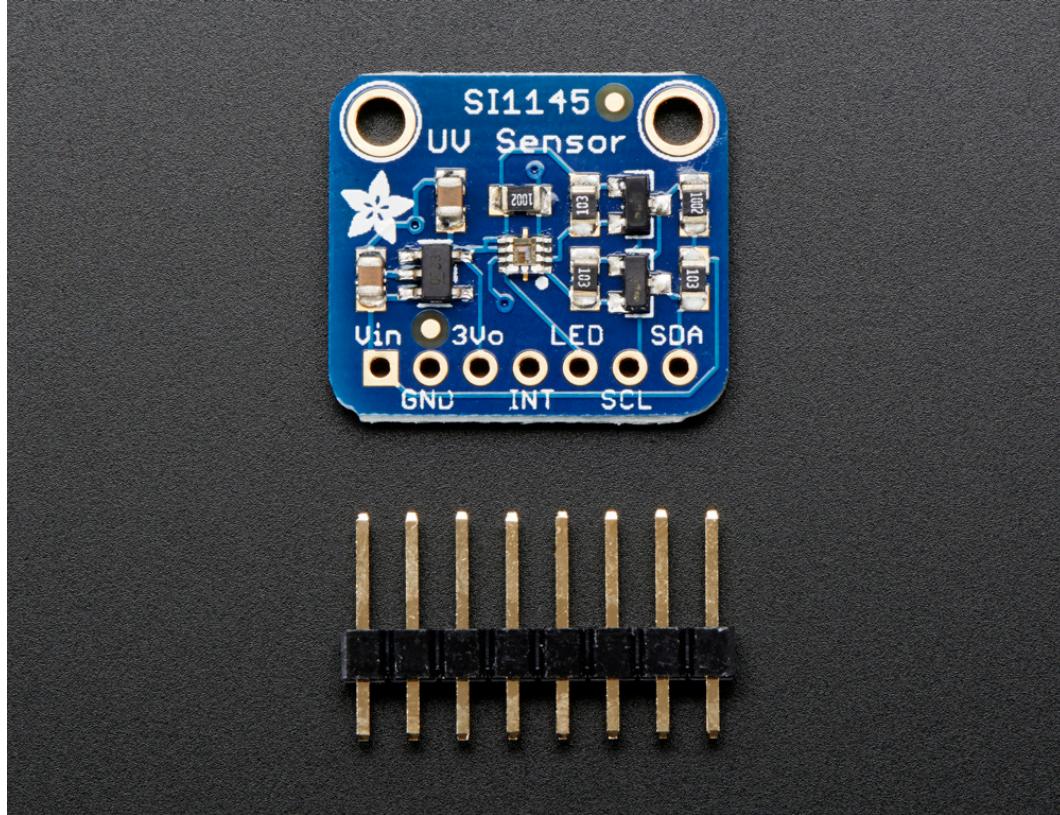

Prepare the header strip:


Cut the strip to length if necessary. It will be easier to solder if you insert it into a breadboard - **long pins down**

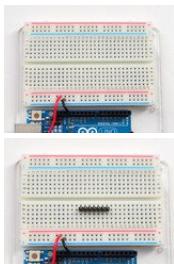

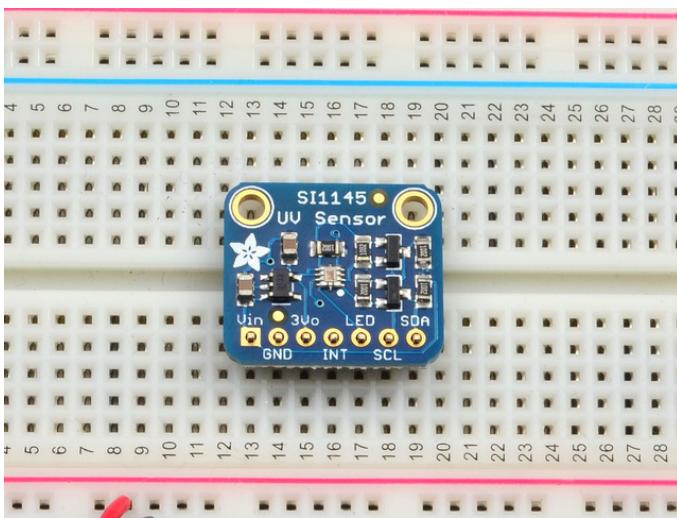

Add the breakout board:


Place the breakout board over the pins so that the short pins poke through the breakout pads

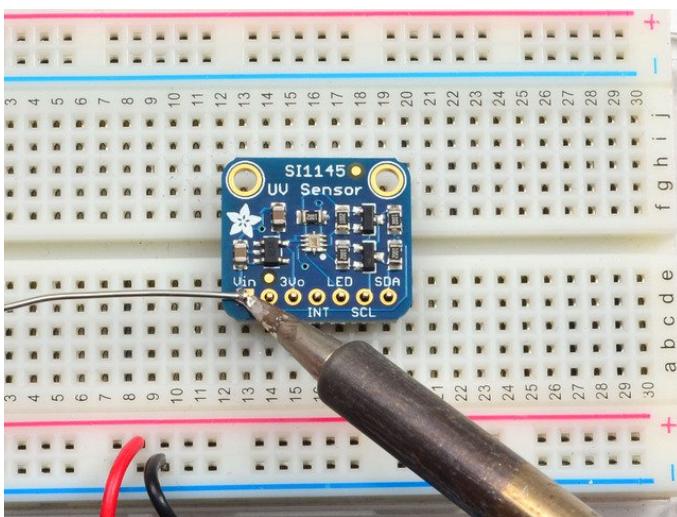


And Solder!

Be sure to solder all 5 pins for reliable electrical contact.

(For tips on soldering, be sure to check out our [Guide to Excellent Soldering](#)).

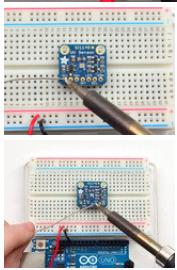


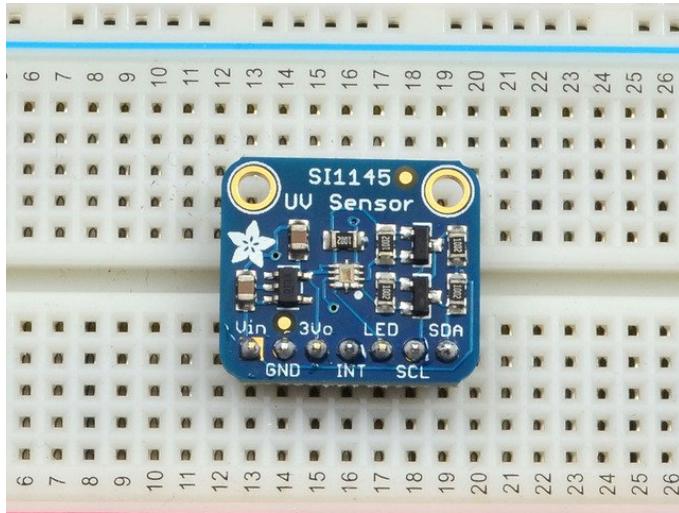

You're done! Check your solder joints visually and continue onto the next steps

Arduino Wiring


You can easily wire this sensor to any microcontroller, we'll be using an Arduino

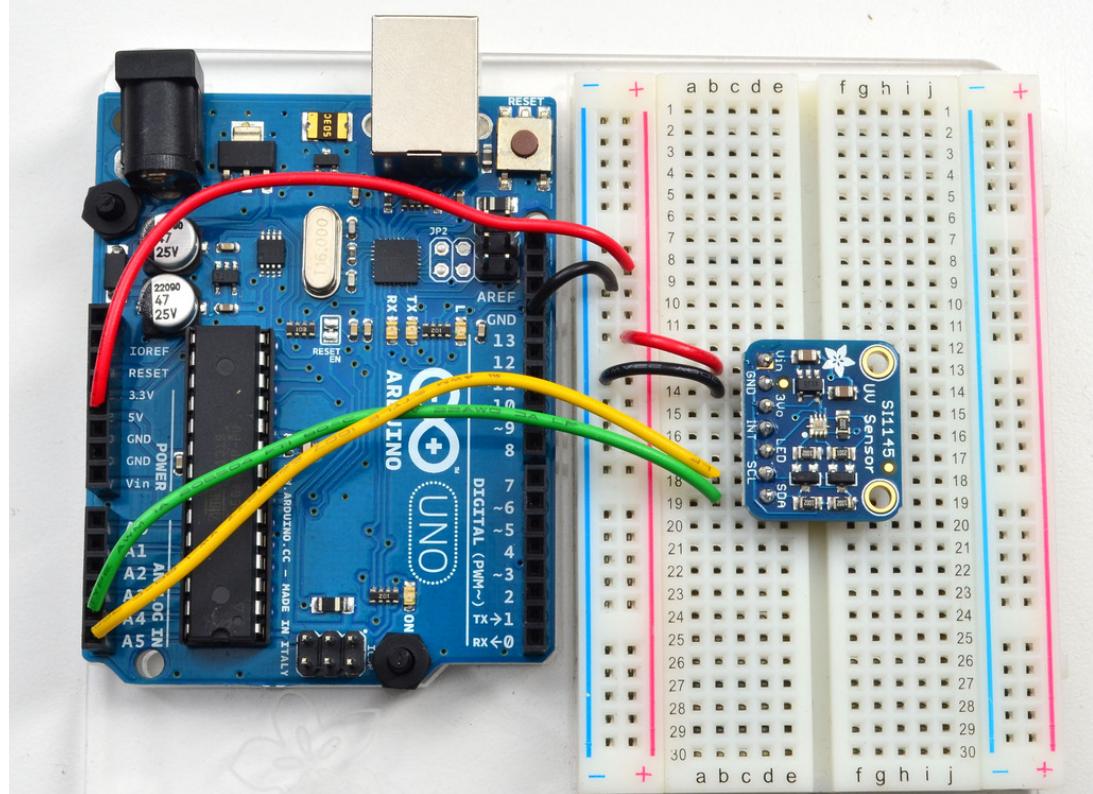

- Connect **Vin** to the power supply, 5V is fine. For 3V microcontrollers, connect to 3.3V
- Connect **GND** to common power/data ground
- Connect the **SCL** pin to the I2C clock **SCL** pin on your Arduino. On an UNO & '328 based Arduino, this is also known as **A5**, on a Mega it is also known as **digital 21** and on a Leonardo/Micro, **digital 3**
- Connect the **SDA** pin to the I2C data **SDA** pin on your Arduino. On an UNO & '328 based Arduino, this is also known as **A4**, on a Mega it is also known as **digital 20** and on a Leonardo/Micro, **digital 2**

Flora Wiring

Connect the sensor to the four top-left pins, **GND**, **SCL**, **SDA** and **3V** using alligator clips, soldered wire, or quality conductive stitching

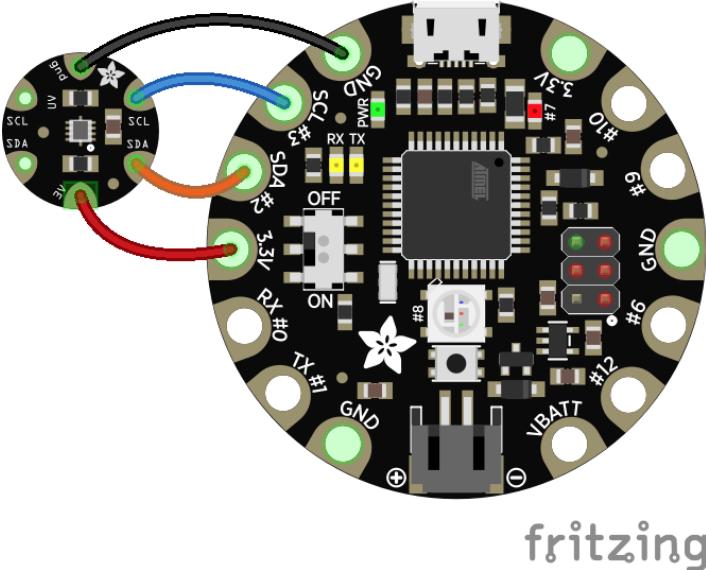

The SI1145 has a fixed I2C address (0x60), you can only connect *one* sensor per microcontroller!

Download Adafruit_SI1145

To begin reading sensor data, you will need to [download Adafruit_SI1145 from our github repository](#). You can do that by visiting the github repo and manually downloading or, easier, just click this button to download the zip

[Download the Adafruit SI1145 Library](#)

Rename the uncompressed folder **Adafruit_SI1145** and check that the **Adafruit_SI1145** folder contains **Adafruit_SI1145.cpp** and **Adafruit_SI1145.h**

Place the **Adafruit_SI1145** library folder your **arduinosketchfolder/libraries/** folder.


You may need to create the **libraries** subfolder if its your first library. Restart the IDE.

We also have a great tutorial on Arduino library installation at:


<http://learn.adafruit.com/adafruit-all-about-arduino-libraries-install-use>

Load Demo

Open up **File->Examples->Adafruit_SI1145->si1145test** and upload to your Arduino wired up to the sensor

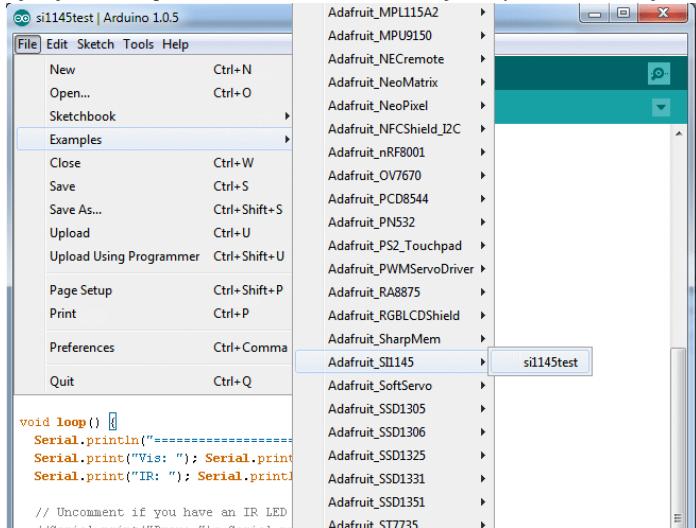

Now you can open up the serial console to see the various light levels and UV index printed out.

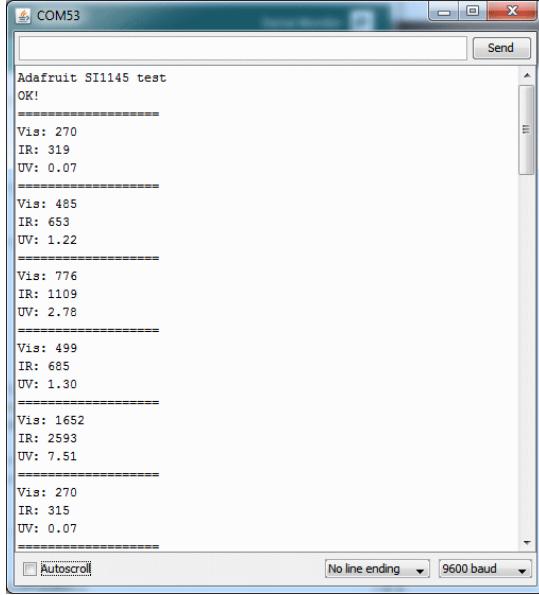

The screenshot shows the Arduino Serial Monitor window titled "COM5". The text output is as follows:

```

Adafruit SI1145 test
OK!
=====
Vis: 270
IR: 319
UV: 0.07
=====
Vis: 485
IR: 653
UV: 1.22
=====
Vis: 776
IR: 1109
UV: 2.78
=====
Vis: 499
IR: 685
UV: 1.30
=====
Vis: 1652
IR: 2593
UV: 7.51
=====
Vis: 270
IR: 315
UV: 0.07
=====
```


At the bottom of the window, there are buttons for "Send", "Autoscroll", "No line ending", and a baud rate dropdown set to "9600 baud".

In this screenshot I pointed a UV LED onto the sensor to simulate a really high UV index of 7. Indoors, expect to get a UV index of well below 1. Even glass windows are excellent at filtering UV light so if you want to measure the actual UV outside point the sensor right at the sun!

The SI1145 is primarily a UV index sensor, but it does have the ability to sense other kinds of light. However, those light levels aren't calibrated in our library. [That is to say, unlike our Lux sensor](#), these are just values based on how much light the sensor sees, and there's no 'units' to them. Still, this might handy if you just want to keep track of light levels.

Proximity Sensing (Breakout Board)

There's also another capability that SiLabs shoved into this chip - a proximity sensor! We haven't done much experimentation with this part of the sensor but it does sort of seem to work. Basically, if you connect an IR LED to the **LED** pin, the sensor will pulse the LED and measure how much IR light is reflected back. This can be used to do basic proximity sensing. If you are interested in trying out the prox sensor, grab an IR LED and connect the + side to 3V or so, and the - side to the **LED** pin.

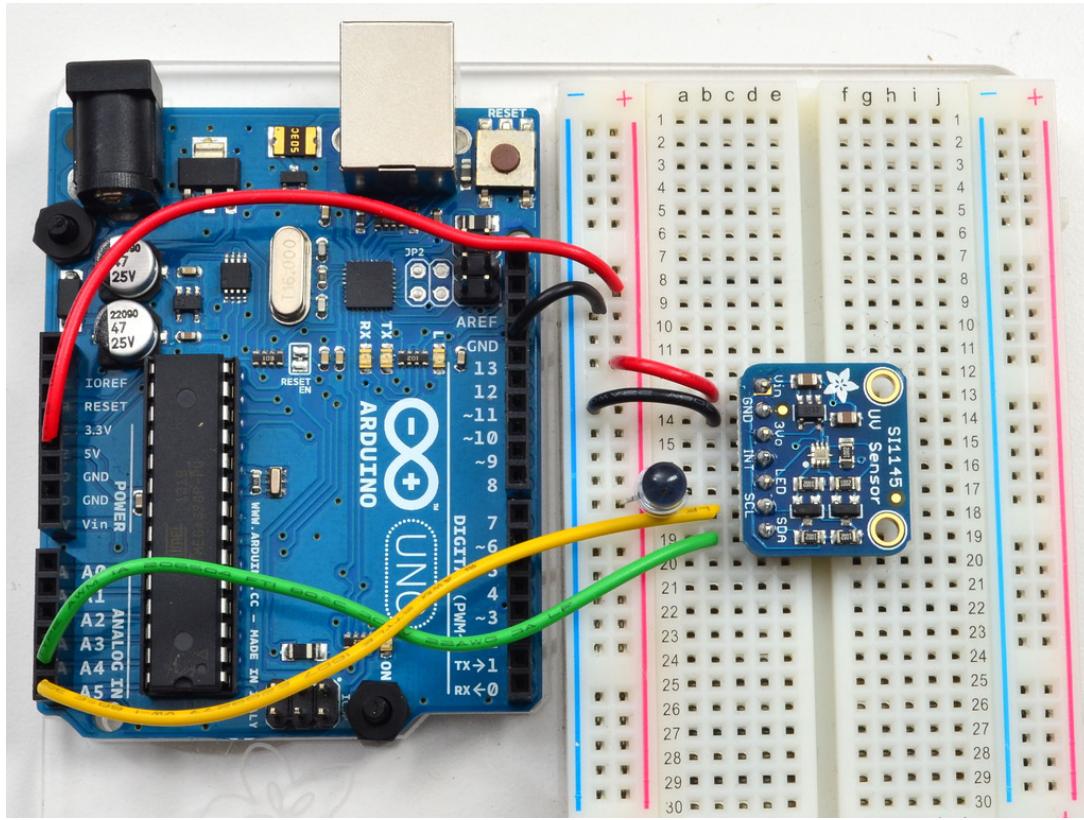

Now re-run the si1145 demo, but with the proximity reading line uncommented!

```

Adafruit SI1145 test
OK!
=====
Vis: 270
IR: 319
Prox: 261
UV: 0.07
=====
Vis: 263
IR: 267
Prox: 312
UV: 0.03
=====
Vis: 261
IR: 259
Prox: 361
UV: 0.02
=====
Vis: 260
IR: 258
Prox: 389
UV: 0.03
=====
Vis: 260
IR: 256
Prox: 374
UV: 0.02
=====
Vis: 263
IR: 279
Prox: 281
UV: 0.03
=====
Vis: 271

```

Autoscroll No line ending 9600 baud

You can see that by moving my hand in front of the sensor, I bounce more IR light into the proximity sensor and the value goes from 261 up to 361

Downloads

by [lady ada](#)


More reading!


- [The Canadian Center for Occupational Health has an article about UV radiation and its effects on the human body](#)
- [The International UV association \(they must have great blacklight parties!\) has a list of Frequently Asked Questions and their Answers](#)
- [Of course, the Wikipedia UV Index page has lots of great info too](#)

Datasheets & Files


- [SI1145 Datasheet](#)
- [Some example firmware is available from the SI1145 software download page](#)
- [SiLabs product page for the SI1145](#)
- [Fritzing objects for both breakout & Flora version in Adafruit Fritzing Library](#)
- [EagleCAD PCB files for Flora version](#)
- [EagleCAD PCB files for breakout version](#)

Schematic and PCB Print

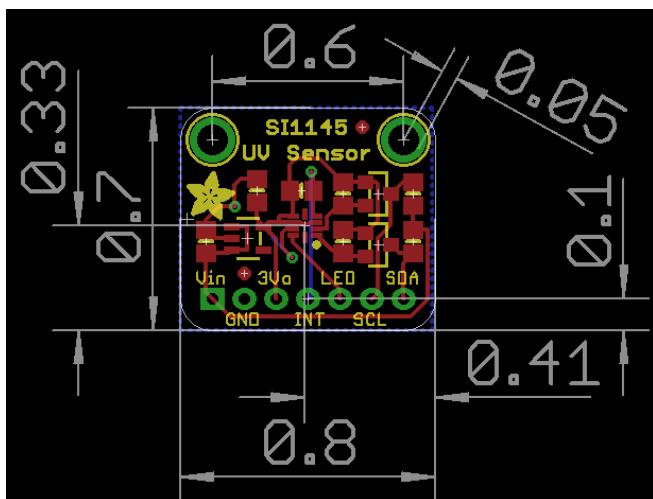

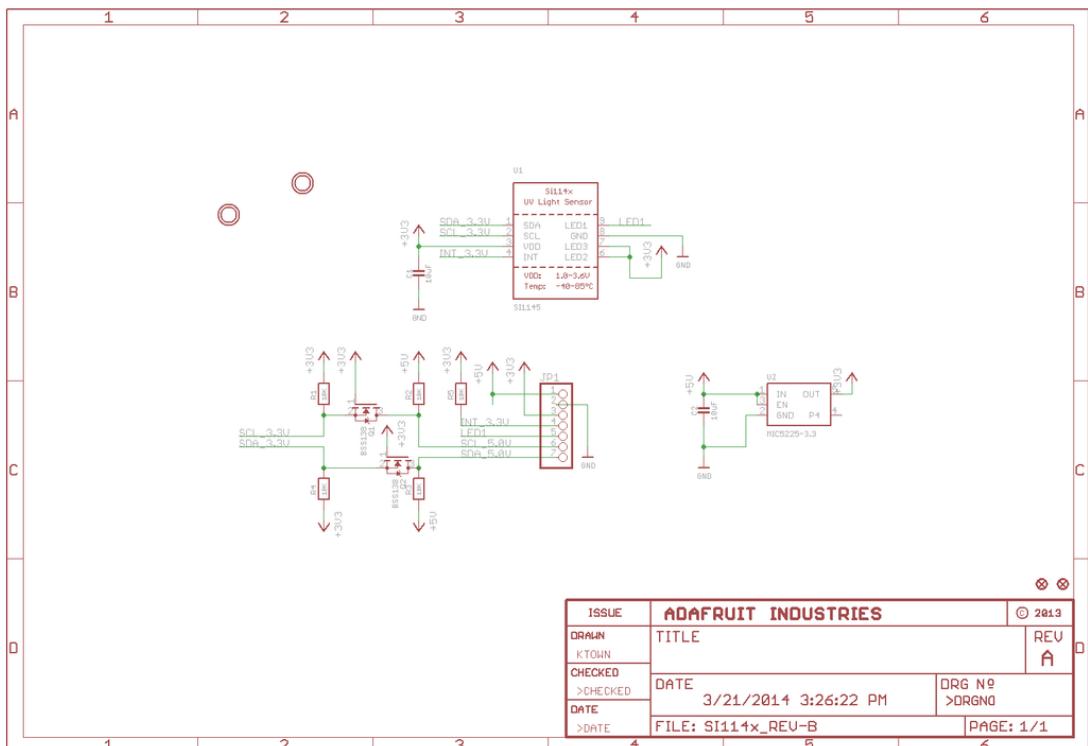

SI1145 Digital UV Index / IR / Visible Light Sensor
\$9.95 [Add to Cart](#)

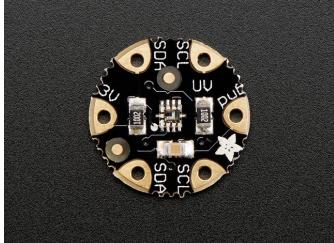

Flora UV Index Sensor - Si1145 Light Sensor
\$8.95 [Add to Cart](#)

RELATED GUIDES

POPULAR

TTL Serial Camera

Snap, Snap!

by lady ada



[This guide is for our new TTL serial camera module with NTSC video output. These modules are a nice addition to a microcontroller project when you want to take a photo or control a video stream. The modules have a few features built in, such as the ability to change the brightness/saturation/hue of images, auto-contrast and auto-brightness adjustment, and motion detection.](#)

[EL Wire](#)

[Working with Electroluminescent Wire](#)

by [lady ada](#)



EL Wire, also known as Electroluminescent wire, is a stiff wire core coated with phosphor and then covered with a protective PVC sheath. When an AC signal is applied to it, it glows a cool neon color. Find out how to solder, power, and work with EL Wire in your next project.

[POPULAR](#)

[Hacking the Kinect](#)

[Reverse engineering the Microsoft Kinect](#)

by [lady ada](#)



Here's a step by step guide on how you can reverse engineer a Microsoft Kinect for the Xbox 360.

[POPULAR](#)

[BeagleBone](#)

[Tutorials for the TI embedded Linux board](#)

by [lady ada](#)



New from the fine people who have brought us the Beagle Board, we now have a smaller, lighter, but powerful single board linux computer, Beagle Bone! We like this move to a more compact and integrated SBC. For example, there is onboard Ethernet and USB host, as well as a USB client interface (a FTDI chip for shell access). It even comes preloaded with Angstrom Linux on the 4 GB microSD card! Here are some tips and tricks to get your BeagleBone up and running.

X

OUT OF STOCK NOTIFICATION

YOUR NAME

YOUR EMAIL

[NOTIFY ME](#)

- [CONTACT](#)
- [SUPPORT](#)
- [DISTRIBUTORS](#)
- [EDUCATORS](#)
- [JOBS](#)
- [FAQ](#)
- [SHIPPING & RETURNS](#)
- [TERMS OF SERVICE](#)
- [PRIVACY & LEGAL](#)
- [ABOUT US](#)

[ENGINEERED IN NYC](#) Adafruit ®

"Fashion is what seems beautiful now but looks ugly later; art can be ugly at first but it becomes beautiful later" - [Unknown](#)

