


## NOTES

- 1. TYPICAL REBAR EDGE DISATNCE = 2" AS SHOWN
- 2. PRELIMINARY REBAR LAYOUT SHOWN, 2 in. SPACNG (TYP.)
- 3. REINFORCEMENT SIZING, COVER, ETC TO BE CONSIDERED IN FINAL DESIGN

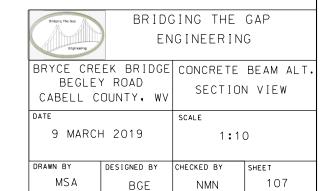

[Academic use only]