SIEMENS

Installation and Power Limited Wiring Instructions

Model MLE-6

Enclosure for the MXL/MXLV Control Panel

INTRODUCTION

Model MLE-6 from Siemens Industry, Inc. is a large-size enclosure for the MXL/MXLV System. The enclosure consists of a backbox and front door that is shipped assembled. Note that the backbox has a flanged lip to permit semi-flush mounting in addition to the usual surface mounting.

Consider the following when mounting the backbox:

- Mounting height for visual and manual access to the MKB-2 Keyboard/annunciator
- Weight and size of enclosure
- Local mounting codes

Fasten the backbox securely to a clean, dry, shock-free, and vibration-free surface. MLE-6 enclosure is for indoor use only in dry environments. Position the backbox clear of obstructions so that the front door opens freely and so that the indicators and controls are easily accessible.

NOTE: When the backbox is mounted semi-flush, be sure that the position of the backbox permits the front door to swing fully open.

To install the MLE-6 backbox:
(Refer to Figure 1.)

1. Slip the front door off the hinges of the box and put it to one side temporarily.
2. Remove the knockouts in the backbox where field wiring is required.

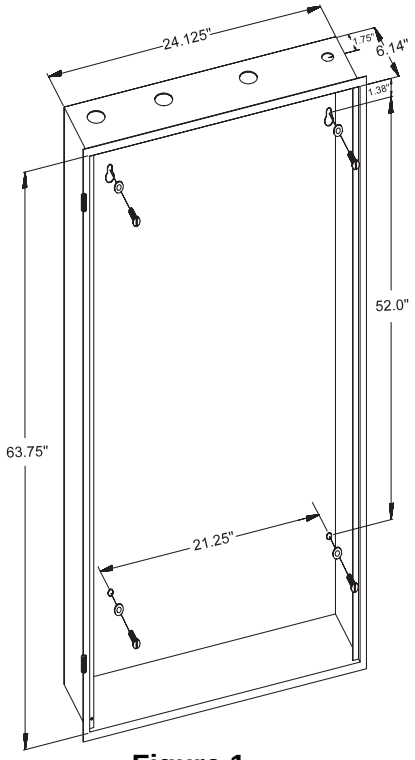


Figure 1
Mounting the Backbox

3. Hold the empty backbox against the wall at a height that provides easy access.
4. Mark drill points on the wall in the center of the two slots on the upper rear of the backbox.
5. Drill the two holes and screw in the top bolts, leaving a gap between the wall and the rear of each bolt head.
6. Mount the backbox on the two bolts and then install the bottom bolts in the two holes provided.
7. Tighten all bolts securely against the back wall of the backbox.
8. Slip the front door back on the hinges of the backbox (See Figure 2).

Siemens Industry, Inc.
Building Technologies Division
Florham Park, NJ

P/N 315-094970-5

Siemens Building Technologies, Ltd.
Fire Safety & Security
2 Kenview Boulevard
Brampton, Ontario
L6T 5E4 Canada

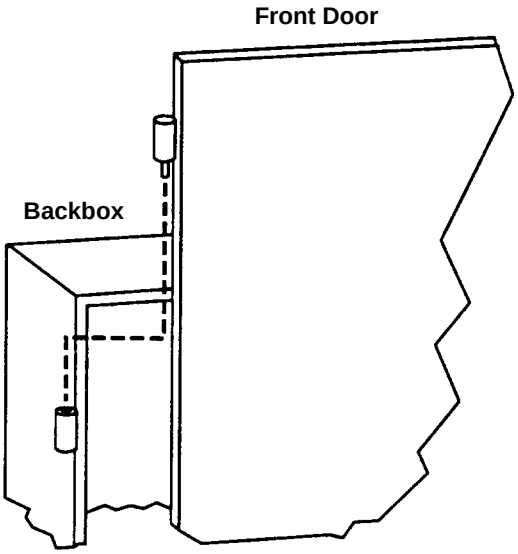


Figure 2
Reinstalling the Front Door

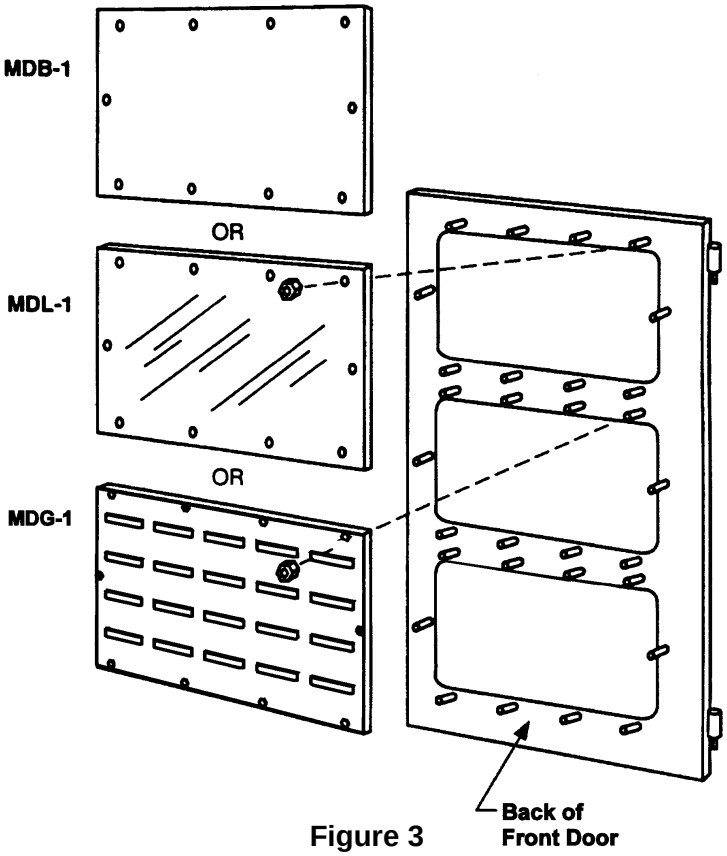


Figure 3
Inserting the Filler Plates in the Front Door

FRONT DOOR

The front door is the main outer door for the MLE-6 enclosure. The door is supplied without filler plates for the three large openings. To select the appropriate filler plates for the three openings, follow the information below.

- **When visual indication of system operation (LCD, LED, or printer) is required,** install clear panels, the MDL-1 lens, behind the appropriate door openings.
- **When visual indication of the system operation is not required,** install plain blank panels, MDB-1s, behind the appropriate door openings.
- **When audio amplifiers such as the EL-410C/D or ZAC-30 are used,** install the MDG-1 (MXL Door Venting Grill) behind the appropriate door openings.
- **After determining which filler plates are required,** insert the appropriate plates in the front door as shown in Figure 3 using the hardware supplied.

MOUNTING PLATES
(MBR-MP and MBR-3MP)

Install the MBR-MP and MBR-3MP Mounting Plates, which are shipped separately. Refer to the *MBR-MP/ MBR-3MP Installation Instructions,* P/N 315-094882.

WIRING

In compliance with UL-864, effective May 1, 1995, all power limited fire protective signaling conductors must be separated a minimum of 1/4 inch from all of the following items located within a control panel:

- electric light
- power
- Class 1 or non-power limited fire protective signaling conductors

To meet the above requirements, the following guidelines **must be observed** when installing modules and wiring to this control panel.

NOTE: If power-limited wiring is not used within an MXL/MXLV enclosure, then the following guidelines do not apply. In that case, be sure to follow standard wiring practices.

WIRING ENTERING ENCLOSURE
Non-Power Limited Wiring

Wiring to the following MXL/MXLV module terminations (See Table 1) is considered non-power limited and must enter the enclosure through the knockouts dedicated to non-power limited wiring. Wiring between these knockouts and the module terminations must be in the shortest route and must not overlap any other wiring.

TABLE 1

Module	Termination
ASC-1/-2‡ (Power from EL-410C/D)	OMM-1
CRM-4	MOM-4
CSM-4†	MOM-4
MPS-6/-W or MPS-12/-W	1, 2, 3
ZC Zone Cards‡ (Power from EL-410C/D)	OMM-1

† When the CSM-4 is used as Municipal Tie or Releasing Service.

‡ Audio or strobe power wiring to any ZC Zone Card module and ASC-1/-2 first must be terminated at a PLC-4 plug-in module installed in an OMM-1 and then at the zone card. The PLC-4 must contain at least one of the following plug-on boards: a PL864-25A or PL864-70A for audio circuits, or a PL-864-25S for strobe circuits. Refer to the *PLC-4 Installation Instructions,* P/N 315-093312.

If there are no MOM-4/CRM-4s installed in the system, install the PLC-4 in the lower left module position of the OMM-1 in the left side of the enclosure. Wire between the PLC-4 and the appropriate zone card in accordance with the instructions accompanying these modules.

If the system contains more than four zone cards, place a second PLC-4 in the upper right module position of the second OMM-1. Locate this OMM-1 in the right side of the enclosure. If more than two PLC-4s are required, install additional PLC-4s in the same relative position in additional OMM-1s located in the lower row of the enclosure.

If there are MOM-4/CRM-4s installed in the system, install the OMM-1 in the lower left module position of the OMM-1. Wire between the PLC-4 and the appropriate zone card in accordance with the instructions accompanying these modules.

If the system contains more than four zone cards, place a second PLC-4 in the upper right module position of the second OMM-1. Locate this OMM-1 in the right side of the enclosure. If more than two PLC-4s are required, install additional PLC-4s in the same relative position in additional OMM-1s located in the lower row of the enclosure.

WIRING IN ENCLOSURE
Non-Power Limited Wiring

The following wiring is considered non-power limited:

- from the MPS-6/-W or MPS-12/-W
- from the batteries to the MMB
- from the MMB (P3) to the MOM-4 (P5)
- from the TSP-40 to the MOM-4 (P8) – optional

To maintain the required 1/4 inch separation from other wiring, these wires must be routed and held in place by a separate wire support. This support is positioned on the left side wall of the enclosure.

To provide the separation, follow the steps listed below:

1. First locate the wire standoffs in the bracket located on the left side of the enclosure.
2. Next place these wires in the standoffs, close the clamp located on the standoff, and then route the wires to the appropriate terminations as shown on the connection diagram/manual.
3. When the optional TSP-40 is used, route the interconnecting cable directly to the MOM-4 (P8) and not over any other wiring.

WIRING ENTERING ENCLOSURE
Power Limited Wiring

Note: Power limited circuits must use type FPLP, FPLR, or FPL cable per article 760 of the NEC.

Wiring to the following MXL/MXLV module terminations (See Table 2) is considered power limited and must enter the enclosure through knockouts dedicated to power limited wiring. Wiring between these knockouts and the module terminations must be in the shortest route and most not overlap any other wiring.

TABLE 2

Module	Termination
ALD-2	MOM-4
ALD-2I	MOM-4
CMI-300	MOM-4
CSM-4*	MOM-4
CZM-4	MOM-4
MMB	TB1 (1-4)
	TB2 (1-4)
	TB3 (1-4)
	TB4 (1-9)†
NET-4/7	TB5 (1-12)
NIM-1R	MOM-4
PIM-1	TB1
PS-5N7	TB1 (1-6)
OCC-1	OMM-1
RCM-1	OMM-1
REP-1	MOM-4
TBM-1/2	TB4 (All positions)
	TB5 (All positions)
XLD-1	MOM-4
ZAC-30	OMM-1
ZCT-8B	OMM-1

* When the CSM-4 is used as Notification Application Circuit or Leased Line.

† Listed Class 2 or Power Limited Source.

WIRING IN THE REMOTE ENCLOSURE

Non-Power Limited Wiring

The following wiring is considered non-power limited:

- from the MPS-6/-W or MPS-12/-W
- from the batteries to the PSR-1

To maintain the required 1/4 inch separation from other wiring, these wires must be routed and held in place by a separate wire support. This support is positioned on the left side wall of the enclosure. To provide the separation, follow the steps listed below:

1. First, locate the wire standoffs in the bracket located on the left side wall of the enclosure.
2. Next, place these wires in the standoffs, close the clamp located on the standoff, and then route the wires to the appropriate terminations as shown on the connection diagram/manual.

WIRING ENTERING THE REMOTE ENCLOSURE

Power Limited Wiring

Note: Power limited circuits must use type FPLP, FPLR, or FPL cable per article 760 of the NEC.

Wiring to the following MXL/MXLV module terminations (See Table 3) is considered power limited and must enter the enclosure through knockouts dedicated to power limited wiring. Wiring between these knockouts and the module terminations must be in the shortest route and must not overlap any other wiring.

TABLE 3

Module	Termination
ALD-2	MOM-4
ALD-2I	MOM-4
CMI-300	MOM-4
CSM-4*	MOM-4
CZM-4	MOM-4
NET-4/7	MOM-4
NIM-1R	MOM-4
OCC-1	OMM-1
PIM-1	TB1
PS-5N7	TB1 (1-6)
PSR-1	TB1 (1-6)†
	TB4 (1-4)
	TB3 (3-6)
RCM-1	OMM-1
REP-1	MOM-4
TBM-1/2	TB4 (All positions)
	TB5 (All positions)
XLD-1	MOM-4
ZAC-30	OMM-1
ZCT-8B	OMM-1

* When the CSM-4 is used as Notification Appliance Circuit or Leased Line.

† Listed Class 2 or Power Limited Source.

WIRING THE DV-100 SERIES MODULES

Non-Power Limited Wiring

Wiring to and from the DV-100 Series modules is considered non-power limited and must enter and exit the enclosure through knockouts dedicated to non-power limited wiring. Wiring between these knockouts and the module termination must be in the shortest route and must not overlap any other wiring. Refer also to the DV-100 Wiring Diagrams, P/Ns 315-192756 and 315-192757, as applicable.