SIEMENS

Installation Instructions
MODELS MBR-2 and MDR-2
MXL/MXLV Backbox and Door

MBR-2 BACKBOX

The Model MBR-2 is the backbox for the MXLV enclosure. Note that the backbox has a flanged lip to permit semi-flush mounting in addition to the usual surface mounting.

Consider the following when mounting the backbox:

- Mounting height for visual and manual access to the MKB-2 Keyboard/ annunciator
- Weight and size of enclosure
- Local mounting codes

Fasten the MBR-2 backbox securely to a clean, dry, shock-free, and vibration-free surface. Position the MBR-2 backbox clear of obstructions so that the MDR-2 door opens freely and so that the indicators and controls are easily accessible.

NOTE: When the backbox is mounted semi-flush, be sure that the position of the backbox permits the MDR-2 door to swing fully open.

To install the MBR-2 backbox:
(Refer to Figure 1.)

1. Remove the knockouts in the backbox where field wiring is required.
2. Hold the empty enclosure against the wall at a height that provides easy access.

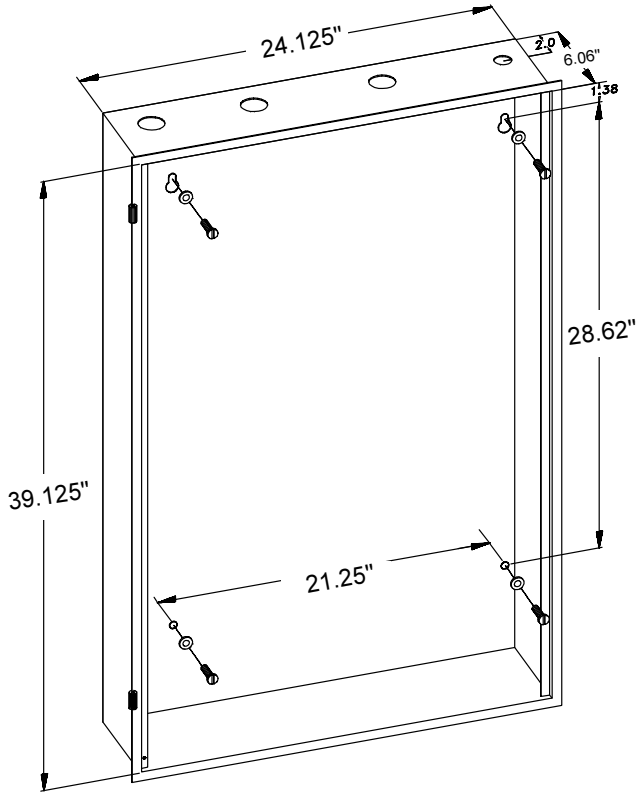


FIGURE 1
Mounting the Backbox

3. Mark drill points on the wall in the center of the two slots on the upper rear of the MBR-2.
4. Drill the two holes and screw in the top bolts, leaving a small gap between the wall and each top bolt.
5. Mount the MBR-2 on the two bolts and then install the bottom bolts in the two holes provided.
6. Tighten all bolts securely against the back wall of the enclosure.

Siemens Industry, Inc.
Building Technologies Division
Florham Park, NJ

P/N 315-092068-5

Siemens Building Technologies, Ltd.
Fire Safety & Security Products
2 Kenview Boulevard
Brampton, Ontario
L6T 5E4 Canada

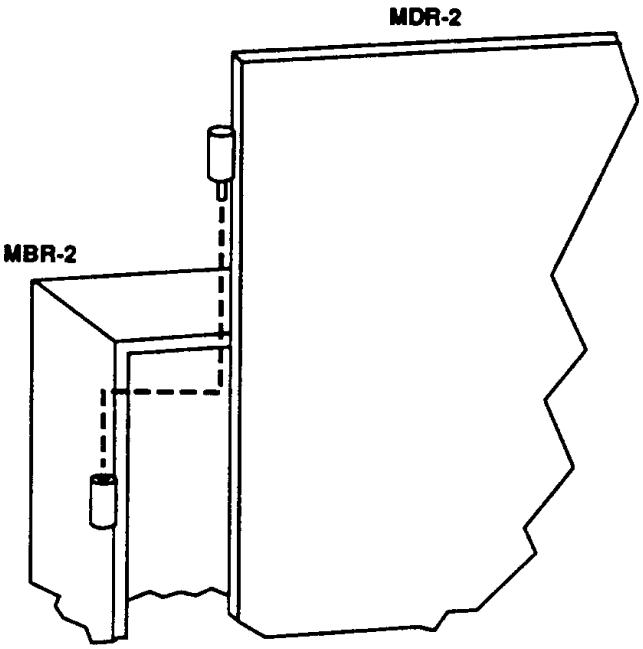


FIGURE 2
Installing the Outer Door

MDR-2 DOOR

The Model MDR-2 door is the main outer door for the MXLV enclosure. The door is supplied without filler plates for the two large openings. To select the appropriate filler plates for the two openings, follow the information below:

- **When visual indication of system operation (LCD, LED, or printer) is required,** install clear panels, the MDL-1 lens, behind the appropriate door openings. Use the hardware supplied.
- **When visual indication of the system operation is not required,** install plain blank panels, MDB-1s, behind the appropriate door openings. Use the hardware supplied.

To install the MDR-2 door:
(Refer to Figures 2 and 3.)

1. Install the MDR-2 outer door on the left side of the enclosure as shown in Figure 2.
2. Next, insert the necessary filler panels in the door.

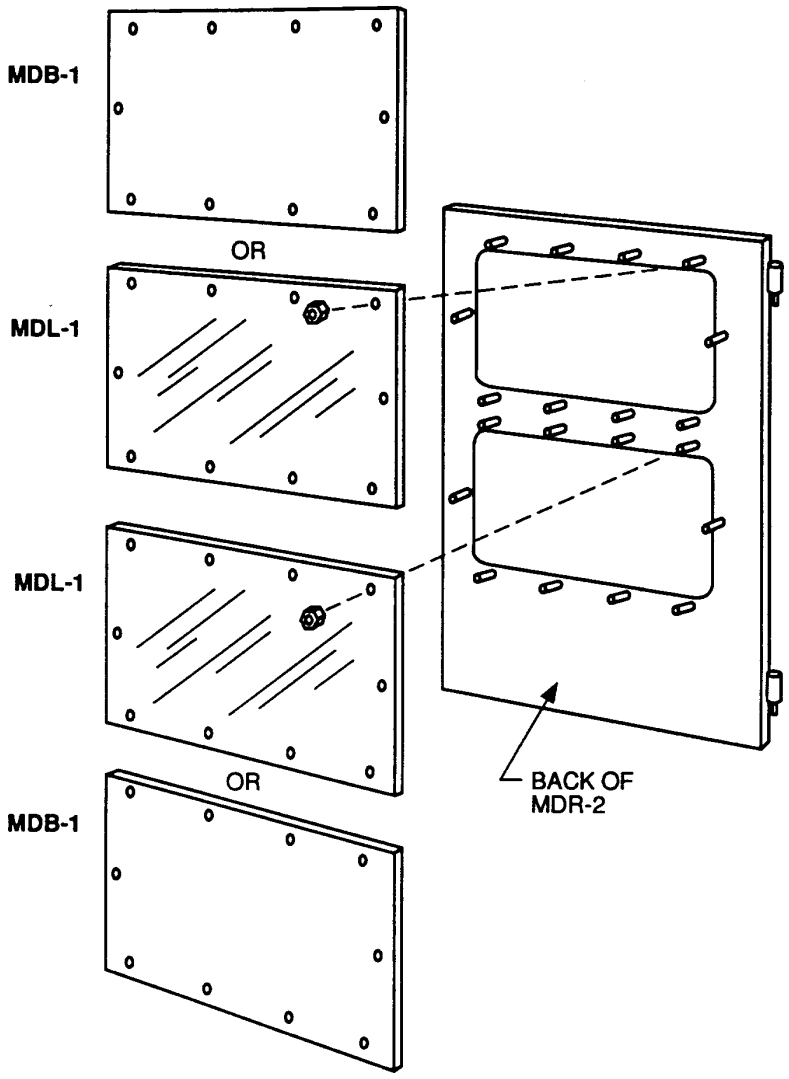


FIGURE 3
Inserting the Filler Plates in MDR-2