SIEMENS

Installation Instructions
Models CAB1 / CAB1R

System Enclosure

INTRODUCTION

The Models CAB1 and CAB1R Enclosures from Siemens Industry, Inc., are used to house system modules. The CAB1 backbox and doors are black; the CAB1R backbox and outer door are red. They are identical in all other ways, and will be referred to in the remainder of this document as CAB1. The CAB1 consists of an outer door, an inner door, and a backbox as shown in Figure 1. CAB-MP Mounting Plate (P/N 500-633012) can be purchased as an option.

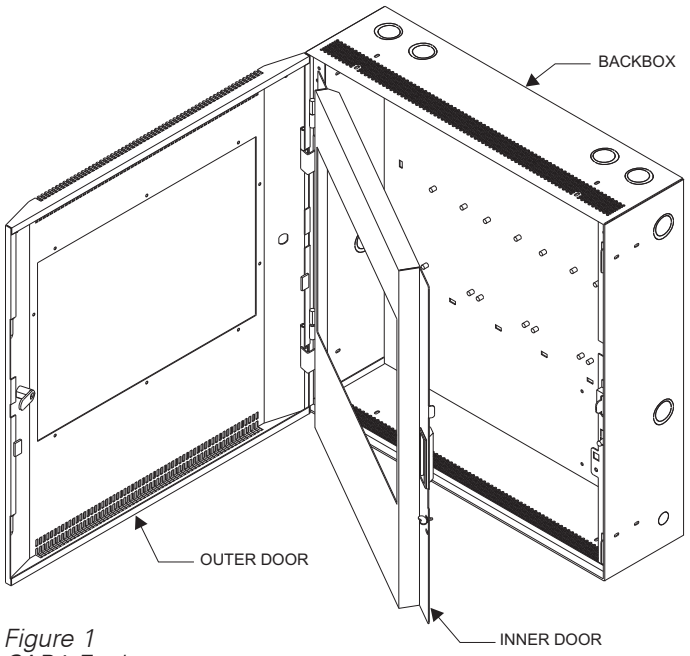


Figure 1
CAB1 Enclosure

NOTE

CAB-1 Enclosure is for indoor use only in dry environments.

The backbox is mounted on a flat surface with four user-supplied bolts that are a maximum of $^{3}/_{8}$ inch in diameter.

The backbox contains enough space to mount a set of BTX-1 (31 AH) batteries in the bottom.

Siemens Industry, Inc.
Smart Infrastructure

INSTALLATION

Prior to installation consider the following:

- Mounting height for visual and manual access to the Person Machine Interface (PMI/PMI-2/PMI-3 {XLS}), FCM2041-U2 (Desigo Fire Safety Modular), FCM2041-U3 (Cerberus PRO Modular) displayed in the opening of the outer door.
- Models LVM and FMT, one module width each, mount to the inner door. No other modules (PSC-12 or PSC-12M/PSX-12 or PSX-12M/CC-5/CC-2) may be located behind these modules.
- Weight and size of the enclosure.
- Local codes.

Install the backbox:

1. Select a clean, dry, shock and vibration free surface.
2. Position the backbox clear of obstructions so that the front door opens freely and the controls and indicators are easily accessible.
3. Mark the locations of the two upper mounting bolts of the backbox on the wall. (Refer to Figure 2.)
4. Drill the two holes located in the previous step and screw in the top bolts, leaving a small gap between the wall and each top bolt.
5. Place the backbox over the two top bolts and allow it to slide down over the bolts. (Refer to Figure 3.)
6. Mark, drill, and install the two bottom bolts in the backbox.
7. Tighten all four bolts securely against the back wall of the backbox.

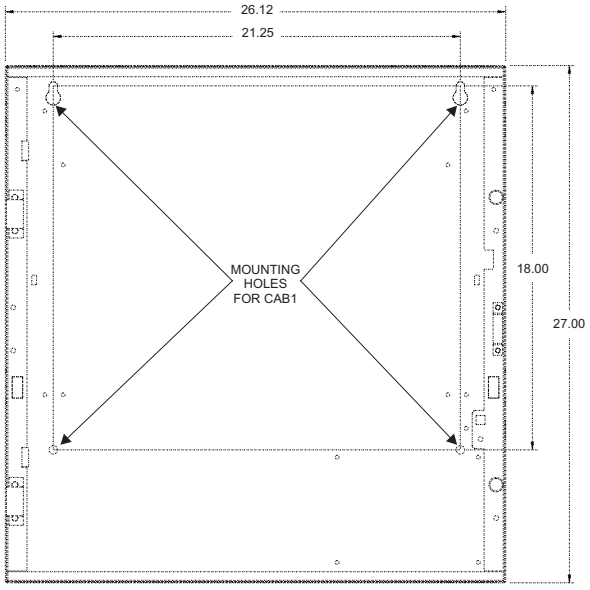


Figure 2
CAB1 Mounting Holes

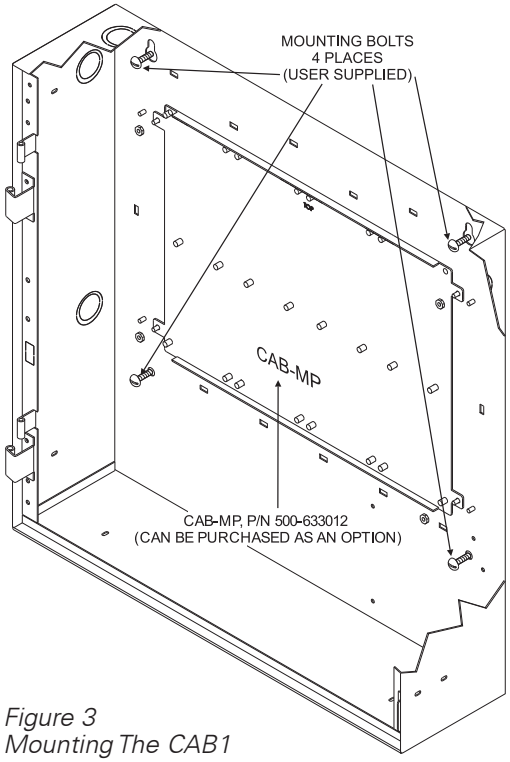


Figure 3
Mounting The CAB1

WIRING

In compliance with NEC Article 760, all power limited fire protective signaling conductors must be separated a minimum of ¼ inch from all of the following wiring located within a control panel:

- electric light
- power
- Class 1 or non-power limited fire protective signaling conductors

To meet these requirements, the following guidelines **must be observed** when installing modules and wiring to this control panel.

When installing power limited field wiring, the installer must comply with NEC article 760-54, which states:

The fire alarm power-limited circuits are installed using Types FPL, FPLR, FPLP or permitted substitute cable, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.35 mm) or by a nonconductive sleeve or nonconductive barrier from all other conductors.

NOTE

If power-limited wiring is not used within the CAB1 enclosure, then the following guidelines do not apply. In that case, be sure to follow standard wiring practices.

Wiring Entering Enclosure

Non-Power Limited Wiring
Wiring entering the enclosure from the bottom and right side of the backbox is considered non-power limited wiring. Wiring must be in the shortest route and must not overlap any other wiring.

Power Limited Wiring
Wiring entering the enclosure from the top and the left side of the backbox is considered power limited. Wiring must be in the shortest route and must not overlap any other wiring.

Use the existing lances in the backbox to dress the wires as needed to maintain separation of power limited and non-power limited wiring.

Install Wiring

The primary mains input must have a separate or dedicated circuit breaker. Wire in accordance with local codes and NEC 760.

1. Remove the knockouts in the backbox for the entry of field wiring. (Refer to Figure 4 for the location of knockouts.)
2. Pull all field wiring into the backbox. Do not dress the wiring until the location of all the equipment is known.
3. Install the wiring from the external power source to the approximate location of the power supply.

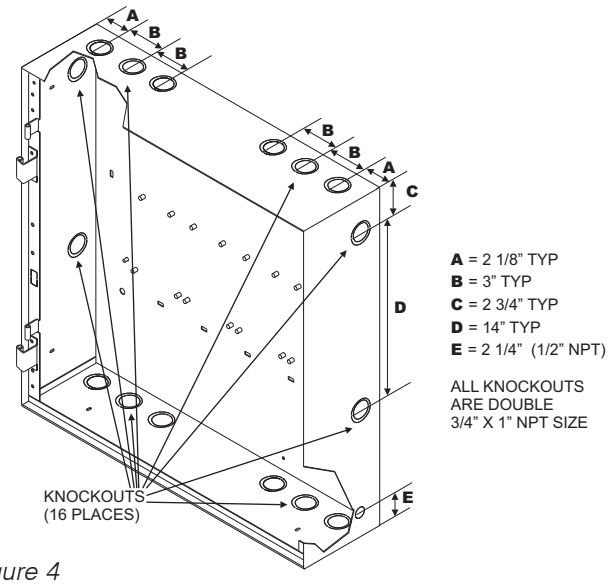


Figure 4
CAB1 Knockouts

POST-INSTALLATION

After the backbox is installed and the wiring completed, finish the installation by installing the optional mounting plate, the inner door, the outer door, and the ground straps.

1. Install the mounting plate, if used.(CAB-MP Mounting Plate, P/N 500-633012 can be purchased as an option.)
2. Install the inner door by placing it on its hinges. (Refer to Figure 5.)
3. Insert blank plates, as needed, in unused spaces on door and secure with 10-32 nuts. (Refer to Table 1 and Figure 6.)

TABLE 1
INNER DOOR PLATES

MODEL	DESCRIPTION	MOUNTING
ID-MP	Mounting plate/bracket for FCM-6, LCM-8 and SCM-8.	Mounts on studs in door. Secured with two 10-32 nuts.
ID-SP	Blank insert the same size as the ID-MP mounting plate/bracket.	Mounts on studs in door. Secured with two 10-32 nuts. Up to four ID-MPs or ID-SPs can be installed on one row.

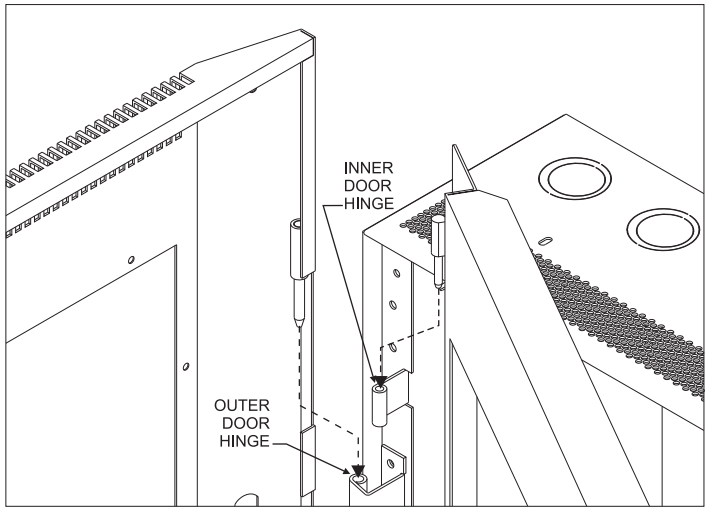


Figure 5
Installing The Outer And Inner Doors On The CAB1

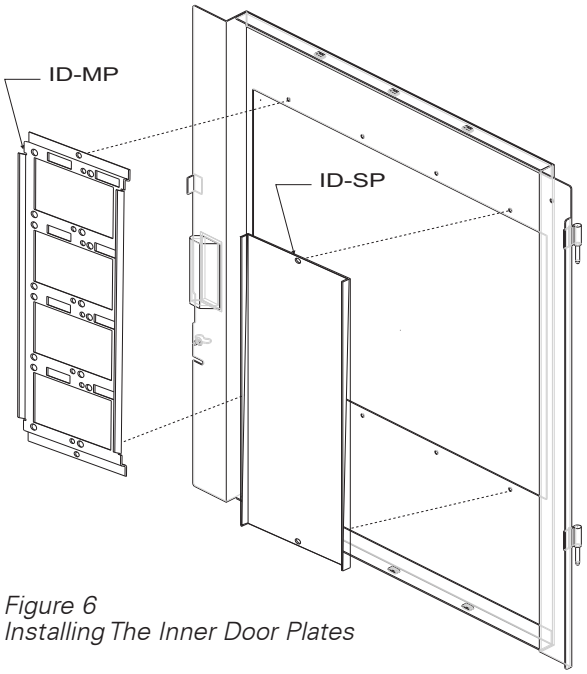


Figure 6
Installing The Inner Door Plates

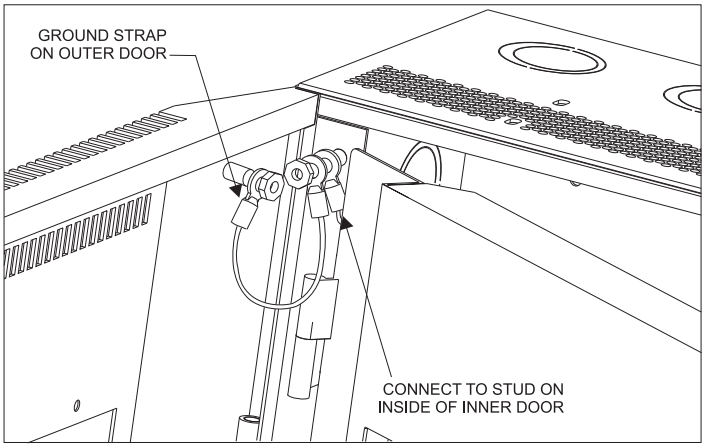


Figure 7
Installing The Ground Straps

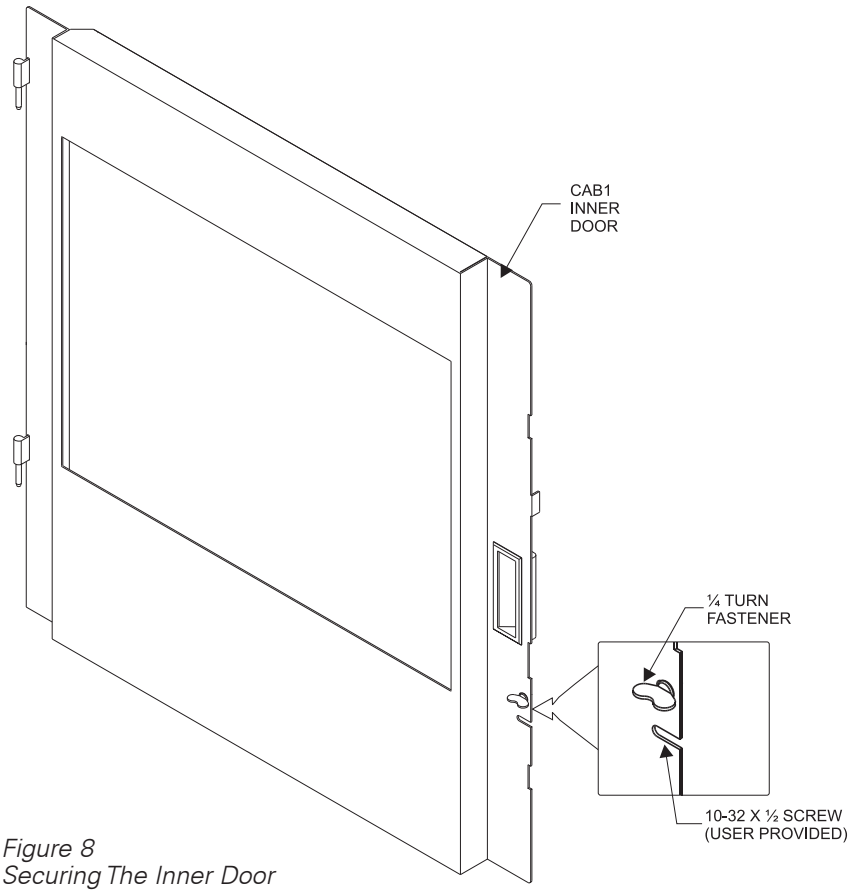


Figure 8
Securing The Inner Door

4. Install the outer door by placing it on its hinges. (Refer to Figure 5.)
5. Install the ground straps on both the inner and outer doors. (Refer to Figure 7.)
6. Close the inner door and secure with the ¼ turn fastener. The inner door can also be secured with a 10-32 x 1/2" screw (user provided), if desired. (Refer to Figure 8).
7. Close the outer door and secure with the key latch.

SPECIFICATIONS

CAB1 backbox:
26-1/8"W x 6-7/8"D x 27"H

CYBER SECURITY DISCLAIMER

Siemens provides a portfolio of products, solutions, systems and services that includes security functions that support the secure operation of plants, systems, machines and networks. In the field of Building Technologies, this includes building automation and control, fire safety, security management as well as physical security systems.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art security concept. Siemens' portfolio only forms one element of such a concept.

You are responsible for preventing unauthorized access to your plants, systems, machines and networks which should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place. Additionally, Siemens' guidance on appropriate security measures should be taken into account. For additional information, please contact your Siemens sales representative or visit https://www.siemens.com/global/en/home/company/topicareas/future-of-manufacturing/industrial-security.html.

Siemens' portfolio undergoes continuous development to make it more secure. Siemens strongly recommends that updates are applied as soon as they are available and that the latest versions are used. Use of versions that are no longer supported, and failure to apply the latest updates may increase your exposure to cyber threats. Siemens strongly recommends to comply with security advisories on the latest security threats, patches and other related measures, published, among others, under

https://www.siemens.com/cert/en/cert-security-advisories.htm.

Siemens Industry, Inc.
8 Fernwood Road
Smart Infrastructure
Florham Park, NJ

Siemens Canada, Ltd.
1577 North Service Road East
Oakville, Ontario
L6H 0H6 Canada

Document ID A6V10324415

P/N 315-033007-AL