SIEMENS

Installation and Power Limited Wiring Instructions

Model MME-3 (R)

Enclosure for the MXL/MXLV Control Panel

INTRODUCTION

Model MME-3(R) from Siemens Industry, Inc. is a medium-size enclosure for the MXL/MXLV System. The enclosure consists of a backbox and front door that is shipped assembled. Note that the backbox has a flanged lip to permit semi-flush mounting in addition to the usual surface mounting. The MME-3 is black and the MME-3R is red; they are identical in all other respects.

Consider the following when mounting the backbox:

- Mounting height for visual and manual access to the MKB-2 Keyboard/annunciator
- Weight and size of enclosure
- Local mounting codes

Fasten the backbox securely to a clean, dry, shock-free, and vibration-free surface. MME-3 enclosure is for indoor use only in dry environments. Position the backbox clear of obstructions so that the front door opens freely and so that the indicators and controls are easily accessible.

NOTE: When the backbox is mounted semi-flush, be sure that the position of the backbox permits the front door to swing fully open.

To install the MME-3 backbox:

(Refer to Figure 1.)

1. Slip the front door off the hinges of the box and put it to one side temporarily.
2. Remove the knockouts in the backbox where field wiring is required.

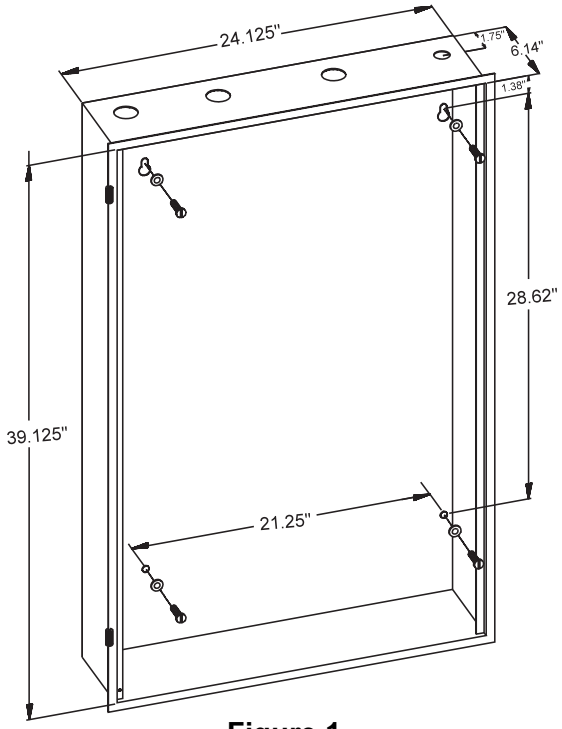


Figure 1
Mounting the Backbox

3. Hold the empty backbox against the wall at a height that provides easy access.
4. Mark drill points on the wall in the center of the two slots on the upper rear of the backbox.
5. Drill the two holes and screw in the top bolts, leaving a small gap between the wall and each top bolt.
6. Mount the backbox on the two bolts and then install the bottom bolts in the two holes provided.
7. Tighten all bolts securely against the back wall of the backbox.
8. Slip the front door back on the hinges of the backbox (See Figure 2).

Siemens Industry , Inc.
Building Technologies Division
Florham Park, NJ

P/N 315-094883-6

Siemens Building Technologies, Ltd.
Fire Safety & Security Products
2 Kenview Boulevard
Brampton, Ontario
L6T 5E4 Canada

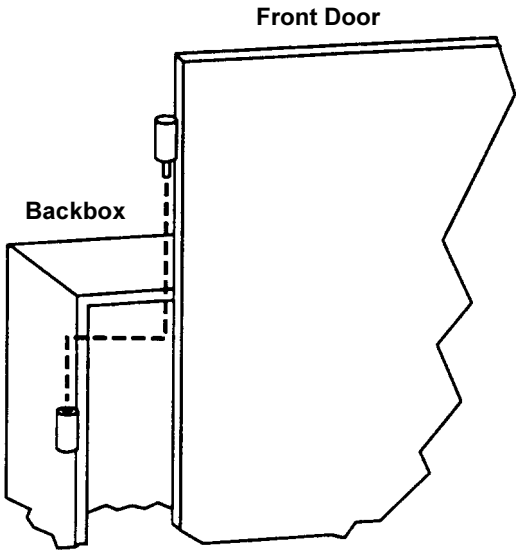


Figure 2
Reinstalling the Front Door

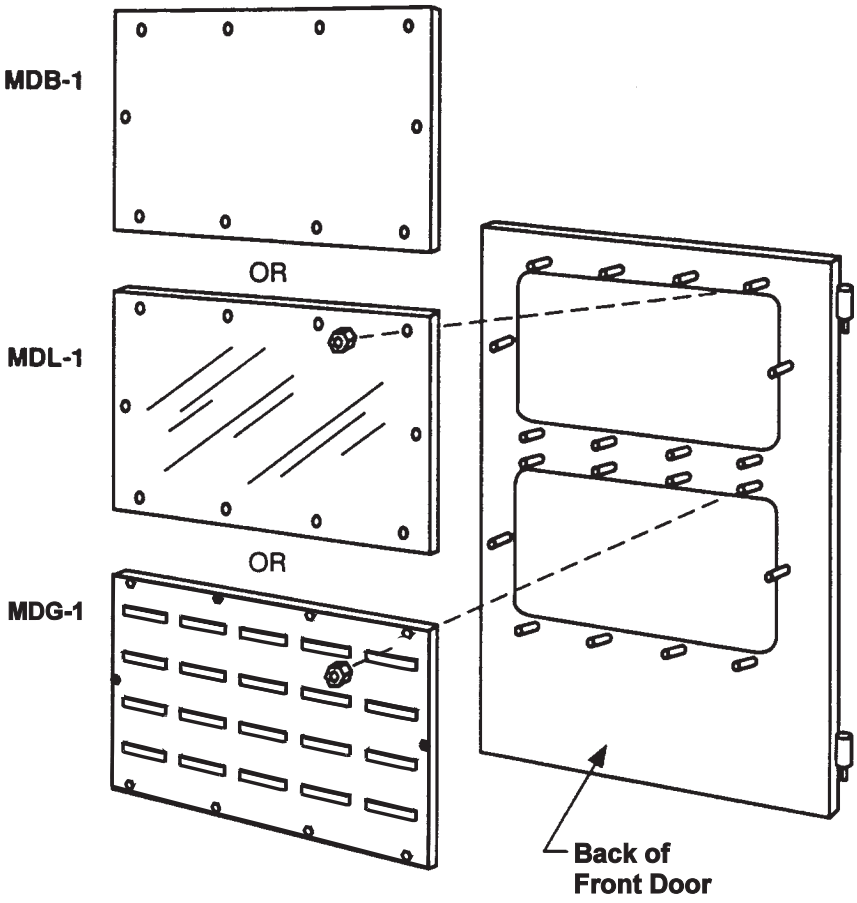


Figure 3
Inserting the Filler Plates in the Front Door

FRONT DOOR

The front door is the main outer door for the MME-3 enclosure. The door is supplied without filler plates for the two large openings. To select the appropriate filler plates for the two openings, follow the information below.

- **When visual indication of system operation (LCD, LED, or printer) is required,** install clear panels, the MDL-1 lens, behind the appropriate door openings.
- **When visual indication of the system operation is not required,** install plain blank panels, MDB-1s, behind the appropriate door openings.
- **When audio amplifiers such as the EL-410C/D or ZAC-30 are used,** install the MDG-1 (MXL Door Venting Grill) behind the appropriate door openings.
- **After determining which filler plates are required,** insert the appropriate plates in the front door as shown in Figure 3 using the hardware supplied.

MOUNTING PLATE (MBR-MP)

Install the MBR-MP Mounting Plate, which is shipped separately. Refer to the *MBR-MP Installation Instructions,* P/N 315-094882.

WIRING

In compliance with UL-864, effective May 1, 1995, all power limited fire protective signaling conductors must be separated a minimum of 1/4 inch from all of the following items located within a control panel:

- electric light
- power
- Class 1 or non-power limited fire protective signaling conductors

To meet the above requirements, the following guidelines **must be observed** when installing modules and wiring to this control panel.

NOTE: If power-limited wiring is not used within an MXL/MXLV enclosure, then the following guidelines do not apply. In that case, be sure to follow standard wiring practices.

WIRING ENTERING MAIN ENCLOSURE
Non-Power Limited Wiring

Wiring to the following MXL/MXLV module terminations is considered non-power limited and must enter the enclosure through the knockouts specified in Table 1 (Refer to Figure 4). Wiring between the knockouts specified and the module termination must be in the shortest route and must not overlap any other wiring.

TABLE 1

Module	Termination	Enclosure Knockout
ASC-1/-2‡ (Power from EL-410C/D)	OMM-1	6 or 10
CRM-4*	MOM-4	9 or 10
CSM-4†	MOM-4	9 or 10
MPS-6/-W	1, 2, 3	8
MPS-12/-W	1, 2, 3	8
ZC Zone Cards‡ (Power from EL-410C/D)	OMM-1	6 or 10

* CRM-4/CSM-4 modules must be installed in the extreme left MOM module position. Install the first CRM in position **A**, the second in position **B**, etc., as shown in Figure 4.

† When the CSM-4 is used as Municipal Tie or Releasing Service.

‡ Audio or strobe power wiring to any ZC Zone Card module and ASC-1/-2 first must be terminated at a PLC-4 plug-in module installed in an OMM-1 and then at the zone card. The PLC-4 must contain at least one of the following plug-on boards: a PL864-25A or PL864-70A for audio circuits, or a PL-864-25S for strobe circuits. Refer to the *PLC-4 Installation Instructions,* P/N 315-093312.

If there are no MOM-4/CRM-4s installed in the system, install the PLC-4 in the extreme left OMM-1 module position in connector position **B**, the second in position **L**, as shown in Figure 6.

If there are MOM-4/CRM-4s installed in the system, install the OMM-1 in the next available left-most position. Install the PLC-4 as shown in Figure 7. Wire between the PLC-4 and the appropriate zone card in accordance with the instructions accompanying these modules.

WIRING IN MAIN ENCLOSURE
Non-Power Limited Wiring

The following wiring is considered non-power limited:

- from the MPS-6/-W or MPS-12/-W
- from the batteries to the MMB
- from the MMB (P3) to the MOM-4 (P5)

To maintain the required separation, the wires must be routed and held in place by a separate wire support. This support is positioned on the left side wall of the enclosure as shown in Figure 5. Follow the procedure listed below:

1. Locate the wire standoffs mounted on the left side of the enclosure (See Figure 5).
2. Place the wires in the standoffs, close the clamps, and then route the wires to the appropriate terminations as shown in Figure 5.
3. When the TSP-40 optional printer is used, the printer cable to the MOM-4 (P8) is considered to be non-power limited. Route the cable as shown in Figure 4.

WIRING ENTERING MAIN ENCLOSURE
Power Limited Wiring

Wiring to the following MXL module terminations is considered power limited and must enter the enclosure through the knockouts specified in

Table 2 (Refer to Figure 4). These modules must be installed in the extreme right MOM module position.

If three MOM-4s are used in the system, install the first module in position **M**, the second in position **L**, etc., as shown in Figure 5. Wiring between the knockouts specified and the module termination must be in the shortest route and must not overlap any other wiring.

TABLE 2

Module	Termination	Enclosure Knockout
ALD-2	MOM-4	5 or 7
ALD-2I	MOM-4	5 or 7
CMI-300	MOM-4	5 or 7
CSM-4*	MOM-4	5 or 7
CZM-4	MOM-4	5 or 7
MMB	TB1 (1-4)	11
	TB2 (1-4)	11
	TB3 (1-4)	11
	TB4 (1-9)†	3 or 4
NET-4/7	TB5 (1-12)	3 or 4
NIM-1R	MOM-4	5 or 7
PIM-1	TB1	3 or 4
PS-5N7	TB1 (1-6)	3 or 4
OCC-1	OMM-1	5 or 7
REP-1	MOM-4	5 or 7
TBM-1/2	TB4 (All positions)	3 or 4
	TB5 (All positions)	3 or 4
XLD-1	MOM-4	5 or 7
ZAC-30	OMM-1	5 or 7
ZCT-8B	OMM-1	5 or 7

* When the CSM-4 is used as Notification Application Circuit or Leased Line.

† Listed Class 2 or Power Limited Source.

WIRING ENTERING THE REMOTE ENCLOSURE

Non-Power Limited Wiring

Wiring to the following MXL/MXLV module terminations is considered non-power limited and must enter the enclosure through the knockouts specified in Table 3 (Refer to Figure 9). Wiring between the knockouts specified and the module termination must be in the shortest route and must not overlap any other wiring.

TABLE 3

Module	Termination	Enclosure Knockout
ASC-1/-2‡	OMM-1	
(Power from EL-410C/D)		6 or 10
CRM-4*	MOM-4	9 or 10
CSM-4†	MOM-4	9 or 10
MPS-6/-W	1, 2, 3	8
MPS-12/-W	1, 2, 3	8
ZC Zone Cards‡	OMM-1	
(Power from EL-410C/D)		6 or 10

* CRM-4 modules must be installed in the extreme left MOM module position. Install the first CRM in position **A**, the second in position **B**, etc., as shown in Figure 9.

† When the CSM-4 is used as Municipal Tie or Releasing Service.

‡ Audio or strobe power wiring to any ZC Zone Card module and ASC-1/-2 first must be terminated at a PLC-4 plug-in module installed in an OMM-1 and then at the zone card. The PLC-4 must contain at least one of the following plug-on boards: a PL864-25A or PL864-70A for audio circuits, or a PL-864-25S for strobe circuits. Refer to the *PLC-4 Installation Instructions,* P/N 315-093312.

If there are no MOM-4/CRM-4s installed in the system, install the PLC-4 in the extreme left OMM-1 module position in connector position **B**, the second in position **L**, as shown in Figure 6.

If there are MOM-4/CRM-4s installed in the system, install the OMM-1 in the next available left-most position. Install the PLC-4 as shown in Figure 7. Wire between the PLC-4 and the appropriate zone card in accordance with the instructions accompanying these modules.

WIRING IN THE REMOTE ENCLOSURE

Non-Power Limited Wiring

The following wiring is considered non-power limited:

- from the MPS-6/-W or MPS-12/-W
- from the batteries to the PSR-1

To maintain the required separation, the wires must be routed and held in place by a separate wire support. This support is positioned on the left side wall of the enclosure as shown in Figure 7. Follow the procedure listed below:

1. Locate the wire standoffs mounted on the left side of the enclosure (See Figure 8).
2. Place the wires in the standoffs, close the clamps, and then route the wires to the appropriate terminations as shown in Figure 8.

WIRING ENTERING THE REMOTE ENCLOSURE

Power Limited Wiring

Wiring to the following MXL/MXLV module terminations is considered power limited and must enter the enclosure through the knockouts specified in Table 4 (Refer to Figure 9). These modules must be installed in the extreme right MOM module position.

If three MOM-4s are used in the system, install the first module in position **M**, the second in position **L,** etc., as shown in Figure 9. Wiring between the knockouts specified and the module termination must be in the shortest route and must not overlap any other wiring.

TABLE 4

Module	Termination	Enclosure Knockout
ALD-2	MOM-4	5 or 7
ALD-2I	MOM-4	5 or 7
CMI-300	MOM-4	5 or 7
CSM-4*	MOM-4	5 or 7
CZM-4	MOM-4	5 or 7
NET-4/7	MOM-4	5 or 7
NIM-1R	MOM-4	5 or 7
OCC-1	OMM-1	5 or 7
PIM-1	TB1	3 or 4
PS-5N7	TB1 (1-6)	3 or 4
PSR-1	TB1 (1-6)†	3 or 4
	TB4 (1-4)	3 or 4
	TB3 (3-6)	11
REP-1	MOM-4	5 or 7
TBM-1/2	TB4 (All positions)	3 or 4
	TB5 (All positions)	3 or 4
XLD-1	MOM-4	5 or 7
ZAC-30	OMM-1	5 or 7
ZCT-8B	OMM-1	5 or 7

* When the CSM-4 is used as Notification Appliance Circuit or Leased Line.

† Listed Class 2 or Power Limited Source.

WIRING THE DV-100 SERIES MODULES IN EITHER THE MAIN OR REMOTE ENCLOSURES

Non-Power Limited Wiring

Wiring to and from the DV-100 Series modules is considered non-power limited and must enter and exit the enclosure through the knockouts specified in Table 5 (Refer to Figure 10). Wiring between the knockouts specified and the module termination must be in the shortest route and must not overlap any other wiring. Refer also to the DV-100 Wiring Diagrams, P/Ns 315-192756 and 315-192757, as applicable.

TABLE 5
DV-100 WIRING

Enters/ Exits	Termination	Enclosure Knockout
Enters	TBM-1, TB2 (1-2)	4
Exits	TBM-1, TB3 (1-2)	4
Enters	DC-35S, Pos. 1-2	8
Exits	DC-35S, Pos. 4-5	8

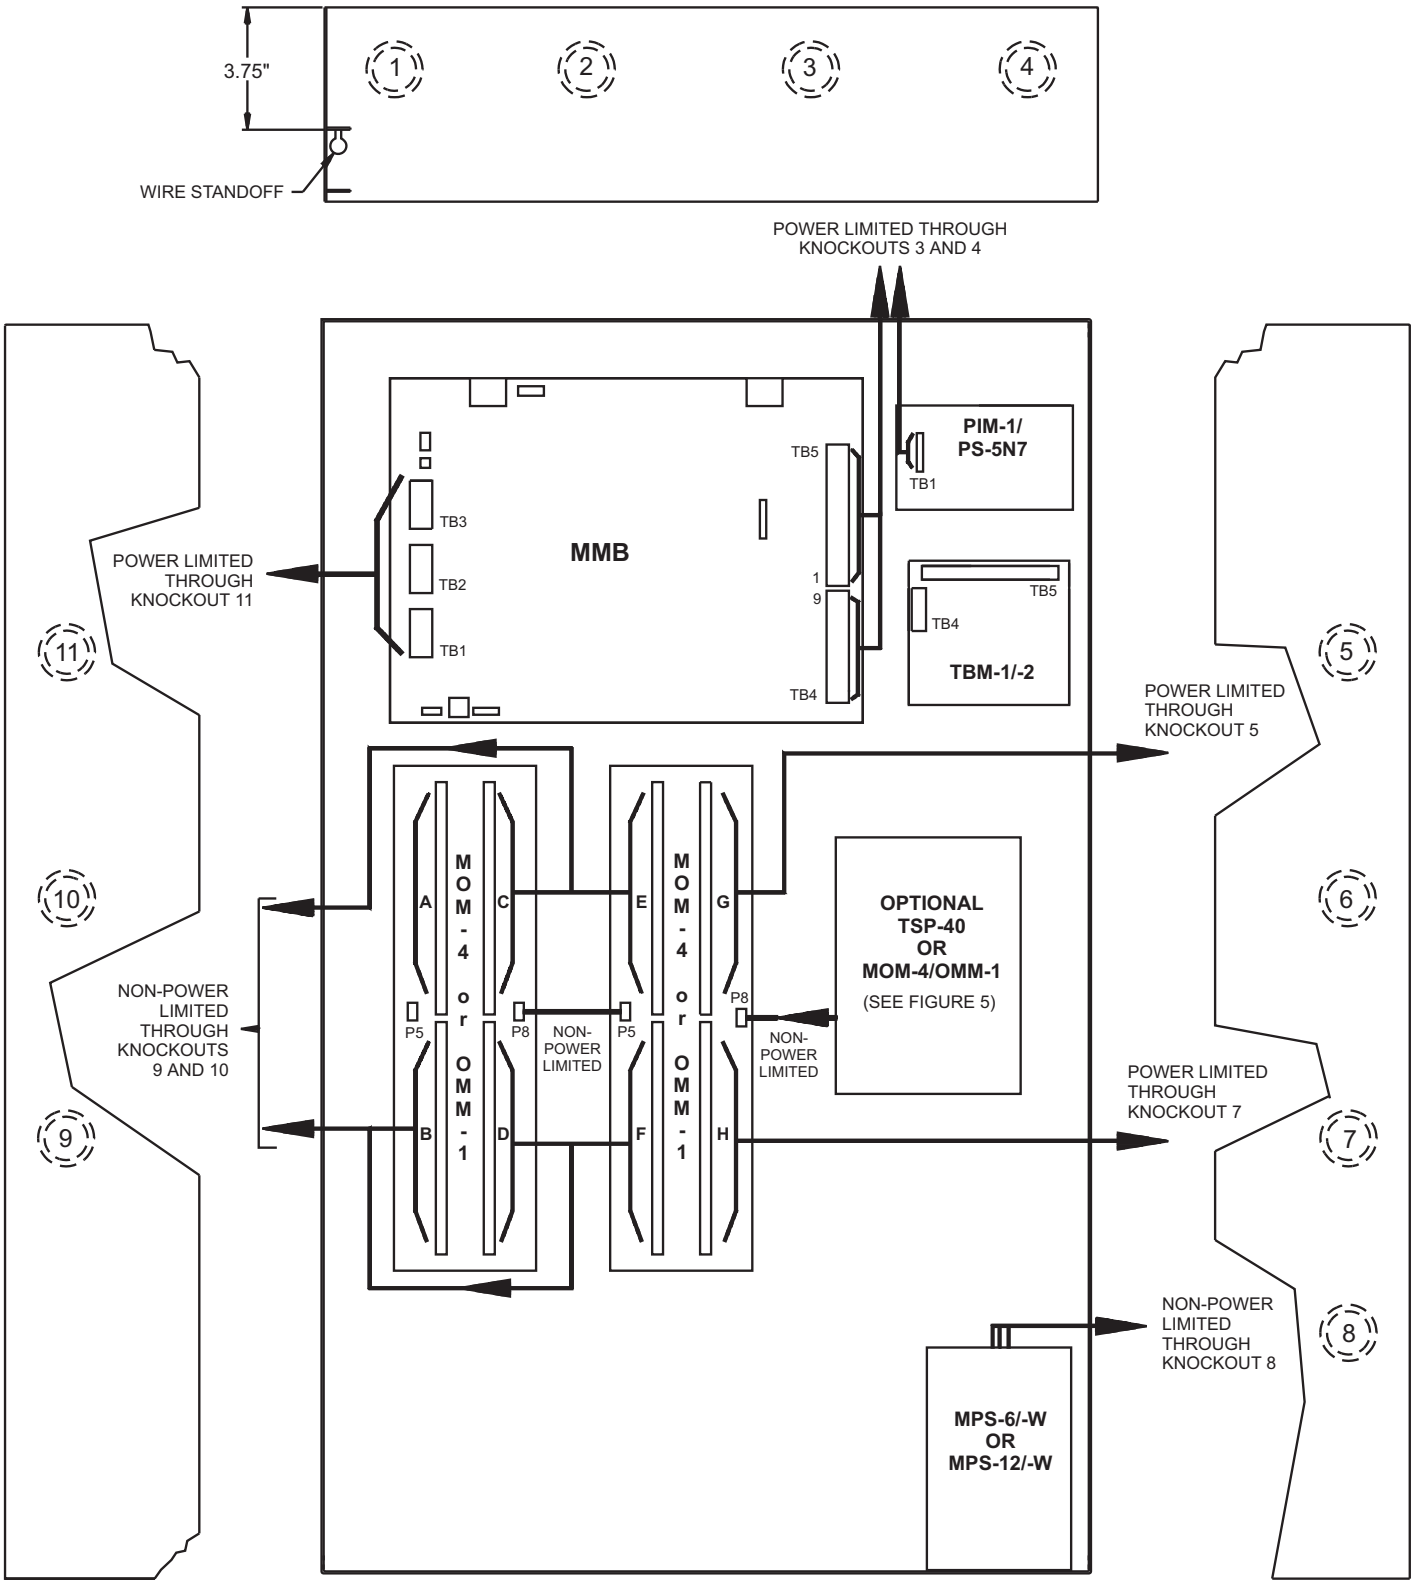


Figure 4
MXL/MXLV Non-Power Limited Wiring Entering Main Enclosure

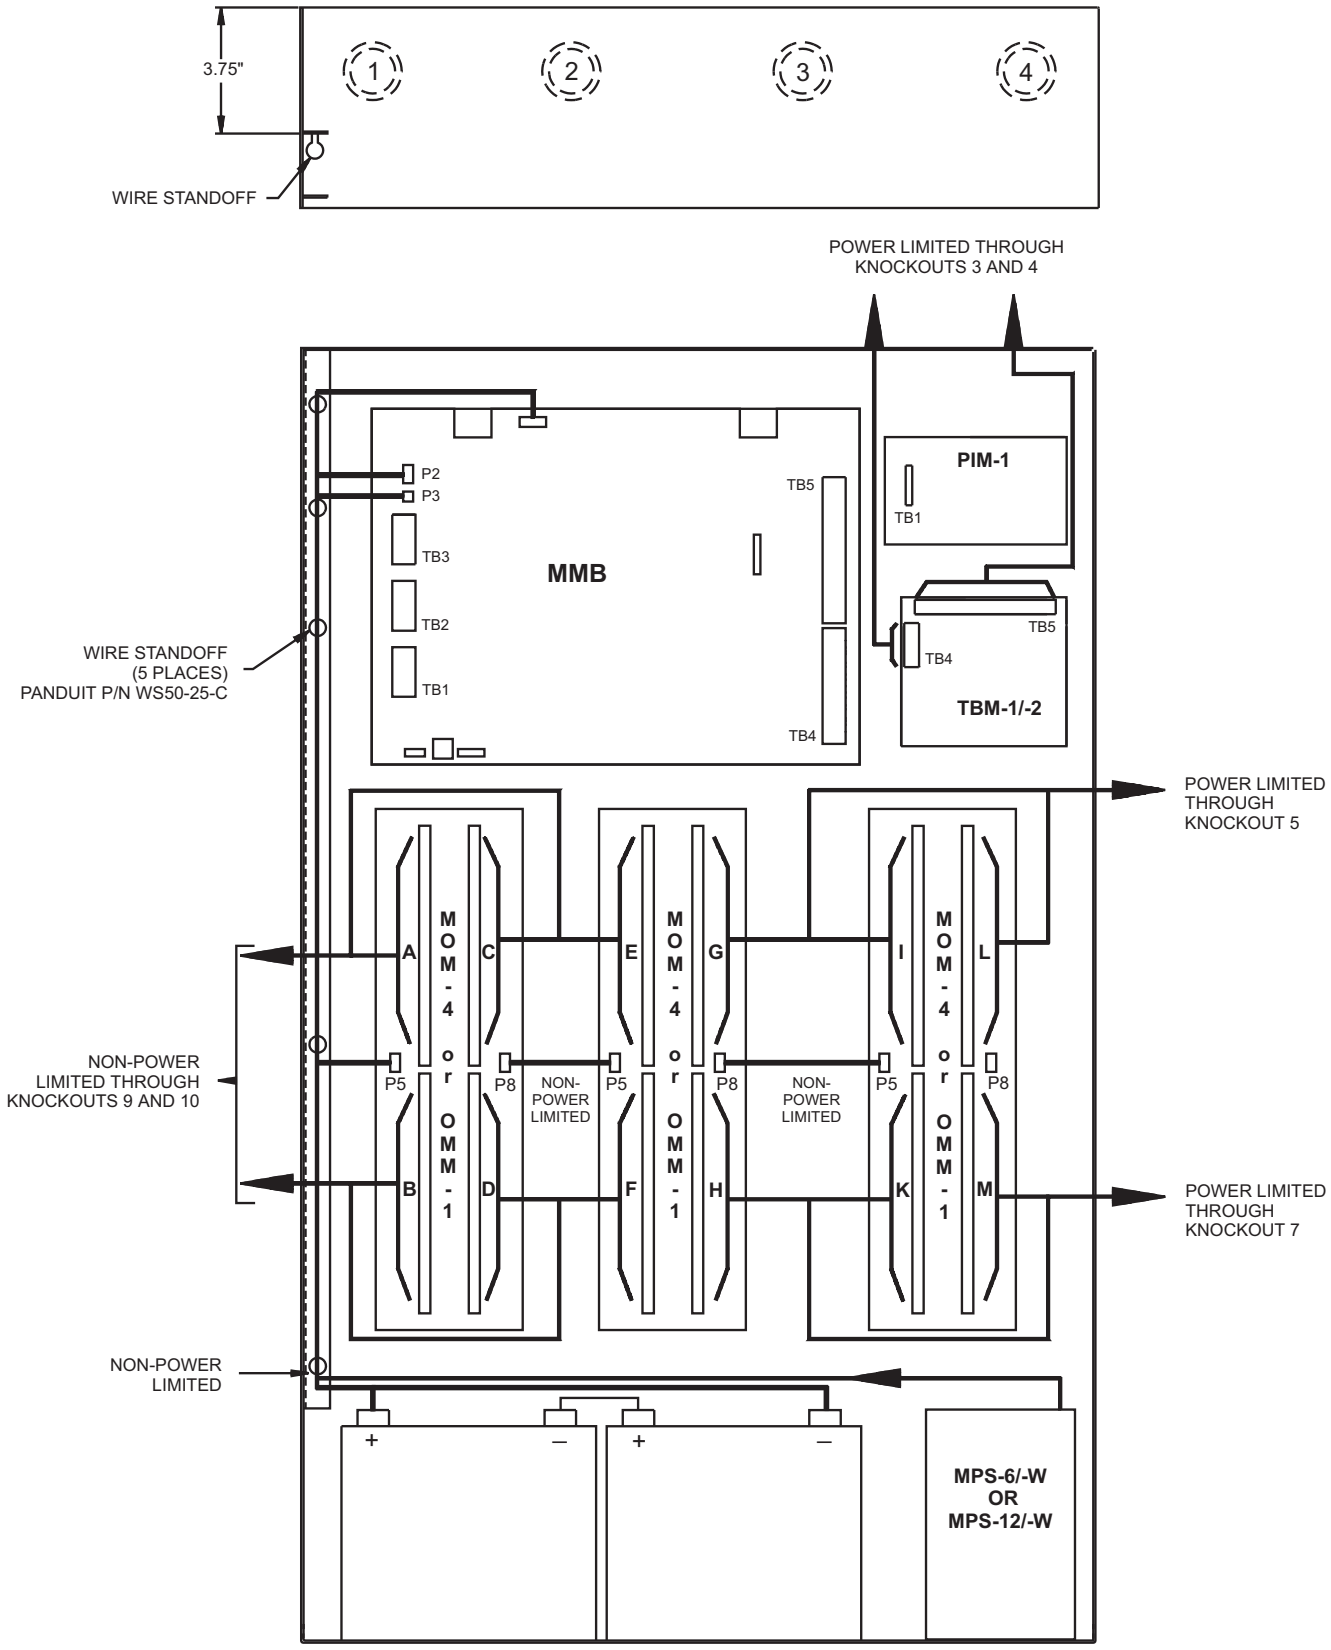


Figure 5
MXL/MXLV Non-Power Limited Wiring in Main Enclosure

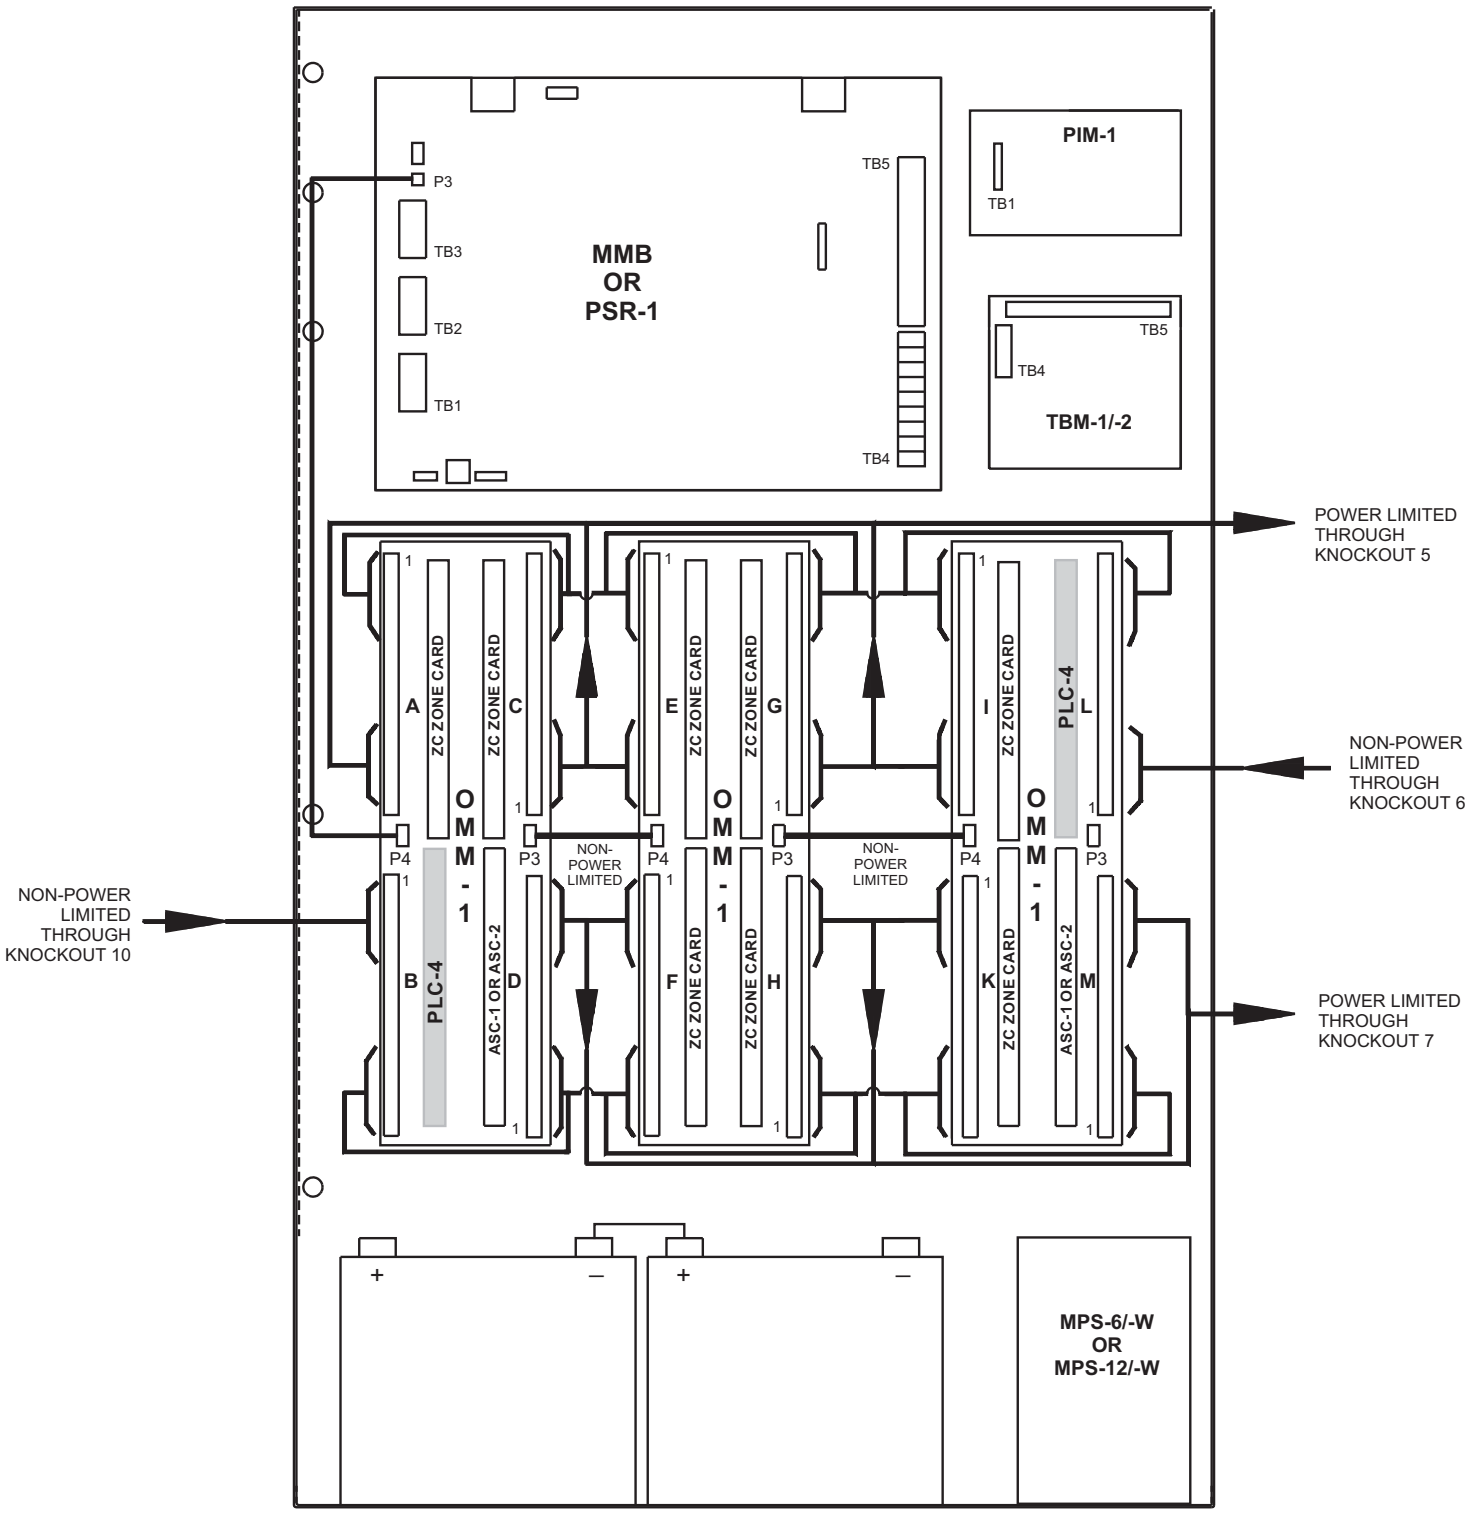


Figure 6
MXL/MXLV Non-Power Limited Wiring When No MOM-4/CRM-4s Are Used

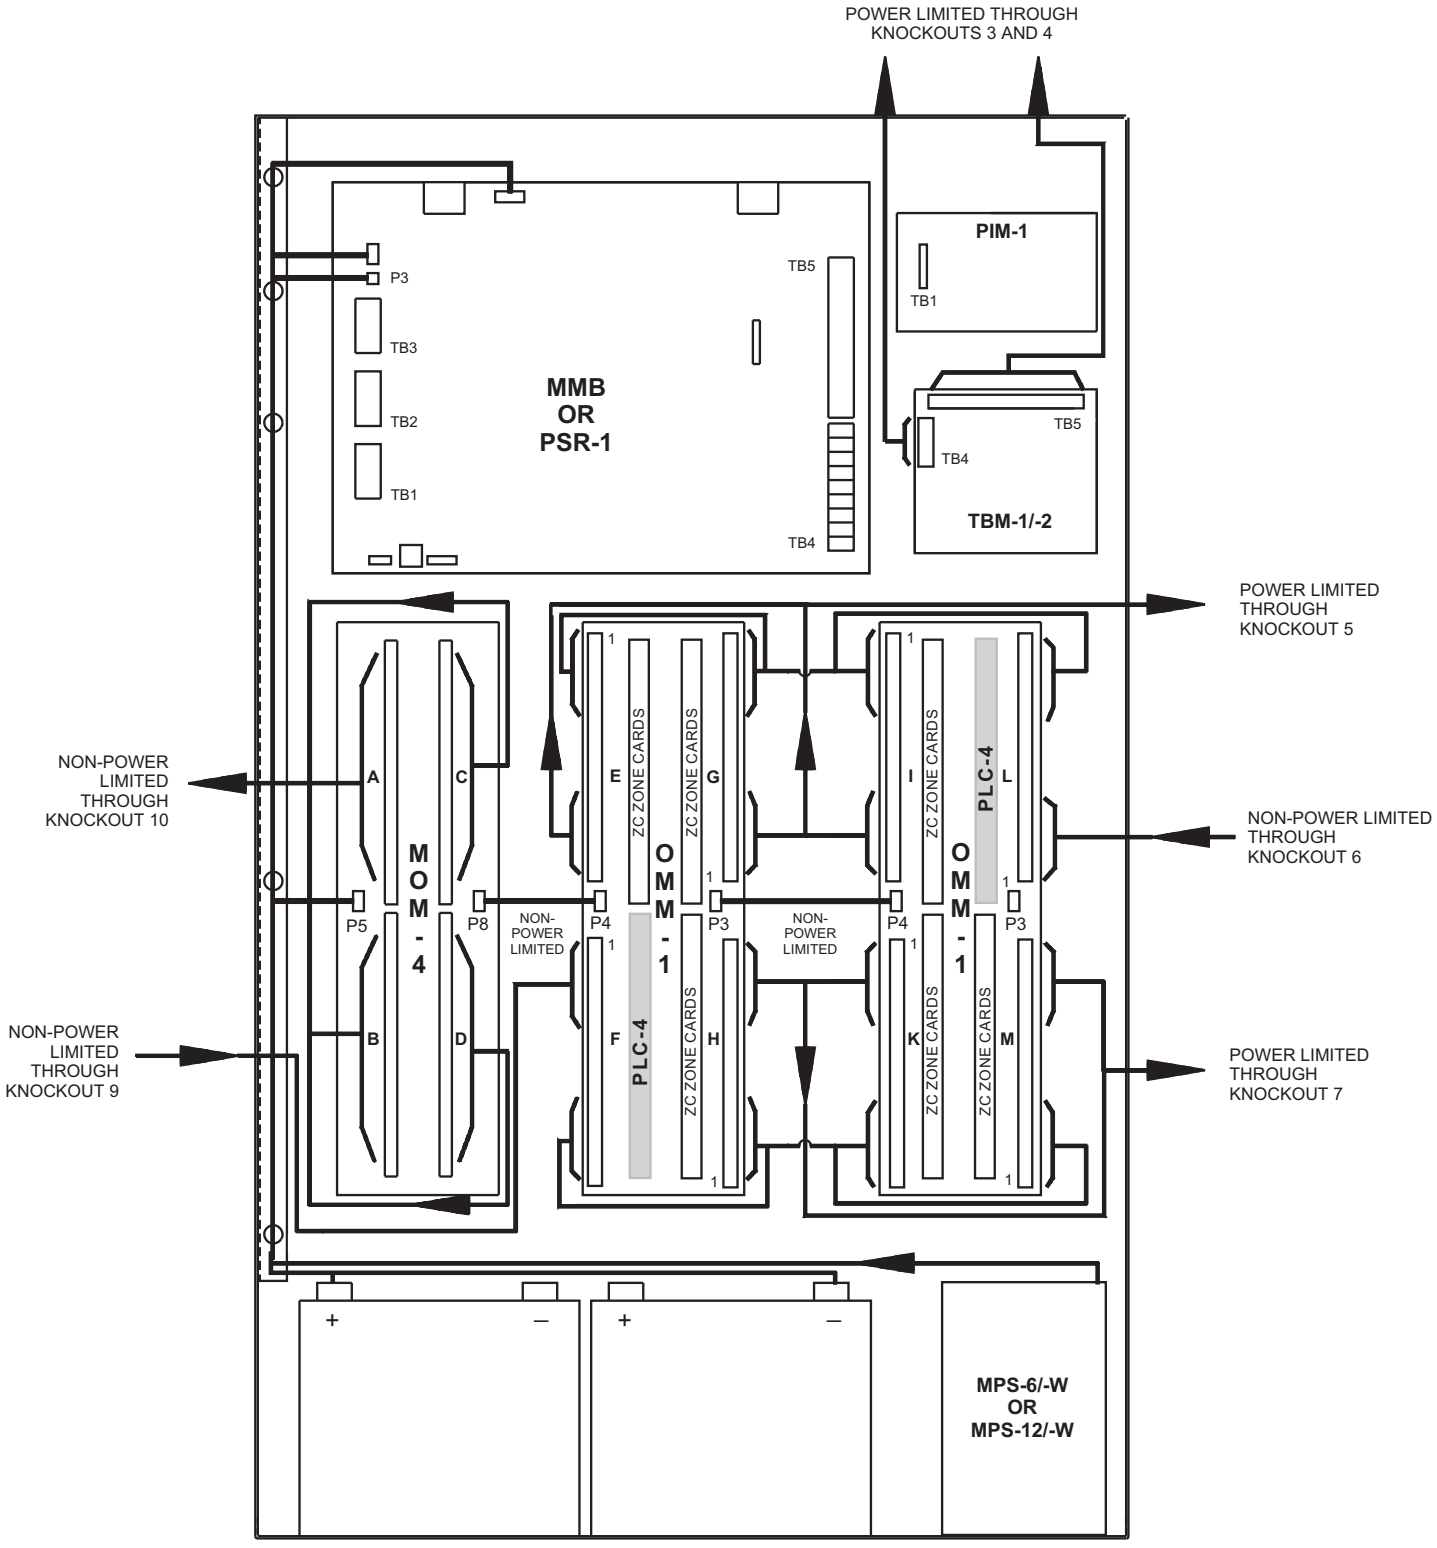


Figure 7
MXL/MXLV Non-Power Limited Wiring When MOM-4/CRM-4s Are Used

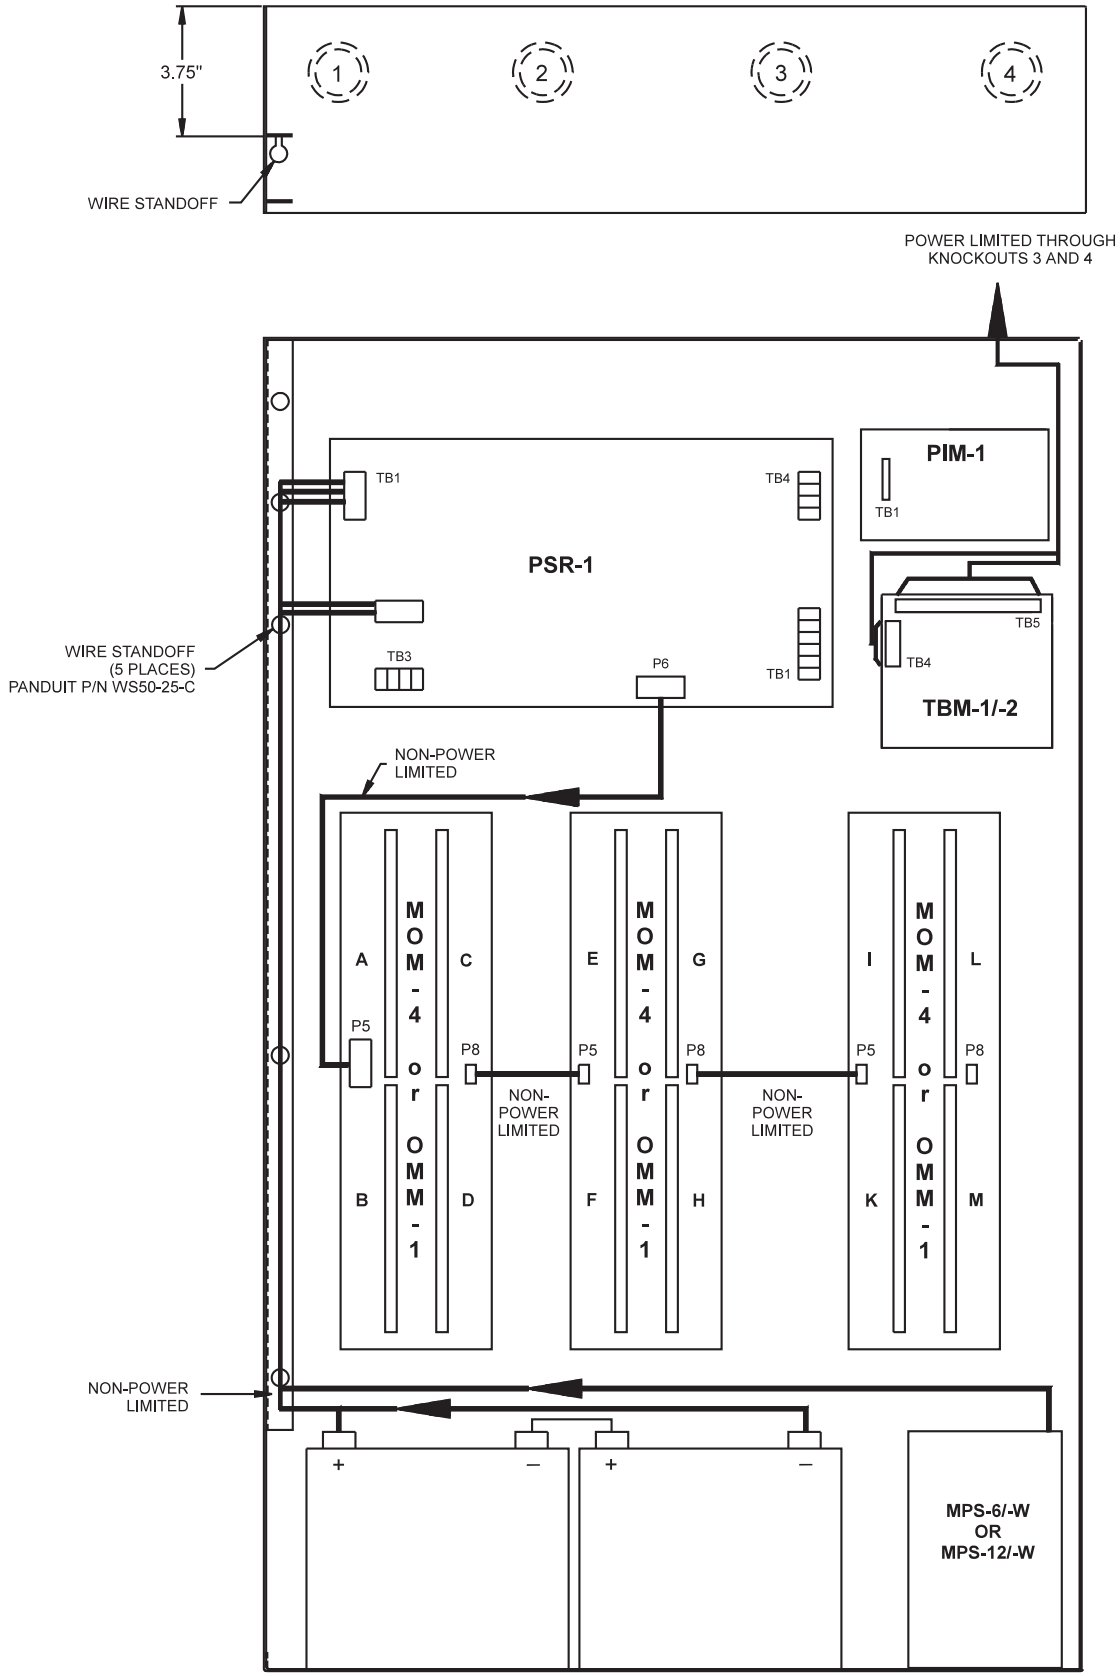


Figure 8
MXL/MXLV Wiring in Remote Enclosure

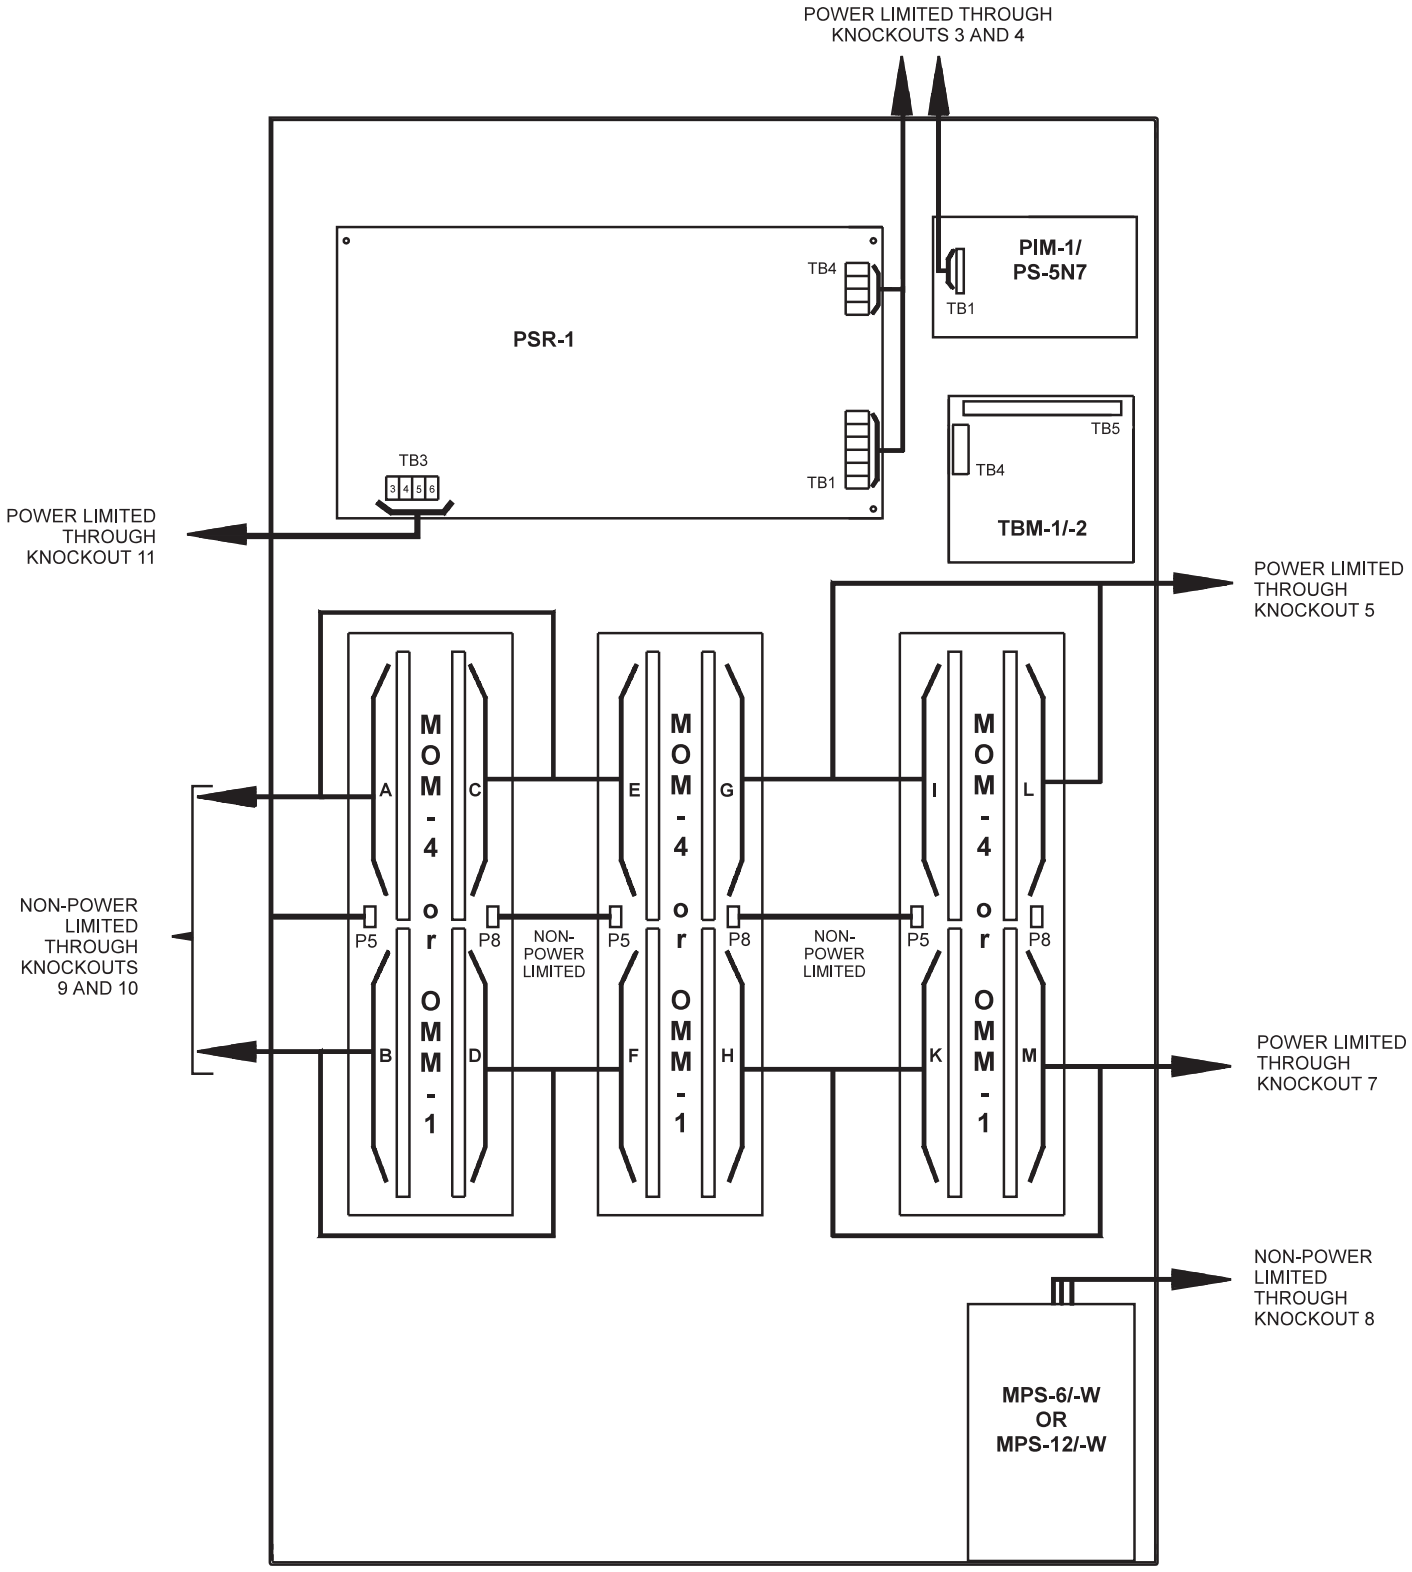


Figure 9
MXL/MXLV Wiring Entering Remote Enclosure

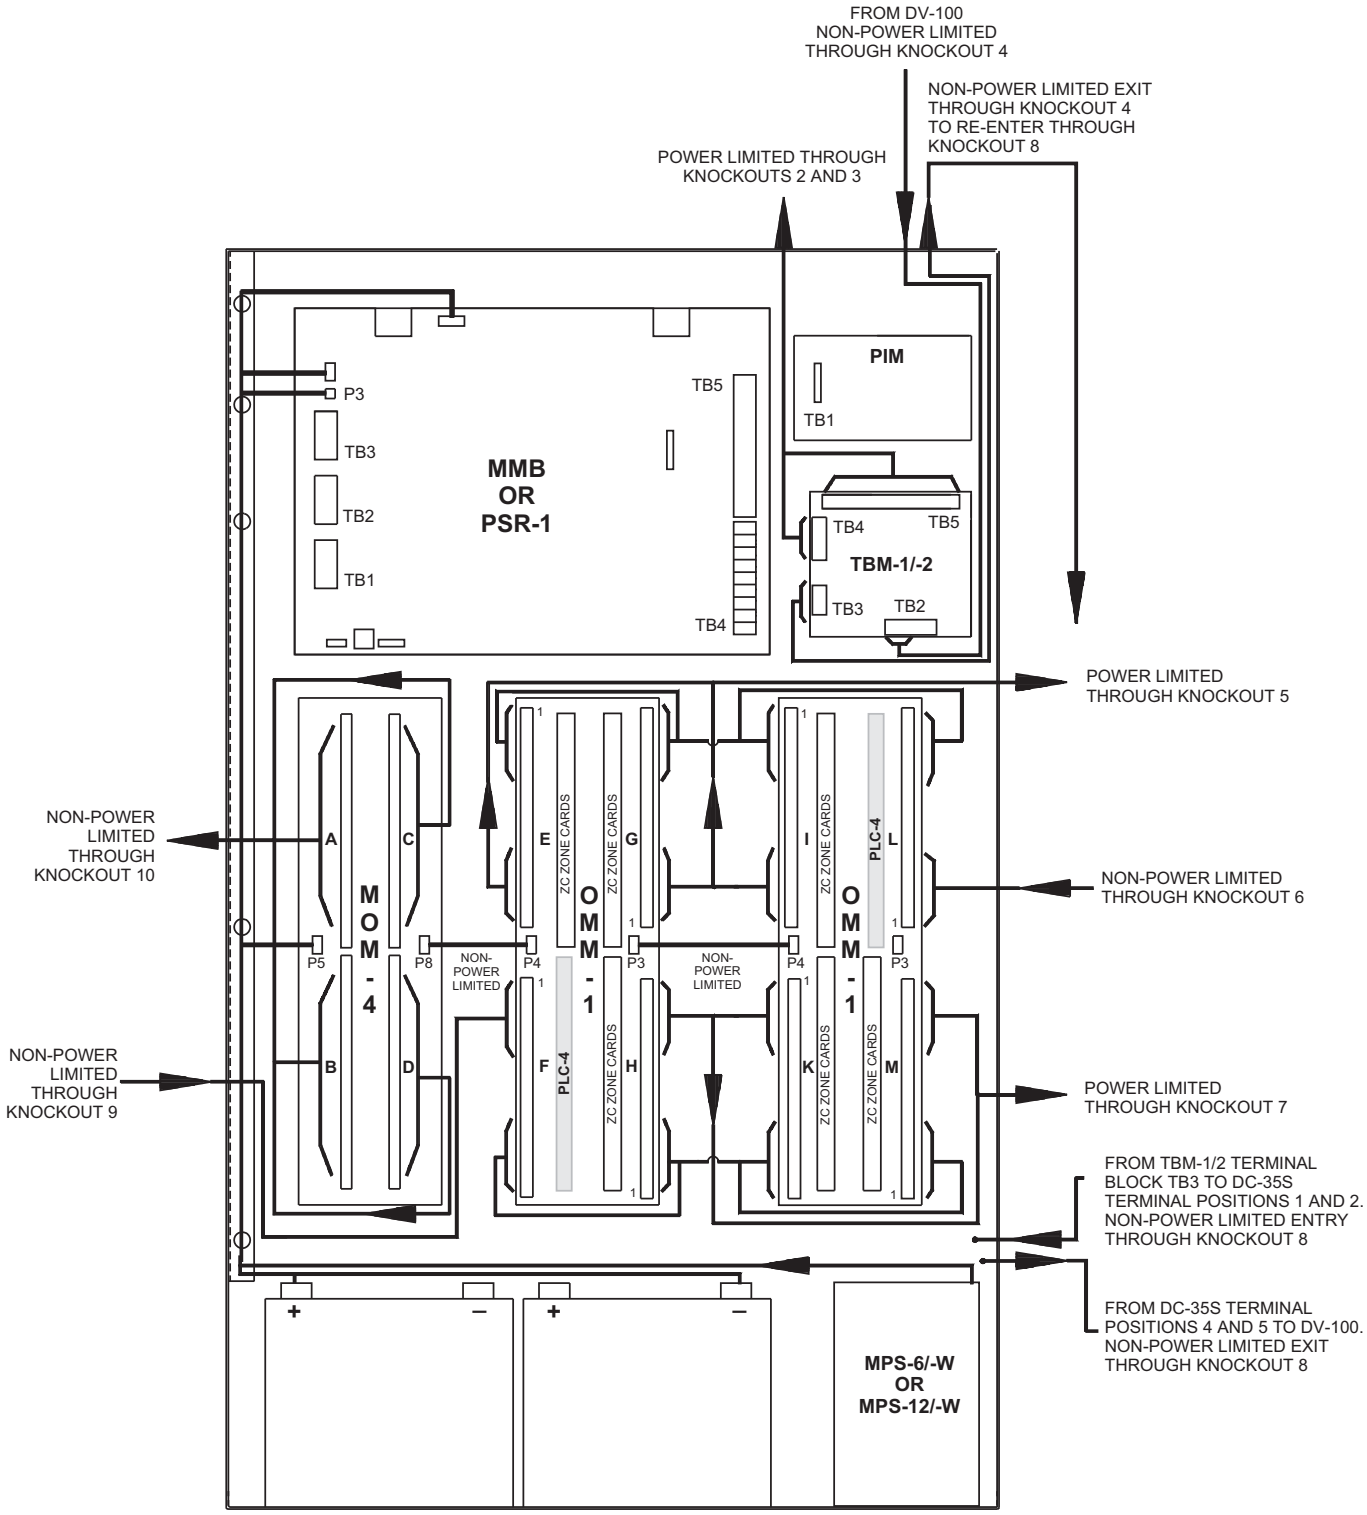


Figure 10
MXL/MXLV Wiring When DV-100 is Used