

# Airplane IFR Quick-Review Study Guide

# WHEN IS AN INSTRUMENT RATING REQUIRED?

- When acting as PIC under IFR or in weather conditions less than prescribed for VFR.
- When carrying passengers for compensation or hire on cross-country flights in excess of 50 NM or at night. (§61.133)
- For flight in Class A airspace (§91.135)
- For Special VFR between sunset and sunrise

# AIRPLANE-INSTRUMENT RATING MINIMUM **AERONAUTICAL EXPERIENCE**

- 50 hours X-Country PIC time
  - Of which ,10 hours in airplanes.
- 40 hours actual or simulated instrument time
  - ▷ Of which, 15 hours with CFII.
    - Including one X-Country flight of:
      - 250 NM along airways or by directed ATC routing.
      - □ An instrument approach at each airport.
      - □ 3 different kinds of approaches using navigation systems.
      - With a filed IFR flight plan.
    - □ 3 Hours instrument flight training in last 2 Calendar months prior to practical test
- Use of approved full flight simulator or FTD, if trained by authorized instructor:
  - Max. 30 hours if instrument time completed under part
- Use of FAA approved Aviation Training Device, if trained by an authorized instructor:
  - Max.10 hours of instrument time if Basic ATD
  - Max. 20 hours of instrument time if Advanced ATD
- No more than 20 hours of total instrument time can be credited in a full flight simulator, FTD or ATD, except the 30 hours exception under part 142 mentioned above.

# RECENCY OF EXPERIENCE

# **To act as PIC** (§61.56)

A Flight review is required since the beginning of the 24 calendar months before the month of the flight in an aircraft for which the pilot is rated. Consists of minimum 1 hour of flight training and 1 hour ground training. Conducted by an authorized instructor.

# The flight review can be substituted by:

- A proficiency check or practical pilot test for a pilot certificate, rating or operating privilege. (conducted by an approved examiner, pilot check airman, or US Armed
- A practical test, conducted by an examiner, for flight instructor certificate, additional rating, renewal or reinstatement.
- Completion of one or more phases of the FAAsponsored pilot proficiency award program (WINGS).
- Flight instructor renewal under part 61.197 exempts the pilot from the ground portion of the flight review.

# LOGGING INSTRUMENT TIME (§61.51)

A person may log instrument time An authorized instructor only for that flight time when the person operates the aircraft solely by reference to instruments under actual or simulated instrument flight conditions.

may log instrument time when conducting instrument flight instruction in actual instrument flight conditions.

A Flight simulator or FTD may be used to meet the flight review requirements as long as:

- It is used in an approved course by a training center under part 142.
- Represent an aircraft for which the pilot is rated.

# To carry passengers as PIC

- 3 takeoffs & landings in category, class and type (if type rating req.) In the last 90 days.
- At periods between 1 hour after sunset to 1 hour before sunrise: 3 takeoffs & landings to full stop within 1 hour after sunset to 1 hour before sunrise.
- The takeoffs and landings may be accomplished in a FFS or FTD if it is approved for landings and used in a part 142 training center.

See exceptions in 61.57(e) for pilots operating under part 121, 125, 135 and PIC of turbine-powered airplanes with more than one flight crewmember.

# To act as PIC under IFR or in weather conditions less than the minimums for VFR- "6 HITS" -

Within 6 calendar months preceding the month of flight:

- 6 instrument approaches.
- Holding procedures & tasks.
- Intercepting & Tracking courses through the use of navigational electronic systems.
- The above can be completed in a FFS, ATD, or FTD provided the device represents the category of aircraft for the instrument rating privileges to be maintained and the pilot performs the tasks and iterations in simulated instrument conditions. A flight instructor is not needed.

No "6 HITS" logged looking back six months? You have an <u>additional 6 months to regain currency</u> by performing the "6 HITS" with a safety pilot (under simulated conditions), an instructor or examiner.

- Safety pilot requirements
  - ▶ Holds at least a private pilot certificate with the appropriate category and class.
  - Have adequate vision forward and to each side of the aircraft.
  - Aircraft must have a dual control system.

# More than 6 months since IFR current?

- An Instrument Proficiency Check (IPC) is required. Administered by a CFII, examiner, or other approved person. Guidelines are in the ACS.
- Some IPC tasks, but not all, can be conducted in a FTD or ATD. (See ACS)

To meet recent instrument experience requirements, the following information must be recorded in the person's logbook

- Location & type of each instrument approach accomplished, and
- The name of the safety pilot, if required.

Airplane IFR Quick-Review | Page 1 | Visit PilotsCafe.com for updates and other flight training resources V3.6.0 Jan 30, 2022, All Rights Reserved © Amir Fleminger & Fleminger Media LLC 2011-2022



# The IPC must cover these areas of operation:

- Air traffic control clearances and procedures.
- Flight by reference to instruments.
- Navigation systems.
- Instrument approach procedures.
- Emergency operations, and
- Post-flight procedures.

6 months rule.

# IFR recency of experience exemptions

■ A PIC who is actively employed by a part 121 or 135 operator is exempt from the IFR recency of experience requirements of part 61.57 when operating under part 91, 121 or 135 (as applicable) for that operator as long as he complies with recency of experience requirements applicable for that operation.

For example, a part 121 airline pilot does not need to log "6 HITS" to operate under part 91 or 121 for that airline as long as he is an active pilot with the company and current with that airline's FAA approved training schedule.

However, he is not IFR current for flying outside the airline unless he also complies with the 6 HITS within

# USE OF FULL FLIGHT SIM, FTD, OR ATD FOR ACQUIRING INSTRUMENT AERONAUTICAL EXPERIENCE (§61.51)

- For training towards a certificate or rating, an authorized instructor is present to observe and signs the person's logbook to verify the time and content of the session.
- For IFR recency requirements, log:
  - ▶ Training device, time and content.

(§61.51, §61.56, §61.57, §91.109, Instrument- Airplane ACS)

### LOGGING INSTRUMENT APPROACH PROCEDURES — REQUIREMENTS

- 1. You must operate the aircraft, FFS, ATD or FTD solely by reference to instruments. §61.51(g)(1)
  - ▷ A flight instructor may log an IAP conducted by the student in actual IMC. (See FAA letter to Levy, 2008)
- 1. Be established on each required segment of the IAP down to its published minimums (MDA or DA).
  - The Initial (starting at the IAP), Intermediate and Final approach segments are required for logging the approach, unless:
  - ▶ When radar vectored to final by ATC. (In simulated IMC, vectors from the safety pilot are also accepted).
- If conducted in simulated IMC in an aircraft, or in a FFS, ATD or FTD, simulated conditions must continue down to MDA or DA.
- 4. In an aircraft, flight must be in actual or simulated IMC.
- 5. In an aircraft, if conditions change from actual IMC to VMC during the final approach segment, you can still log the approach.

(See FAA InFO 15012, 2015)

# PREFLIGHT SELF-ASSESSMENT - "IM SAFE"

- <u>I</u> Illness Do I have any symptoms?
- M Medication Have I taken prescription or over-the-counter drugs?
- S Stress Am I under psychological pressure, worried about finances, health or family discord?
- A Alcohol No drinking within 8 hours. ("8 hours bottle to throttle"). No more than .04% of alcohol in blood.
- F Fatigue Am I tired / adequately rested?
- E Emotion Am I emotionally upset?

(§91.17, AIM 8-1-1)

# RISK MANAGEMENT & PERSONAL MINIMUMS - "PAVE"

- P Pilot (general health, physical / mental / emotional state, proficiency, currency)
- <u>A</u> Aircraft (airworthiness, equipment, performance)
- <u>V</u> En<u>Vironment</u> (weather hazards, terrain, airports / runways to be used & other conditions)
- E External pressure (meetings, people waiting at destination, etc.)

(Pilot's Handbook of Aeronautical Knowledge)

# DECISION MAKING - "DECIDE"

- D Detect that a change has occurred.
- <u>E</u> Estimate the need to counter the change.
- C Choose a desirable outcome.
- I Identify solutions.
- **D Do** the necessary actions.
- E Evaluate the effects of the actions

(Pilot's Handbook of Aeronautical Knowledge)



# PERSONAL DOCUMENTS REQUIRED FOR FLIGHT

- Pilot Certificate
- Medical certificate (or US Driver's license as permitted by §61.113 & §61.23)
- Authorized photo ID (passport, driver's license, etc)
- Restricted Radiotelephone Operator Permit (For flights outside the US)

# AIRCRAFT DOCUMENTS REQUIRED FOR FLIGHT — "ARROW"

- A Airworthiness certificate
- R Registration certificate
- R Radio station license (for flights outside the US)
- O Operating limitations & information (in AFM)
- W Weight & Balance data (aircraft specific)

(§21.5, §91.103, §91.9, §91.203, ICAO Article 29)

# AIRCRAFT MAINTENANCE INSPECTIONS REQUIRED FOR IFR — "AVIATES"

- <u>A</u> Airworthiness Directive (AD) required inspections. (\$39)
- <u>V</u> VOR check every 30 days. (For IFR; §91.171)
- <u>I</u> Inspections: (§91.409)
  - ▶ Annual inspection 12 Cal. Months (all aircraft).
  - ▶ 100-hour (time-in-service) inspection required if:
    - □ Carrying a person for hire (other than crew
    - □ **Flight instructing for hire** in an aircraft provided by the person giving the instruction.
    - □ "For hire" refers to the person , not the aircraft.
      - Flight school providing airplane + instructor for hire:
         100-hours required
      - Student-owned aircraft: 100-hours not required.
      - Rental (no pilot or instructor): 100-hr not required.
    - The 100-hr inspection may be exceeded by up to 10 hours if aircraft is enroute to a place where it can be done. This additional time must be included in computing the next 100-hours inspection.
    - □ An annual inspection can substitute for the 100-hour if done within 100 hours of time-in-service.
  - ▷ A <u>progressive inspection</u> schedule, if specifically approved by the FAA, may replace the annual and 100 hour inspections.
- A Altimeter, automatic altitude reporting (used by transponder) & static system every 24 calendar months. (For IFR in controlled airspace; §91.411)
- T Transponder every 24 calendar months. (§91.413)
- <u>E</u> ELT (§91.207)

  - ▶ Battery must be replaced after more than 1 hour of cumulative transmitter use or if 50% of its useful life has expired (or, for rechargeable batteries, 50% of the useful life of charge has expired).
- S Supplemental Type Certificate (STC) required inspections.

### **BRIEFINGS**

# PASSENGER BRIEFING - "SAFETY"

- **■** S
  - ▶ Seat belts fastened for taxi, takeoff, landing.
  - > Shoulder harness fastened for takeoff, landing.
  - ▶ Seat position adjusted and locked in place
- <u>A</u>
  - ▶ Air vents location and operation
  - ▶ All environmental controls (discussed)
  - ▶ Action in case of any passenger discomfort
- <u>F</u>
  - ▶ Fire extinguisher (location and operation)
- <u>E</u>
  - ▶ Exit doors (how to secure; how to open)
  - **▷** Emergency evacuation plan
  - Emergency/survival kit (location and contents)
- <u>T</u>
  - ▶ Traffic (scanning, spotting, notifying pilot)
  - ▶ Talking, sterile flight deck expectations
- )
  - ▶ Your questions? Speak up!

(Pilot's Handbook of Aeronautical Knowledge)

# TAXI BRIEFING - "ARCH"

- A Assigned / planned runway.
- R Route.
- <u>C</u> Crossings and hold short instructions.
- <u>H</u> Hot spots & Hazards (e.g., NOTAMs, closed taxiways/runways, surface condition).

# TAKEOFF BRIEFING - "DEPARTS"

- <u>D</u> Departure review (e.g. takeoff type, initial heading, first fix & course, clearance readout).
- **<u>E</u> Establish <u>Expectations** (e.g., flying pilot, PIC, positive transfer of controls).</u>
- P Plan / special considerations (e.g., weather, visibility, terrain, unfamiliar field, inoperative equipment / MELs).
- **<u>A</u> Alternate** (takeoff alternate, if needed, or return plan)
- R Runway conditions and length.
- <u>T</u> Trouble / <u>Tactics</u> (e.g., rejected takeoff, engine failure).
- S Speak up! Questions / concerns?



# PREFLIGHT INFO REQUIRED FOR IFR: "NW KRAFT" - (§91.103)

- <u>N</u> NOTAMs.
- <u>W</u> Weather reports and forecasts.
- K Known traffic delays as advised by ATC.
- R Runway length of intended use.
- A Alternatives available if flight cannot be completed as planned.
- F Fuel requirements
- <u>T</u> Takeoff and landing performance data.

# IFR FLIGHT PLAN §91.173

- Requirement: no person may operate an aircraft in controlled airspace under IFR unless that person has:
  - ▶ Filed an IFR flight plan; and
  - ▶ Received an appropriate ATC clearance.
- It is legal to fly IFR in uncontrolled airspace (class G) without a flight plan or clearance. However, once airborne, you must remain in uncontrolled airspace until you file a flight plan and get an ATC clearance to enter the controlled airspace.
- How to file an IFR flight plan?
  - ▷ FSS
    - □ by phone (1-800-WX-BRIEF)
    - over the radio (GCO/RCO)
    - □ In person.
  - ▷ Online
    - □ www.1800wxbrief.com (Leido)
    - www.fltplan.com (Garmin)
  - ▷ EFB (e.g., Foreflight)
  - - □ Pop-up IFR clearances let pilots transition from VFR to IFR, even without a previously filed flight plan (required by §91.173(a)), under ATC authorization.
    - While filing a flight plan (with FSS) is preferred, pop-ups allow to quickly get the flight into the system. (i.e, when weather is deteriorating fast during VFR). They are subject to ATC workload and not guaranteed.
    - You must be at or above the minimum IFR altitude, or climb to it under VFR.
- File at least 30 minutes prior to estimated departure. Nonscheduled flights above FL230 should be filed at least 4 hours before est. departure time. (AIM 5-1-8)
- Flight plan cancellation (AIM 5-1-15)
  - ▶ Towered airports automatically canceled by ATC upon landing.
  - ▶ Non-towered airports Pilot must contact ATC / FSS to cancel (by radio or phone)
  - Can cancel anytime in flight if out of IMC and out of class A airspace.
- Preferred IFR Routes are published in the Chart Supplement U.S. The AIM recommends filing a preferred route if one is available. (AIM 5-1-8)

# **IFR MINIMUM FUEL REQUIREMENTS** §91.167

Fuel from departure to destination airport

Fuel from destination to most distant alternate (if alternate required) 4

45 Minutes calculated at normal cruise

\*Other fuel requirements exist for 121, 135, Flag and supplemental operations

# **NEED A DESTINATION ALTERNATE?** "1-2-3" RULE -

# A destination alternate is always required, unless:

- An instrument approach is published and available for the destination. AND.
- For at least 1 hour before to 1 hour after ETA:
  - Ceiling will be at least 2000' above airport elevation; and
  - Visibility will be at least 3 SM.

§91.169



# MIN WX CONDITIONS REQUIRED AT AN AIRPORT TO LIST IT AS AN ALTERNATE

The alternate airport minima published in the procedure charts, or, if none:

- Precision approach: 600 ft ceiling and 2 SM visibility.
- Non-precision approach: 800 ft ceiling and 2 SM visibility.
- No instrument approach available at the alternate:

Ceiling & visibility must allow descent from MEA, approach and landing under VFR.

§91.169

# FILING AN ALTERNATE - GPS CONSIDERATIONS

- Equipped with a non-WAAS GPS? You can flight plan based on GPS approaches at either the destination or the alternate, but not at both.
- WAAS Without baro-VNAV? May base the flight plan on use of LNAV approaches at both the destination and alternate.
- WAAS with baro-VNAV? May base the flight plan on use of LNAV/VNAV or RNP 0.3 at both the destination and the alternate.

AIM 1-1-17b.5, 1-1-18c.9, 1-2-3d

# **IFR CRUISING ALTITUDES** §91.179

 In uncontrolled airspace Based on magnetic course:

Below FL290 0°-179° ODD thousands (below 18,000 or Flight Levels (at or above FL180)

180°-359° EVEN thousands (below 18,000') or Flight Levels (at or above FL180)

180-359° 0-179°

EVEN: ODD

# Above FL290 (in non-RVSM)

0°-179° Flight Levels at 4,000' increments starting at FL290 (e.g., FL 290, 330, 370)

180°-359° Flight Levels at 4,000' increments starting at FL310 (e.g., FL 310, 350, 390)

# Above FL290-FL410 (in RVSM)

0°-179° Odd Flight Levels at 2,000' intervals starting at FL290 (e.g., FL 290, 310, 330)

180°-359° Even Flight Levels at 2,000' intervals starting at FL300 (e.g., FL 300, 320, 340)

# In controlled airspace

IFR Cruising altitudes are as assigned by ATC.



# IFR TAKEOFF MINIMUMS (§91.175)

No T/O minimums mandated for part 91 operations. Part 121, 125, 129, 135:

- Prescribed T/O minimums for the runway, or, if none:
- 1-2 engines airplanes: 1 SM visibility
- More than 2 engines: ½ SM visibility



Non-Standard TO mins / Departure Procedures.



Non-Standard IFR alternate minimums exist.



Alternate minimums not authorized due to NA unmonitored facility or the absence of weather reporting service.

# DEPARTURE PROCEDURES (DP)

AIM 5-2-9

- Ensures obstacle clearance, provided:
  - b the airplane crossed the departure end of the runway at least 35 ft AGL,

  - ▷ climbs at least 200 Feet per NM (FPNM), or as published otherwise on the chart.
    - □ FPNM to Feet-Per-Minute conversion:

FPM = FPNM X Groundspeed / 60

- Pilots are encouraged to file a DP at night, during marginal VMC or IMC.
- Two types of DP
  - - Provides only obstacle clearance.
    - Printed either textually or graphically.
    - □ Graphic ODPs are titled "(OBSTACLE)."
  - Standard Instrument Departure (SID)
    - □ In addition to obstacle clearance it reduces pilot and controller workload by simplifying ATC clearances and minimizing radio communications.
    - May depict special radio failure procedures.
    - SIDs are always printed graphically.
- DP are also categorized by equipment required:
  - ▶ Non-RNAV DP for use by aircraft equipped with ground-based navigation (i.e., VOR, DME, NDB).
  - RNAV DP for aircraft equipped with RNAV equipment (e.g., GPS, VOR/DME, DME/DME). Require at least RNAV 1 performance. Identified with the word "RNAV" in the title.
  - RADAR DP ATC radar vectors to an ATS route, NAVAID, or fix are used after departure. RADAR DPs are annotated "RADAR REQUIRED."
- You are not required to accept a DP. To avoid it, state "NO SIDs" in the flight plan's remarks section.
- Transition routes connect the end of the basic SID procedure to the enroute structure.

# **DIVERSE DEPARTURE PROCEDURE**

- All US airports with a published IAP but with no published DP meet the Diverse Airport criteria
- This criteria requires that an airport has been evaluated for no obstacles within 200 ft altitude/NM up to a minimum IFR altitude.
- Diverse Airport Departures provide obstacle

clearance when a DP is not published.

- Turns are allowed only after reaching 400 ft AGL.
- A <u>Diverse Vector Area (DVA)</u> allows ATC to provide radar vectors instead of an ODP, while meeting the diverse departure criteria. DVA information is found in the US terminal procedures publication. It includes a statement that initial headings are provided by ATC and any applicable climb gradients.

# VISUAL CLIMB OVER AIRPORT (VCOA)

- A departure option for IFR aircraft in VMC.
- The pilot visually conducts climbing turns over the airport up to the published "climb to" altitude, from which he proceeds to the instrument portion of the departure.
- Designed to avoid obstacles beyond 3 SM from the departure end of the runway (DER), as an alternative to complying with climb gradients greater than the standard 200 ft/NM.
- Advise ATC as early as possible prior to departure of the intent to fly a VCOA.
- Published in the "Take-Of Minimums and (Obstacle) Departure Procedures" section of the TP.
- May appear as an option on graphic ODPs

# IFR DEPARTURE CLEARANCE -"CRAFT"

- C Clearance limit.
- R Route.
- A Altitude.
- <u>F</u> Frequency (for departure).
- <u>T</u> Transponder code.

Clearance void time – The time at which your clearance is void and after which you may not takeoff. You must notify ATC within 30 min after the void time if you did not depart.

"Hold for release" - You may not takeoff until being released for IFR departure.

Release time - The earliest time the aircraft may depart under IFR.

**Expect Departure Clearance Time (EDCT)** – A runway release time given under traffic management programs in busy airports. Aircraft are expected to depart no earlier and no later than 5 minutes from the EDCT.

Abbreviated departure clearance – "Cleared (...) as filed (...)"

(AIM 5-2-6)

# STANDARD TERMINAL ARRIVAL (STAR)

- Serves as a transition between the enroute structure and a point from which an approach to landing can be made.
- <u>Transition routes</u> connect **enroute fixes** to the basic STAR procedure.
- Usually named according to the fix at which the basic procedure begins.
- As with a SID, you can state "NO STARs" in the remarks section of the flight plan, to avoid getting a clearance containing a STAR.
- RNAV STARs require RNAV 1 performance.



# **IFR ALTITUDES**

# MIN IFR ALTITUDES (§91.177)

- Except for takeoff or landing, or otherwise authorized by the FAA, no person may operate an aircraft under IFR below -
  - **▶ Minimum altitudes prescribed for the flown segment, or if none:**
  - ▶ Mountainous areas: 2,000 ft above the highest obstacle within a horizontal distance of 4 NM from the course.
  - ▶ Non-mountainous areas: 1,000 ft above the highest obstacle within 4 NM from the course.

# **IFR ALTITUDES — DEFINITIONS** (§91.177, Pilot/Controller Glossary)

- DA / H Decision Altitude / Height: the <u>Altitude</u> (MSL) / <u>Height</u> (above runway threshold), on an instrument approach procedure at which the pilot must decide whether to continue the approach or go around.
- MAA Maximum Authorized Altitude. Annotated "MAA-17000" (17,000ft as an example) on IFR charts.
- MCA Minimum Crossing Altitude. The lowest altitude at certain fixes that an airplane must cross when flying in the direction of a higher MEA.
- MDA / H Minimum Descent Altitude / Height: The lowest Altitude (MSL) / Height (above runway threshold) to which descent is authorized on a non-precision approach until the pilot sees the visual references required for landing.
- MEA Minimum Enroute Altitude: The lowest published altitude between radio fixes which assures acceptable navigational signal coverage and meets obstacle clearance requirements. An MEA gap establishes an area of loss in navigational coverage and annotated "MEA GAP" on IFR charts.
- MOCA Minimum Obstruction Clearance Altitude: Provides obstacle clearance and navigation coverage only up to 22 NM of the VOR.
  - ▶ If both an MEA and a MOCA are prescribed for a particular route segment, a person may operate an aircraft lower than the MEA down to, but not below the MOCA, provided the applicable navigation signals are available. For aircraft using VOR for navigation, this applies only when the aircraft is within 22 NM of the VOR. (§91.177)
- MORA Minimum Off Route Altitude (Jeppesen):
  - ▶ Route MORA provides obstruction clearance within 10NM to either side of airway centerlines and within a 10NM radius at the ends of airways.
  - ▶ Grid MORA provide obstruction clearance within a latitude / longitude grid block.
- MRA Minimum Reception Altitude. The lowest altitude on an airway segment where intersection can be determined using radio navigational aids.
- MTA Minimum Turning Altitude: Provides vertical and lateral obstacle clearance in turns over certain fixes. Annotated with the MCA X icon and a note describing the restriction.
- MVA Minimum Vectoring Altitude: The lowest altitude at which an IFR aircraft will be vectored by a radar controller, except as otherwise authorized for radar approaches, departures, and missed approaches. MVAs may be lower than the minimum altitudes depicted on aeronautical charts, such as MEAs or MOCAs.
- OROCA Off Route Obstruction Clearance Altitude: Provides obstruction clearance with a 1,000 ft buffer in non-mountainous terrain areas and 2,000 ft in mountainous areas. OROCA may not provide navigation or communication signal coverage.

\*Designated mountainous areas are defined in 14 CFR part 95 by lat / long coordinates.









# **FLIGHT INSTRUMENTS**

# GYROSCOPIC INSTRUMENTS

- Two principles of a gyroscope:
  - ▶ Rigidity in space, and
  - > precession.

# **Attitude Indicator (AI)**

Operates on the principle of **rigidity in space**. Shows **bank and pitch information**. Older Als may have a tumble limit. Should show correct attitude within 5 minutes of starting the engine. Normally vacuum-driven in GA aircraft, may be electrical in others. May have small acceleration/deceleration errors (accelerate-slight pitch up, decelerate- pitch down) and roll-out errors (following a 180 turn shows a slight turn to the opposite direction).

# Heading indicator (HI)

Operates on the principle of **rigidity in space**. It only reflects changes in heading, but cannot measure the heading directly. You have to calibrate it with a magnetic compass in order for it to indicate correctly. HIs may be slaved to a magnetic heading source, such as a flux gate, and sync automatically to the present heading. Normally powered by the vacuum system in on GA aircraft.

# **Turn Indicators**

Operates on the principle of precession.

- ▶ Turn coordinators show <u>rate-of-turn</u> and <u>rate of roll</u>.
- ▶ Turn-and-slip indicators show <u>rate-of-turn only</u>.

# PITOT-STATIC INSTRUMENTS

# **Altimeter**

- An <u>aneroid barometer</u> that shows the height above a given pressure level, based on standard pressure lapse rate of 1000' per inch of mercury.
- A stack of sealed aneroid wafers expand and contract with changes in atmospheric pressure received from the static port.
- A <u>mechanical linkage</u> between the aneroid and the display translates the sensed pressure to an altitude indication.
- An <u>altimeter setting knob</u> (on a "sensitive altimeter", which are most aircraft altimeters) allows the pilot to
  adjust the current pressure to the current altimeter setting published locally (available from ATIS, METAR or
  ATC).
- The pressure setting is displayed in the "Kollsman Window" in mb and/or inches of mercury (Hg)
- In the US, when operating below 18,000' MSL regularly set the altimeter to a station within 100 NM. Above 18,000' MSL, the altimeter should be set to the standard sea level pressure of 29.92" Hg, and operate in Flight Levels (FL).
- "High to Low Watch out below!". Use caution when flying from high pressure to low pressure areas. If altimeter setting is not updated, altitude will indicate higher, causing the pilot to fly lower than desired. Flying from hot to cold areas results in the same error.

# Types of altitude

- Indicated altitude Uncorrected altitude indicated on the dial when set to local pressure setting (QNH).
- Pressure altitude Altitude above the standard 29.92. Hg plane (QNE). Used when flying above the transition altitude (18,000' in the US)
- **Density altitude** Pressure alt. corrected for nonstandard temperature. Used for performance calculations.
- True altitude Actual altitude above Mean Sea Level (MSL).
- Absolute altitude Height above airport elevation (QFE).

# **Vertical Speed Indicator (VSI)**

- Indicates <u>rate-of-climb</u> in fpm (accurate after a 6-9 sec. lag), and <u>rate trend</u> (immediately with rate change).
- A diaphragm inside the instrument is connected directly to the static source.
- The area outside the diaphragm also receives static pressure, but via a calibrated leak (a restricted orifice).
- This configuration essentially responds to static pressure change over time.
- As the diaphragm expands or contracts, a mechanical linkage moves the pointer needle to display the current rate of climb to the pilot.
- <u>Instantaneous VSI</u> (IVSI) solves the lag issue with the addition of vertical accelerometers.



# PITOT-STATIC INSTRUMENTS - CONTINUED

# Airspeed Indicator (ASI)

- The airspeed indicator measures the difference between impact (ram) air pressure from the pitot tube and ambient pressure from the static port. The result pressure is called dynamic pressure and corresponds to airspeed.
  - ▷ Dynamic Pressure (airspeed) = Impact Pressure Static pressure.
- A diaphragm in the instrument receives ram pressure from the pitot tube. The area outside the diaphragm is sealed and connected to the static port. A mechanical linkage converts the expansion and contraction of the diaphragm to airspeed shown on the display dial.

# Types of speed

- Indicated airspeed (IAS)\_- indicated on the airspeed indicator
- Calibrated airspeed (CAS) IAS corrected for instrument & position errors.
- Equivalent airspeed (EAS) CAS corrected for compressibility error.
- True airspeed (TAS) Actual speed through the air. EAS corrected for nonstandard temperature and pressure
- Mach number The ratio of TAS to the local speed of sound.
- Ground speed Actual speed over the ground. TAS corrected for wind conditions.

# AIRSPEED INDICATOR MARKINGS

- White arc Flap operating range. Starts at Vs0; ends at Vfe
- Green arc Normal operating range Starts at Vs1; ends at Vno
- Yellow arc Caution range. Fly only in smooth air and only with caution.
- Red line Vne

# V-SPEEDS

- <u>Va</u> Design maneuvering speed
- Vs Stall speed, clean config.
- Vs0 Stall speed landing config.
- Vs1 Stall speed specific config.
- Vfe Max flap extended speed.
- Vno Max structural cruise speed
- Vne Never Exceed Speed

# ■ Vx - Best angle of climb

■ Vy - Best rate of climb

# STATIC PORT BLOCKAGE

- Airspeed indicator Indicates correctly only at the blockage altitude.
- Altimeter will freeze on the altitude where it was blocked.
- VSI freezes on zero.
  - > After verifying a blockage in the static port, you should use an alternate static source or break the VSI window (in which case, expect reverse VSI information).
- When using the <u>alternate static source</u> (a lower static pressure is measured):
  - Airspeed indicator indicate a faster speed than it should.
  - Altimeter indicate higher than it should.

# PITOT TUBE BLOCKAGE

# The only instrument affected is the airspeed indicator.

- Ram air inlet clogged and drain hole open? Airspeed drops to zero.
- Both air inlet and drain hole are clogged? The airspeed indicator will act as an altimeter, and will no longer be reliable.
- When suspecting a pitot blockage, consider the use of pitot heat to melt ice that may have formed in or on the pitot tube.

# GENERIC INSTRUMENT TAXI CHECK

- Airspeed 0 KIAS.
- <u>Turn coordinator</u> ball centered and wings level when not turning. On turns: shows turn in correct direction, ball goes to opposite direction of the turn.
- Attitude Correct pitch attitude and bank angle ±°5 within 5 minutes of engine start (if vacuum).
- Heading indicator Set and shows correct headings.
- <u>Altimeter</u> Set to local altimeter settings or to airport elevation (§91.121). Shows surveyed elevation ±75 ft (AIM 7-2-3).
- VSI 0 fpm.
- <u>Magnetic compass</u> swings freely, full of fluid, shows known headings and deviation card is installed. Marker beacons - Tested
- NAV & Comm Set.
- GPS Checked and set.
- EFIS cockpits Check PFD/MFD/EICAS for 'X's, messages, warnings and removed symbols.



# MAGNETIC COMPASS ERRORS & LIMITATIONS - "DV MONA"

- D- Deviation M- Magnetic dip
- V- Variation O- Oscillation
- N- North/south turn errors -
- Northern hemisphere: UNOS Undershoot North/ Overshoot South
- A- Acceleration errors

Northern hemisphere: ANDS Accelerate North/ Decelerate South

# **ELECTRONIC FLIGHT INSTRUMENTS**

- Attitude Heading Reference Systems (AHRS) Provides more accurate and reliable attitude and heading data than traditional separate gyro systems. The first AHRS units were very expensive and relied on laser gyros and flux valves. Today they are based on solid state technologies (no moving parts) and are cheaper, smaller and easier to maintain.
- Air Data Computers (ADC) replaces the mechanical pitot-static instruments. The ADC receives inputs from the pitot, static and outside temperature ports and computes airspeed, true airspeed, vertical speed and altitude.
- Flight director computes and displays command bars over the attitude indicator to assist the pilot in flying selected heading, course or vertical speed.
- Flight Management System (FMS) Receives inputs from various sensors and provides guidance to the autopilot and flight director throughout the flight. The FMS also automatically monitors and selects the most appropriate navigation source for accurate positioning. (GPS, VOR/DME, INS etc.)
- Electronic Flight Instrument Systems (EFIS) AKA "Glass cockpit".
- Primary Flight Displays (PFD) Displays flight data such as attitude, altitude, airspeed, VSI and heading as well as rate tapes.
- Multi-Function Displays (MFD) Displays a variety of information such as moving maps, aircraft system status, weather and traffic. It may also be used as a backup for other displays, such as the PFD or EICAS.

# MINIMUM EQUIPMENT REQUIRED FOR FLIGHT (§91.205)


For VFR day:
"A TOMATO FLAMES" —

A - Altimeter

- T Tachometer for each engine.
- O Oil temperature indicator for each engine.
- M Manifold pressure gauge for each altitude engine.
- A Airspeed indicator.
- T Temperature gauge for each liquid cooled engine.
- O Oil pressure gauge for each engine.
- F Fuel quantity gauge for each tank.
- L Landing gear position lights (if retractable gear).
- A Anticollision lights (for aircraft certified after March
- M Magnetic direction indicator (magnetic compass).
- E ELT, if required by §91.207.
- S Safety belt / shoulder harness.

# For VFR night:

All VFR day equipment + FLAPS "FLAPS" -



L - Landing light (if for hire) .

A - Anticollision lights.

P - Position lights (navigation lights).

S - Source of electrical power (i.e., battery).

If operating for hire over water and beyond power-off gliding distance from shore: (unless part 121)


- An approved flotation device for each occupant
- At least one pyrotechnic signaling device

# Flight at and above FL240:

When using VOR for navigation, DME or RNAV is also required.

For IFR day: all VFR day equipment + GRABCARD For IFR night: all VFR day + VFR night + GRABCARD "GRAB CARD" -






- A Altimeter (sensitive, adjustable for barometric pressure)
- B Ball (slip-skid indicator).
- C Clock. Shows hours, minutes and seconds with sweep-second pointer or digital representation. Installed as part of aircraft equipment.
- A Attitude indicator.
- R Rate-of-turn indicator.
- D Directional gyro (heading indicator).

# **OPERATING WITH INOPERATIVE ITEMS (§91.213)**



# Is the inoperative equipment required by:

- VFR-day type certification requirements?
- Equipment list or kind of operations equipment list?
- §91.205 or other regulations for kind of operations?
- An Airworthiness Directive (AD)?



# Flying is permitted, provided:

- Inoperative equipment is removed (affecting weight & balance), or
- deactivated and placarded "Inoperative."
- Pilot/mechanic determines no hazard from inop. item.



# **RADIO NAVIGATION**

# VHF OMNI DIRECTIONAL RANGE (VOR)

- 108.0 to 117.95 MHz, excluding 108.10-111.95 with odd tenths (reserved for LOC frequencies).
- Full scale deflection: 10°.
- Standard service volumes do not apply to published routes.
- Pilot must verify correct and usable VOR station with morse ID before using it.
- The VOR MON (VOR Minimum Operational Network) program ensures that as old VORs are decommissioned, a MON airport (i.e.,equipped with legacy ILS or VOR approach) is available within 100 NM regardless of aircraft position in the CONUS.


# VOR Receiver Checks (§91.171)

- Perform every 30 calendar days

  - VOR ground checkpoint ±4°
  - VOR <u>airborne checkpoint</u> ±6°
  - ▷ Dual VOR cross-check ±4°
  - Above a <u>prominent ground</u> <u>landmark</u> on a selected radial <u>at least 20 NM from a VOR</u>, flying <u>at a "reasonable low</u> altitude" ±6°



- D.E.P.S -D - Date
- E Error (bearing error)
- P Place
- S Signature

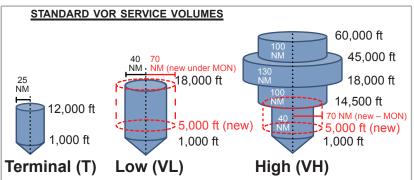


# **VOR limitations**

- Cone of confusion
- Reverse sensing (if used incorrectly)
- Requires line-of-sight between aircraft and station.

# DISTANCE MEASURING EQUIPMENT (DME)

# ■ 962-1213 MHz (UHF).

- Normally <u>tuned automatically</u> with a paired VHF station (VOR/LOC).
- The Airborne DME unit transmits an interrogation signal.
- The ground DME facility receives and replies to the interrogation.
- Airborne unit calculates the <u>slant range</u> distance to the station based on the reply time.
- Due to slant range error, when flying overhead the station, DME indicates greater than zero.
- Slant range error is negligible at 1 NM DME station per every 1000ft height. For example, at 5000 ft, slant range error is negligible when further than 5 NM of the station.

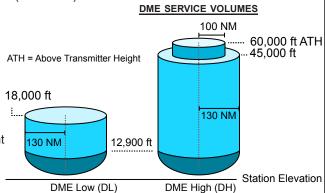

# NON-DIRECTIONAL BEACON (NDB)

- 190-535 kHz (also receive and point towards commercial radio AM station at 550 -1650 kHz).
- Low to medium frequency band.
- ADF (Automatic Direction Finder) in aircraft points towards the NDB.
- Magnetic Bearing = Magnetic Heading + Relative Bearing

# **COMPASS LOCATOR**

A <u>low-powered NDB</u> (at least 25 Watts and 15NM range) installed at the OM or the MM on some ILS approaches.


| NDB Service Volume Classes                             |       |  |
|--|-------|--|
| Compass Locator  | 15 NM |  |
| Medium High (MH)                                       | 25 NM |  |
| High (H) 50 NM (or less, see NOTAM or Chart Supplement |       |  |
| High High (HH)   | 75 NM |  |



# INSTRUMENT LANDING SYSTEM (ILS)

# LOCALIZER (AIM 1-1-9)

- Provides <u>lateral course guidance</u>.
- Frequencies: 108.1 111.95 MHz with odd tenths only. 90 and 150 Hz signals are carried over the VHF frequency and used by the receiver interpret the aircraft's lateral position.
- Width: Between 3°-6° so that the width at the threshold would be 700 feet. Usually 5° total width. (2.5 full deflection to each side, 4 times more sensitive than a VOR).
- <u>Coverage range</u>: 35° to each side of the centerline for the first 10NM and 10° up to 18NM from the antenna and up to an altitude of 4500'.




# **GLIDE SLOPE** (AIM 1-1-9)

- Provides <u>vertical course guidance</u>.
- Frequencies: 329.3 to 335 MHz (UHF), automatically tuned with the localizer. Vertical position is interpreted by the intensity of 90 and 150 Hz signals carried over the UHF frequency and directed above and under the slope.



- Range: typically up to 10 NM.
- Slope: typically 3°.
- Errors: False glide slope above normal glide slope.



OM

400 Hz

0

M

ALSF-2

☷

IM MM

1300 Hz

3 kHz

# **MARKER BEACONS**

- Provide <u>range information</u> over specific points along the approach. Transmits at 75 MHz.
- Outer marker: 4-7 miles out. Indicate the position at which the aircraft should intercept the GS at the appropriate interception altitude ±50ft. BLUE. "- -"
- <u>Middle marker</u>: ~3500ft from the runway. Indicates the approximate point where the GS meets the decision height. Usually 200ft above the touchdown zone elevation. <u>AMBER</u>. ". . "
- <u>Inner marker</u>: between the MM and runway threshold. Indicates the point where the glide slope meets the DH on a CAT II ILS approach. WHITE. ". . . "

BC


3 kHz

<u>Back course marker</u>: Indicates the FAF on selected back course approaches. Not part of the ILS approach.
<u>WHITE</u> "..."

# APPROACH LIGHT SYSTEMS (ALS) (AIM 2-1-1)

- Provides basic <u>visible means to transition between instrument-guided flight into a visual approach</u>.
- ALS <u>extends from the landing threshold into the approach area</u> up to:
- May include Seguenced Flashing Lights, which appear to the pilot as a ball of light traveling towards the runway at twice a second (AKA "The Rabbit").
- The visible parts of the ALS configuration can help the pilot estimate flight visibility.

| ILS Category | Visibility       | DH             |
|--------------|------------------|----------------|
| CAT I        | 2,400' or 1,800' | 200'           |
| CAT II       | 1,200'           | 100'           |
| CAT IIIa     | >700'            | <100' or no DH |
| CAT IIIb     | 150'-700'        | <50' or no DH  |
| CAT IIIc     | 0'               | No DH          |

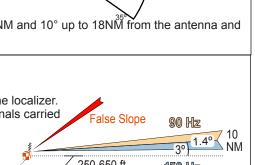



# AREA NAVIGATION (RNAV)

- Allows navigation on any desired path without the need to overfly ground-based facilities.
- Types:
  - ▷ Global Navigation Satellite System (GNSS) (e.g., GPS, Galileo, GLONASS, BeiDou)
  - ▷ VOR/DME RNAV
  - ▷ DME/DME RNAV
  - ▷ Inertial Reference Unit / System (IRU/ IRS)
- RNAV VNAV Vertical NAVigation guidance.
- BARO-VNAV An RNAV system that uses the barometric altitude to compute vertical guidance for the pilot.
- Published RNAV routes include Q (FL180 to FL450) and T (1,200 AGL to 18,000 MSL) routes and are designated RNAV 1 unless charted otherwise.
- Magnetic Reference Bearing (MRB) the published bearing between two waypoints on an RNAV route.

# GLOBAL POSITIONING SYSTEM (GPS)

- GPS is a Global Navigation Satellite System (GNSS) operated by the United States.
- The constellation consists of a minimum of 24 satellites (with some spares) orbiting above the earth at 10,900 NM. The system is designed so that at least 5 satellites are in view at any given location on earth.
- The Aircraft's GPS receiver calculates the distance to a GPS satellite based on the time lapse since the broadcast timestamp (obtained from an atomic clock onboard the satellite) and the time it received the signal.
- Using only one satellite, the aircraft could virtually be on any point on a sphere surrounding the satellite, with the calculated distance ("pseudo-range") as the sphere's radius.
- The GPS receiver uses the intersection of spheres, from multiple satellites, to calculate the aircraft's geographical position. Course and speed data are computed from aircraft position changes.
- At least <u>3 satellites are required for 2D</u> position. (latitude and longitude); at least <u>4 satellites are required for 3D</u> position. (latitude, longitude and altitude).
- Receiver Autonomous Integrity Monitoring (RAIM) is a function of GPS receivers that monitors the integrity of the satellite signals.
  - ▷ RAIM (fault detection) requires a minimum of 5 satellites, or, 4 satellites + an altimeter input (baro-aided RAIM)
  - ▷ To eliminate a corrupt satellite (fault exclusion), RAIM needs an additional satellite (total of 6 or 5 + baro-aid)
- A database loaded into the receiver unit contains navigational data such as: airports, navaids, routes, waypoints and instrument procedures.
- Airborne GPS units use **great-circle navigation**.
- <u>GPS CDI</u> deflection shows <u>distance</u>, unlike a VOR's CDI, which presents an <u>angular distance</u> off course in degrees.
- GPS can substitute ADF or DME, except for ADF substitution on NDB approaches without a GPS overlay ("or GPS" in title).
- <u>Check GPS NOTAMS before the flight</u> and use <u>RAIM prediction</u> if available on your receiver.
- <u>GPS Augmentation systems, or Differential GPS (DGPS)</u> Improves the accuracy of GPS by measuring errors received by reference stations at known geographical locations and then broadcasting those errors to supported GPS receivers.
  - - □ Wide Area Augmentation System (WAAS) in the US; EGNOS in Europe.
    - Ground stations (Wide-area Reference Stations and Wide-area Master Stations) measure GPS errors and produce correction signals. These corrections are broadcasted back to the satellite segment from which they are bounced back to aircraft GPS WAAS receivers to improve accuracy, integrity and availability monitoring for GPS navigation.
    - Covers a wide area.
    - $\hfill \square$  Facilitates APV approaches such as LPV and LNAV/VNAV and LP  $\hfill$  approaches.
  - ▷ Ground Based Augmentation System (GBAS)
    - □ Formerly named Local Area Augmentation System (LAAS) in the US. Now replaced with the ICAO term "GBAS."
    - □ Errors are broadcasted via VHF to GBAS-enabled GPS receivers.
    - GBAS is more accurate than WAAS but covers a much smaller geographical area.
    - □ Allows for **category I** and above approaches to **GLS DA** minima.



# REQUIRED NAVIGATION PERFORMANCE (RNP)

- RNP is:
  - > A statement of navigation equipment and service performance.
  - **RNAV** with navigation monitoring and alerting.
- All RNAV approaches are RNP approaches
  - ▶ Most US RNP approaches are titled "RNAV (GPS)".
  - US Approaches with "RNAV (RNP)" in the title are "AR" (Authorization Required) approaches, which require special FAA approval for the crew, aircraft and operation.
  - ▷ In other countries, all RNP approaches may have "RNP" in the title, even those that do not require special authorization.

# RNP approach minima and equipment:

- GLS DA minima using GBAS (formerly LAAS)
- LP MDA or LPV DA minima require RNP achieved by WAAS.
- LNAV / VNAV DA achieved by VNAV-approved WAAS, or BARO-VNAV systems.
- LNAV MDA achieved by a basic, unaugmented IFR-approved GPS.

# UNDERSTANDING THE DIFFERENCE BETWEEN RNAV, GNSS, GPS, PBN AND RNP

- Area Navigation (RNAV)
  - ▷ RNAV is a system that enables navigation between any two points without the need to overfly ground-based stations.
- GNSS is a broad term for satellite-based RNAV systems.
  - ▷ GPS is the GNSS operated by the USA. Other examples are GLONASS by Russia and Galileo by the EU.
- Performance Based Navigation (PBN)
  - PBN is a general basis for navigation equipment standards, in terms of accuracy, integrity, continuity, availability and functionality for specific operation contexts (e.g., final approach, enroute, missed approach).
- Required Navigation Performance (RNP)
  - ▶ **RNP** is a specific **statement of PBN** for the flight segment and aircraft capability.
  - > RNP is also defined as RNAV + navigation monitoring and alerting functionality.
    - □ Receiver Autonomous Integrity Monitoring (RAIM) or built-in monitoring in WAAS provide this capability.
  - Enroute RNP 2.0 (2 NM accuracy 95% of the flight time)
  - ▶ Terminal & Departure RNP 1.0 (1 NM accuracy 95% of the flight time)
  - ▶ Final Approach RNP 0.3 (0.3 NM accuracy 95% of flight time)
  - ▷ Advanced RNP (A-RNP) a higher RNP standard mandatory for RNP AR, that require capability for: (AIM 1-2-2)
    - □ Radius-to-Fix (RF) legs
    - $\ \square$  Scalable RNP - can gradually vary between 1.0 and 0.3 (or as low as 0.1) RNP values, and
    - Parallel offset flight path generation

# ATTITUDE INSTRUMENT FLYING

# Basic attitude instrument flying skills: ■ Cross Check ■ Instrument interpretation ■ Aircraft Control ■ Fixation ■ Omission ■ Emphasis

- Control & Performance Method Divides the cockpit panel by control instruments and performance instruments. First, set the power and attitude, then monitor the performance and make adjustments.
  - **▷** Control instruments
    - □ Power Tachometer, Manifold pressure, EPR, N1, etc.
    - Attitude Attitude Indicator
  - ▶ Performance Instruments
    - □ Pitch: altimeter, airspeed and VSI
    - Bank: Heading Indicator, Turn Coordinator, and magnetic compass
- Primary & Supporting Method Divides the cockpit panel by Pitch, Bank, and Power instruments.
  - ▶ Pitch instruments: Attitude Indicator, Altimeter, Airspeed Ind., and VSI.
  - ▶ **Bank instruments**: Attitude ind., Heading ind., Mag. Compass, and Turn Coordinator.
  - ▶ **Power instruments**: Airspeed, Tachometer, Manifold pressure
  - ▷ For a specific maneuver, primary instruments provide the most essential information for pitch, bank and power while supporting Instruments back up and supplement the information presented by the primary instruments.
  - ▷ Example, for a constant rate climb with a standard rate turn
    - □ Primary: Pitch VSI; Bank Turn Coordinator; Power RPM / MP
    - □ Secondary: Pitch ASI; attitude, Bank AI, HI, Mag. Compass; Power ASI



# REQUIRED REPORTS UNDER IFR

# "MARVELOUS VFR C500" -

(AIM 5-3-3, §91.183, §91.187)

- Missed approach
- <u>Airspeed ±10 kts / 5</u>% change of filed **TAS** (whichever is greater)
- Reaching a holding fix (report time & altitude)
- VFR on top when an altitude change will be made.
- ETA changed ±2 min, or ±3 min in North Atlantic (NAT) \*
- Leaving a holding fix/point
- Outer marker (or fix used in lieu of it) \*
- Unforecasted weather (§91.183)
- Safety of flight (any other information related to safety of flight, §91.183)
- Vacating an altitude / FL
- Final Approach fix \*
- Radio/Nav/approach equipment failure (§91.187)
- Compulsory reporting points ▲ \* (§91.183)
- 500 unable climb/descent 500 fpm
- \* Required only in non-radar environments (including ATC radar failure)

# **HOLDING PATTERNS**

(AIM 5-3-8)

 ATC may assign holding instructions to delay or separate traffic in the air for reasons such as weather or airport closures

# Non-charted holding clearance items:

- Direction of hold from the fix (e.g., N, W, S, NE)
- **▶** Holding Fix
- ▶ Radial, course, airway, or route on which to hold.
- Leg length in <u>miles</u> (if DME or RNAV) or <u>minutes</u> otherwise.
- Direction of turns (<u>if left</u>). Otherwise, right turns are standard.

# Charted holding clearance items

- ▶ Holding Fix
- $\triangleright$  **Direction** of hold from fix (e.g., N, W, S, E)
- ▷ EFC

Start speed reduction 3 minutes before reaching the hold fix.

Actions at hold fix and each turn point

- 5 Ts
- ▶ Turn
- ▶ Time
- ▷ Twist▷ Throttle

# MAKE ALL HOLD TURNS:

- 3° per second, or
- 30° bank angle, or
- 25° bank angle if using a Flight Director system

\*Whichever uses the least bank angle

# POSITION REPORT ITEMS REQUIRED IN NON-RADAR ENVIRONMENT

"A PTA TEN R" -

(§91.183, AIM 5-3-2)

- <u>Aircraft ID</u>.
- Position.
- <u>T</u>ime.
- Altitude.
- Type of flight plan (except when communicating with ARTCC / Approach control).
- ETA and name of next reporting fix.
- <u>N</u>ame only of the next succeeding point along the route of flight.
- Any pertinent remarks.

# **HOLDING PATTERN TIMING**

- Start timing outbound abeam/over the fix (whichever is later). Or, if the abeam point cannot be determined, start the time at the completion of the outbound turn.
- Adjust the outbound leg so the inbound leg takes:
  - At or below 14,000' MSL − 1 minute

  - ▷ DME/GPS holds fly the outbound leg to the specified distance from the fix/waypoint.

# **HOLDING SPEEDS**

| ALTITUDE (MSL)   | MAX AIRSPEED (KTS) |
|------------------|--------------------|
| 6,000' or below  | 200 kts            |
| 6001 - 14,000    | 230 kts            |
| 14,001 and above | 265 kts            |
| Air Force fields | 310 kts *          |
| Navy Fields      | 230 kts *          |

May be restricted to 175 kts on some instrument approach procedures

\* Unless published otherwise.

# **HOLDING ENTRY**

**Direct** - Upon crossing the fix turn to follow the holding pattern

**Parallel** - Upon crossing the fix, turn to a heading parallel to the holding course outbound for 1 minute. Then turn into the hold pattern to intercept the inbound course.

**Teardrop** - Upon crossing the fix, turn outbound to a heading 30° into the pattern. Fly it for 1 minute, then turn in the direction of the hold turns to intercept the inbound course.

AT THE HOLD FIX, REPORT TO ATC:

"<callsign> Over <place><altitude> at <time>"

Teardrop



# LOST COMMUNICATIONS PROCEDURE (§91.185)

If in VFR conditions, continue the flight under VFR and land as soon as practicable, otherwise:

# ALTITUDE TO FLY THE HIGHEST OF: "MEA" — ■ M - Minimum altitude prescribed for IFR ■ E - Expected (as in: "Expect 5000 10 min after departure") ■ A - Assigned. Last altitude assigned by ATC. E - Last Expected route by ATC, if none: ■ F - Filed route LEAVING THE CLEARANCE LIMIT

# Is the clearance limit a fix from which an approach begins?

Start descent and approach as close as possible to the EFC, or ETA (if no EFC given)

At EFC or clearance limit (if no EFC given), proceed to a fix from which an approach begins and start the approach

# PROCEDURE TURN

(§91.175, AIM 5-4-9)



- A PT is a maneuver that enables:
  - ▷ Course reversal.
  - ▶ A descent from IAF.
  - ▷ Inbound course interception.
- Max speed 200 kts.
- Remain within the charted distance ("Remain within NM" note), typically 10 NM, and comply with published altitudes for obstacle clearance.
- The shape of the maneuver is mandatory if a teardrop or holdingin-lieu of a PT is published. Otherwise, only the direction of the turn is mandatory.
- A teardrop procedure may be published in lieu of a PT. In that case:
  - No IF published? Intermediate segment begins 10 miles prior to the final approach fix.
  - Nav facility located on the airport? Final approach starts at completion of the teardrop turn. However, the final approach segment begins on the final approach course 10 miles from the facility.
- A PT or hold-in-lieu-of-PT is mandatory when depicted on the approach chart. However, it is not permitted when: No PT depicted on the chart, radar vectors to final or when conducting a timed approach from a holding fix.

# DO NOT FLY A PROCEDURE TURN WHEN: "SHARP TT" -

- Straight-in approach clearance.
- Holding in lieu of a procedure turn.
- DME Arc.
- Radar vectors to final.
- No PT depicted on chart.
- Timed approach from a hold fix.
- Teardrop course reversal.

# Instrument approach types

# ■ Precision

- Lateral + vertical guidance to a DA.
- ▷ ILS Instrument Landing System
- ▶ MLS Microwave Landing System
- PAR Precision Approach Radar
- ▷ GLS GBAS Landing System
- > TLS Transponder Landing System

# ■ Non-Precision

lateral guidance only. Flown to MDA.

- ▷ VOR
- ▷ NDB
- ▷ RNAV / RNP to LNAV or LP Minima
- ▶ LOC Localizer
- LDA Localizer-type Directional Aid. Identical to a LOC but not aligned with the runway.
- SDF Simplified Directional Facility. Similar to a LOC with 6° or 12° width. May be aligned or not with the runway.
- ASR Approach Surveillance Radar
- Approach with Vertical Guidance (APV). A precision-like approach, flown to a DA with lateral + vertical guidance, but does not meet precision approach standards.
  - RNAV / GNSS (i.e, LNAV/VNAV and LPV minima)
  - ▶ LDA with Glide Slope

# **Approach Clearances**

- When can you descend to the next instrument approach segment?
  - When cleared for the approach and established on a segment of a published approach or route. (AIM 5-5-4)
- Contact approach (AIM 5-5-3)
  - Requested by the pilot in lieu of an instrument approach. (Cannot be initiated by ATC)
  - Requires at least 1SM ground visibility and remain clear of clouds.
  - Only at airports with approved instrument approach procedures.
  - Pilot assumes responsibility for obstruction clearance.
- Visual approach (AIM 5-5-11)

  - Requires at least 1000' ceiling and 3SM visibility. (IFR under VMC)
  - Pilot <u>must have either the airport</u> or the traffic to follow in sight.
  - Pilot is responsible for visual separation from traffic to follow.

# Missed Approach (AIM 5-5-5)

- Execute a missed approach when:
  - Arrival at MAP or DH with insufficient visual reference to runway environment.
  - ▷ A safe approach is not possible.
  - ▷ Instructed to do so by ATC.



# When can you descend below MDA / DA? (§91.175)

- 1. The aircraft is **continuously in a position** from which **a descent to a landing on the intended runway** can be made at a **normal rate of descent using normal maneuvers**.
- 2. The <u>flight visibility</u> (or the enhanced flight visibility, if equipped) is <u>not less than the visibility prescribed in the standard instrument approach</u> being used.
- At least one of the following visual references for the intended runway is distinctly visible and identifiable to the pilot: (except for CAT II & III approaches)
  - i. The approach light system, except that the pilot <u>may not descend below 100 feet</u> above the touchdown zone elevation <u>using the approach lights as a reference</u> unless the <u>red terminating bars</u> or <u>the red side row</u> bars are also <u>distinctly</u> visible and identifiable.
  - ii. The threshold.
  - iii. The threshold markings.
  - iv. The threshold lights.
  - v. The runway end identifier lights.
  - vi. The visual glideslope indicator.
  - vii. The touchdown zone or touchdown zone markings.
- viii. The touchdown zone lights.
- ix. The runway or runway markings.
- x. The runway lights.

# VISUAL DESCENT POINT (VDP) (AIM 5-4-5)

- A defined point on the final approach course of a non-precision straight-in approach procedure from which normal descent from the MDA to the runway touchdown point may begin, provided adequate visual reference is established.
- Identified by a 'V' symbol on the descent profile.
- If not equipped to identify the VDP, fly the approach as if no VDP was published.
- Do not descend below the MDA prior to reaching the VDP.
- Calculate VDP, when not published: By distance: VDP (in NM from threshold) = MDH / 300

Example: Given MDH is 600 ft, how far is the VDP from the threshold?

VDP = 600 / 300 = 2 NM

Start the descent 2 NM from the threshold.

By time: MDH / 10 = seconds to subtract from time between FAF and MAP

**Example**: Given MDH is 500 ft, FAF to MAP is 4:00, **when** would you be over the VDP and start the descent from MDA/H? 500 / 10 = 50 seconds. 4:00 - 0:50 = 3:10 Start the descent at 3:10 (time from FAF)

# VISUAL DESCENT ANGLE (VDA) (AIM 5-4-5)

- A computed glide path from the FAF to the runway's TCH published for non-precision approaches. Typically 3°.
- FAA policy is to publish a VDA/TCH on all non-precision approaches except those published in conjunction with vertically guided minimums (i.e., ILS or LOC RWY XX) or no FAF procedures without a stepdown fix (i.e., on-airport VOR or NDB). A VDA does not guarantee obstacle protection below the MDA in the visual segment. The presence of a VDA does not change any non-precision approach requirements.
- VDAs are advisory only, pilots must still comply with all published altitudes on the procedure.

# Rate of Descent for a 3° Glide Path

VS (fpm) = Ground Speed X (10 / 2), or VS (fpm) = Ground Speed X 5

# Example:

120 kts X (10 / 2) = 120 kts X 5 = 600 fpm

How Far to Start a Descent for a 3° Glide Path?

TOD = Altitude to lose (ft) / 300

# Example, on approach

800 ft to lose MDA to TCH:

800/300 = 2.67 NM

Start descent 2.67 NM from the runway threshold.

# Example

Cruising at FL350, ATC: "...cross LGA VOR at FL240":

Altitude to lose = 35,000 - 24,000 = 11,000 ft 11000/300 = 36.67 NM

Start descent 36.67 NM from LGA VOR

# Other Glide Path Angles

Descent gradient (%) = tan(descent angle) X 100

| Descent angle | Gradient (%) = tan(angle) |
|---------------|---------------------------|
| 2°            | 3.5%                      |
| 3°            | 5.2%                      |
| 4°            | 7%                        |
| 5°            | 8.7%                      |

VS (fpm) = Groundspeed X Descent Gradient (%)
TOD = Altitude to lose / (glidepath angle \*100)

# Example

At FL350, ATC:"...cross LGA OR at FL240", pilot elects a steep 4° slope, 380 kts GS:

VS = 380 X 7 = 2660 fpm

TOD = 11000 / 400 = 27.5 NM

Start the descent 27.5NM from LGA at 2800 fpm



# **AIRSPACE**

# Class A (AIM 3-2-2)

- Controlled airspace from 18,000' MSL to FL600 within the 48 contiguous states and Alaska. Includes the airspace within 12 NM of the shoreline as well as designated international airspace beyond the 12 NM distance.
- IFR only unless otherwise authorized.

# Class B (AIM 3-2-3, §91.126)

- Controlled airspace surrounding the nation's busiest airports.
- Usually extends from the surface up to 10,000' MSL.
- The shape of each class B is specifically tailored for its environment
- Consist of a surface area and two or more layers (resembling an upside-down wedding cake).
- Requires two-way radio communications.
- ATC separates both VFR and IFR traffic.
- Requires ATC clearance to enter. VFR pilots must make sure they hear a clearance to "Enter Class B". IFR pilots will typically already have this clearance as part of their ATC clearance picked up before or after takeoff.
- A Mode-C transponder and ADS-B Out equipment are required within a 30 NM radius (the "Mode-C Veil").

# Class C (AIM 3-2-4)

- Controlled airspace around towered airports with certain number of IFR operations or passenger volume.
- Typical inner area is a 5 NM radius surrounding its primary airport, extending up to 4,000' above airport height.
- A 10 NM radius shelf area typically extends from no lower than 1,200' up to 4,000' above airport height.
- A non-charted outer area extends up to 20 NM from the primary airport.
- ATC Provides VFR/ IFR traffic separation in the outer area if two-

- way radio communication is established and in the Class C airspace itself.
- Requires two-way radio communication, a Mode-C transponder and ADS-B Out equipment.

# Class D (AIM 3-2-5)

- Controlled airspace extending from the surface to 2,500' above airport height.
- Usually shaped as a cylinder with a 4 NM radius from the primary airport.
- Requires two-way radio communication.

### Class E (AIM 3-2-6)


- Controlled airspace not designated as A, B, C, or D.
- May or may not be associated with an airport.
- Requires Mode-C transponder and ADS-B Out equipment at and above 10,000' MSL within the 48 contiguous states and D.C, excluding at or below 2,500' AGL.
- Requires ADS-B Out at and above 3,000' MSL over the Gulf of Mexico from the U.S. coast out to 12 NM.

### ■ Functions of Class E:

- Surface area designated for an airport.
- Extension to a surface area of Class B, C, or D.
- ▷ Transition area. Begins at 700' or 1200' AGL used to transition to/from a terminal or en-route environment.
- ▷ En-route domestic areas
- ▷ Offshore Airspace Areas

### Class G (AIM 3-3)

 Uncontrolled airspace. Class G airspace is generally any airspace that has not been designated as Class A, B, C. D. or E.

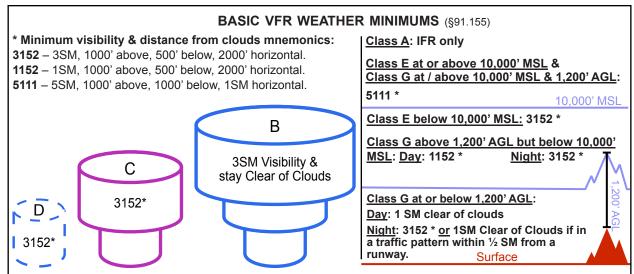

- Except as provided in §91.157 (SVFR), no person may operate an aircraft beneath the ceiling under VFR within the lateral boundaries of controlled airspace designated to the surface for an airport when the ceiling is less than 1,000 feet.
- Except as provided in §91.157 (SVFR), no person may take off or land an aircraft, or enter the traffic pattern of an airport, under VFR, within the lateral boundaries of the surface areas of Class B, C, D, or E airspace designated for an airport:
  - ▷ Unless ground visibility at the airport is at least 3 SM, or
  - ▷ If ground visibility is not reported at that airport, unless flight visibility during takeoff or landing, or while operating in the traffic pattern is at least 3 SM.
- For the purpose of this section, an aircraft operating at the base altitude of a Class E airspace area is considered to be within the airspace directly below that area.



# SPECIAL USE AIRSPACE

# Prohibited Areas (§91.133, AIM 3-4-2)

- Flight is prohibited unless permission is granted by the using or controlling agency, as appropriate.
- Prohibited airspace exists due to security or other reasons associated with the national welfare.
- Example: Prohibited airspace P-56A over the White House.

# Restricted Areas (§91.133, AIM 3-4-3)

- Flight is not completely prohibited, but is subject to restrictions due to hazards to aircraft such as artillery firing, aerial gunnery, or guided missiles.
- No person may operate an aircraft within a restricted area contrary to the restrictions imposed, unless that person has the permission of the using or controlling agency.
- If the restricted airspace is not active and has been released to the controlling agency (FAA), ATC will allow the aircraft to operate in the restricted airspace without a specific clearance to do so.
- If the restricted airspace is active, and has not been released to the controlling agency (FAA), ATC will issue a clearance which will ensure the aircraft avoids the restricted airspace unless it is on an approved altitude reservation mission or has obtained its own permission to operate in the airspace and so informs the controlling agency.

# Warning Areas (AIM 3-4-4)

- Extends 3 NM outward from the coast of the U.S.
- Contains activity that may be hazardous to aircraft.
- The purpose of warning areas is to warn nonparticipating aircraft of the potential hazard.
- May be located on domestic or international water, or both.

# Military Operating Areas (MOA) (AIM 3-4-5)

- Established for the purpose of separating certain military training activities from IFR traffic.
- When a MOA is in use, nonparticipating IFR aircraft may be cleared through it if IFR separation can be provided.
   Otherwise, ATC will reroute or restrict the traffic.
- Example activities in an MOA: air combat tactics, air intercepts, aerobatics, formation training, and low-altitude tactics
- Pilots operating under VFR should exercise extreme caution when operating within an active MOA. Therefore, pilots should contact any FSS within 100 miles of the area to obtain accurate real-time information concerning the MOA hours of operation. Prior to entering an active MOA, pilots should contact the controlling agency for traffic advisories.

# Alert Areas (AIM 3-4-6)

- Depicted on charts to inform pilots of high volume of pilot training or an unusual type of aerial activity.
- Pilots transitioning the area are equally responsible for collision avoidance.

# Controlled Firing Areas (AIM 3-4-7)

- Contain activities that, if not conducted in a controlled environment, may be hazardous to nonparticipating aircraft.
- Activities are suspended immediately when a spotter aircraft, radar or ground lookout positions indicate an aircraft might be approaching the area.
- CFAs are not charted because they do not cause a nonparticipating aircraft to change its flight path.

# Military Training Routes (MTR) (AIM 3-5-2)

- IFR MTRs (IR) are typically above 1,500' AGL, while VFR MTRs (VR) are below 1,500' AGL.
- Generally, MTRs are established below 10,000 ft at speeds in excess of 250 knots. However, route segments may exist at higher altitudes.
- Route identification
  - MTRs with no segments above 1,500' AGL are identified by 4 digits; e.g., IR1206, VR1207.
  - MTRs that include one or more segments above 1,500' AGL are identified by three digits; e.g., IR206, VR207.

# Air Defense Identification Zone (ADIZ) (AIM 5-6)

- An area of airspace over land or water, in which the ready identification, location, and control of all aircraft (except DoD and law enforcement aircraft) is required in the interest of national security.
- Requirements to operate within an ADIZ:
  - ▷ An operable Transponder with altitude encoding.
  - Two-way radio communication with the appropriate aeronautical facility.

  - Depart within 5 minutes of flight plan's estimated departure time (exempt in Alaska info facility exists for filing, file immediately after departure or when within range of an appropriate facility).

# Temporary Flight Restrictions (TFR) (AIM 3-5-3)

- Defined in Flight Data Center (FDC) NOTAMs
- TFR NOTAMs begin with the phrase: "FLIGHT RESTRICTIONS."
- Current TFRs are found at: www.tfr.faa.gov.
- Some reasons the FAA may establish a TFR:
  - Protect persons or property in the air or on the surface from hazards by low flying aircraft.
  - Provide a safe environment for disaster relief aircraft.
  - Prevent an unsafe congestion of sightseeing aircraft around an event of high public interest.
  - Protect declared national disasters for humanitarian reasons in the State of Hawaii.
  - Protect the President, Vice President, or other public figures.
  - Provide a safe environment for space agency operations.

# Special Flight Rules Area (SFRA) (AIM 3-5-7)

- An airspace of defined dimensions above land areas or territorial waters, where special air traffic rules have been established for.
- Each person operating in a SATR (Special Air Traffic Rules) or SFRA must adhere to the special air traffic rules in 14 CFR Part 93, unless otherwise authorized or required by ATC.
- Example: The Washington DC Metropolitan SFRA.



# MAX AIRCRAFT AIRSPEEDS IN THE U.S. (§91.117)

- Mach 1.0 (speed of sound): above 10,000' MSL. (§91.817)
- 250 kts: below 10,000' MSL.
- 200 kts: under Class B, or within a VFR corridor through Class B.
- 200 kts: at or below 2,500' within 4 NM of the primary airport of a Class C or D airspace.
- If the aircraft minimum safe airspeed for any particular operation is greater than the max speed prescribed above, the aircraft may be operated at that minimum speed.

### **WEATHER**

# WEATHER INFORMATION SOURCES

- Flight Service Station (FSS)
- NOAA's Aviation Weather Center Website <a href="https://www.aviationweather.gov/">https://www.aviationweather.gov/</a>
- Flight planning websites such as <a href="www.1800wxbrief.com">www.1800wxbrief.com</a> and <a href="www.fltplan.com">www.fltplan.com</a>
- EFB software (i.e., ForeFlight, Jeppesen FlightDeck Pro)
- <u>Transcribed Weather Broadcast (TWEB)</u> —Available in <u>Alaska only</u>. A recorded broadcast over selected L/MF and VOR facilities of weather information for the local area.
- Flight Information Services-Broadcast (FIS-B) A ground information data link service, provided through the ADS-B service network over 978 UAT MHz. Provides aviation weather and aeronautical information on cockpit displays. Some information available on FIS-B:
  - METAR, TAF, NEXRAD, AIRMET, SIGMETs and convective SIGMETs
  - ▷ TFR, Special Use Airspace updates and NOTAMs (FDC and distant)
  - ▷ PIREPs
- Automatic Terminal Information Service (ATIS) A continuous broadcast of local airport weather and NOTAMs. Updated hourly, normally at 55 minutes passed the hour. Special updates issued outside the regular hourly cycle when needed. ATIS is published over the radio and, in locations with D-ATIS, via data link (ACARS).
- <u>Automated Surface Observation System (ASOS)</u> Typically update hourly
- Automated Weather Observation System (AWOS)
   Update every minute
- ATC Center weather advisories are issued by ARTCC to alert pilots of existing or anticipated adverse weather conditions. ARTCC will also broadcast severe forecast alerts (AWW), convective SIGMETs and SIGMETs on all of its frequencies except for the emergency frequency (121.5 MHz).
- Onboard weather radar
- Onboard lightning detector
- XM Satellite weather service
- ACARS

# **TYPES OF WEATHER BRIEFINGS**

- <u>Standard</u> A full briefing. Includes: adverse conditions, VFR not recommended, synopsis, current conditions, enroute forecast, destination forecast, winds aloft, NOTAMs and ATC delays
- Abbreviated Updates previously received information from mass disseminated sources or a previous briefing.
- <u>Outlook</u> For departures 6 or more hours away. Includes forecasts for the time of the flight.
- Inflight FSS also provides any of the above types in flight.

# WEATHER PRODUCTS

# AIRMET (WA) -

- An advisory of <u>significant weather phenomena</u> at <u>lower intensities than those which require the issuance of SIGMETs</u>. These conditions may affect all aircraft but are potentially hazardous to aircraft with limited capability.
- ▶ Valid for 6 hours.
- AIRMET (T) describes moderate turbulence, sustained surface winds of 30 knots or greater, and/or non-convective low-level wind shear.
- AIRMET (Z) describes moderate icing and provides freezing level heights.
- AIRMET (S) describes IFR conditions and/or extensive mountain obscurations.
- Graphical AIRMETs (AIRMET G) found at www.aviationweather.gov

# ■ SIGMET (WS) -

- A <u>non-scheduled inflight advisory</u> with a <u>maximum forecast period of 4 hours</u>. Advises of non-convective weather potentially hazardous to all types of aircraft. A SIGMET is issued when the following is expected to occur:
- > Severe icing not associated with thunderstorms
- Severe or extreme turbulence or Clear Air Turbulence (CAT) not associated with thunderstorms.
- Dust storms, sandstorms lowering surface visibility below 3 miles.

# ■ Convective SIGMET (WST) –

- An inflight advisory of <u>convective weather</u> <u>significant</u> to the safety of <u>all aircraft</u>.
- Issued hourly at 55 minutes past the hour for the western (W), eastern (E) and central (C) USA.
  - Not issued for Alaska or Hawaii.
- **Valid for 2 hours**. ▶
- Contains either an observation and a forecast or only a forecast.
- ▷ Issued for any of the following:
  - Severe thunderstorms due to:
    - Surface winds greater or equal to 50 knots
    - Hail at the surface greater than 3/4 inch in diameter
  - Tornadoes
  - □ Embedded thunderstorms of any intensity
  - A <u>line of thunderstorms</u> at least <u>60 miles long</u> with thunderstorms affecting at least <u>40% of its length.</u>



# **WEATHER PRODUCTS - CONTINUED**

- □ Thunderstorms producing <u>heavy or greater</u> <u>precipitation</u> (<u>VIP level 4</u>) affecting <u>at least 40% of</u> <u>an area of at least 3000 square miles</u>.
- Any Convective SIGMET implies severe or greater turbulence, severe icing, and low level wind shear.
- International SIGMET
  - Issued <u>outside the Contiguous USA</u> and <u>follow ICAO</u> <u>coding standards</u>.
  - In the US, international SIGMETs are issued for areas that include Alaska, Hawaii, portions of the Atlantic and Pacific Oceans, and the Gulf of Mexico.
  - ▷ Criteria for international SIGMETs:
    - Thunderstorms occurring in lines, embedded in clouds, or in large areas producing tornadoes or large hail.
    - □ Tropical cyclones
    - Severe icing
    - Severe or extreme turbulence
    - <u>Dust storms</u> and <u>sandstorms</u> lowering surface <u>visibility</u> to <u>less than 3 miles</u>
    - Volcanic ash
- PIREP (UA) & <u>Urgent PIREP (UUA)</u> pilot weather reports.
- METAR Aviation routine weather show surface weather observations in a standard international format. Scheduled METARs are published every hour. Non-scheduled METARS (SPECI) are issued when there is a significant change in one or more reported element since the last scheduled METAR.
- <u>TAF</u> Terminal Aerodrome Forecast. Weather forecast for 5SM radius area around the station. Issued 4 times a day, every six hours and normally covers a 24 or 30 hour forecast period. TAF amendments (TAF **AMD**) supersede previous TAFs.
- Surface analysis chart —Generated from surface station reports. Shows pressure systems, isobars, fronts, airmass boundaries (e.g.: dry lines and outflow boundaries) and station information (e.g.: wind, temperature/dew point, sky coverage, and precipitation). Issued every 3 hours. (or every 6 hours in Hawaii and tropical and Oceanic regions). A <u>Unified Surface Analysis Chart</u> is produced every 6 hours and combines the analysis from the 4 centers (OPC, WPC, NHC and HFO)
- Radar summary chart (SD) Depicts precipitation type, intensity, coverage, movement, echoes, and maximum tops. Issued hourly
- Wind & temp aloft forecasts (FB) Issued 4 times daily for various altitudes and flight levels.

Winds at altitude up to 1500' AGL and temperatures at up to 2500' AGL are not shown.

Format: DDff±tt, where DD = wind direction; ff = wind speed; tt = temperature. Light and variable winds: 9900. Winds between 100-199 Kt are coded by adding 5 to the first digit of the wind direction.

Above FL240 temperatures are negative and the minus sign (-) is omitted.

Examples:

1312+05: winds 130 / 12 kt, 5°C. 7525-02: winds 250 / 125 kt, -2° C.

■ Low level significant weather chart — Forecasts significant weather conditions for a 12 and 24 hour period from the surface to 400 mb level (24,000 ft). Issued 4 times a day. Depicts weather categories (IFR, MVFR and

VFR), turbulence and freezing levels.

- Mid-level significant weather chart Forecasts of significant weather at various altitudes and flight levels from 10,000' MSL to FL450. Shows: thunderstorms, jet streams, tropopause height, tropical cyclones, moderate and severe icing conditions, moderate or severe turbulence, cloud coverage and type, volcanic ash and areas of released radioactive materials. Issued 4 times a day for the North Atlantic Region.
- High-level significant weather charts Depicts forecasts of significant weather phenomena for FL250 to FL630. Shows: coverage bases and tops of thunderstorms and CB clouds, moderate and severe turbulence, jet streams, tropopause heights, tropical cyclones, severe squall lines, volcanic eruption sites, widespread sand and dust storms. Issued 4 times a day.
- Convective outlook (AC) Available in both graphical and textual format. A 3-day forecast of convective activity. Convective areas are classified as marginal (MRGL), slight (SLGT), enhanced (ENH), moderate (MDT), and high (HIGH) risk for severe weather. Issuance: day 1 5 times a day, day 2 twice a day, day 3 once a day. Available on www.spc.noaa.gov.
- Weather satellite images:
  - - Helps in identifying cloud coverage based on visible light reflection.
    - □ Not useful for identifying cloud height.
  - ▷ Infrared (Color or B/W)
    - □ Measure cloud top temperature
    - Highest clouds appear bright white.
    - □ Middle clouds are in shades of gray
    - Low clouds and fog are dark gray,
  - ▶ Water vapor
    - Shows areas of moist and dry air in shades of gray from white to black.
    - Moist air areas are depicted as bright white
    - Dry air is depicted in black.
- Next Generation Weather Radar (NEXRAD) products. Examples:
  - <u>Base reflectivity</u> echo intensities in dBZ. Available for several elevation tilt angles.

  - Composite reflectivity Reveals highest reflectivity of all echos, helps in examining storm structure features and the intensity of storms.
  - ▶ 1 and 3-hour precipitation
- <u>Ceiling & Visibility Charts</u>- Shows ceiling based on surface observations. This online tool phased out the older weather depiction chart and is now replaced with the HEMS tool at <u>www.aviationweather.gov/hemst</u>
- Graphical turbulence Guidance (GTG) tool at www.aviationweather.gov/turbulence/gtg – Shows color coded turbulence forecast based on aircraft category, altitude and time.



# **WEATHER HAZARDS**

# **THUNDERSTORMS**

# The Three Conditions Required for the formation of Thunderstorms:

- 1. Sufficient water vapor (moisture).
- 2. An <u>unstable temperature lapse rate</u>. Stability is the resistance of the atmosphere to upwards or downwards displacement. An unstable lapse rate allows any air mass displacement to further grow vertically.
- An initial <u>uplifting force</u> (e.g., front passages, orographic lifting by typography, heating from below, etc.).

# Three Stages in Thunderstorm Lifecycle:

- 1. <u>Cumulus</u> (3-5 mile height) The lifting action of the air begins, growth rate may exceed 3000 fpm.
- 2. <u>Mature</u> (5-10 miles height) Begins when precipitation starts falling from the cloud base. Updraft at this stage may exceed 6000 fpm. Downdrafts may exceed 2500 fpm. All <u>thunderstorm hazards are at their greatest</u> intensity at the mature stage.
- 3. Dissipating (5-7 miles height) Characterized by strong downdrafts and the cell dying rapidly.

# Thunderstorm Hazards:

- Limited visibility
   Strong updrafts / downdrafts
   Hailstones
   Severe turbulence
- Wind shear
   Icing
   Heavy rain
   Lightning strikes and tornadoes.

# **FOG**

# A cloud that begins within 50 ft of the surface.

# Fog occurs when:

- The air temperature near the ground reaches its dew point, or
- when the <u>dew point is raised to the existing temperature</u> by <u>added moisture</u> to the air.

# Types of fog

- Radiation fog Occurs at calm, clear nights when the ground cools rapidly due to the release of ground radiation.
- Advection fog Warm, moist air moves over a cold surface. Winds are required for advection fog to form.
- Ice fog Forms when the temperature is much below freezing and water vapor turns directly into ice crystals. Ice fog is common in the arctic regions, but also occurs in mid-latitudes.
- Upslope fog Moist, stable air is forced up a terrain slope and cooled down to its dew point by adiabatic cooling.
- Steam fog Cold, dry air moves over warm water. Moisture is added to the airmass and steam fog forms.

# **ICING**

- <u>Structural Ice</u>. Two conditions for formation: 1. Visible moisture (i.e., rain, cloud droplets), and 2. Aircraft surface temperature below freezing.
  - ▷ <u>Clear ice</u> The most dangerous type. Heavy, hard and difficult to remove. Forms when water drops freeze slowly as a smooth sheet of solid ice. Usually occurs at temperatures close to the freezing point (-10° to 0° C) by large supercooled drops of water
  - <u>Rime ice</u> Opaque, white, rough ice formed by small supercooled water drops freezing quickly. Occurs at lower temperatures than clear ice.
- Instrument ice Structural ice forming over aircraft instruments and sensors, such as pitot and static.
- Induction ice ice reducing the amount of air for the engine intake.
- Intake ice Blocks the engine intake.
- Carburetor ice May form due to the steep temperature drop in the carburetor Venturi. Typical conditions are outside air temperatures of -7° to 21° C and a high relative humidity (above 80%).
- Frost Ice crystals caused by sublimation when both the temperature and the dew point are below freezing.



# **AEROMEDICAL**

(Pilot Handbook of Aeronautical Knowledge)

- Hypoxia Insufficient supply of oxygen to the body cells.

  - Histotoxic hypoxia Inability of the body cells to affectively use the O2 supplied by the blood. This can be caused by use of alcohol or drugs.
  - <u>Stagnant hypoxia</u> Caused by the blood not flowing efficiently. Can be caused by heart problems, excessive acceleration (Gs), shock or a constricted blood vessel. Cold temperatures can restrict circulation and decrease blood supplied to the extremities
- <u>Hyperventilation</u> A condition which occurs when excessive amount of CO2 is eliminated from the body as a result of breathing too rapidly. Symptoms may be similar to those of hypoxia. Breathing into a paper bag or talking aloud helps recovery from hyperventilation.
- <u>Decompression sickness</u> Inert gasses (mainly nitrogen) are released rapidly from solution in the body tissues and fluids as a result of low barometric pressure. The gasses form bubbles that may harm the body in several ways. The most common result of decompression sickness is joint pain ("the bends"). To help prevent the bends after SCUBA diving: wait at least 12 hours after diving that does not require a controlled ascent (non-decompression stop diving) for flights up to 8000 ft MSL; wait 24 hours for flights above 8000 ft or after any diving that required a controlled ascent (decompression stop diving)

Oxygen requirements (§91.211, Note: see §121.327-121.333 & §135.89, §135.157 for 121/135 operations O2 rules)

# Unpressurized cabins

- Cabin pressure altitudes above 12,500 to 14,000' MSL (including) − The required minimum flight crew must be provided with and must use supplemental O2 for periods of flight over 30 minutes at these altitudes.
- Cabin pressure altitudes above 14,000' The required minimum flight crew must be provided with and must use supplemental O2 the entire flight time at these altitudes.
- ▷ Cabin pressure altitudes above 15,000' MSL Each occupant must be provided with supplemental O2.

### ■ Pressurized cabins

- > Above FL250 an addition of at least 10 minutes of supplemental O2 for each occupant is required.
- Above FL350 one pilot at the controls must wear and use an O2 mask unless two pilots are at the control with quick-donning masks and the aircraft is at or below FL410.
- If one pilot leaves the controls above FL350, the other pilot must wear and use his O2 mask regardless if it's a quick donning type.

# ■ Middle Ear & Sinus blockage

- ▷ Air pressure in the middle ear and sinuses normally equalizes with external air through the nasal passages.
- ▷ Allergies, colds or sinus infections may block these small opening and prevent the pressure from equalizing.
- ▷ If the air gets trapped, it may cause extreme pain, reduction in hearing or damage to the ear drums. This effect is usually most severe during descent.
- ▷ To relieve this condition, try the "Valsalva Maneuver": pinch your nostrils and gently try to blow air out of your nose. This forces air through the Eustachian tube into the middle ear. It may not work if the pilot has a cold, sinus or ear infection, or a sore throat.
- ▷ Consider seeing a physician if the condition doesn't clear after the flight.

# Spatial disorientation and illusions

- ▷ 3 systems the body uses for spatial orientation
  - □ Vestibular System Consists of organs in the inner ear
    - 3 semicircular canals sense movement in 3 axes: pitch, roll and yaw. The canals are filled with fluid, which moves
      against tiny sensory hairs as the head is moved. The brain gets these signals and interprets a sensation of movement.
    - 2 otolith organs, the utricle and saccule, sense acceleration in the horizontal and vertical planes.
  - □ Somatosensory System Consists of nerves in the skin, muscles and joints.
  - □ <u>Visual System</u> Visual cues from our eyes help the brain figure out spatial orientation.

# 

- □ **The leans** After leveling the wings following a prolonged turn, pilot may feel that the aircraft is banked in the opposite direction of the turn.
- Coriolis Illusion After a prolonged turn, the fluid in the ear canal moves at same speed as the canal. A head movement on a different plane will cause the fluid to start moving and result in a false sensation of acceleration or turning on a different axis.
- □ **Graveyard Spiral** A pilot in a prolonged, coordinated constant-rate turn may experience the illusion of not turning. After leveling the wings, the pilot may feel the sensation of turning to the other direction ("the leans"), causing the pilot to turn back in the original direction. Since a higher angle of attack is required during a turn to remain level, the pilot may notice a loss of altitude and apply back force on the elevator. This may tighten the spiral and increase the loss of altitude.
- □ Somatogravic Illusion Rapid acceleration stimulates the inner ear otolith organs in the same way as tilting the head



# SPATIAL DISORIENTATION AND ILLUSIONS - CONTINUED

- backwards. This may create the illusion of a higher pitch angle. Deceleration causes the opposite illusion the sensation of tilting the head forward and the aircraft being in a nose-low attitude.
- □ Inversion Illusion An abrupt change from climb to straight and level may create the illusion of tumbling backwards due to the fluid movement in the otolith organs.
- □ **Elevator Illusion** An abrupt upward vertical acceleration may create the illusion of climbing, due to fluid movement in the otolith organs.

# **▷ Visual Illusions**

- □ False Horizon An illusion in which the pilot may misidentify the horizon line. May be caused by sloping cloud formation, an obscured horizon, an aurora borealis, dark night with scattered lights and stars or the geometry of the ground
- Autokinesis Staring at a stationary point of light in a dark or featureless scene for a prolonged period of time may cause the light to appear to be moving. A pilot may attempt to align the aircraft with the perceived moving light, resulting in loss of control.

# **Optical Illusions**

- □ **Runway Width Illusion** A narrow runway may create the illusion that the aircraft is higher than it actually is. A wide runway may cause the opposite effect of the aircraft flying too low.
- Runway and Terrain Slope Illusion An up-sloping terrain or runway may create the illusion that the aircraft is at a higher altitude than it actually is.z
- □ **Featureless Terrain Illusion** Also known as "**black hole approach**." Flying over featureless or dark areas, such as in an overwater approach, can create the illusion that the aircraft is at a higher altitude than it actually is and may lead the pilot to fly at a lower altitude than desired.
- □ **Water Refraction** Rain on the windscreen can create an illusion of being at a higher altitude due to the horizon appearing lower than it is. This can result in the pilot flying a lower approach.
- □ **Haze** Shooting an approach in haze may create the illusion that the runway is further that it actually is, or that the aircraft is higher than it actually is.
- □ **Fog** Flying into fog may create an illusion of a nose-up motion.
- □ **Ground Lighting Illusion** Lights along a straight path, such as a road or lights on moving trains, can be mistaken for runway and approach lights. Bright runway and approach lighting systems, especially where few lights illuminate the surrounding terrain, may create the illusion that the runway is closer than it actually is. This may result in the pilot flying a higher approach than desired.

# Coping with spatial disorientation (Pilot Handbook of Aeronautical Knowledge)

- 1. Understand the causes of the illusions that may affect you as a pilot and stay alert for them when flying.
- 2. Obtain and understand relevant preflight weather information.
- 3. Maintain instrument proficiency and obtain training if needed before flying in marginal or instrument conditions.
- 4. Do not fly into adverse weather conditions or into dark or featureless areas unless instrument proficient.
- 5. When using outside visual references, ensure they are reliable, fixed points on the earth's surface.
- 6. Avoid sudden head movements, particularly during takeoff, turns, and approaches to landing.
- 7. Be physically tuned for flight into reduced visibility. Ensure proper rest, adequate diet, and, if flying at night, allow for night adaptation. Remember that illness, medication, alcohol, fatigue, sleep loss, and mild hypoxia are likely to increase susceptibility to spatial disorientation.
- 8. Most importantly, become proficient in the use of flight instruments and rely upon them. Trust the instruments and disregard your sensory perceptions.

# TABLES & REFERENCES

| RNP Approach Minima – supported equipment |           |          |               |                  |               |
|---|-----------|----------|---------------|------------------|---------------|
| Minima                                    | GLS (DA)  | LPV (DA) | LP (MDA)      | LNAV / VNAV (DA) | LNAV (MDA)    |
| Approach Type                             | Precision | APV      | Non-precision | APV              | Non-precision |
| GBAS (formerly LAAS)                      | ✓         | ✓        | ✓             | ✓                | ✓             |
| WAAS                                      |           | ✓        | ✓             | <b>√</b>         | <b>✓</b>      |
| GPS + Baro VNAV                           |           |          |               | ✓                | ✓             |
| Basic IFR GPS                             |           |          |               |                  | <b>√</b>      |



# TABLES & REFERENCES - CONTINUED

# **VOR Time & Distance**

Distance off course = 200 ft per dot per NM from VOR

<u>Distance to station</u> = TAS X min between bearings / degrees of BRG change

<u>Time (minutes) to station</u> = Seconds of BRG change / degrees of BRG change

| Transponder Codes |                    |
|-------------------|--------------------|
| Code Description  |                    |
| 7500              | Aircraft hijacking |
| 7600              | Radio Failure      |
| 7700              | Emergency          |

# **Standard Rate Turn - Angle of Bank Calculation**

(KTAS / 10) X 1.5

Example: 120 KTAS

(120 / 10) x 1.5 = 12 x 1.5 = <u>18º of bank</u>

| Aircraft Approach Categories |              |   |  |
|------------------------------|--------------|---|--|
| CAT                          | 1.3Vso (kts) | Standard ( <u>old</u> ) circling maneuver radius (NM) |  |
| Α                            | < 90         | 1.3   |  |
| В                            | 91-120       | 1.5   |  |
| С                            | 121-140      | 1.7   |  |
| D                            | 141-165      | 2.3   |  |
| Е                            | > 165        | 4.5   |  |

# Expanded Circling Approach Maneuvering Radius Identified by on FAA approach charts.

For procedures developed after late 2012. (AIM 5-4-20)

| Circling MDA<br>(MSL) | Α   | В   | С   | D   | Е   |
|-----------------------|-----|-----|-----|-----|-----|
| 1000 or less          | 1.3 | 1.7 | 2.7 | 3.6 | 4.5 |
| 1001-3000             | 1.3 | 1.8 | 2.8 | 3.7 | 4.6 |
| 3001-5000 ft          | 1.3 | 1.8 | 2.9 | 3.8 | 4.8 |
| 5001-7000 ft          | 1.3 | 1.9 | 3.0 | 4.0 | 5.0 |
| 7001-9000 ft          | 1.4 | 2.0 | 3.2 | 4.2 | 5.3 |
| 9001 and above        | 1.4 | 2.1 | 3.3 | 4.4 | 5.5 |

| RVR (ft) | Visibility (SM) |
|----------|-----------------|
| 1,600    | 1/4             |
| 2,400    | 1/2             |
| 3,200    | 5/8             |
| 4,000    | 3/4             |
| 4,500    | 7/8             |
| 5,000    | 1               |
| 6,000    | 1-1/4           |

# Special VFR (SVFR) (91.157) -

An ATC clearance allowing operation under VFR with weather conditions lower than the standard VFR minimums prescribed in 91.155.

SVFR is available **below 10,000 MSL** within the airspace contained by the **upward extension of the lateral boundaries of the controlled airspace designated to the surface of an airport**.

Requires at least 1 SM (as officially reported) and that the aircraft remains clear of clouds.

For **night SVFR** (sunset to sunrise), **an <u>Instrument rating</u>** and <u>instrument-equipped aircraft</u> are required.

| Flight Categories Used in AWC Weather Products |         |                            |        |                        |
|--|---------|----------------------------|--------|------------------------|
| Category                                       | Color   | Ceiling                    |        | Visibility             |
| LIFR (Low IFR)                                 | Magenta | Less than 500'             | and/or | Less than 1 SM         |
| IFR (Instrument Flight Rules)                  | Red     | 500' to below1,000' ft AGL | and/or | 1 SM to less than 3 SM |
| MVFR (Marginal VFR)                            | Blue    | 1,000'-3,000' AGL          | and/or | 3 to 5 SM              |
| VFR (Visual Flight Rules)                      | Green   | Greater than 3000' AGL     | and    | Greater than 5 SM      |

# **NOTES**

By definition, IFR is ceiling less than 1,000' AGL and/or visibility less than 3 miles while LIFR is a sub-category of IFR. By definition, VFR is ceiling greater than or equal to 3,000' AGL and visibility greater than or equal to 5 SM while MVFR is a subcategory of VFR.

Sources: https://aviationweather.gov/taf/help?page=plot and AIM 7-1-7

# IFR Quick-Review Guide - Airplane



| Term  | Definition  |  |
|-------|---|--|
| AATD  | Advanced Aviation Training Device   |  |
| AAWU  | Alaskan Aviation Weather Unit   |  |
| AC    | Advisory Circular   |  |
| ACS   | Airman Certification Standards  |  |
| AD    | Airworthiness Directive   |  |
| ADC   | Air Data Computer   |  |
| ADM   | Aeronautical Decision Making  |  |
| ADS-B | Automatic Dependent Surveillance-<br>Broadcast                            |  |
| AFM   | Airplane Flight Manual  |  |
| AGL   | Above Ground Level  |  |
| AHRS  | Attitude Heading Reference System   |  |
| Al    | Attitude Indicator  |  |
| AIM   | Aeronautical Information Manual   |  |
| ALS   | Approach Light System   |  |
| ALSF  | Approach Light System with Sequence Flashing Lights (e.g, ALSF-1, ALSF-2) |  |
| APV   | Approach with Vertical guidance   |  |
| ARTCC | Air Route Traffic Control Center ("Center")                               |  |
| ASI   | Airspeed Indicator  |  |
| ASOS  | Automated Surface Observation System                                      |  |
| ASR   | Approach Surveillance Radar   |  |
| ATC   | Air Traffic Control   |  |
| ATD   | Aviation Training Device  |  |
| ATIS  | Automatic Terminal Information Service                                    |  |
| AWC   | Aviation Weather Center   |  |
| AWOS  | Automated Weather Observation System                                      |  |
| BATD  | Basic Aviation Training Device  |  |
| DA    | Decision Altitude   |  |
| DH    | Decision Height   |  |
| DME   | Distance Measuring Equipment  |  |
| DP    | Departure Procedure   |  |
| EDCT  | Expect Departure Clearance Time   |  |
| EFB   | Electronic Flight Bag   |  |
| ELT   | Emergency Locator Transmitter   |  |
| ETA   | Estimated Time of Arrival   |  |
| FAA   | Federal Aviation Administration   |  |
| FAF   | Final Approach Fix  |  |
| FCC   | Federal Communications Commission   |  |
| FFS   | Full Flight Simulator   |  |
| FIS-B | Flight Information Services-Broadcast                                     |  |
| FL    | Flight Level  |  |
| fpm   | Feet per Minute   |  |
| FPNM  | Feet per Nautical Mile  |  |
| FSS   | Flight Service Station  |  |

| Term                | Definition  |  |
|---------------------|---|--|
| FTD                 | Flight Training Device  |  |
| GBAS                | Ground Based Augmentation System (i.e, LAAS)  |  |
| GP                  | Glide Path  |  |
| HFO                 | Weather Forecast Office Honolulu  |  |
| HI                  | Heading Indicator   |  |
| IAF                 | Initial Approach Fix  |  |
| ICAO                | International Civil Aviation Organization   |  |
| IF                  | Intermediate Fix  |  |
| IFR                 | Instrument Flight Rules   |  |
| ILS                 | Instrument Landing System   |  |
| IM                  | Inner Marker  |  |
| IMC                 | Instrument Meteorological Conditions  |  |
| IPC                 | Instrument Proficiency Check  |  |
| KTAS                | Knots True Airspeed   |  |
| Kts                 | Knots. NM / hour.   |  |
| LAAS                | Local Area Augmentation System  |  |
| LDA                 | Localizer Type Directional Aid.   |  |
| LIFR                | Low IFR   |  |
| LNAV                | Lateral Navigation  |  |
| LOC                 | Localizer   |  |
| LP                  | Localizer Performance RNAV / RNP approach   |  |
| LPV                 | Localizer Precision with Vertical Guidance approach   |  |
| MAA                 | Maximum Authorized Altitude   |  |
| MALSR               | Medium Intensity Approach Lighting<br>System with Runway Alignment Indicator<br>Lights  |  |
| MAP                 | Missed Approach Point   |  |
| MCA                 | Minimum Crossing Altitude   |  |
| MDA                 | Minimum Descent Altitude  |  |
| MDH                 | Minimum Descent Height  |  |
| MEA                 | Minimum Enroute Altitude  |  |
| MEL                 | Minimum Equipment List  |  |
| MFD                 | Multi Function Display  |  |
| MLS                 | Microwave Landing System  |  |
| MM                  | Middle Marker   |  |
| MOCA                | Minimum Obstruction Clearance Altitude  |  |
| MON                 | VOR Minimum Operational Network program   |  |
| MORA                | Minimum Off Route Altitude (Jeppesen)   |  |
| MRA                 | Minimum Reception Altitude  |  |
| MSL                 | Mean Sea Level  |  |
| MVFR                | Marginal VFR  |  |
| NDB                 | Non-Directional Beacon  |  |
| Night<br>(FAR §1.1) | The time between the end of evening civil twilight and the beginning of morning civil twilight, as published in the Air Almanac, converted to local time. |  |



| Term   | Definition  |
|--------|---|
| NHC    | National Hurricane Center                                     |
| NMC    | National Meteorological Center                                |
| NOTAM  | Notice to Airmen  |
| ODALS  | Omni-Directional Approach Lighting<br>System                  |
| ODP    | Obstacle Departure Procedure                                  |
| OM     | Outer Marker  |
| OPC    | Ocean Prediction Center                                       |
| PAPI   | Precision Approach Path Indicator                             |
| PAR    | Precision Approach Radar                                      |
| PFD    | Primary Flight Display  |
| PIC    | Pilot-in-Command  |
| PIREP  | Pilot Report  |
| RAIM   | Receiver Autonomous Integrity<br>Monitoring                   |
| REIL   | Runway End Identifier Lights                                  |
| RNAV   | Area Navigation   |
| RVR    | Runway Visual Range   |
| RVSM   | Reduced Vertical Separation Minimum                           |
| SBAS   | Satellite-based Augmentation System (e.g., WAAS, EGNOS)       |
| SDF    | Simplified Directional Facility                               |
| SID    | Standard Instrument Departure                                 |
| STAR   | Standard Terminal Arrival                                     |
| STC    | Supplemental Type Certificate                                 |
| SVFR   | Special VFR   |
| TCH    | Threshold Crossing Height                                     |
| TDZL   | Touchdown Zone Lights   |
| TIBS   | Telephone Information Briefing Service                        |
| TLS    | Transponder Landing System                                    |
| TOC    | Top of Climb  |
| TOD    | Top of Descent  |
| TWEB   | Transcribed Weather Broadcast                                 |
| UAT    | Universal Access Transceiver                                  |
| VASI   | Visual Approach Slope Indicator                               |
| VFR    | Visual Flight Rules   |
| VIP    | Video Integrator Processor                                    |
| VMC    | Visual Meteorological Conditions                              |
| VNAV   | Vertical Navigation   |
| VCOA   | Visual Climb Over Airport                                     |
| VOR    | VHF Omnidirectional Range                                     |
| VORTAC | VHF Omnidirectional Range Tactical Air Navigation (VOR+TACAN) |
| VS     | Vertical Speed  |
| VSI    | Vertical Speed Indicator                                      |
| WAAS   | Wide Area Augmentation System                                 |
| WPC    | Weather Prediction Center                                     |
| Wx     | Weather   |

Get your copy of the guide at: https://PilotsCafe.com/IFR-quick-review-guide/



**<u>Disclaimer</u>**: While every attempt was made to verify the accuracy of the information in this report, the author does not assume any responsibilities or liabilities for errors contained in it or for misuse of this information. You may only use this guide at your own risk.

Please send any error corrections or feedback to: <a href="https://www.PilotsCafe.com/contact">www.PilotsCafe.com/contact</a>

All rights reserved to Amir Fleminger and Fleminger Media LLC dba PilotsCafe ®. PilotsCafe ® is a USA Registered Trademark.

All Rights Reserved.