


Print, cut and tape

Reverse Tuck End carton (RTE) — 80 × 40 × 150 mm internal — 4 sheets of US Letter portrait

- 1 Print every sheet at 100%. In the print dialog turn OFF "fit to page", "shrink oversized pages" and any scaling. Choose Actual size.
- 2 Check the 100 mm bar on any sheet against a ruler before cutting. If it is short, the print scaled: fix the setting and print again.
- 3 Cut each sheet along the long-dashed grey frame, on all four sides. The short blue dashes inside it are creases - do not cut those.
- 4 Lay the sheets out in the grid below and butt the cut edges together - do not overlap them. Tape on the back.
- 5 On the assembled sheet the magenta line is the knife line and the blue dashes are creases. Score the creases with a blunt point, then fold away from the score.

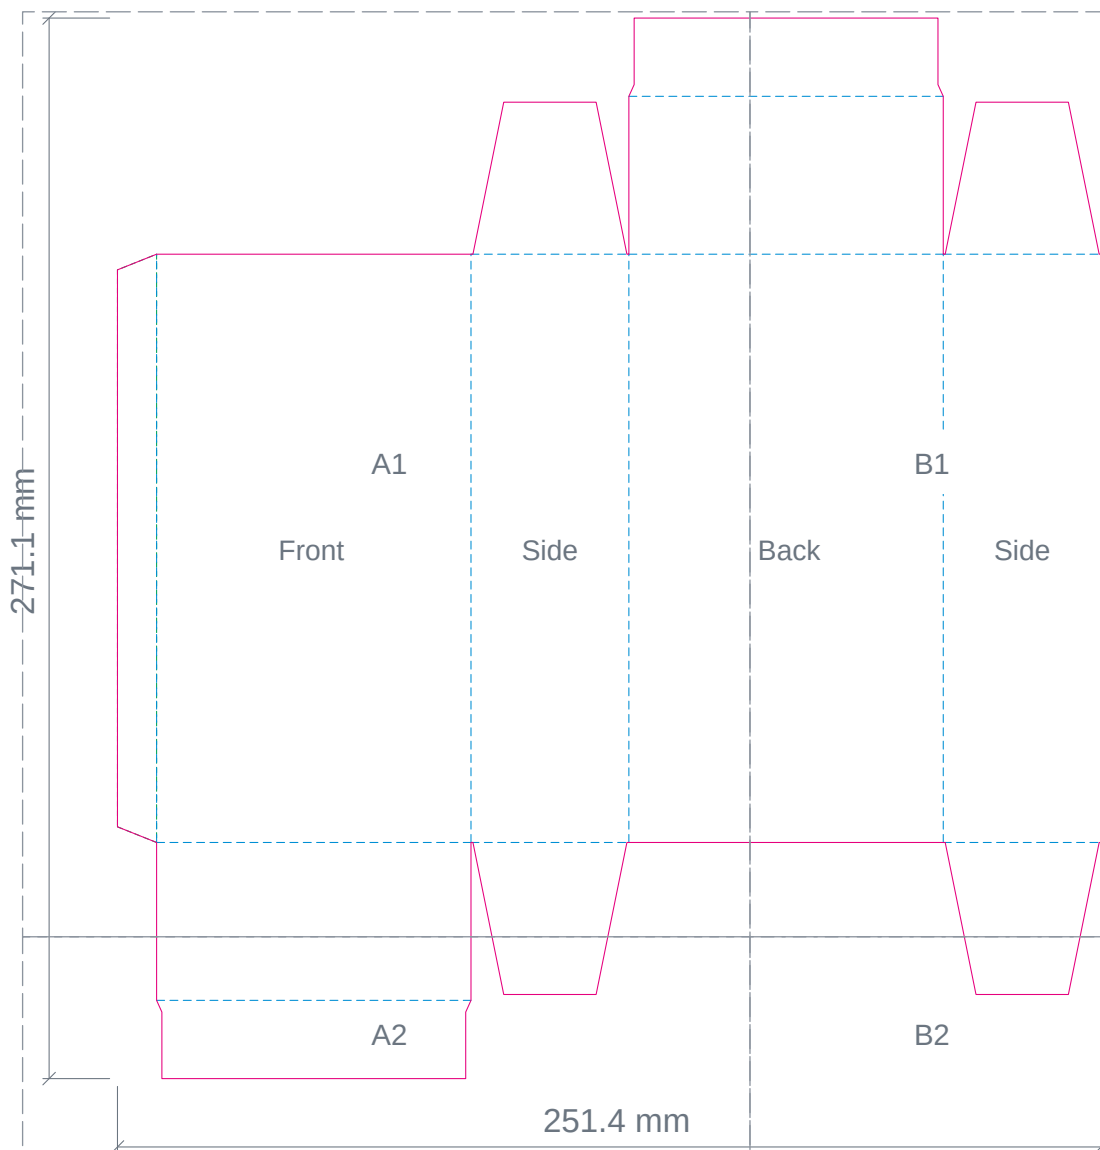


Assembled, the blank is 251 × 271 mm. Cartonry is a drafting tool: check a folded proof against your product, and your converter, before ordering tooling.


271.1 mm

Front

Side



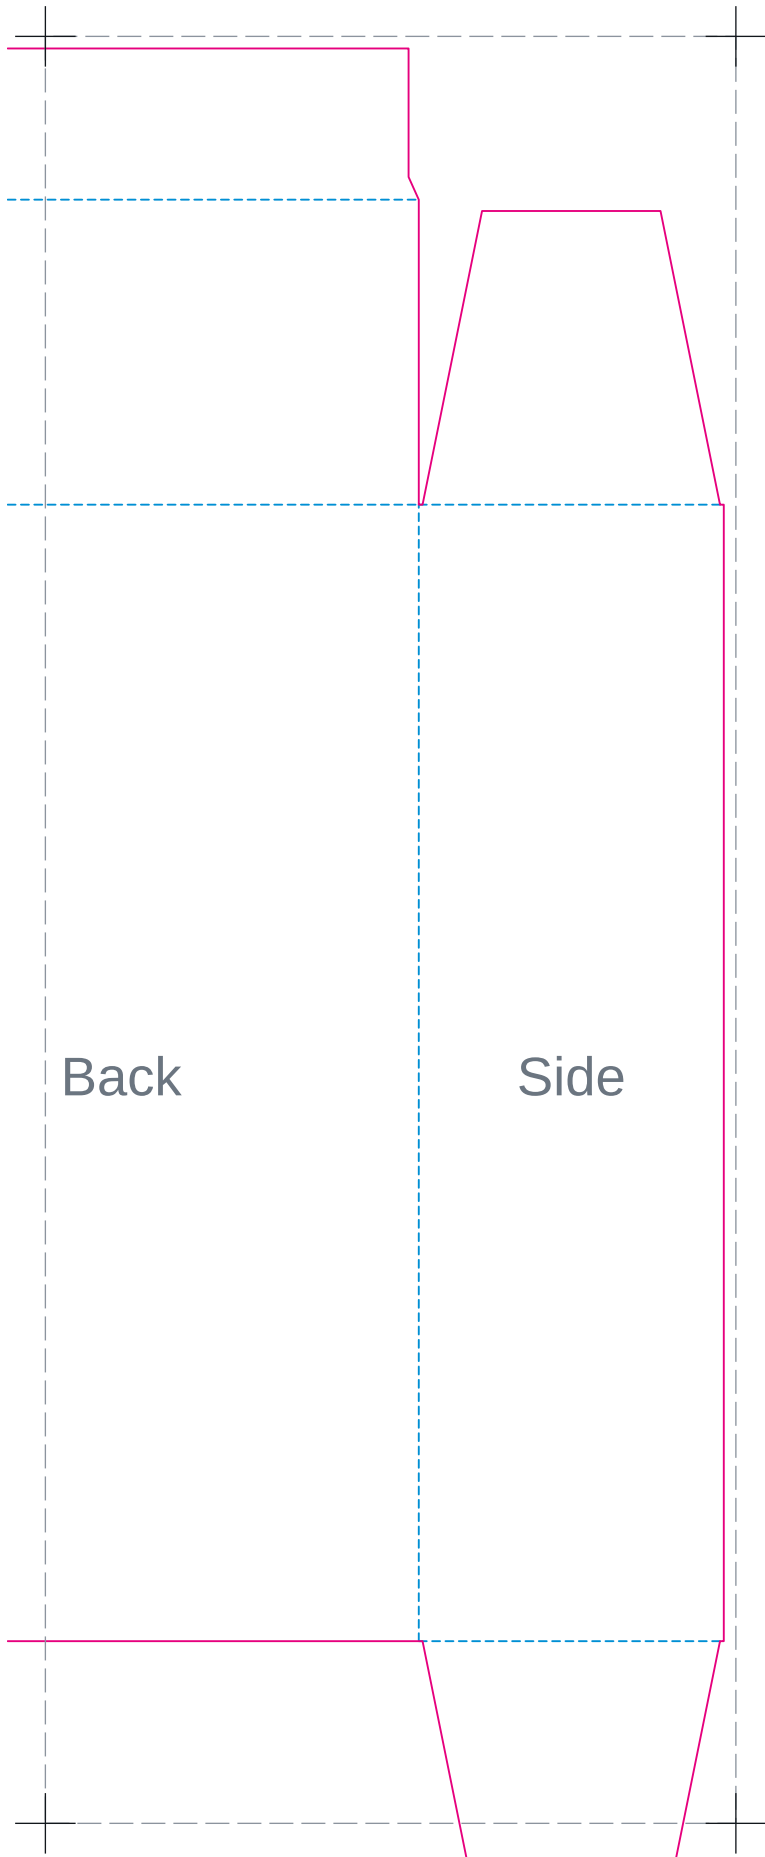

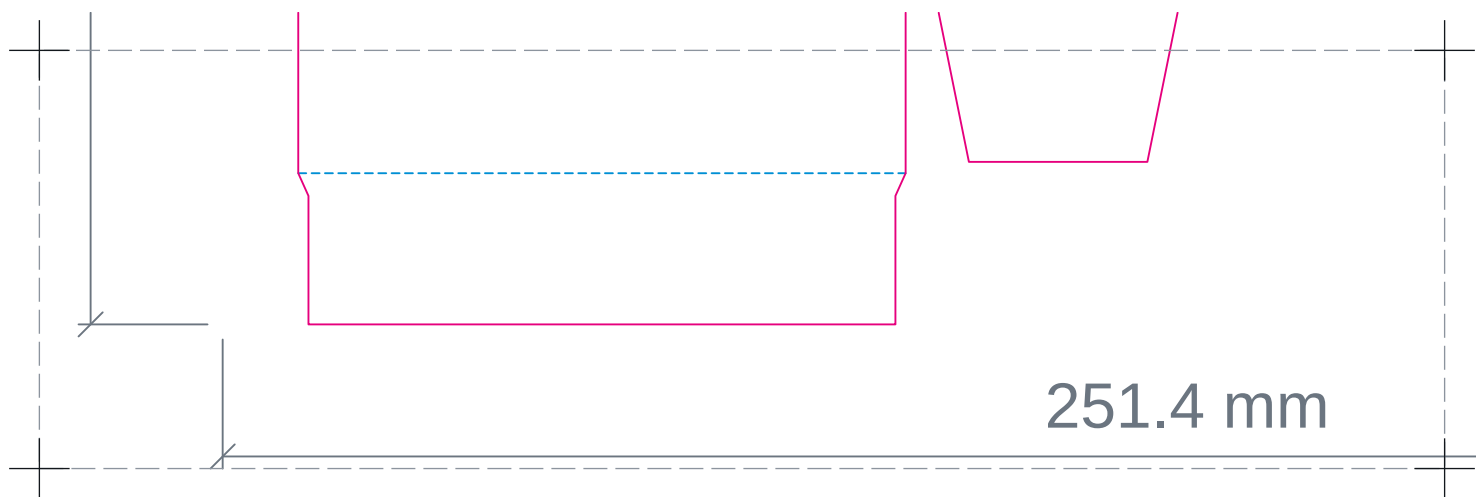



This bar must measure 100 mm (3.94 in). If it is shorter, the printer scaled the page: print again

