




Print, cut and tape


Full Overlap Slotted Container (FOL) — 200 × 150 × 100 mm internal — 9 sheets of A4 landscape

- 1 Print every sheet at 100%. In the print dialog turn OFF "fit to page", "shrink oversized pages" and any scaling. Choose Actual size.
- 2 Check the 100 mm bar on any sheet against a ruler before cutting. If it is short, the print scaled: fix the setting and print again.
- 3 Cut each sheet along the long-dashed grey frame, on all four sides. The short blue dashes inside it are creases - do not cut those.
- 4 Lay the sheets out in the grid below and butt the cut edges together - do not overlap them. Tape on the back.
- 5 On the assembled sheet the magenta line is the knife line and the blue dashes are creases. Score the creases with a blunt point, then fold away from the score.

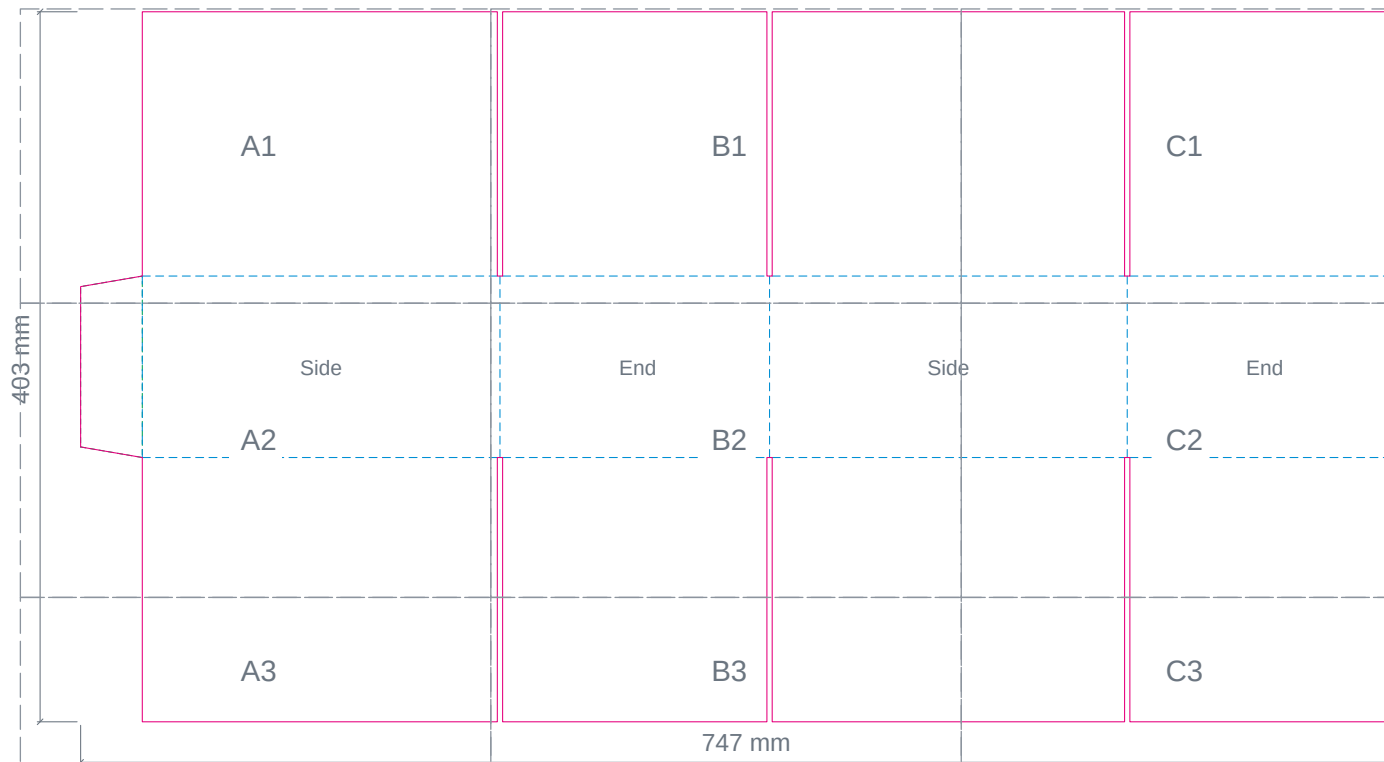



Assembled, the blank is 747 × 403 mm. Cartonry is a drafting tool: check a folded proof against your product, and your converter, before ordering tooling.

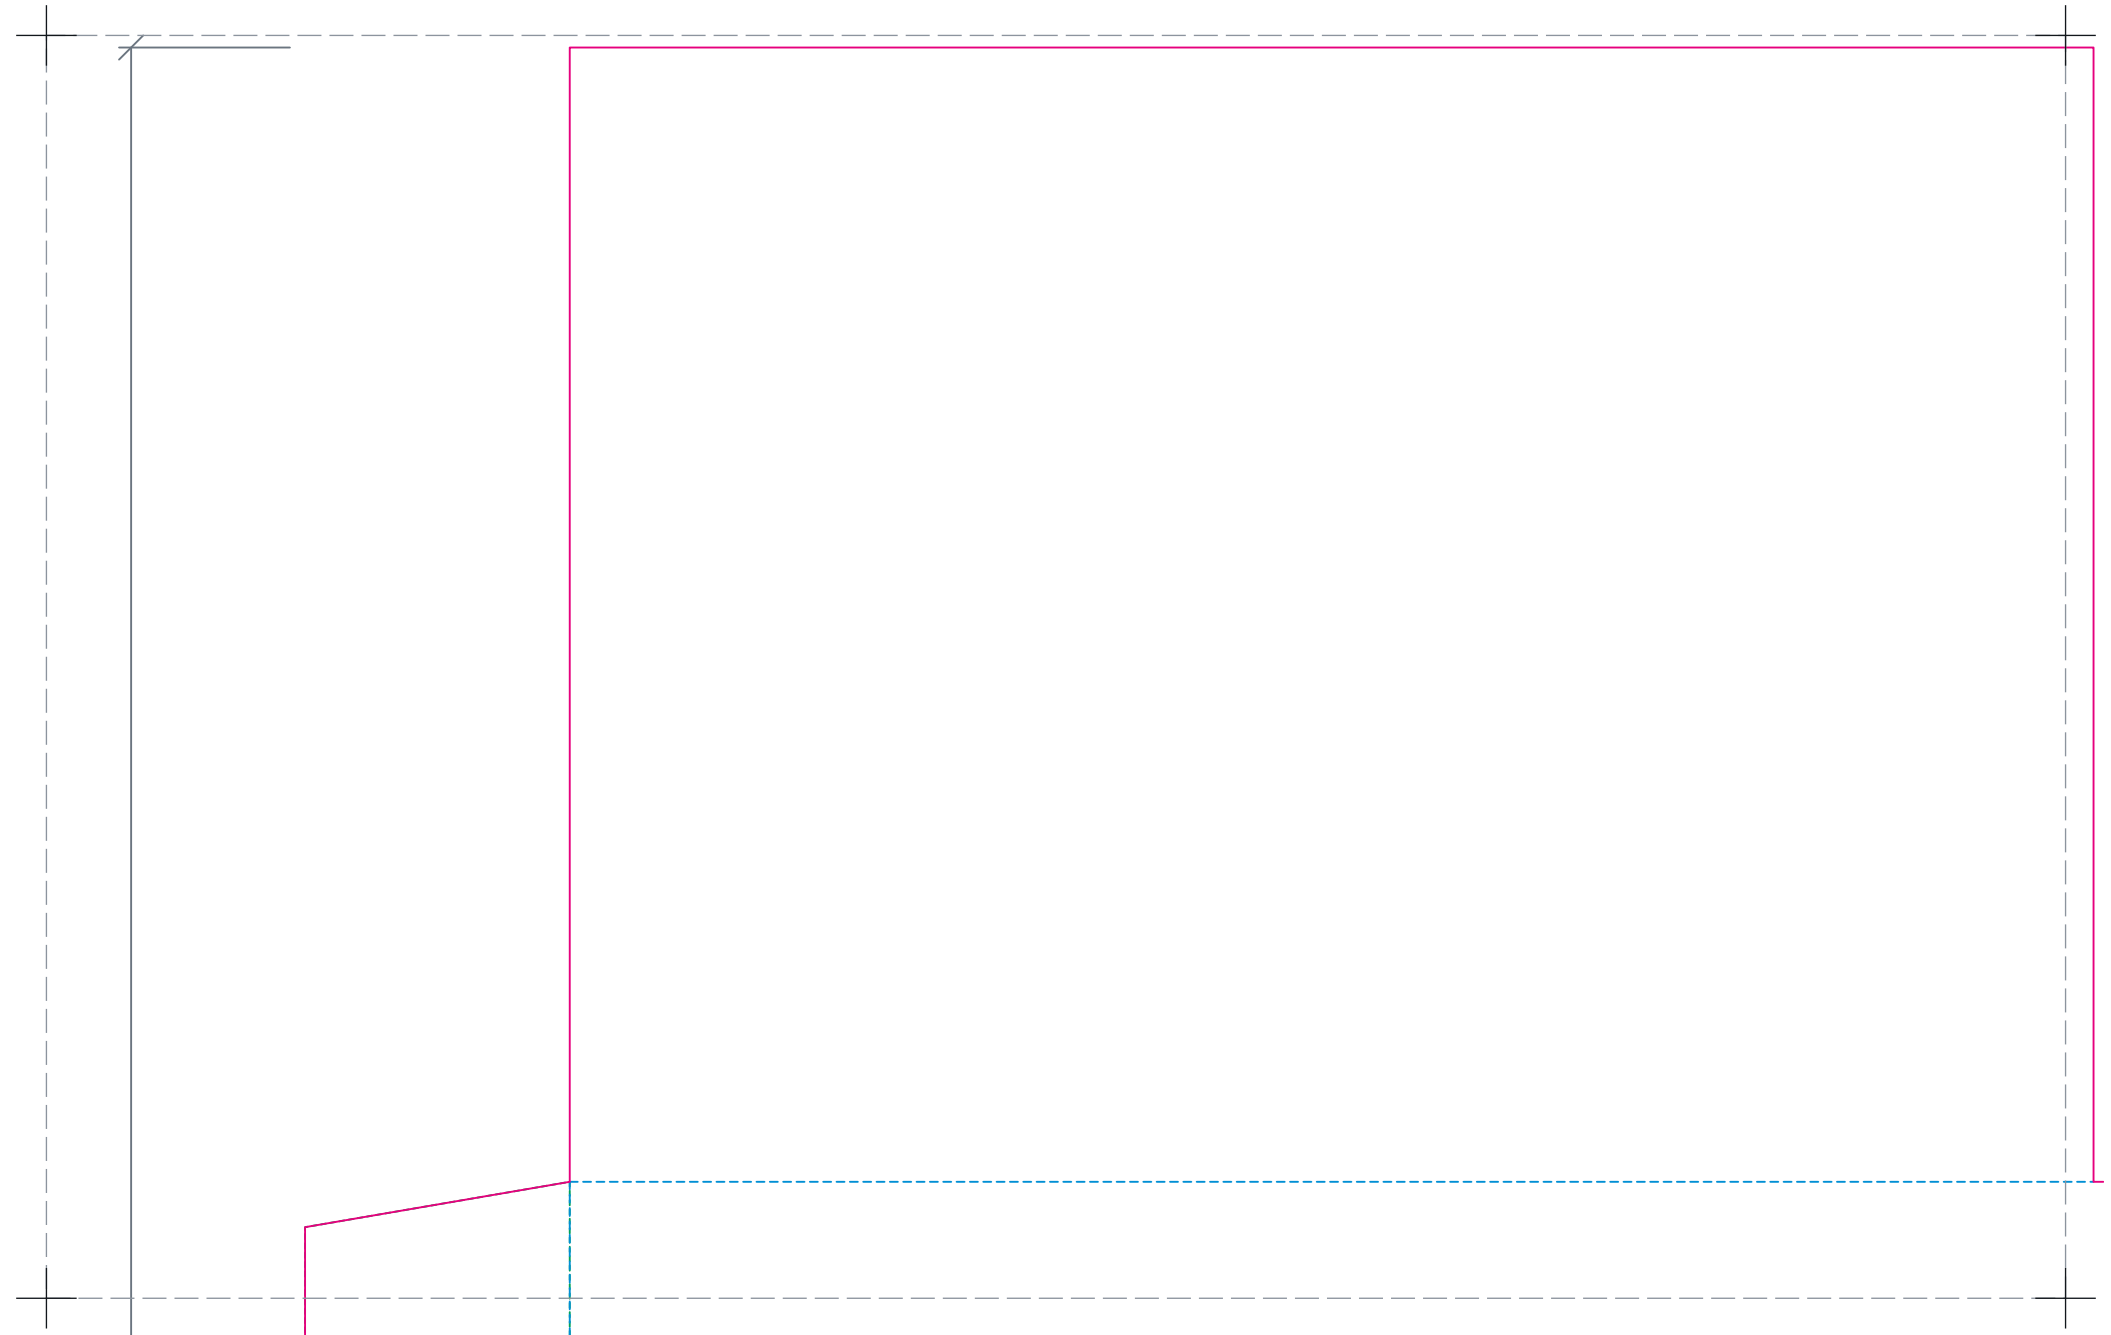

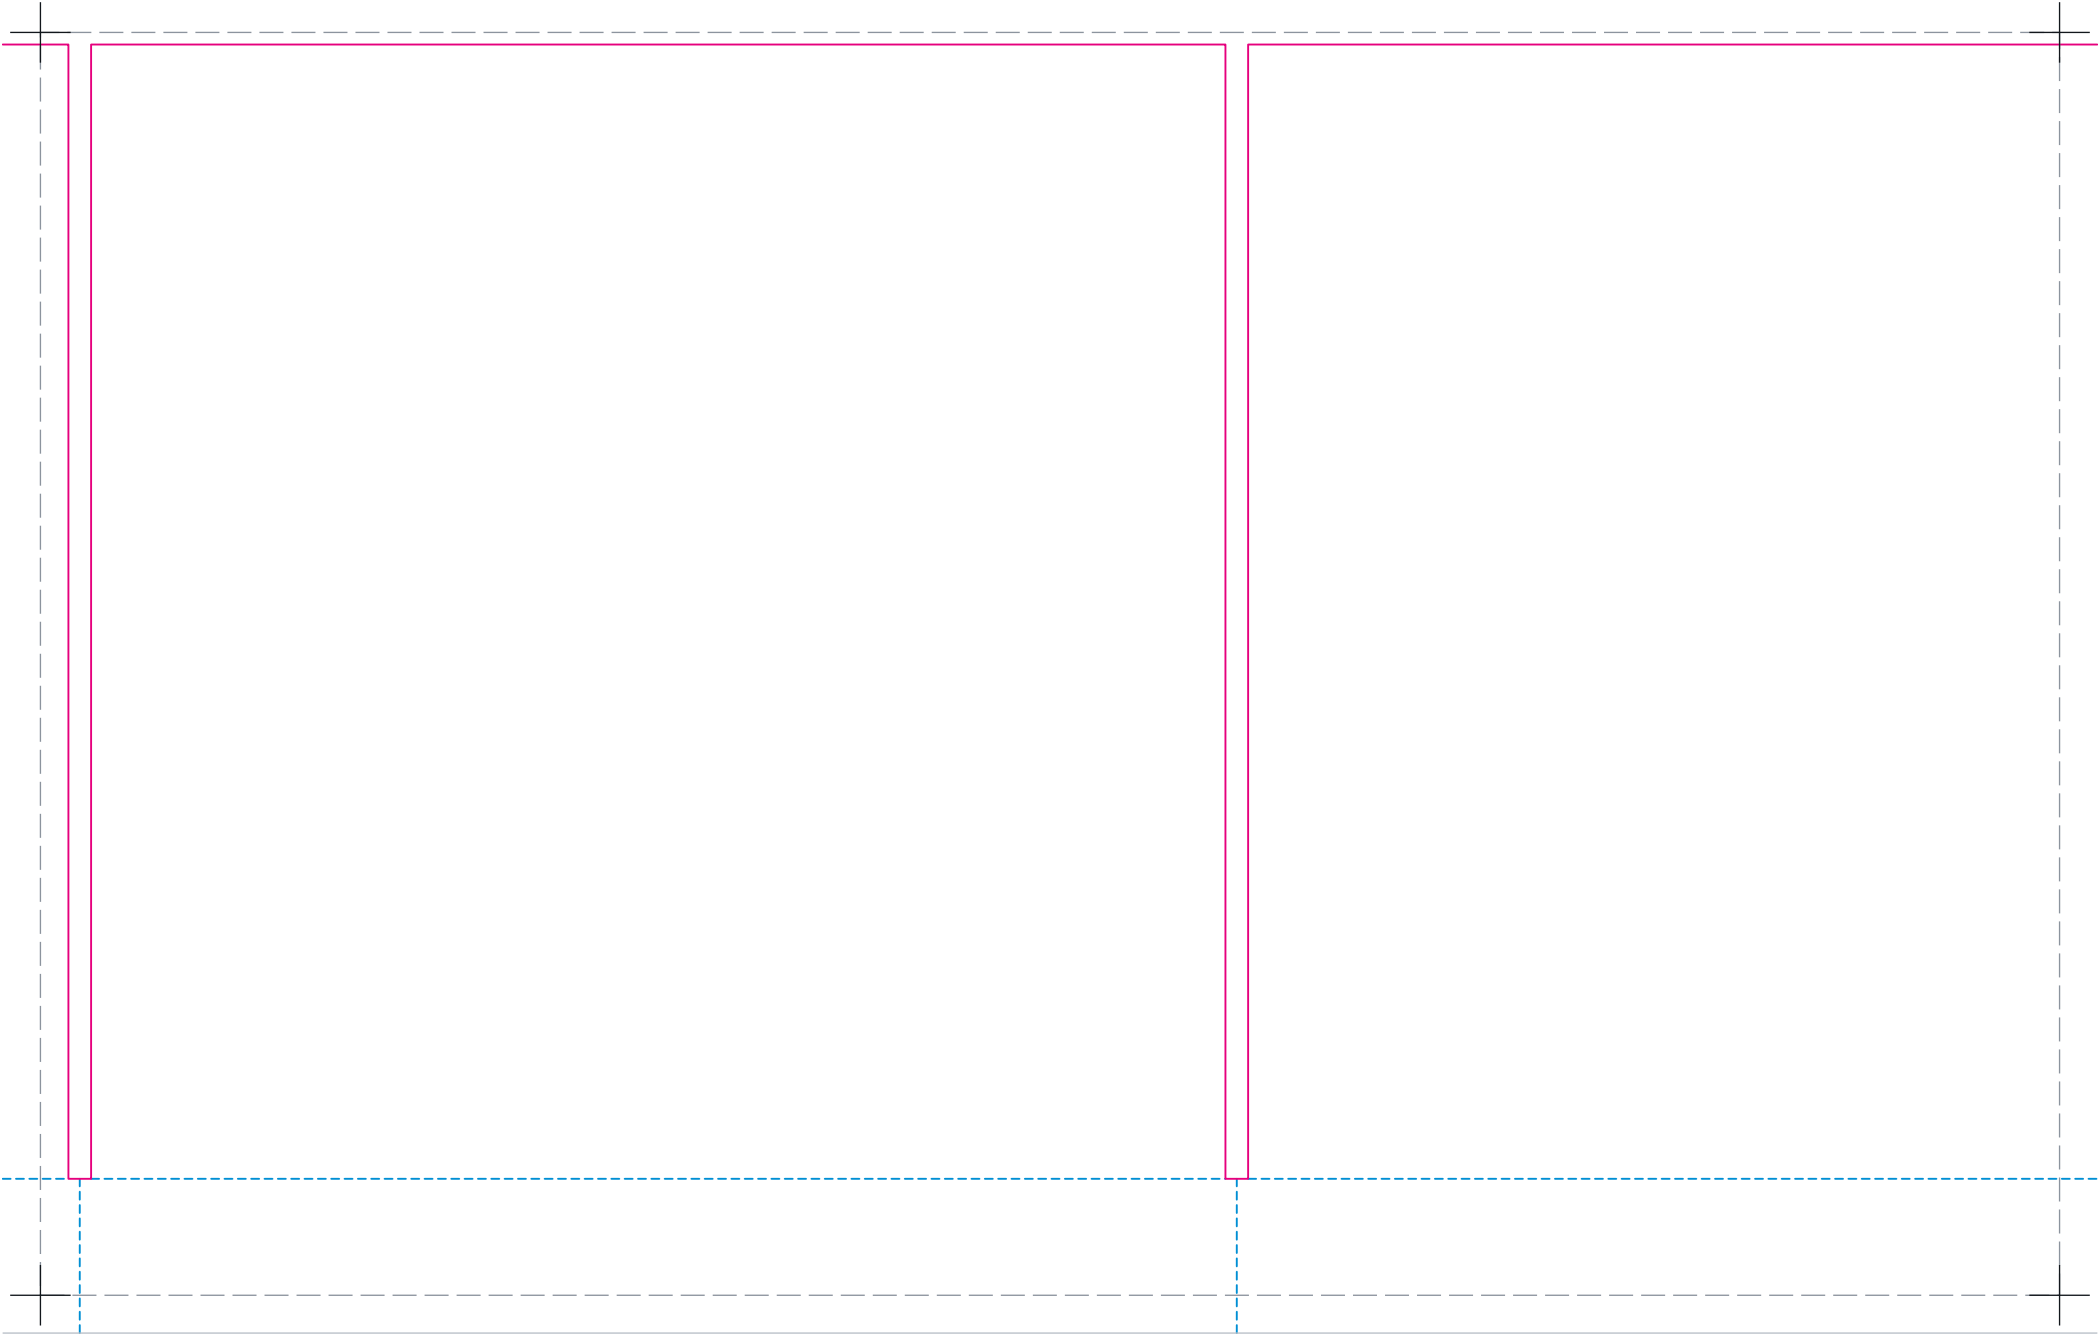


This bar must measure 100 mm (3.94 in). If it is shorter, the printer scaled the page: print again at 100% / Actual size.

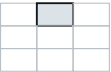

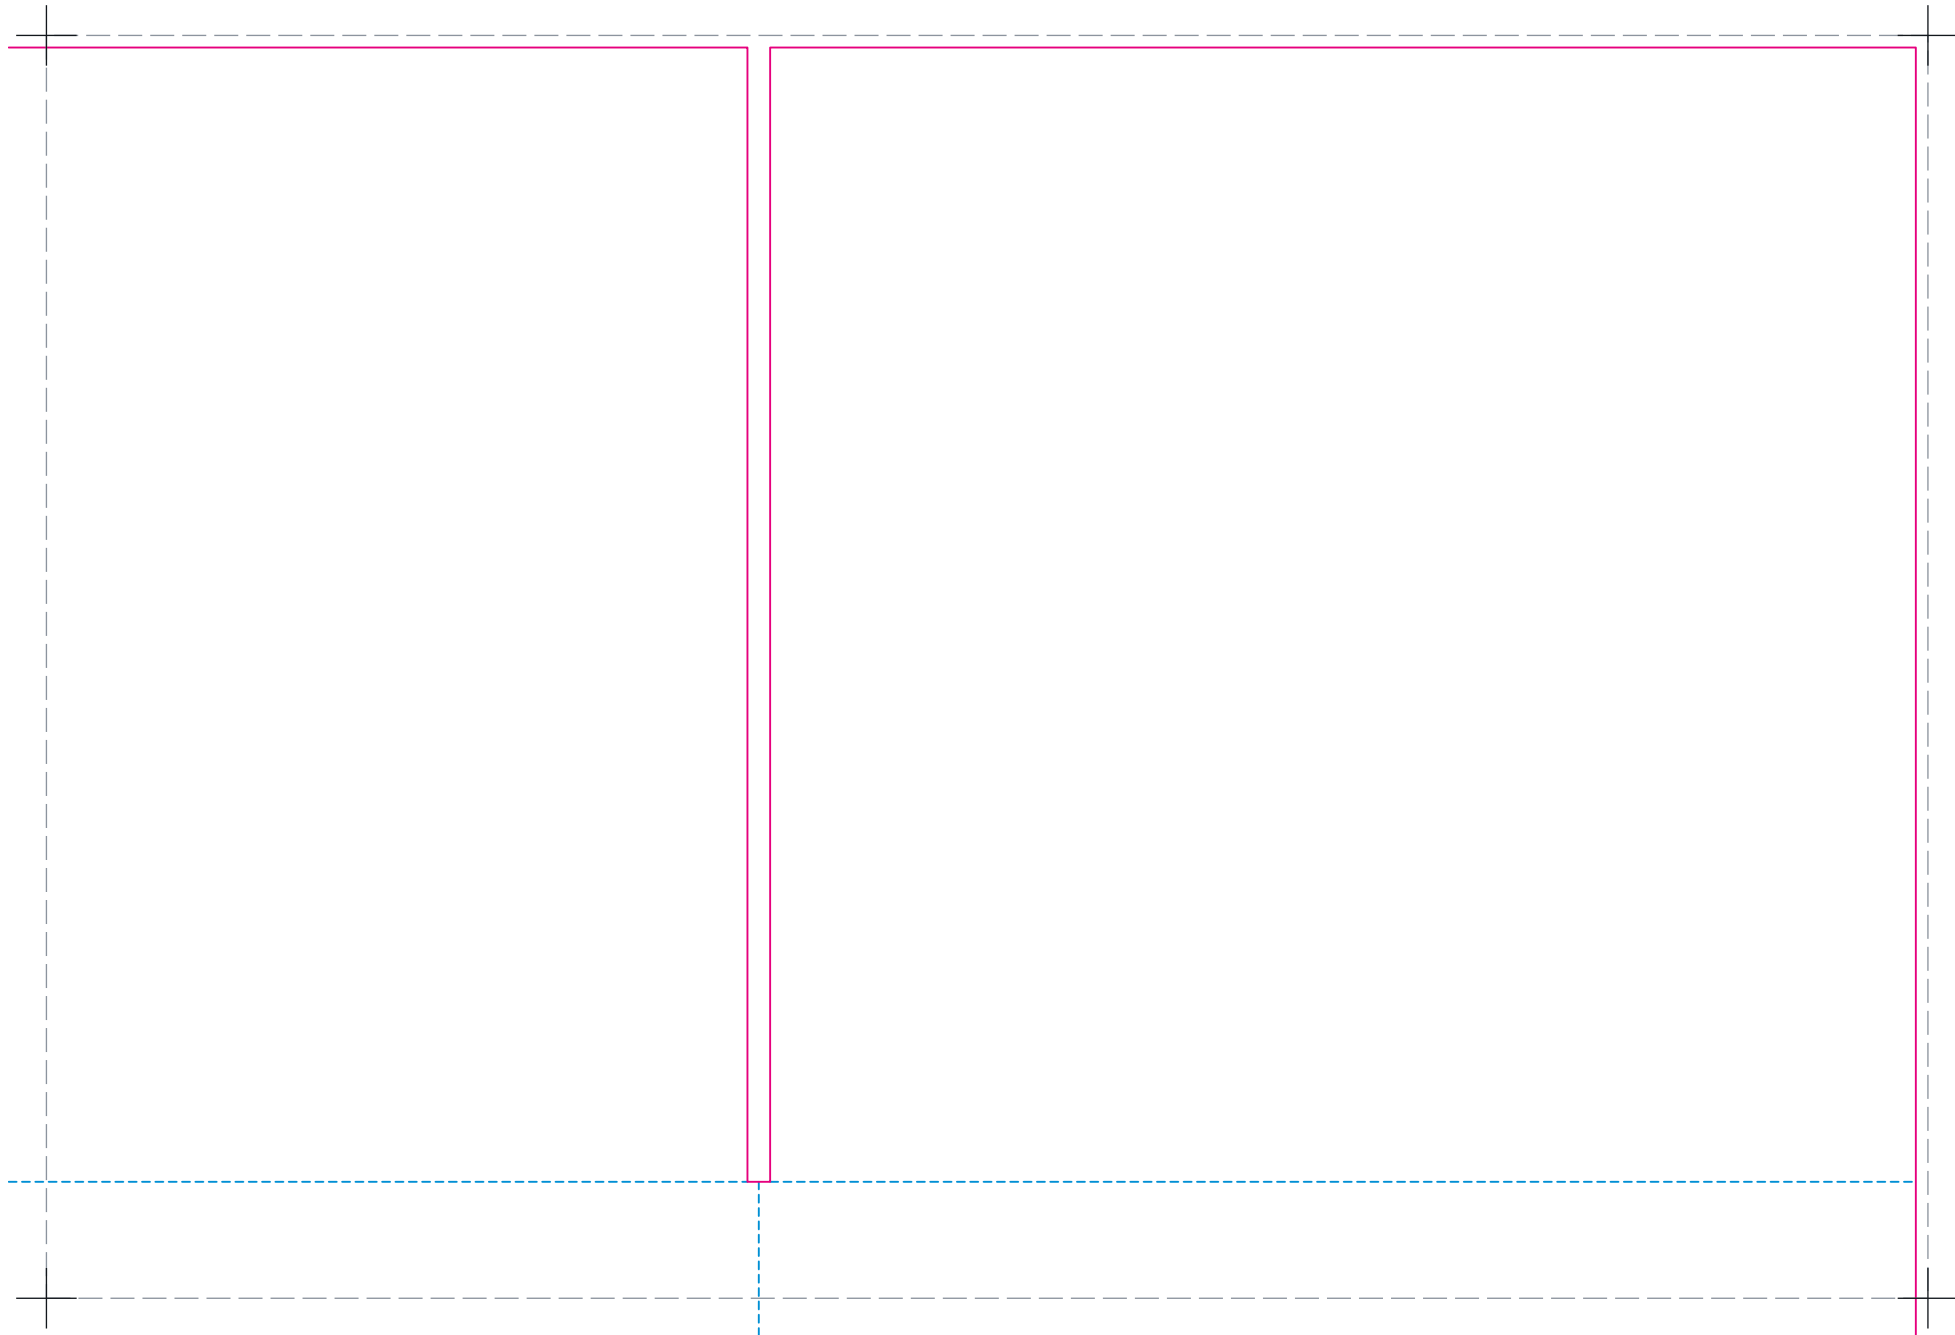


This bar must measure 100 mm (3.94 in). If it is shorter, the printer scaled the page: print again at 100% / Actual size.

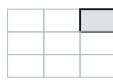


403 mm

Side

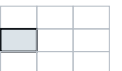

End

Side



End

