



LUXURY FURNITURE BLUEPRINTS

FLUTED WALNUT ARMOIRE




COMPLETE BUILD PLANS — DIMENSIONED
BLUEPRINTS, CUT LIST & ASSEMBLY GUIDE

SHEET 1 OF 6



GOOD PLANS. QUALITY BUILDS. TIMELESS RESULTS.

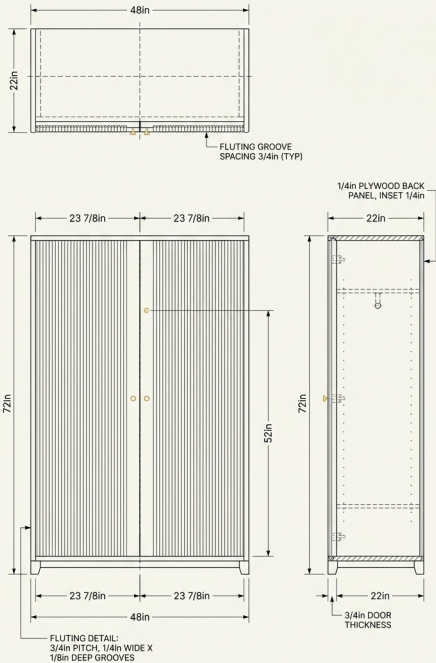


LUXURY FURNITURE
BLUEPRINTS

PROJECT: FLUTED WALNUT ARMOIRE

DATE: OCTOBER 28, 2023

SCALE: N.T.S.

DRAWN BY: A.J.R.

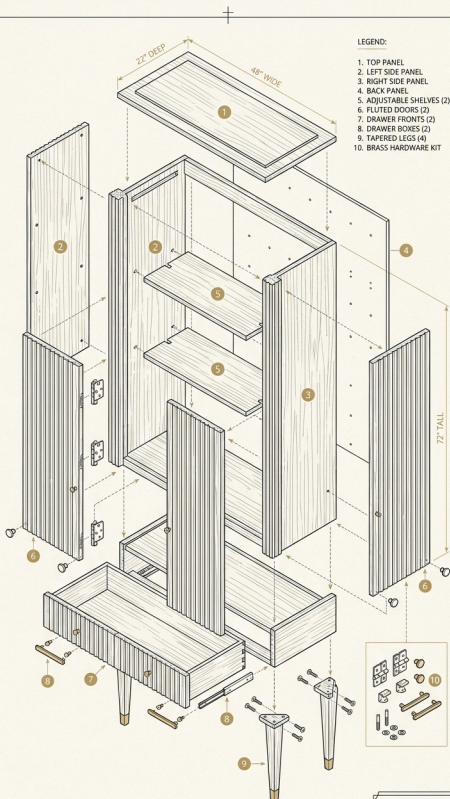


#	PART NAME	QTY	DIMENSIONS	MATERIAL
1	Side Panels	2	21 1/2" x 70 1/2"	Walnut Plywood
2	Top Panel	1	47" x 21 1/2"	Walnut Plywood
3	Bottom Panel	1	47" x 21 1/2"	Walnut Plywood
4	Back Panel	1	47" x 69"	1/4" Walnut Plywood
5	Fluted Doors	2	23 1/2" x 47 1/2"	Walnut Solid & Veneer
6	Drawer Fronts	2	47" x 9 1/2"	Walnut Solid & Veneer
7	Drawer Box Sides	4	20" x 8 1/2"	Hardwood
8	Drawer Box Front/Back	4	45" x 8 1/2"	Hardwood
9	Drawer Bottoms	2	45" x 20"	1/4" Plywood
10	Interior Shelves (Adjustable)	3	46" x 20"	Walnut Plywood
11	Tapered Legs	4	2" x 2" x 6"	Solid Walnut
12	Face Frame Stiles	2	1 1/2" x 72"	Solid Walnut
13	Face Frame Top/Bottom Rails	2	1 1/2" x 45"	Solid Walnut
14	Face Frame Mid-Rails	2	1 1/2" x 45"	Solid Walnut
15	Fluted Panel Strips (Applied)	48	1" x 72"	Solid Walnut
16	Interior Cleats/Supports	8	1" x 20"	Hardwood
17	Back Panel Cleats	4	1" x 46"	Hardwood

HARDWARE & SUPPLIES


- 4 x Soft-Close Door Hinges
- 2 Pairs x 20" Soft-Close Drawer Slides
- 2 x Large Brass Bar Pulls (Doors)
- 2 x Small Brass Pulls (Drawers)
- 1 Box x 1 1/4" Wood Screws
- 1 Box x 2 1/2" Wood Screws
- 1 Bottle x Wood Glue
- 1 Can x Walnut Wood Finish (Oil-based)

1

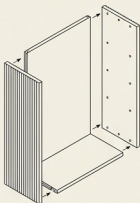


1) ASSEMBLE SIDE PANELS & BACK PANEL INTO CARCASS.

2

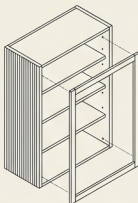


2) INSTALL INTERIOR SHELVES & FACE FRAME.

3




3) ATTACH THE TOP PANEL.

4




4) ATTACH TAPERED LEGS TO THE BASE.

5

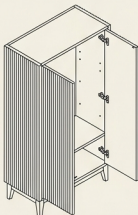

5) INSTALL THE TWO FLUTED DOORS WITH HINGES.

6

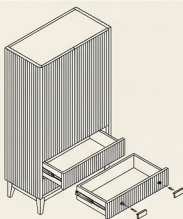

6) ASSEMBLE & INSTALL TWO DRAWERS WITH BRASS PULLS.

- 1) Sand using 120, 150, 180, 220 grits; remove dust after each.
- 2) Dampen surface to raise grain, dry, then lightly resand with 220.
- 3) Apply conditioner evenly, wiping excess within fifteen minutes.
- 4) Use cloth to apply warm stain, wiping off after ten minutes.
- 5) Apply two to three coats of satin finish, sanding between.
- 6) Buff with soft cloth, then apply paste wax for lasting sheen.



WARM WALNUT TONE