

Pulling Fryers

Detail Clean

Frequency

Weekly

Models

All Models

Estimated Time to Complete

30 minutes -*Complete during low volume or closed periods.*

Health & Safety Hazards



Slippery Floors



Chemicals



Hot Surfaces

Food Safety



Wash & dry hands **after** performing task



Remove or cover all food and packaging



Ensure nuts, bolts & screws are tight

Equipment



KAY® Heavy-Duty Degreaser Solution



KAY® SolidSense™ FloorCare Solution




Kitchen Roll



Blue Border Cloth



Blue Deck Scrub



Cleaning Gloves Available



Red Mop



Red Mop Bucket




Blue Round Brush




Red Dry Mop



Wet Floor Cone

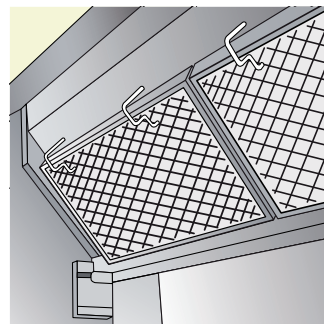


Pulling Fryers

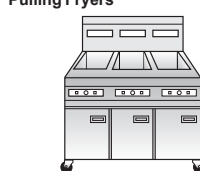


Ensure other employees are aware cleaning is taking place. Use verbal warnings or warning cones.

1

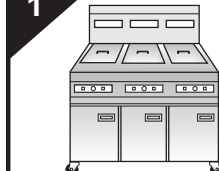


Cover vats with vat lids and remove filtering machine.

2

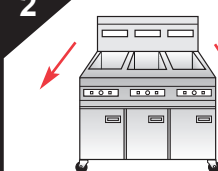


Ensure there is enough room to pull equipment out safely. Pull fryer forward to allow full access behind.

3

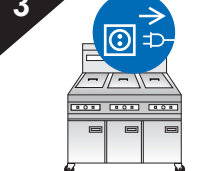


Unplug fryer.

4

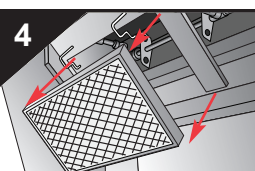


Remove filters.

5

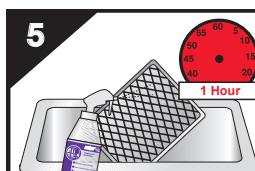


Place filters in back sink and spray with KAY® Heavy-Duty Degreaser. Leave for 1 hour.

6

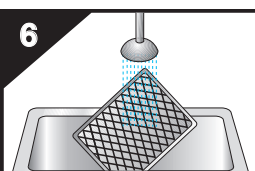


Rinse with hot water and allow to dry.

7

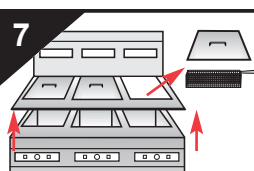


Remove & clean baskets, backsplashes & vat lids using 4-Step Cleaning Method.

8

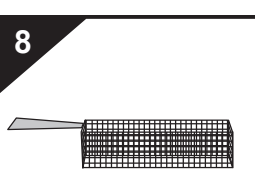

Check baskets for damaged or loose wires

9

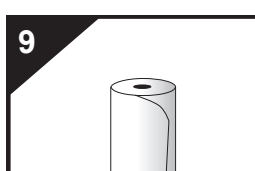


Remove heavy grease using kitchen roll first.

10




Spray KAY® Heavy-Duty Degreaser inside filter housing, back and side panels of grill housing. Leave for 5 minutes.

11

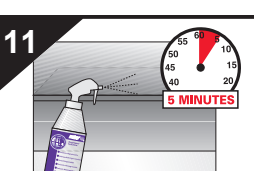


Spray KAY® Heavy-Duty Degreaser onto back and sides of fryer. Leave for 5 minutes.

12

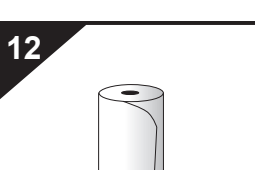


Remove heavy grease using kitchen roll.

13

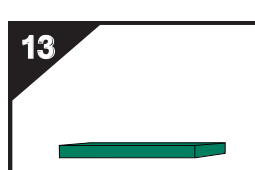

Use green scouring pad to remove heavy carbon build-up.

14

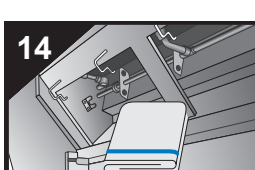


Use a blue border cloth soaked in hot APSC solution to wipe all areas.

15




Continue to spray and wipe until all grease is removed.

16

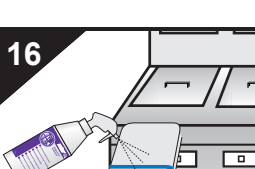


Spray KAY® Heavy-Duty Degreaser onto Blue Border cloth and wipe control panel and inside pot area.

17

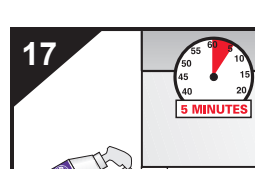

Spray legs and wheels with KAY® Heavy-Duty Degreaser and leave for 5 minutes.

18

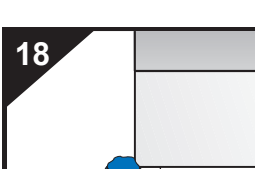

Scrub with Blue Round Brush.

19




Wipe with Blue Border Cloth.

20




Deck scrub & mop the floor & baseboards. Refer to Floor Cleaning Card.

21

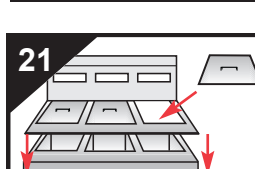


Replace backsplash and vat lids.

22

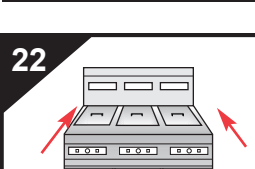

Reconnect fryer and push back into place.

23

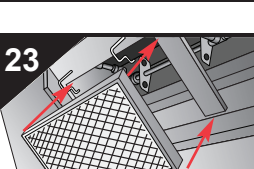

Replace filters when dry.