

Beverages: Water Filters

Pre-filter Cartridge Replacement

Frequency

Check Quarterly, Change Whenever the Inlet Gauge is in the Red sector or Annually

Models

All Models

Time Taken to Complete

10 Minutes

Health & Safety Hazards



Slippery Floors / Tripping



Chemicals

Food Safety




Wash and dry hands **after** performing this task



Inspect equipment. Do not use if damaged


THE FOLLOWING TASK SHOULD BE CARRIED OUT ONCE THE RESTAURANT IS CLOSED

Equipment

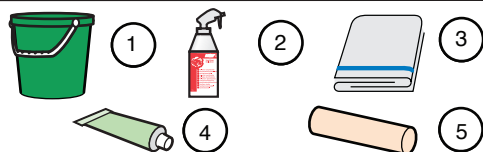


- 1 Bucket
- 2 KAY Surface Sanitiser
- 3 Blue Border Cloth
- 4 Taylor Lube
- 5 Pre-Filter Cartridge

NB To Order a New Pack Contact:
Cornelius - 0870 905 0773 / Whitlence - 0121 501 2566

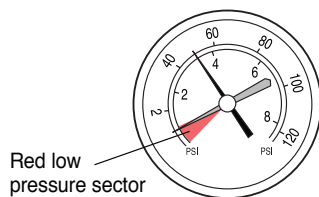

INLET GAUGE	OUTLET GAUGE	ACTION
Red Sector	Red Sector	Check water supply Change Pre-Filter
Normal	Red Sector	Change Cartridges

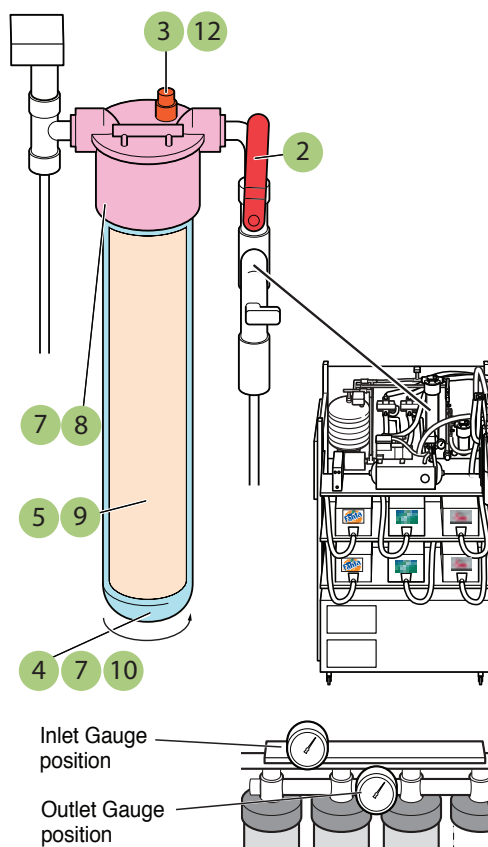


1




Turn the power switch to OFF on the drinks towers on the front counter. **NB** This will avoid starving the drinks system of water.

2

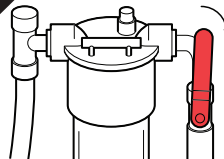


Shut off Water System by turning red handle to shut position.

3

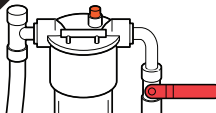


Relieve water pressure by pressing red pressure relief button on top of Pre-Filter Head. Listen for pressure being vented and possible release of moisture.

4

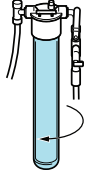

Turn the Filter Cartridge Housing clockwise and remove.

5



Remove used Cartridge and throw away.

6




Empty water from Cartridge Casing by tipping into container.

7



Clean Filter Head and Cartridge Casing with KAY Surface Sanitiser.

8

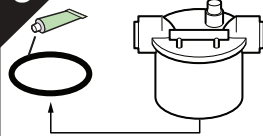


Lubricate 'O' Ring with Taylor Lube and check for damage.

9




Take new cartridge out of packaging. Position replacement Cartridge in the stub of the Cartridge Casing. Ensure it is firmly secured down onto the stub at the base of the Cartridge Casing.

10

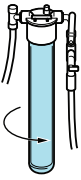


Screw Pressure Vessel onto Filter Head firmly but hand tighten only.

11

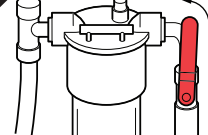

NB Check for leaks by turning water back ON, by turning the red handle to the OPEN/ON position.

12

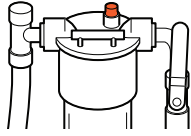


Bleed air from system by pushing red button on top of Pre Filter Head.

13



If there are leaks repeat **steps 2-12** ensuring tightness and location of O-ring is correct. If damaged contact your [Service Company](#).

14

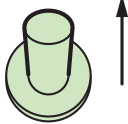

Turn the power switch to ON on the drinks towers on the front counter.