

Sauce Dispensers: Sauce Guns/Dispensers

Check Calibration/Condition of Parts

Frequency

Monthly

Models

All Models

Estimated Time to Complete

30 Minutes

Health & Safety Hazards

Food Safety



Wash and dry hands **after** performing this task




Ensure nuts, bolts & screws are tight




Inspect equipment. Do not use if damaged

Equipment

1

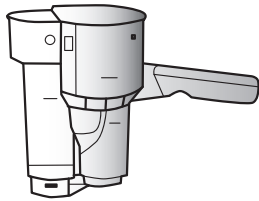


2

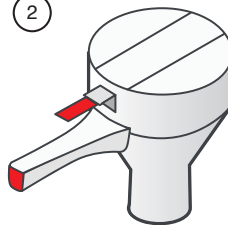


3




4

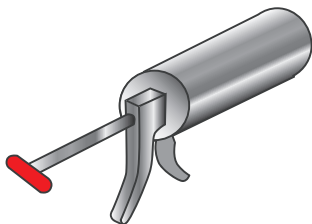


5

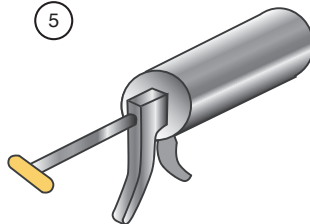


6

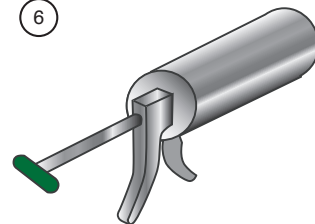

7

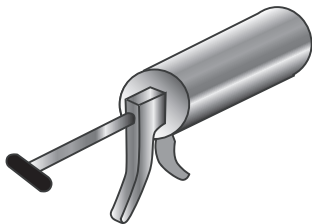

8

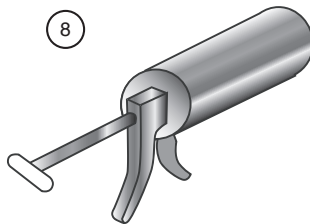

9



1 Dual Ketchup Dispenser

4 Big Mac Sauce

7 Sour Cream & Chive Sauce

2 Single Ketchup Dispenser

5 Sandwich Sauce

8 Promotional Sauce

3 Single Mustard Dispenser

6 Tartare Sauce

9 Ratio Cup

NB

	1 FULL SHOT	TO CALIBRATE	VOLUME INCREASE
Ketchup (regular)	10ml	6 shots = 60ml	90ml
(quarter)	15ml	6 shots = 90ml	120ml
Mustard	0.7ml	35-60 shots = 30ml	60ml
Brown Sauce	15ml	6 shots = 90ml	120ml
Big Mac Sauce	10ml	6 shots = 60ml	90ml
Tartare Sauce	20ml	3 shots = 60ml	90ml
Sandwich Sauce	10ml	6 shots = 60ml	90ml
Sour Cream & Chive Sauce	10ml	6 shots = 60ml	90ml
Salsa	15ml	6 shots = 90ml	120ml
Hellman's Light Mayo	10ml	6 shots = 60ml	90ml


The mix water and sauce should raise the volume in the ratio cup by the appropriate amount.

1


Ensure there is no wear and tear on the dispensers and Sauce Guns. Check all parts are present and ensure correct assembly.

2


Fill the sauce dispensers half full with mustard or ketchup sauce, then Insert Sauce Tubes into the Sauce Guns in preparation for calibration procedures.

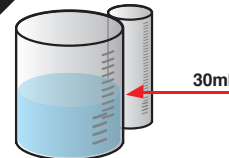3

Fill the ratio cup with 30ml of water.

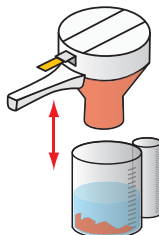4

Hold the dispenser/sauce gun over the top of the ratio cup. Dispense one full shot at a time.
NB The lever must be allowed to fully return to its normal setting after each shot has been dispensed (for sauce guns 'clicks' back into position).

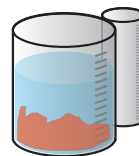5

Once all shots have been dispensed, verify the increase in water volume is correct.


View table above: VOLUME INCREASE.

6

Repeat **steps 3-5** for each Dispenser and Sauce Gun.

NB Clean the ratio cup after every time it is used.

NB If the amounts of sauce being dispensed are incorrect, the springs in the dispensers must be changed. For Sauce Guns you will need to replace parts or dispenser. **View step 7.**

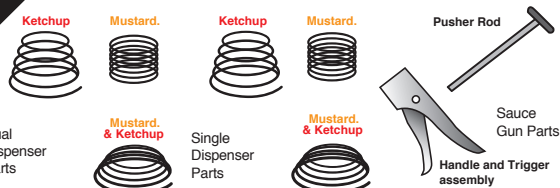7**8**

To order sauce dispenser/gun parts, contact HKI 0870 7200 544.