

Shake Machines: Taylor HT C602

Card No. SS1419

Re-assemble/Sanitise & Prime

Frequency

Weekly

Models

Taylor HT C602

Estimated Time to Complete

120 Minutes

Health & Safety Hazards



Chemicals



Slippery Floors / Tripping

Food Safety



Critical Control Point



Ensure nuts, bolts & screws are tight




Inspect equipment. Do not use if damaged



Wash & dry hands **before** performing task

Equipment

-
- 1 Cleaning Brushes
 - 2 APC Solution
 - 3 Red Border Cloth
 - 4 Shake Buckets
 - 5 McD Sanitiser
 - 6 Shaft Drive Tool
 - 7 Seal Removal Tool
 - 8 Shake Parts Trays
 - 9 O-ring Removal Tool
 - 10 KAY Surface Sanitiser
 - 11 Taylor Lube
 - 12 Plastic Wash Bottle
 - 13 Clear Gloves

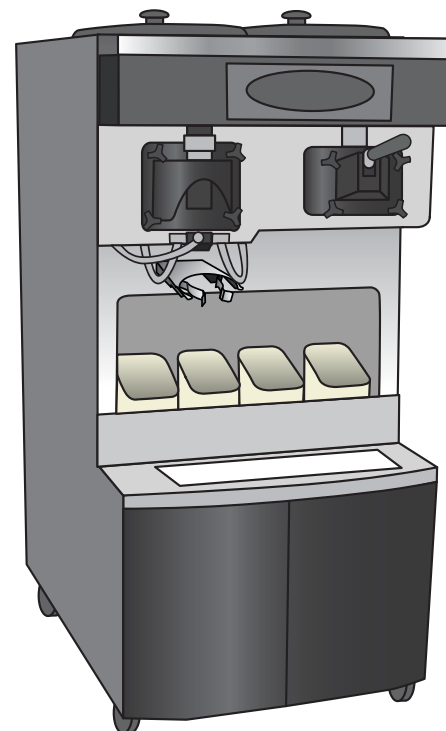

NB


Prior to starting this procedure, the following must be worn: Hat, Hair Net and Clean Apron.

Check the condition of all O-rings and parts for wear and tear, nicks or damage and replace as needed.

Always handle shake machine parts over a surface and avoid dropping from a height.


Replace all O-rings **quarterly**.

1

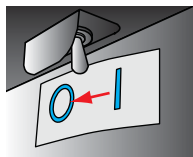


Make Sure the Power switch is OFF.

2

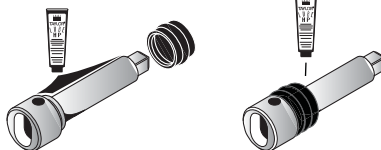


Lubricate the groove on the beater drive shaft. Slide the beater shaft seal over the small end of the drive shaft and engage into the groove on the shaft. Pack the inside of the drive shaft seal with lube to form an air tight seal.
NB Do not lubricate the square end.

3

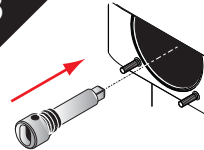


Install the Drive Shaft through the Shell Bearing in the freezing cylinder and engage the square end firmly into position.

4

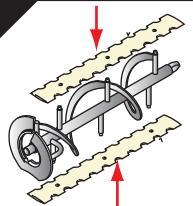

Place the Scraper Blades over the holding pins on the Beater Assembly.

5

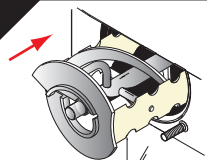


Holding the blades on the Beater Assembly, insert the beater assembly in the freezing cylinder. Engage the shaft end firmly into the Drive Shaft Socket.

6


NB When properly engaged the Beater Assembly will not protrude beyond the front of the freezing cylinder.

7

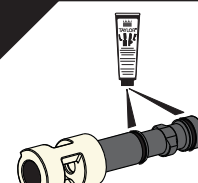


Slide the 2 O-rings into the grooves of the Draw Valve and lubricate.

8

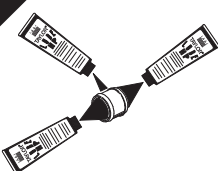

Lubricate the outer diameter of the Spinner Shaft Seal. Fill the cups on each end of the seal with lube.

9

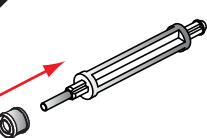


Insert the Spinner Seal onto the Seal Removal Tool.


10

Insert the Seal Removal Tool into the bottom of the Draw Valve. The Spinner Seal should fit into the seal groove located inside the Draw Valve.

NB Check the Spinner Seal is correctly installed into the groove, otherwise Shake Mix will leak out of the top of the Drawer Valve.

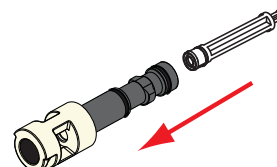


11

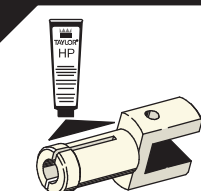

Lubricate the smaller end of the Driven Spinner.


12

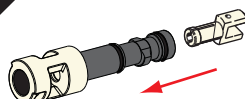


Squeezing the split end of the Driven Spinner together insert into the bottom end of the Draw Valve until it snaps into position.

13

Lubricate both ends of the Drawer Spout. Insert and align the valve Spinner Assembly into the Freezer Door.

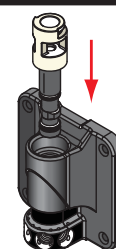

14

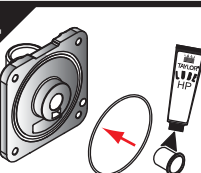


Place the O-ring into the groove on the Freezer Door. Lubricate the outside diameter of the Front Bearing, then slide it into the door hub.


15

Position the Freezer Door on the four studs on the front of the freezing cylinder. Install the hand screws (2 short hand screws at the bottom). Hand tighten each handscrew equally in a criss-cross pattern.

NB Ensure the Drawer Valve is aligned with the Spinner Coupling.

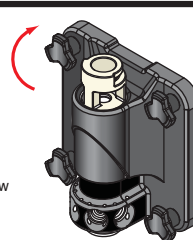


16

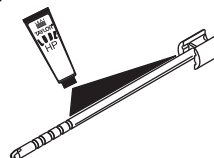


Lubricate the Shaft Spinner Blade up to the groove.

17

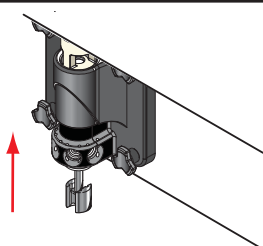


Insert the Spinner Blade into the centre of the Driven Spinner and through the Draw Valve, until it appears at the top of the Draw Valve. The spinner blade must be aligned and engaged to the Driven Spinner at the bottom of the Draw Valve

18

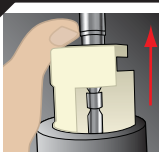


Engage the Spinner Shaft into the Spinner Coupling by raising the locking collar of the spinner coupling until the locking collar can drop into the locked position.

19

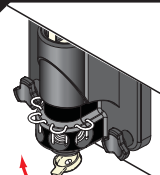

Snap the Restrictor Cap over the end of the Door Spout and install the Retainer Pins.


20

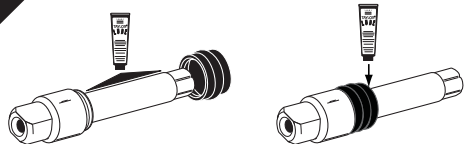

Soft Serve Side: Lubricate the groove on the beater drive shaft. Slide the beater shaft seal over the small end of the drive shaft and engage into the groove on the shaft. Pack the inside of the drive shaft seal with lube to form an air tight seal.


NB Do not lubricate the hex end.

21

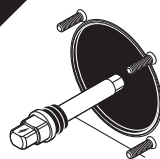


Install the Drive Shaft through the Shell Bearing in the freezing cylinder and engage the hex end firmly into the Drive Shaft Coupling.

22

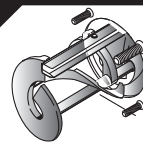


Place the rear scraper blade over the holding pin on the Beater Assembly. Holding the rear blade, slide it into the freezing cylinder halfway. Install the front scraper blade over the front holding pin.

23

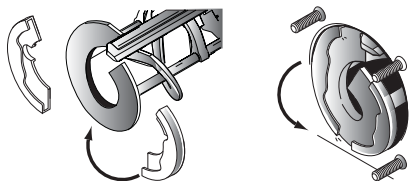


Install the Beater Shoes. Slide the Beater Assembly the rest of the way into the freezing cylinder. Engage the shaft end firmly into the Drive Shaft Socket. When positioned, the Beater Assembly will not protrude beyond the front of the freezing cylinder.

24

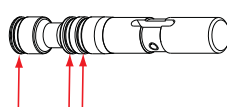


Slide the 3 O-rings into the grooves on the Draw Valve and lubricate.

25

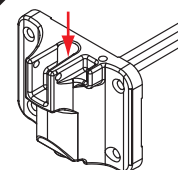


Lightly lubricate the inside of the top of the Freezer Door Valve.

26

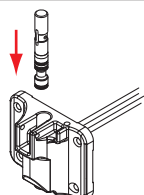


Insert the Draw Valve from the top, with the Draw Handle slot facing forward.

27

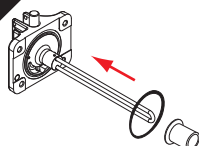


Place the Door Seal into the groove on the back of the Freezer Door. Slide the Front Bearing over the baffle rod so the flanged end is against the door. **NB Do not lubricate the Seal or Front Bearing.**

28

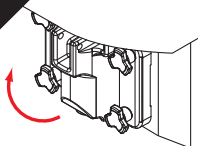

Insert the Baffle Rod through the middle of the Beater Assembly. Place the Freezer Door over the 4 studs and hand tighten the 4 handscrews equally in a criss-cross pattern.

29

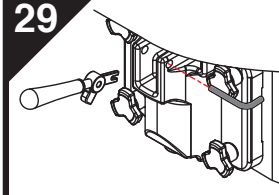


Slide the fork of the Drawer Handle in the slot of the Draw Valve and secure the Pivot Pin.

30




Slide the long Drip Pans into the front panel. Slide the two shorter Drip Pans into the rear panel. Slide the 2 notched Drip Pans into the left and right side panels.

31

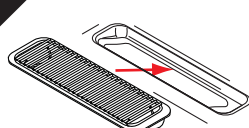


Install the front Drip Tray and splash shield under the Draw Spouts.

32

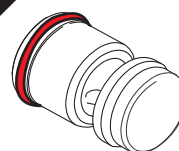


Shake Side: Slide the red O-ring into the groove on the piston. **NB** Do not Lubricate.

33

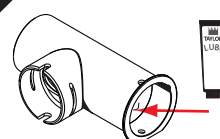

Apply a thin layer of lubricant to the inside of the Pump Cylinder at the Retaining Pin hole end.

34

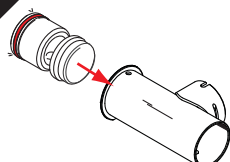


Insert the Piston into retaining pin hole end of the Pump Cylinder.

35




Slide the red O-ring into the groove of the valve cap. **NB** Do not Lubricate.

36

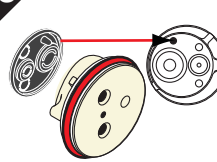


Slide the Pump Value Gasket into the holes on the cap. **NB** Do not lubricate.

37

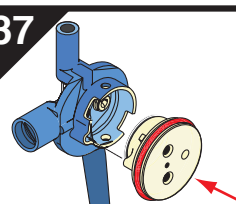


Insert the Valve Cap into the hole in the Mix Inlet Adapter.

38

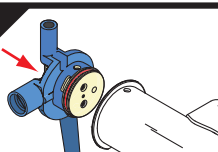


Insert the Mix Inlet Assembly into the Pump Assembly. **NB** The adapter must be positioned into the notch located at the end of the pump.

39

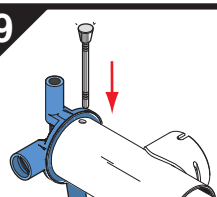


Secure the pump parts by sliding the Retaining Pin through the pin holes.

40

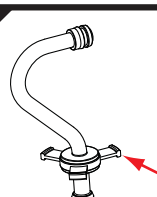


Slide the Check Ring into the groove of the mix feed tube.

41

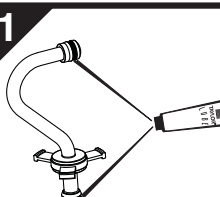


Install one O-ring on each end of the Mix Feed Tube and lubricate.

42

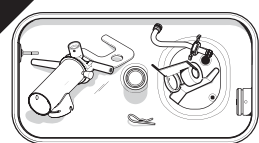


Lay the Pump Assembly, Pump Clip Cotter Pin and Agitator in the bottom of the Mix Hopper for sanitising.

43

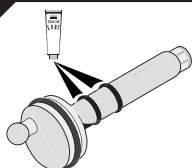

Slide the large black O-ring and 2 smaller O-rings into the grooves on the drive shaft. **NB** Do not lubricate the hex end of the drive shaft or larger O-ring.

44

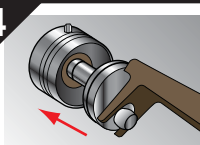


Install the Drive Shaft into the Drive Hub at the rear of the Mix Hopper using the Drive Shaft Tool. **NB** For ease installation position the knob at the 3 o'clock position.

45



Soft Serve side: Repeat steps 32-44. **NB:** Soft Serve side mix inlet adaptor is red.

46

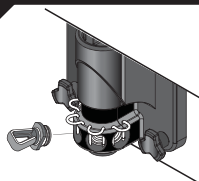

Insert the syrup hole plugs in the syrup ports. Lower the retainer clips to secure the hole plugs in the shake door.

47




Wearing clear gloves, prepare 9.5 litres of lukewarm water mixed with 1 packet of McD Sanitiser solution.

48




Shake Side: Pour the solution over the parts in the bottom of the Mix Hopper allowing the solution to flow into the freezing cylinder.

49

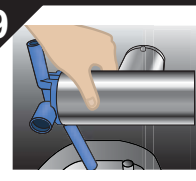


Install the Air Mix Assembly onto the Drive Hub by aligning the Drive Slot in the piston with the knob of the Drive Shaft.

50

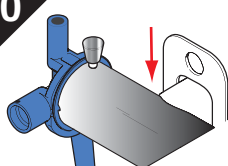

Insert the Pump Clip over the Collar of the Pump Assembly, ensuring the Clip fits into the grooves of the Collar.

51

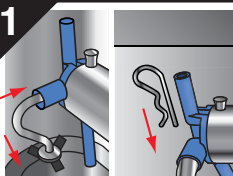


Install the Mix Feed Tube, the bottom end into the Mix Inlet Adaptor and the top end into the Pump Assembly and secure with the Cotter Pin.

52




Wearing clear gloves and using 2 shake mix buckets. Prepare 15.2 litres of McD Sanitiser solution. (One packet per 9.5 litres). Pour the solution into the mix hopper. **NB** The solution should be approx 2.5cm of the top of the Hopper.

53

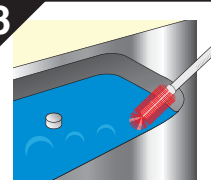

Using the Shake Brush, scrub the exposed sides of the Hopper and parts.

54

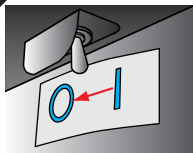

Place the power switch in the ON position.

55



Place a Shake bucket under the Draw Spout. Press the WASH symbol. Allow the sanitizer solution to come in contact with all areas of the freezing cylinder.

56



Press a FLAVOUR symbol 6 times to open and close the Draw Valve.

57



Press the PUMP Symbol to sanitise the inside of the Air/Mix Pump and Mix Feed Tube.

58




Press a FLAVOUR symbol to open the Draw Valve and drain the sanitiser solution.

59




Once the Sanitiser Solution stops flowing press the WASH and PUMP symbols to close the draw value.

60

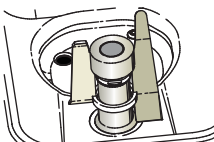


Place the Agitator on the Agitator Drive Housing.

61

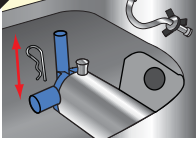


Remove the Cotter Pin to release the Mix Feed Tube and place it on a sanitised surface, next to the Hopper and replace the Cotter Pin.

62

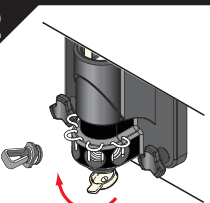

Remove the Restrictor Cap, Retainer Pins and Syrup Hole Plugs.


63

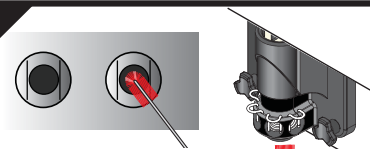


Prepare a small amount of Sanitizer Solution and brush clean the Syrup Ports, bottom of Door Spout/Driven Spinner and Syrup Line Fittings.

64

Place a Shake Bucket under the Draw Spout. Fill the squeeze bottle with sanitiser solution and insert the tube end into one Syrup Port at a time, inject the solution into the Syrup Port. Do the same for each Syrup Port. **NB** This procedure should be performed for a minimum of 10sec per syrup port.

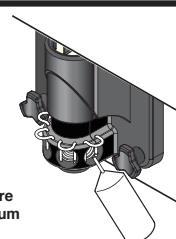


65

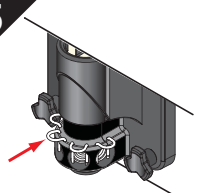


Reinstall the Retainer Pins into their positions on the Freezer Door.

66

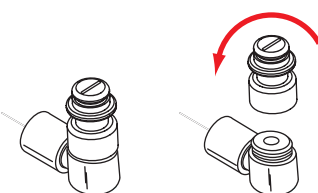


Before reinstalling the Syrup Line Connectors, remove the Syrup Nose Fittings by turning them anti-clockwise.

67

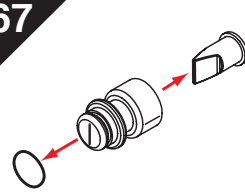

Remove the Duck Bill Valve and O-ring from the Syrup Nose Fittings.

68

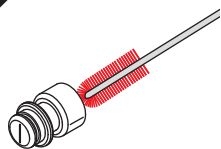

Using a Shake Brush, scrub the inside of the Syrup Nose Fitting.

69




Using a sanitised Red Border Cloth, wipe away any syrup from the Duck Bill Valves and O-rings.

70


Place the Syrup Nose Fittings and Duck Bill Valves in sanitiser for 1-2 minutes.

71

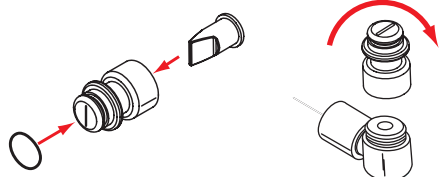


Wearing clear gloves, reinstall the O-rings and Duck Bill Valves into the Syrup Nose Fitting and place back onto the Syrup line fitting by turning it clockwise and hand tighten.

72

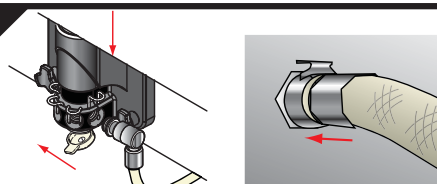


Reconnect the syrup lines into the Quick disconnect fittings on the front panel. Then to syrup port holes on the freezer door and secure with the retainer pins. Refit the restrictor cap.

73

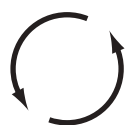


Soft Serve side: Repeat Steps 47-61.
NB Use only 9.5 litres of sanitiser solution for step 52.

74

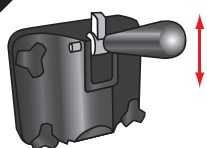


NB The Soft serve dispensing handle will need to be pulled up/down to open and close the Draw Valve.

75

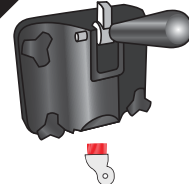

Using the Sanitiser Solution, brush clean the bottom of the Draw Spout.

76

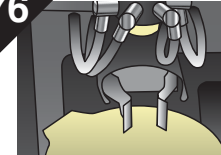


Shake Side Priming: Place a Shake mix bucket underneath the Draw Spout. Press any FLAVOUR symbol to open the draw valve.

77




Wearing clear gloves, pour 9.5 liters of shake mix into the front of the Mix Hopper allow it to flow into the freezing cylinder. **NB** This will force out any remaining Sanitiser solution.

78

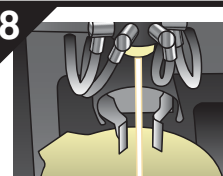

When full strength mix is flowing out from the draw spout. Press any FLAVOUR symbol to close the draw spout.

79

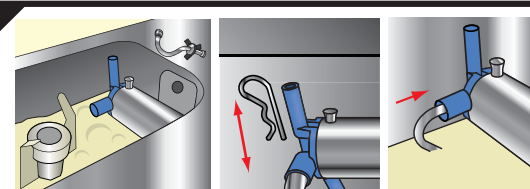

Once the mix stops bubbling, remove the Cotter Pin from the Outlet Fitting of the mix pump. Insert the Mix Feed Tube into the Mix Inlet Hole. Place the other end into the Mix Inlet adapter. Secure the Cotter Pin.

80




Select the AUTO Symbol. Fill the hopper with shake mix and place the hopper cover back into position.

81



Soft Serve Side: Repeat steps 76-80.
NB Pull the Draw Handle down to dispense the mix.

82

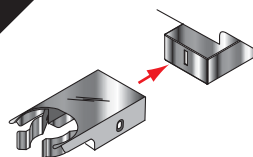

Install the shake cup holder.