



**SUPPLIES:**



KAY® Heat-Activated Equipment Cleaner



KAY® Grill Cleaning Pad & Pad Holder



ECOLAB® Hi-Temp Handle, Hi-Temp Multi Use Tool Pad, Hi-Temp Multi Use Tool, Hi-Temp Detail Brush

**Other supplies needed:**

- Visor
- Warm Water
- Grill Cloth
- GTW Bucket
- Plastic Scraper
- Squeegee
- Long Gauntlets
- Grill Scraper

|                            |                                                                                                                          |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Frequency                  | Changeover Cleaning - as needed, e.g. when changing from sausage to beef<br>Full daily cleaning – minimum every 24 hours |
| Models                     | All                                                                                                                      |
| Estimated Time to Complete | 30 minutes                                                                                                               |


Health & Safety Hazards

-  Slippery Floors
-  Chemicals
-  Hot Surfaces


Food Safety

-  Wash & dry hands after performing task
-  Ensure nuts, bolts & screws are tight
-  Inspect equipment - Do not use if damaged


AT CHANGEOVER

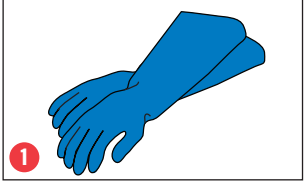


- Put on gauntlets.

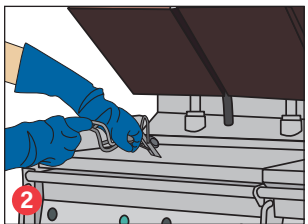


- Clean grill surfaces in the usual manner.

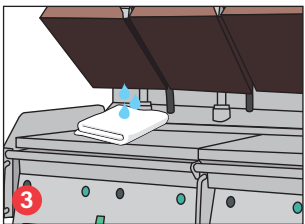


- Soak the folded, sanitised grill cloth with **warm** water and place in cold zone of grill.

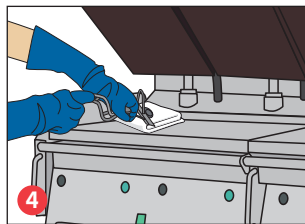


- With grill scraper holding cloth firmly, clean grill in a front to back motion, until all heavy carbon build up is removed.

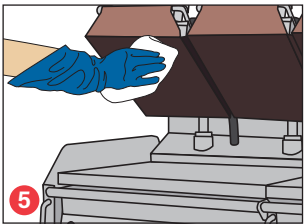


- Wipe down release sheets with a fresh damp sanitised grill cloth.

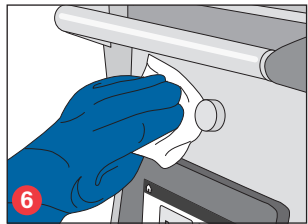

- Wipe down grill exterior, backsplash, bull nose, tray clips and belly bar.

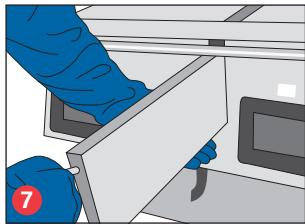


- Empty grease troughs into black GTW bucket and then into blue barrel (sausage grill) or directly into food waste bin (eggs grill).

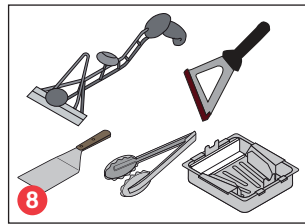


- Before using, all Grill Tools (grill scraper, squeegee, spatula, tongs, tool holder) must be cleaned using 4-Step Cleaning Method.

## QUICK GRILL CLEANING THROUGHOUT DAY

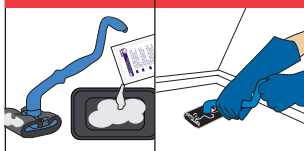


- Squeegee lower grill surface
  - Apply Equipment Cleaner onto Pad; apply to lower grill surface until completely covered.
  - Scrub grill with Grill Tool.
  - Rinse lower grill surface and upper release sheets with clean, sanitiser-soaked grill cloth.
- NOTE:** For quick grill cleaning you do not need to put grill into 'CLEAN' mode; clean at COOK temperature.


## FULL DAILY CLEAN

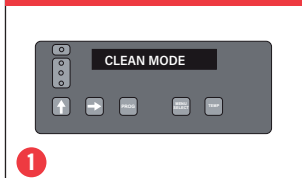


- 1. Immediately begin cleaning grill after selecting 'CLEAN MODE'.  
**NOTE:** Use 'CLEAN MODE' for end of day cleaning to prevent alerts and prevent upper platens from going into sleep mode during cleaning
- Leave filters in place; grill will be ready to clean.

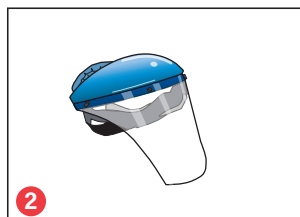


- 2. Put on visor.
- Open Equipment Cleaner packet.

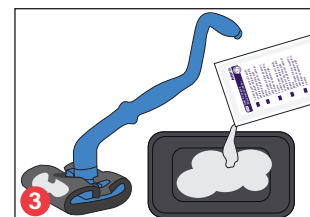


- 3. Pour a small amount of Equipment Cleaner onto Grill Cleaning Pad.
- Pour remaining Cleaner into hi-temp tray.

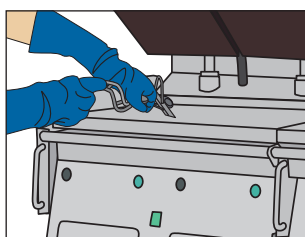


- Put on gauntlets.
- Clean grill surfaces in the usual manner.

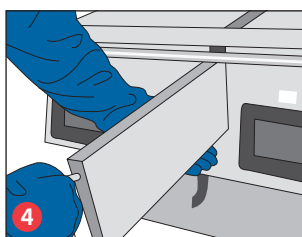


- 4. Empty grease troughs into black GTW bucket and then into blue barrel.
- Replace grease troughs.

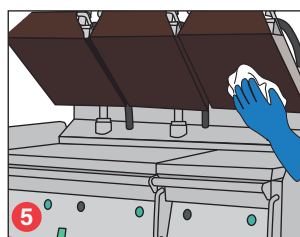


- 5. Use a clean grill cloth to wipe exposed surfaces of release sheets.
- Keep cloth for later.

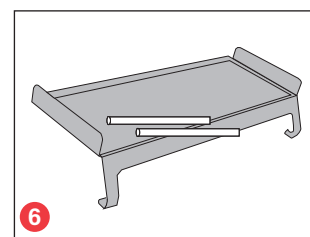


- 6. Remove release sheet clips, rods and splash shields, and take to back sink for 4-Step Cleaning.

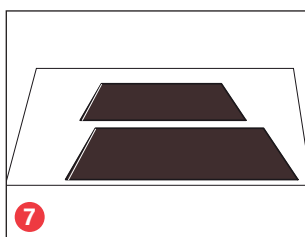

- 7. Remove upper release sheets and place on nearby flat surface while grill platen cleaning is completed.

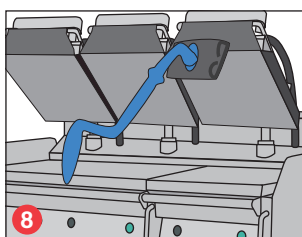


- 8. Dip Grill Cleaning Pad into Equipment Cleaner.
- Spread Cleaner on upper platen including edges; do not scrub yet.

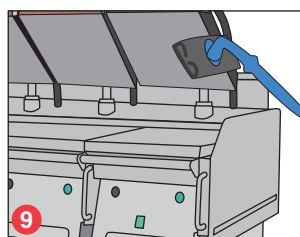


- 9. Re-dip Pad into Equipment Cleaner.
- Spread Cleaner on edges of platen; do not scrub yet
- Lower platens as needed for better access.




- 10. Use a Grill Cloth dipped in Equipment Cleaner to clean around top of platens, back of grill and platen arms. To remove carbon build-up, use Grill Cleaning Pad, Hi-Temp Multi Use Tool Pad or Double-Sided Brush dipped in Equipment Cleaner to detail clean where necessary.

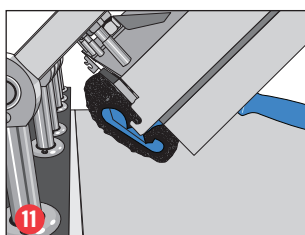


- 11. Apply Equipment Cleaner onto back edge of upper plate; do not scrub yet.

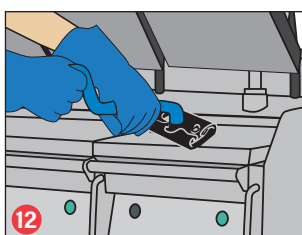


- 12. Repeat on lower platen; do not scrub.

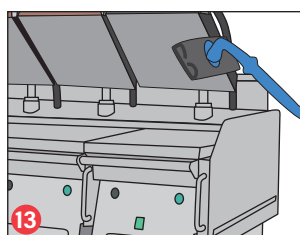

- 13. Scrub upper platen including edges until carbon liquefies; lower platens as needed.

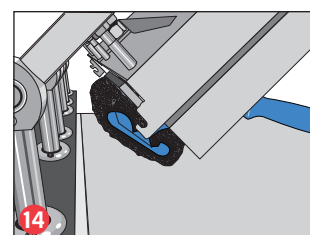


- 14. Repeat scrubbing on back edge until carbon liquefies.

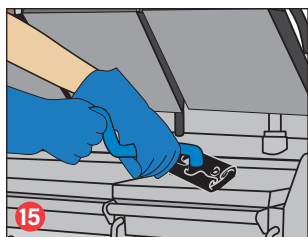

- Scrub lower grill surface.




- Using a damp cloth taken from clean cloth bucket, rinse upper platens and lower platens including edges.

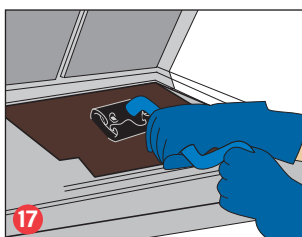

- One at a time, place release sheets on clean lower grill surface.
- Scrub both sides of each sheet with Equipment Cleaner using the Cleaning Tool and Pad.




- Wipe both sides of each release sheet with a clean, sanitised grill cloth.

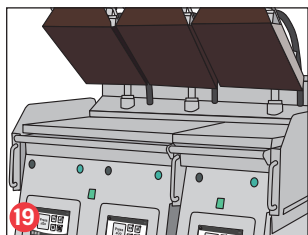


- Reinstall release sheets and clips.




- Wipe all surfaces with a clean, sanitised grill cloth.
- Discard cloth in dirty cloth bucket once completed.

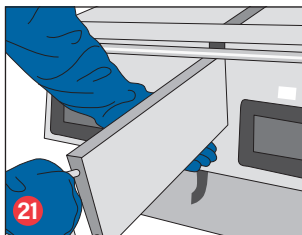


- Empty grease troughs into back room sink (NOT black bucket) and spray out.

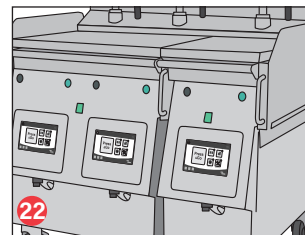

- Turn grill back to cooking mode.

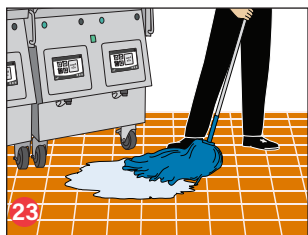

- Sweep and mop area, including under grill.

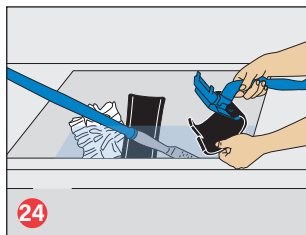

- Bring cleaning tools to back sink to wash, rinse and sanitise.