



COFFEE WORKS

DATA-DRIVEN COFFEE EXCELLENCE



BW4 RL



BW4 TWIN



**BW4
+ FOSTERS FRIDGE**

BLACK&WHITE 4

CLEANING & TROUBLESHOOTING GUIDE

UCC
COFFEE

1

DAILY CLEANING

BW4 RL/TWIN/UT

BW4 VARIATIONS



BW4 RL



BW4 TWIN



BW4 + FOSTERS FRIDGE

CLEAN ONE MACHINE AT A TIME ONLY **ONCE EVERY 24 HOURS**



– Use **ONE** coffee cleaning tablet (RED cleaning key)




– Use **TWO** milk cleaning tablets (BLUE cleaning key)

STEP 1



– Access the user menu by pressing the service icon (as shown).

STEP 2

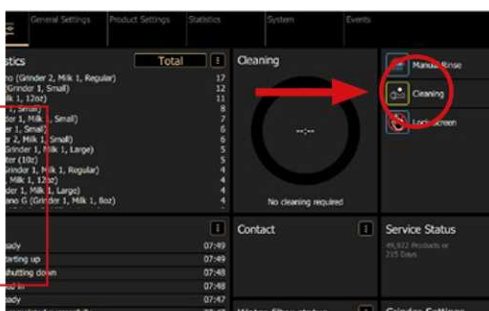

– Select the Cleaning button to start the automatic cleaning cycle
– Follow the on screen prompts



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING CYCLE

BW4 RL/TWIN/UT

STEP 3



BW4 RL

- To clean your **BW4 RL** coffee machine, empty, clean, sanitise, and air dry milk container from the side fridge
- Clean milk suction tubes with a damp cloth
- Re-insert empty milk container with tubes inside

Please ensure the fridge is turned off by removing the drip tray underneath as stated in the automatic cleaning cycle



BW4 TWIN

- To clean your **BW4 Twin** coffee machines independently, empty, clean, sanitise, and air dry milk container from the twin fridge and rinse thoroughly



BW4 TWIN

- Transfer milk into spare clean and dry container (supplied) or use from a fresh bottle of milk
- Re-insert milk tubes from the coffee machine that will remain in service into the container or fresh milk bottle
- Clean milk suction tubes with a damp cloth, insert tubes from coffee machine that is to be cleaned into the empty cleaning container



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING CYCLE

BW4 RL/TWIN/UT

TO CLEAN YOUR BW4 + FOSTER FRIDGE, ENSURE:

- ALL THREE PIPES FROM EACH MACHINE SHOULD REMAIN ATTACHED BY THEIR SPECIFICALLY LABELLED CABLE TIES
- ALL THREE PIPES SHOULD BE THE SAME LENGTH AS EACH OTHER
- WHEN MACHINES ARE IN USE OR BEING CLEANED, PIPES SHOULD ALL BE POSITIONED AS PER THE BELOW IMAGES ENSURING THEY EXTEND TO THE BOTTOM OF THE MILK OR CLEANING CONTAINER



To clean your **BW4 + FOSTER FRIDGE** coffee machines' independently:

- Clean machines one at a time
- Take the milk container (being used for the machines to be cleaned) out of the fridge
- Empty, clean, sanitise, and air dry milk container. Store safely whilst machines are cleaned
- Position the cleaning container directly under and in line with the pipes from the machine to be cleaned
- Clean pipes thoroughly with a damp sanitised cloth and place into the cleaning container ensuring they extend to the bottom of the container
- Continue to follow on screen prompts

Fridge must remain switched on with the closed for the duration of the automatic cleaning cycle



✓ CORRECT



✗ INCORRECT



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING

STEP 4



Your machine may now ask you to clean the bean hoppers as part of the cleaning cycle

- Remove any remaining coffee beans and store them in an airtight container in a cool dark place - **Coffee beans stay fresh for up to 12 hours after opening**
- To do this, remove the bean hopper lid
- Turn the lever in the hopper, this will loosen and release it

STEP 5



- Use both hands to lift out of the machine (as shown)
- Wipe hopper clean with an absorbent cloth and ensure the hopper is dry before reinserting

STEP 6



- Press the retaining clips to loosen the coffee outlet
- Pull the coffee outlet from the dispense head (as shown)



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING

STEP 7



- Clean thoroughly with warm water and rinse
- Use your designated brush to remove any milk and coffee residue
- Dry thoroughly and re-insert into the machine


STEP 8



- Remove blue coffee cleaning key by rotating 90° anti-clockwise
- Place **two** milk cleaning tablets inside cleaning key, re-insert and lock into place by rotating 90° clockwise



STEP 9

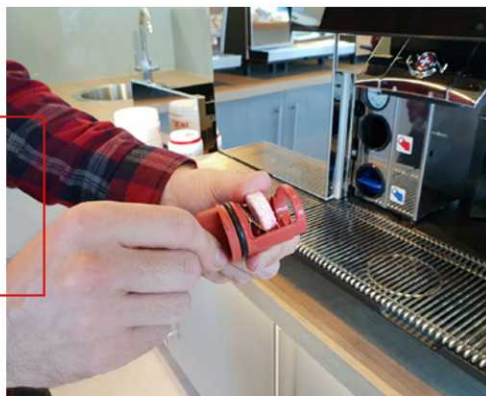

- Remove red coffee cleaning key by rotating 90° anti-clockwise
- Place **one** coffee cleaning tablet inside cleaning key, re-insert and lock into place by rotating 90° clockwise



The automatic cleaning cycle will now begin




Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING

STEP 10

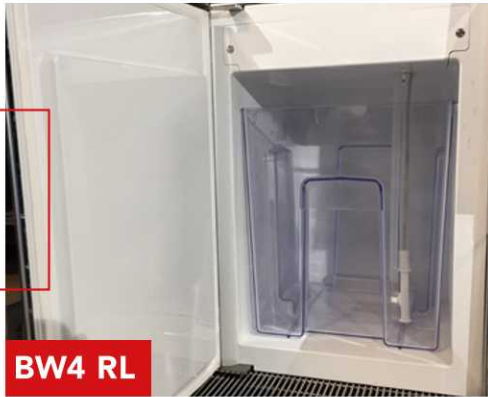

BW4 RL

- After the cleaning cycle is complete, remove the milk container from refrigerator, rinse with warm soapy water, and dry thoroughly
- Clean the milk tubes with warm water and dry thoroughly
- Wipe clean the inside of the refrigerator with a damp cloth and dry thoroughly



BW4 TWIN

- After the cleaning cycle is complete, remove the cleaning container from refrigerator, rinse with warm soapy water, and dry thoroughly
- Clean the milk tubes with warm water and dry thoroughly
- Wipe clean the empty side of the refrigerator with a damp cloth and dry thoroughly



BW4 + FOSTERS FRIDGE

- After the cleaning cycle is complete, remove the cleaning container from refrigerator, rinse with warm soapy water, and dry thoroughly
- Clean the milk tubes with warm water and dry thoroughly and proceed to next machine
- Wipe clean the empty side of the refrigerator with a damp cloth and dry thoroughly




Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING

STEP 10

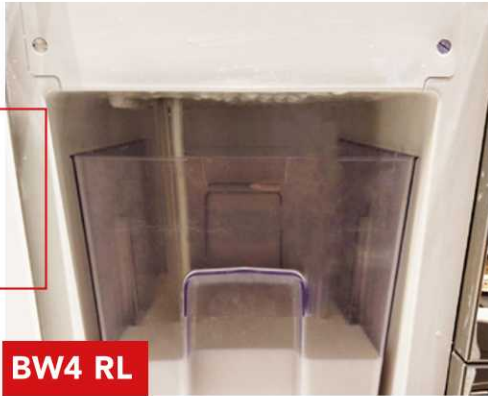

BW4 RL

- Put the milk container back in to the fridge, place the milk tubes in the container and close the refrigerator door
- Switch the fridge back on only if resuming service



BW4 TWIN

- If the cleaned machines are resuming service fill the main milk container with sufficient fresh milk
- Put the milk container back in to the fridge, place the milk tubes in the container and close the refrigerator door



BW4 + FOSTERS FRIDGE

- If the cleaned machines are resuming service fill the main milk container with sufficient fresh milk
- Put the milk container back in to the fridge, place the milk tubes in the container and close the refrigerator door



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.

1 CONT.

DAILY CLEANING

STEP 11



- Empty the grounds drawer, rinse with warm soapy water and dry thoroughly

STEP 12



- Remove the drip tray and clean with warm soapy water and dry thoroughly

STEP 13



- Clean the outside of the coffee machine and fridge with a damp soapy cloth and dry thoroughly with a clean, dry cloth ensuring no water marks are visible

**CLEANING COMPLETED -
YOUR MACHINE IS NOW READY FOR SERVICE OR CLOSE DOWN**



Warning: Only use correct cleaning products for this machine. Do not leave cleaning products out when not in use. Cleaning products should be stored out of sight and away from direct sunlight and customers.



COFFEE WORKS

DATA-DRIVEN COFFEE EXCELLENCE



BW4 RL



BW4 TWIN



**BW4
+ FOSTERS FRIDGE**

BLACK&WHITE 4

TROUBLESHOOTING GUIDE

UCC
COFFEE



THE COFFEWORKS 3 GOLDEN RULES

Problems with coffee machines, quality issues and inconsistencies are almost always linked to one of the following 3 golden rules. These must be followed to keep your machine running and serving great quality coffee.

BENEFITS

- Ownership of the fundamentals for a successful coffee service
- Consistently great coffee and improved sales
- Increased lifespan of your equipment
- An improved customer experience

#1

ONLY USE FRESH COFFEE

Do you have too much coffee in the hopper? Do you leave coffee in the hopper overnight? Coffee beans stay fresh for up to 12 hours after opening after this they can become stale and have a bad taste. The hardened coffee beans can cause the following issues:

- Grinder teeth can block
- Extraction time will speed up
- The machine internally can block up

#1 TOP TIPS

- Clean the hopper(s)
- Put the machine on a clean cycle
- Top up your hopper(s) with fresh coffee regularly/daily
- Store open coffee bags in an airtight container in a cool dark place

#2

ONLY USE FRESH, COLD MILK

Is your milk being kept out on the counter top? If so, the temperature is rising. This will affect the texture and quality of your lattes, cappuccinos and flat whites, causing the following issues:

- Drinks will begin to under-fill
- Milk becomes bubbly and tasteless
- Your milk pipes/ steam arm(s) will block up

#2 TOP TIPS

- Put the machine on a clean cycle
- Use milk straight from the fridge (ideally 4 degrees celsius)

#3

CLEAN AND MAINTAIN YOUR MACHINE

Do you clean your machine daily? This is certainly affecting the performance of your machine, the quality of your drinks and the perception of your business to customers. It can also cause the following issues:

- Poor quality drinks
- Drinks that pour inconsistently e.g. only one spout dispensing, too fast, too slow
- Build-up of scale, leading to a machine that runs inefficiently

#3 TOP TIPS

- Put the machine on a clean cycle
- Clean the hopper(s)
- Clean machine parts thoroughly
- Clean everything in your baristas work space, and everything the customer can see
- Check your water filter is effective and replace as required

FOLLOWING THESE RULES WILL PREVENT FUTURE ISSUES AS WELL AS HELP YOU TO GET YOUR MACHINE UP AND RUNNING FASTER.

1

MACHINE HAS A LEAK

DO YOU HAVE WATER BELOW THE MACHINE?

STEP 1



Firstly, pour some cold water slowly in to the drip tray to identify where the leak is coming from... can you see the leak?


STEP 2



If the cold water leaks straight from the machine, lift drip tray from silver base and re-fit, ensure the drip tray is fitted snug to the machine, then repeat step 1 to see if leak still persists.

IF LEAK STILL PERSISTS

STEP 3

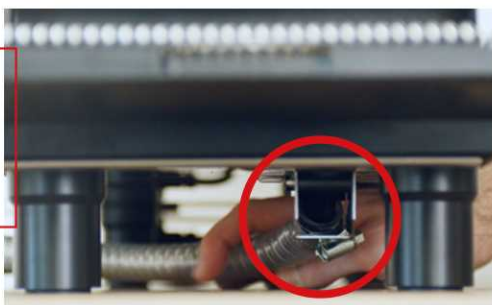

Ensure waste pipe is fitted correctly underneath drip tray? Secure tightly, then repeat step 1 to see if leak still persists.

IF LEAK STILL PERSISTS – SEE NEXT PAGE

1 CONT.

MACHINE HAS A LEAK

STEP 4



If the water is backing up in to the drip tray, or still pools under the machine, ensure the drain tube is not kinked or elevated, preventing a downward flow. Repeat step 1 to see if leak still persists.

If your drain tube is connected directly to a down pipe, ensure it is correctly fitted (as shown).

IF PROBLEM STILL PERSISTS

RAISE A SERVICE CALL VIA E-TECH

2

NO WATER

NO WATER OR COFFEE COMING OUT OF THE MACHINE?

STEP 1



Check to see if there is water coming in to the machine by pressing the rinse button. If no water comes out, check that the supply taps have not been accidentally closed. If water is coming out, go straight to step 3.

CHECK FILTER TAP

STEP 2



This can usually be found underneath the machine near your water filter (the water filter may be located next to the Multiplex). The tap should be in line with the pipe (as shown).

STEP 3

NOW TEST AN ESPRESSO TO SEE IF THIS HAS CLEARED THE BLOCKAGE.

Pour an espresso which now should pour smoothly and evenly into the cup.

IF PROBLEM STILL PERSISTS

RAISE A SERVICE CALL VIA E-TECH

3

NO POWER

SCREEN IS BLANK - DOES NOT SWITCH ON

IS THERE POWER IN TO YOUR MACHINE?

This could be as simple as flicking a switch!

STEP 1



To locate the on/off switch please remove the grounds drawer, the switch is then located on the right hand side. Check if the on/off switch is illuminated and in the on position (I), if switch is in off position (O) turn switch to the on position.

IF PROBLEM PERSISTS

STEP 2



Ensure the mains socket is switched on, visually check wall socket and also the lead connecting to the machine, DO NOT MOVE MACHINE DURING THIS PROCESS. If the problem persists contact your maintenance team to address the issue with your power supply.

IF PROBLEM STILL PERSISTS

RAISE A SERVICE CALL VIA E-TECH

4

QUALITY ISSUES

QUALITY ISSUES WITH COFFEE

- Is your coffee fresh? Coffee beans stay fresh for up to 12 hours after opening, after this they can become stale and have a bad taste.
Try a fresh bag, stale coffee is bitter.

QUALITY ISSUES WITH MILK/MILK DRINKS UNDERFILLING

- Is your milk cold and fresh?
Try adding fresh cold milk.

IF PROBLEM STILL PERSISTS

RAISE A SERVICE CALL VIA E-TECH

4 CONT.

QUALITY ISSUES

STEP 1



You will find the coffee outlet underneath the machine spout. These often get dirty if not cleaned.

STEP 2



Clean the coffee outlet with hot water and your designated cleaning brush.

IF PROBLEM STILL PERSISTS


RAISE A SERVICE CALL VIA E-TECH

5

BEAN HOPPER ISSUES

Bean hopper missing/empty. These errors are almost always caused after you've cleaned your machine, if the machine is not put back together correctly it will not function.

STEP 1

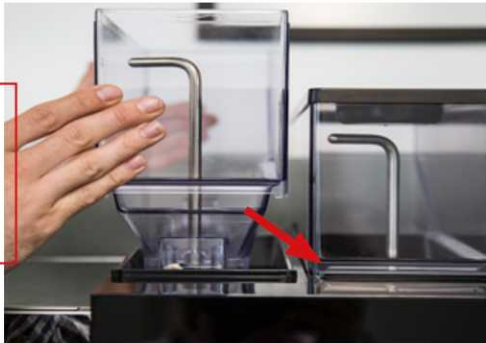

Has the hopper been fitted correctly? Remove the bean hopper lid, turn the lever in the hopper, this will loosen and release it. Use both hands to lift out of the machine then re-insert. Make sure the base of the hopper is sitting flush against the coffee machine hood (as shown).

STEP 2



Make sure the base of the hopper is sitting flush against grinder module. If not there may be coffee beans blocking the hopper from sitting correctly. Switch off machine, remove blockage. Replace bean hopper and test again.

IF PROBLEM STILL PERSISTS

RAISE A SERVICE CALL VIA E-TECH