

DCFT Daily Cleaning Process

Daily cleaning of the DCFT vertical toaster

Frequency

Daily

Models

Prince Castle DCFT

Estimated Time to Complete

20 minutes

Health and Safety Hazards



Chemicals



Hot Surface

Food Safety



Wash and dry hands **before and after** performing this task




Ensure nuts, bolts & screws are tight



Inspect equipment. Do not use if damaged

Equipment




Red
border
cloth



Grill
cloth



Long
Gauntlets

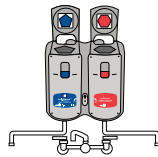

KAY® SolidSense™
All Purpose Super
Concentrate (APSC)



SolidSense
Sanitizer spray

Procedure

1

Turn off toaster and allow to cool for 15 Minutes. Switch is located at the rear right corner.


For safety put on blue gauntlets as toaster will still be hot.



2

Remove the release sheet and clean using a clean red border cloth and sanitiser.

Inspect release sheet for wear and tear replace when necessary.

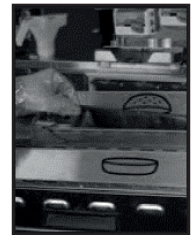

3

Open the toaster to clean the belts inside.

Using a red border cloth and APSC, wipe over the metal conveyor belt.



4

Using red border cloth and sanitiser, clean club belt.


Close the door and turn on the toaster, count to 13 and turn the toaster off now repeat steps 4 and 5.



5

Using red border cloth and APSC, wash inner door. Ensuring whole area is now clean.

Now repeat steps 4,5 and 6 for second side of the toaster.

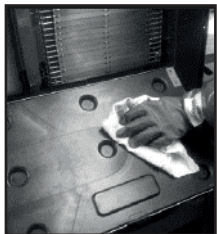**6**

Close the conveyor access door and secure bun guide and tighten up cover screws.

Using APSC and red border cloth, clean the outside of the toaster.

**7**


Turn toaster around and repeat steps 3-6 for the rear toaster belts.

**8**

Lift and remove the bun chute and clean using the 4-step cleaning method.

**9**

Clean the bun landing zone using a clean red border cloth and sanitiser and allow to air dry.

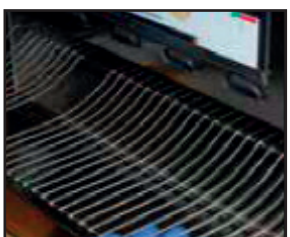**10**

Install the wire chute ensuring it is the correct way up and secure into position using the two posts at the rear of the toaster.

**11**

Check the condition of the release sheet and re-install.

The release sheet should extend 1/2 inch below the centre platen.

**12**

Turn the toaster on and allow warm up ready for use.

**13**

Wait until toaster reads "ready" the toaster is now ready for operation.

