

Grill Recovery Cleaning



SUPPLIES:



KAY® QSR Heat Activated Equipment Cleaner



KAY® Grill Cleaning Pad & Pad Holder



Ecolab® Hi-Temp Handle, Hi-Temp Multi Use Tool, Hi-Temp Multi Use Tool Pad, Hi-Temp Universal Pad (Mop Sock), Hi-Temp Double-Sided Brush

Other supplies needed:
Visor
Warm Water
Grill Cloth
GTW Bucket
Plastic Scraper
Squeegee
Long Gauntlets
Grill Scraper


Frequency	Quarterly or Monthly if Required
Models	All

Health & Safety Hazards


-  Slippery Floors
-  Chemicals
-  Hot Surfaces

Food Safety


-  Wash and Dry Hands After Performing Task
-  Ensure Nuts, Bolts and Screws are Tight
-  Inspect Equipment - DO NOT USE IF DAMAGED

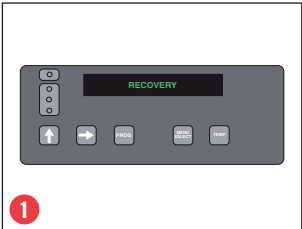


- Turn grill to 'RECOVERY' (141 °C).
- Leave filters in place.
- Grill will take approximately 15 minutes to cool.

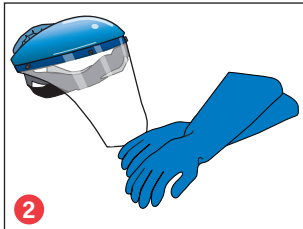


- Put on visor and gauntlets.

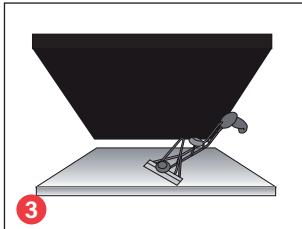


- Clean grill surfaces in the usual manner.

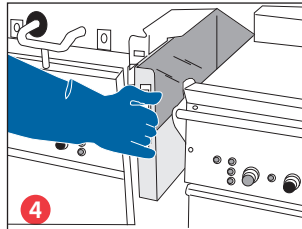


- Empty grease troughs into black GTW bucket and then into blue barrel.
- Replace grease troughs.

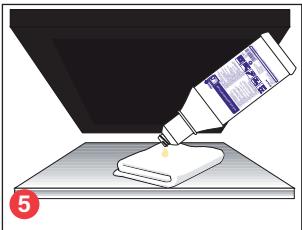


- Pour a small amount of Equipment Cleaner onto a grill cloth; clean exposed surfaces of release sheets.

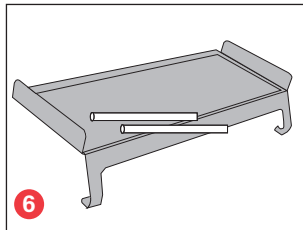


- Remove release sheet clips, rods and splash shields; take to back sink for 4-Step Cleaning.

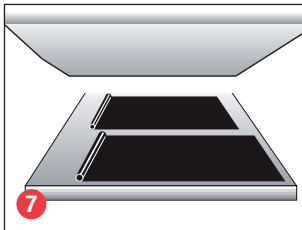


- Remove upper release sheets.
- Wipe clean; place release sheets flat on a clean surface while grill is in 'RECOVERY'.

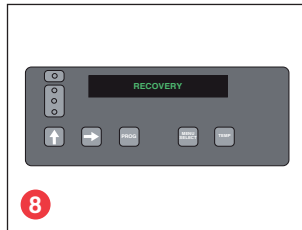

- When at correct temperature, display will state 'RECOVERY'.

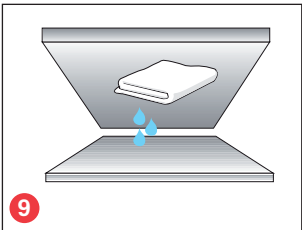


- Using a damp cloth and container of warm water, wipe upper platen including edges.

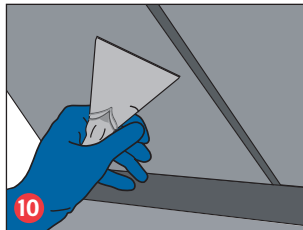


- Use plastic scraper to remove as much loose carbon as possible from upper platens.




- Spray Equipment Cleaner on platen sides.

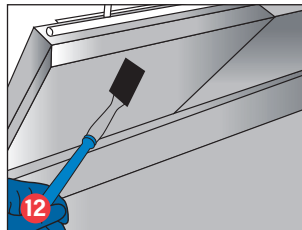


- After spraying upper platens, spread Cleaner around with Tool to distribute and ensure full coverage.

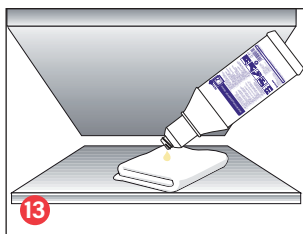


- For hard to reach areas apply Equipment Cleaner to a grill cloth and wipe area.

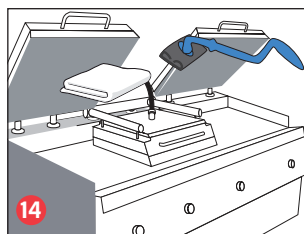


- Ensure Equipment Cleaner has been applied to all platen edges.

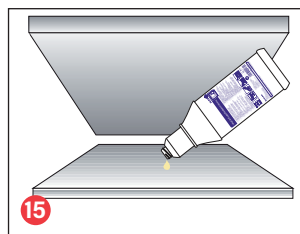


- Pour remaining Equipment Cleaner directly onto lower platen.

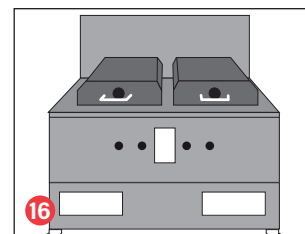


- Lower all platens.
- Allow cycle to complete; this will take 17 minutes.

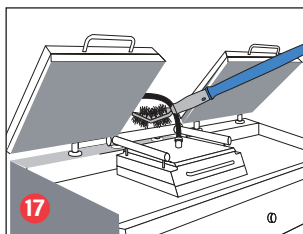


- When platens raise, use Double Sided Brush to scrub grill and upper platens including rear and edges, until carbon liquefies.
- Lower platens as needed to enable sides to be scrubbed.

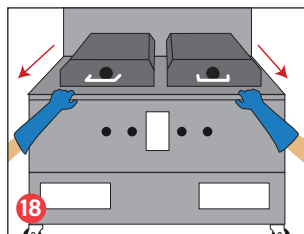


- Pull grill out for better access when cleaning rear of platens.

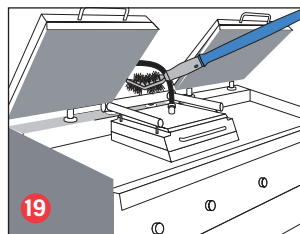


- Repeat for all platens.
- Reapply Equipment Cleaner from lower grill as needed throughout cleaning.

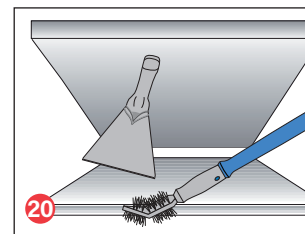


- Use scraper or Grill Tool where needed to remove remaining carbon.

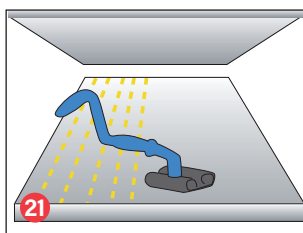


- Scrub lower grill surface using the Grill Tool.

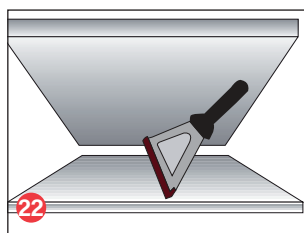


- Squeegee all Equipment Cleaner into grease trough.

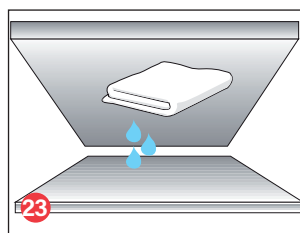


- Using a damp cloth and a container of **warm** water, rinse upper platen including edges.

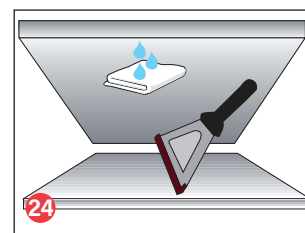


- Squeegee away any excess water and wipe platens with a damp grill cloth for a final time.

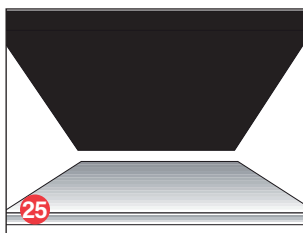


- Reinstall release sheets, clips and splash shields.

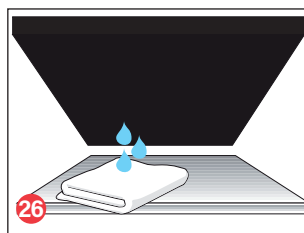


- Wipe all surfaces with a clean, sanitised grill cloth. Discard cloth in dirty cloth bucket once completed.

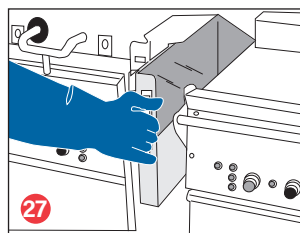

- Empty grease troughs into back room sink (NOT black bucket) and spray out.

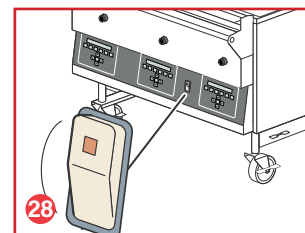

- Turn grill OFF at interlock/main power switch (24hrs—Leave for at least 10 seconds before turning back on).

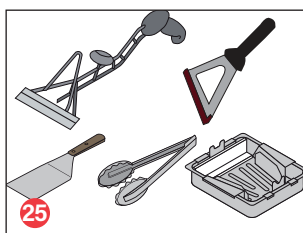

- All Grill Tools (grill scraper, squeegee, spatula, tongs, tool holder) must be cleaned using 4-Step Cleaning Method.



- Sweep and mop area, including under grill.
- NOTE:** Pull grill weekly. Refer to Pulling Grills card.