

Shake Machine: Carpigiani K3

Card No. SS141i

Re-assemble/Sanitise & Prime

Frequency

Weekly

Models

Carpigiani K3

Estimated Time to Complete

45 Minutes

Health & Safety Hazards



Chemicals



Slippery Floors / Tripping

Food Safety



Critical Control Point



Ensure nuts, bolts & screws are tight




Inspect equipment. Do not use if damaged



Wash & dry hands **before & after** performing task

Equipment

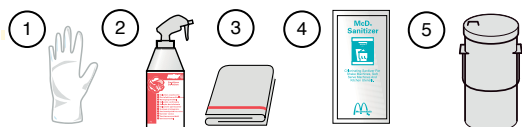

- 1 Clear Gloves
- 2 KAY Surface Sanitiser
- 3 Red border cloth
- 4 KAY 5 Sanitiser
- 5 Shake Churn
- 6 Shake Bucket
- 7 Shake Brush

NB

Prior to starting this procedure, the following must be worn: Hat, Hair Net and Clean Apron.



















Wash hands thoroughly up to elbows.

Check the condition of all O-rings/Check Bands and parts for wear and tear, nicks or damage and replace as needed.

Always handle shake machine parts over a surface and avoid dropping from a height.


Replace all O-rings/Check bands **quarterly**.



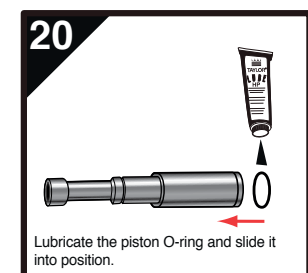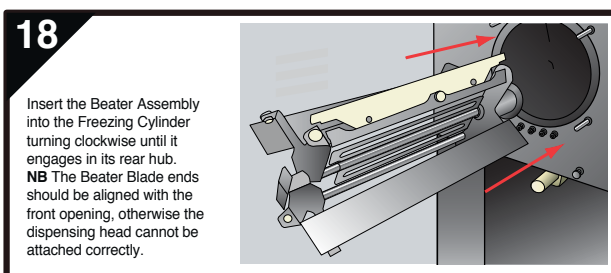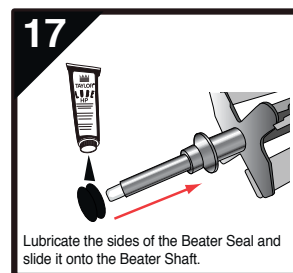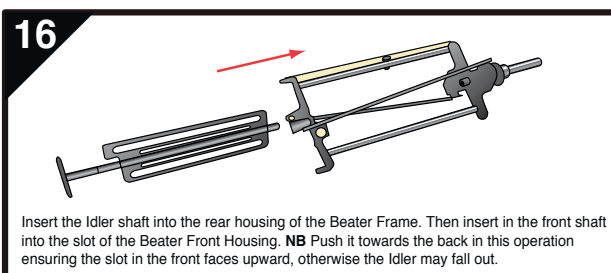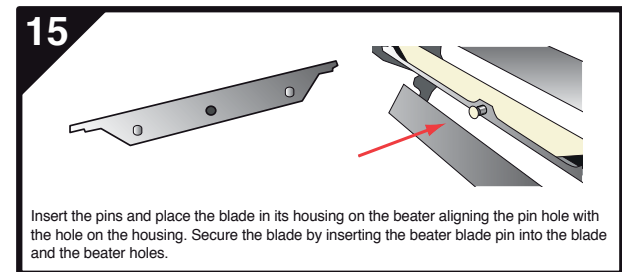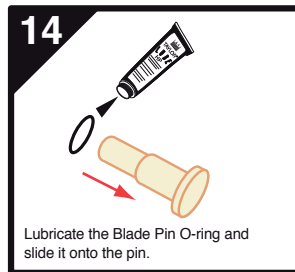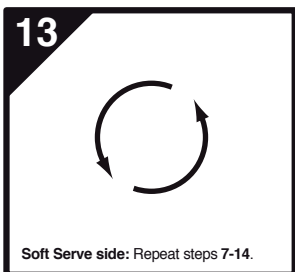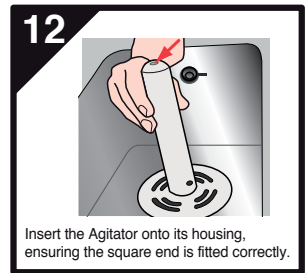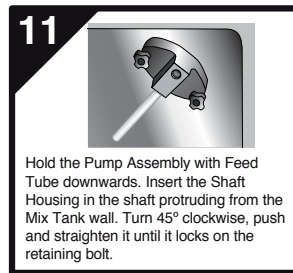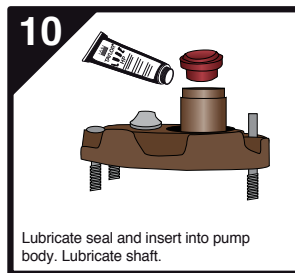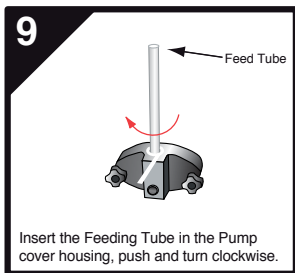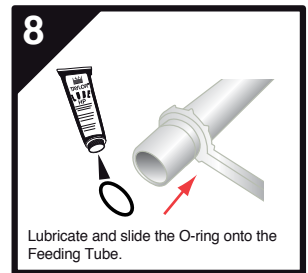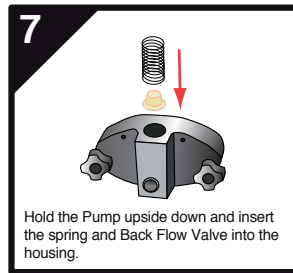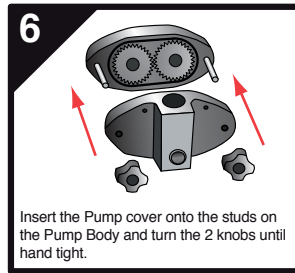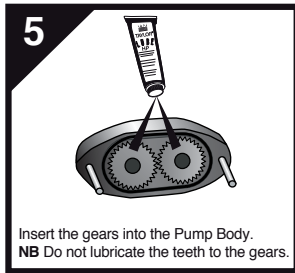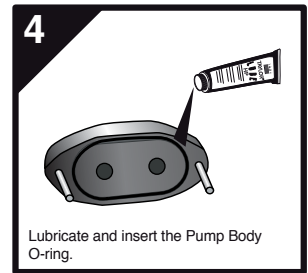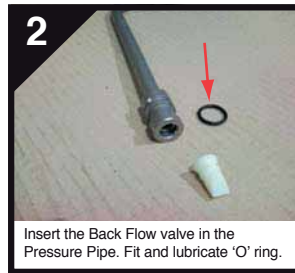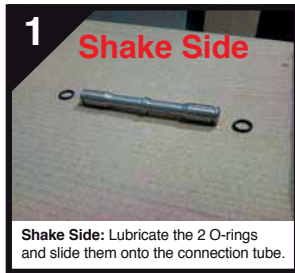


21

Lubricate and insert the 2 O-rings. Squeezing them between two fingers, insert them into the freezer door housing. Use the O-ring removal too to slide them into their seats.

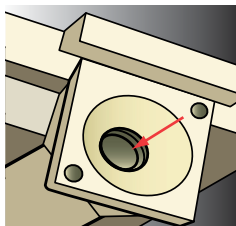


22

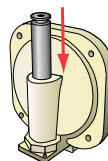

Holding the Dispensing Head vertical, slide the Piston into its housing.


23

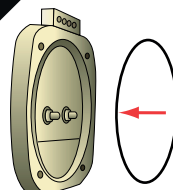


Lubricate the freezer door O-ring and slide it into position.

24

Fit the Dispensing Head in the 4 front panel studs and fasten with the 4 knobs, hand tightening in a criss-cross pattern.

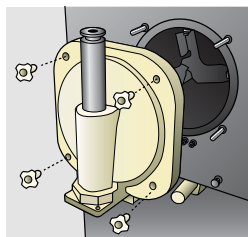

25

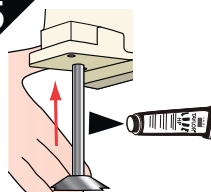

Lubricate the Spinner Shaft and insert it into its housing.

26



Lubricate and fit O-ring to Spout Cap.

27



Fit Spout Cap.

28



Close the protection cover


29

Soft Serve



Insert the end of the Idler Shaft in the rear housing and align the Idler Shaft Groove with the frame front slot. Push the Idler into position.


30

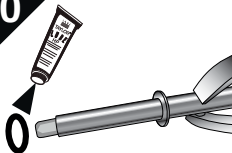

Lubricate the sides of the Beater Seal and slide it onto the Beater Shaft.

31

Insert the Beater Assembly into the Freezing Cylinder, turning clockwise until it engages in the rear hub.
NB The Beater Blade ends should be aligned with the front opening otherwise the dispensing head cannot be attached correctly

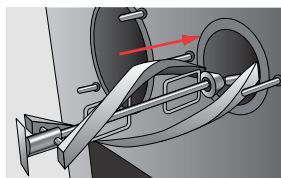


32




Lubricate the 2 Piston O-rings and slide them into position.

33

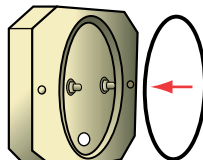

Lubricate the Dispensing Head O-ring and slide it into position.

34

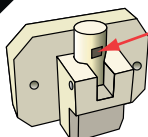


Insert the Piston with pointed end down into the housing in the Dispensing Head.
NB Ensure that the piston square lines up with the rectangular opening on the Spigot front.

35

Position the Dispensing Handle on the Spigot and insert the pivot pin through the handle lever hole. Fit O-ring in position shown.



36

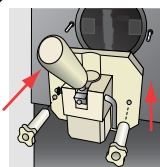

Place the Dispensing Head Assembly onto the 2 front panel studs and fasten with the 2 knobs hand tight.

37




Make up a solution of Mcd Sanitiser (One packet to 9.5litres lukewarm water per Hopper).

38



N.B: Ensure the pressure pipe is not mounted into position. Lay in bottom of hopper.

39

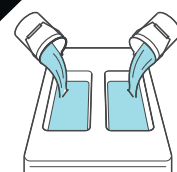

Pour the Mcd Sanitiser Solution into the Mix Hopper. **Do not exceed maximum level line.**

40




Press AGIT Button on both Shake and Soft Serve and let the machine run for 30 seconds then press the STOP Button. This fills the chamber with the McD Sanitiser Solution

41



Scrub the Hoppers with a shake cleaning brush. Then let the solution stand for one minute.

42

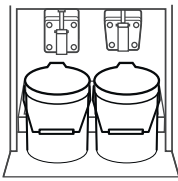

Return to the front of the machine and place an empty shake bucket under the Shake and Soft Serve Dispensers.

43

Shake side only




Drain the McD Sanitiser Solution from the machine completely. Press the STOP button.

44

Drain the Sanitiser Solution from both sides of the machine completely.

45

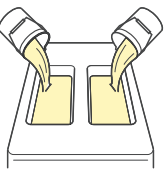

Wearing clear gloves, fill the Hoppers with either Shake Mix or Soft Serve. **Do not exceed maximum level line.**

46

Shake side: After adding the Shake mix wait a few minutes until the Shake Mix stops bubbling completely. Insert the Pressure Pipe (T-Bar) into the bottom of the Hopper. Do not connect to the Pump Body.



47



Press the AGIT Button for 30 seconds and check the pump efficiency: A steady flow of mix should come out of the Pump Body Mix Outlet Hole and hit midway up the Pressure Pipe (T-Bar).




NB Whilst the machine is running, listen for excess noise coming from the Pump Bodies 5-8 seconds. Any noise should subside within a few seconds. If this is not the case. Press the STOP button and Dismantle the pump body and check assembly set-up.

48



Press the STOP button to turn the machine to OFF.

49

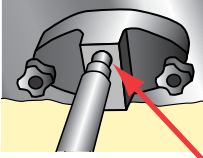

Insert the Pressure Pipe pressure pipe into the Pump Body Mix Outlet Hole.

50



Start up will take 15 minutes. Start dispense when SHAKE READY shows in the display.

51



Start-up will last 15 minutes, this will be indicated by the PROD Button flashing. **N.B** Do not dispense shakes until Shake button stops flashing to indicate the end of the Start-up cycle

52

Soft Serve Side




Soft Serve Side. Ensure Pressure Pipe the (L-Bar) is inserted into the bottom of the Hopper and without connecting to the Pump Body.

53



Agitate Soft Serve Side to check the motor is working

54

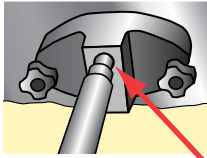


Insert the Pressure Pipe pressure pipe into the Pump Body Mix Outlet Hole.

55



Press Production. Soft Serve is ready when Sundae s displayed normally between 6 - 8 minutes

56

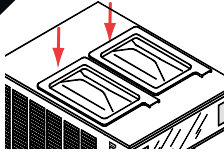

Clean and sanitise lids using 4-step cleaning method and replace.

57



Using KAY Surface Sanitiser Solution and a Red Border Cloth to clean the outside surfaces and wipe away any spillage. **DO NOT** spray the Fan at the rear of the machine.