cross bracing^26-0727 hanger asm btm gusset

body-0329 | QTY 1 IN HANGER EAST | INCHES | TOP / FRONT / BOTTOM SCALE 1:2

01 / TOP - FACE A

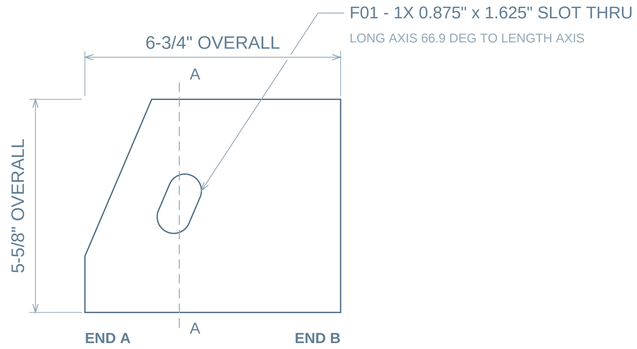

02 / FRONT - EDGE VIEW

03 / BOTTOM - FACE B

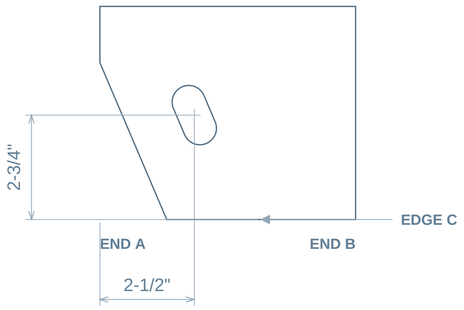

GEOMETRY REVIEW: spline chord error <0.00001 in where recorded; no native thread specifications supplied.

04 / SECTION A-A

X = 2-1/2" FROM END A



SECTION SCALE 1:2

05 / ISOMETRIC

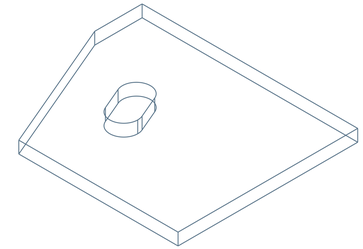

ISOMETRIC REFERENCE / NTS

FEATURE / DATUM NOTES

HOLES / SLOTS LOCATED ON FACE B

X: FROM END A / Y: FROM EDGE C

Dimensions are to feature centers.

Shared columns use one X chain.

Equal row spacing is counted once.

DATUM / REVIEW

END A is the left material extent in both face views.

EDGE C is marked on the bottom face view.

Fractions to 1/32; exact feature sizes/pitches as needed.

cross bracing^26-0727 hanger asm btm gusset

body-0329 / QTY 1 / TRUE FACE PLANE / PROFILE DETAIL 1 OF 1

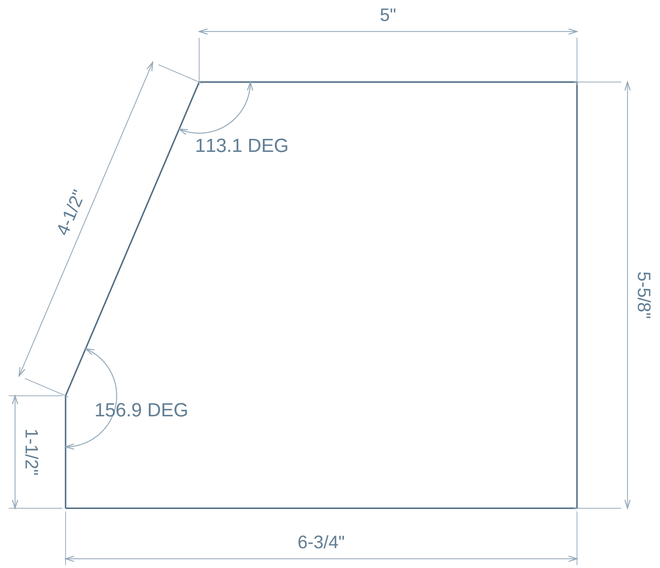

PROFILE DATUM

U = local length / END A

V = local transverse axis

MODEL-EXACT SLOPE CHECK

EDGE 91869

66.9 DEG TO U / 4.50000"

ALL OUTER STRAIGHT EDGES

Dimensioned at true face scale

PROFILE SCALE 1:1 / ADJACENT-EDGE INCLUDED ANGLES SHOWN AT SLOPE ENDS

INCHES / FRACTIONS NEAREST 1/32 / ANGLES 0.1 DEG / NOT A MANUFACTURING TOLERANCE

Smaller included angles are between the two actual adjacent edges. Slope to U is the acute angle to the local length axis.

Retain the accompanying R01 views for drilling, thickness, sections and release limitations. DO NOT SCALE.