

OpenClaw Webchat Interaction

OpenClaw Webchat Interaction

1. Course Content
 - Course Overview
 - Learning Objectives
2. Adding Allowed Addresses
3. Accessing Web UI
4. Model Switching and Dialogue
5. Common Chat Commands
6. Common Errors and Solutions
 - 6.1 Cannot Open Web Page
 - 6.2 Token Verification Failed
 - 6.3 No Response or Model Loading Failed
 - 6.4 Allowed Address Configuration Not Taking Effect

1. Course Content

Course Overview

OpenClaw WebChat is a browser-based web interaction interface. You don't need to install any client software - simply enter the address in your computer's browser to communicate with the robot. This course will introduce in detail how to interact with OpenClaw through WebChat.

Learning Objectives

- Learn to configure WebChat's allowed addresses (Allowed Origins)
- Master the method to access OpenClaw Web UI through browser
- Be able to perform model switching and dialogue in the web interface
- Understand common issues and solutions during WebChat usage

2. Adding Allowed Addresses

- Set the address whitelist for accessing WebChat in the OpenClaw configuration file:

```
nano $HOME/.openc1aw/openc1aw.json  
# Or use your favorite editor, such as vim, code, etc.
```

- Find the `gateway.controlui.allowedorigins` configuration item and enter the robot IP address + `:18789`
- If your robot has multiple IP addresses, separate them with commas

```

    }
  },
  "gateway": {
    "port": 18789,
    "mode": "local",
    "bind": "lan",
    "allowedOrigins": [
      "http://localhost:18789",
      "http://192.168.10.138:18789",
      "http://192.168.2.53:18789"
    ],
    "allowInsecureAuth": true,
    "dangerouslyDisableDeviceAuth": true
  },
  "auth": {
    "mode": "token",
    "token": "yahboom"
  },
  "tailscale": {
    "mode": "off",
    "resetOnExit": false
  },
}

```

- You can check the robot IP address in various ways, for example by opening a new terminal

```

-----
IP_Address_1: 192.168.10.138
IP_Address_2: 172.19.0.1
MACHINE: RaspberryPi5 | ROS_DISTRO: humble
ROBOT_TYPE: ROSMASTER-M3Pro | CAMERA_TYPE: dabai_dcw2 | RADAR: Tmini-plus*2


```

- **Save and exit**
Press `Ctrl+O` to save, `Ctrl+X` to exit (nano editor)
- Restart the gateway to apply the configuration


```
openclaw gateway restart
```

3. Accessing Web UI

- Open a browser on a computer in the same network segment as the robot, enter `robot IP:18789` in the address bar, and the page will redirect to the gateway dashboard interface
- Enter `yahboom` in the gateway token field, then click Connect

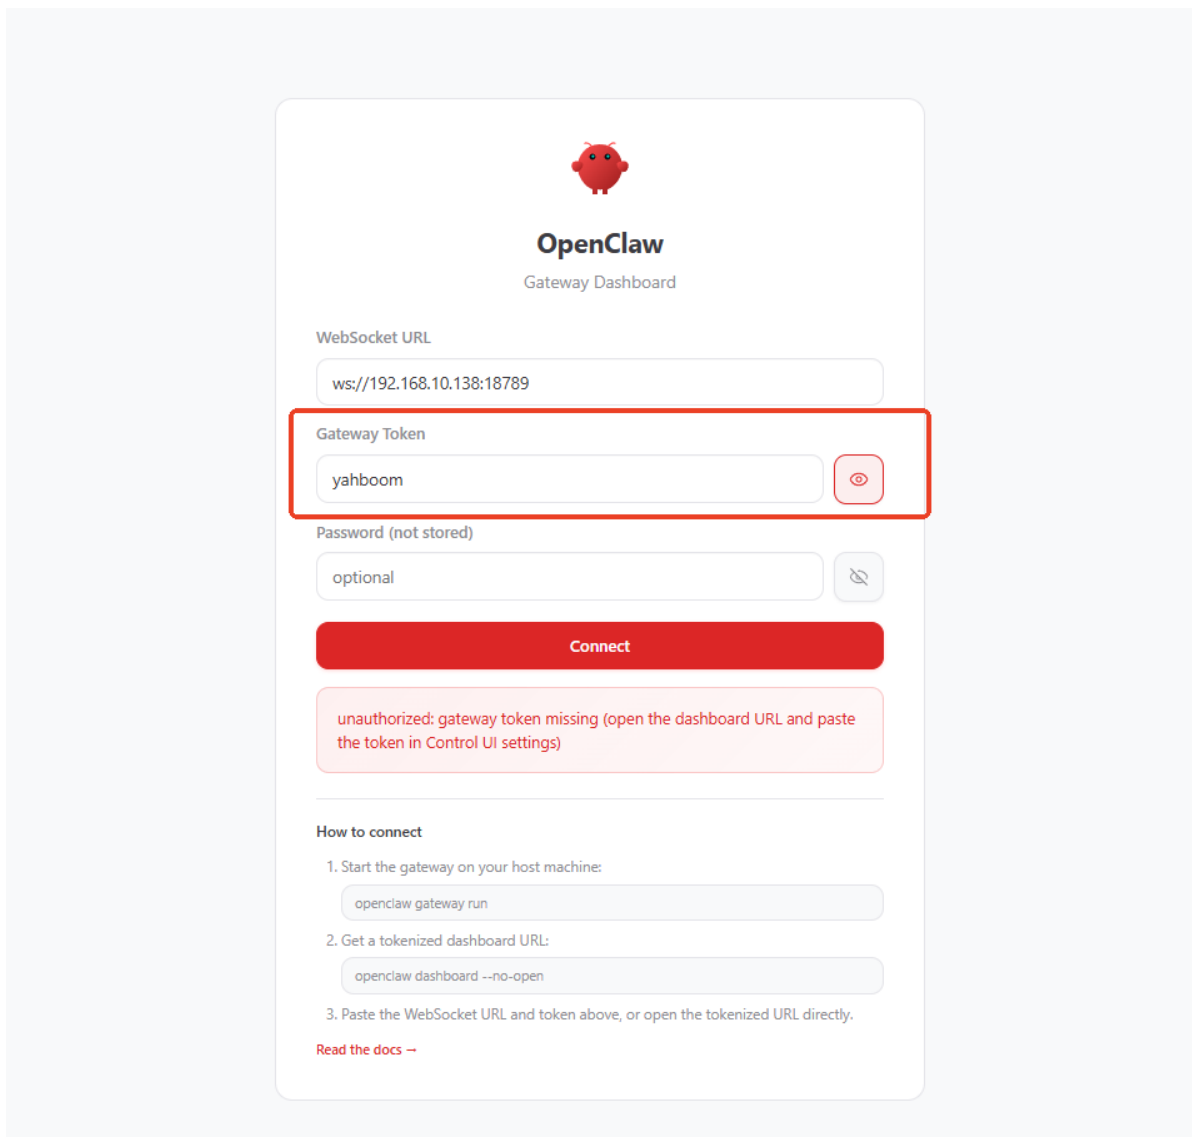

- Then you will enter OpenClaw's Web interface, where you can chat with OpenClaw, monitor and configure parameters, etc.

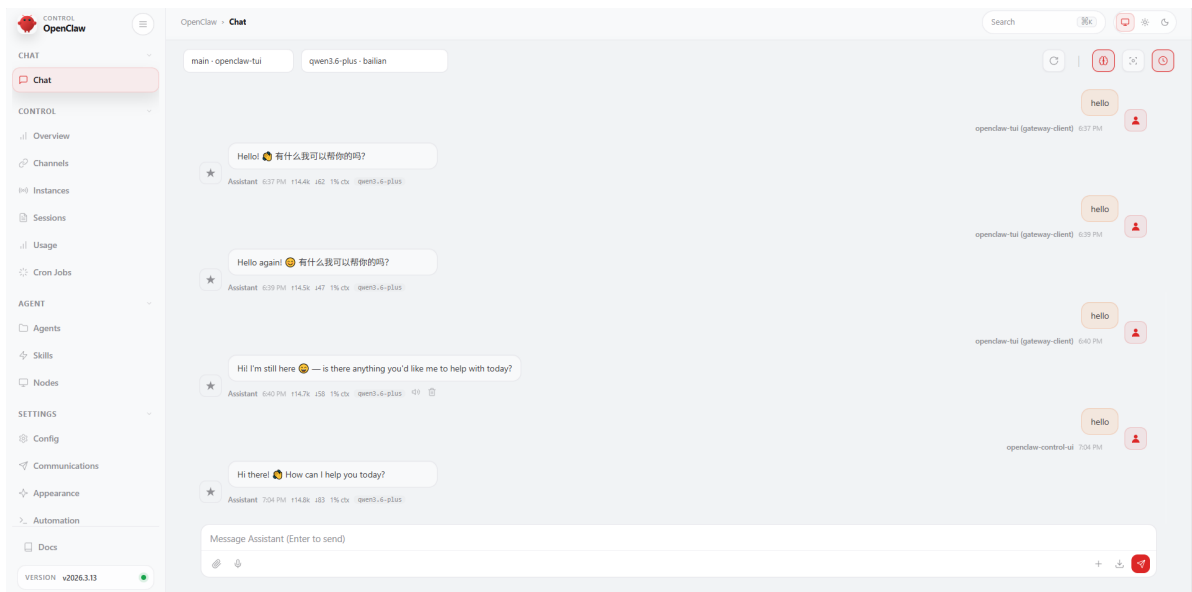


4. Model Switching and Dialogue

- In the model selection box at the top of the Web interface, you can select a configured model to temporarily switch the current session model



- After selecting a model, you can chat with OpenClaw in the dialogue box

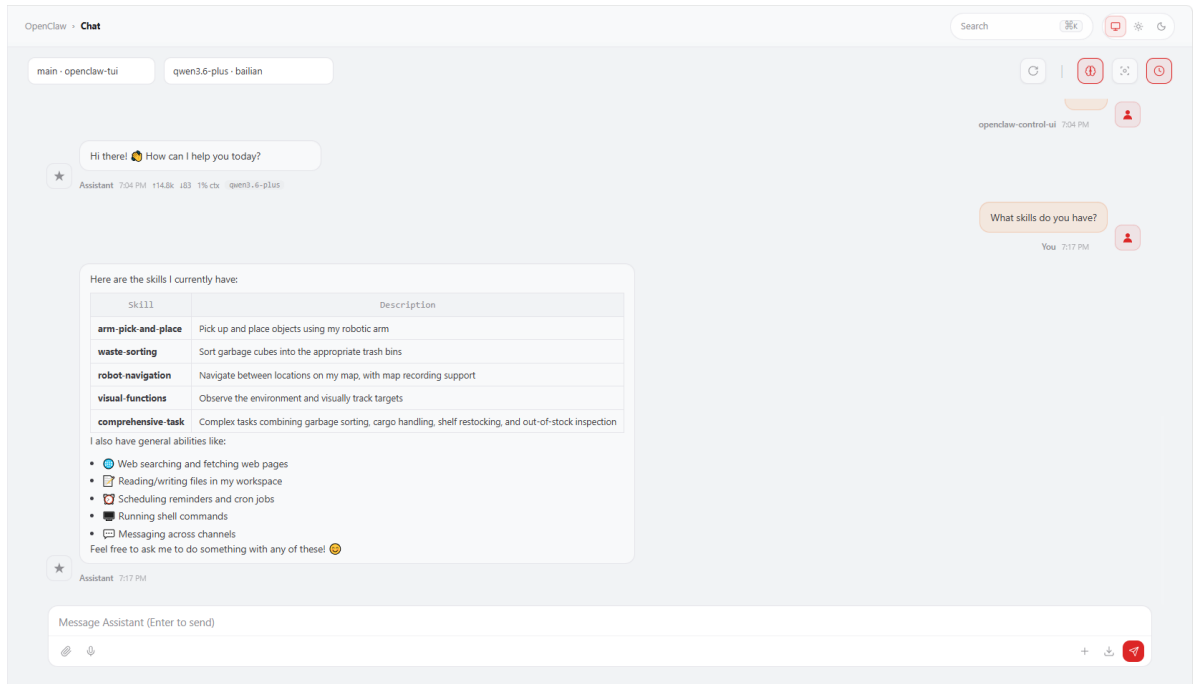

5. Common Chat Commands

In the WebChat dialogue box, besides directly typing text to chat with OpenClaw, you can also use slash commands starting with `/` to perform various operations. Here are some common chat commands:

Command	Description	Example
<code>/model [model name]</code>	Switch the model for current session	<code>/model gpt-4o</code>
<code>/stop</code>	Stop the currently generating response	Just type <code>/stop</code>
<code>/new</code>	Start a new session (clear current dialogue history)	Just type <code>/new</code>
<code>/reset</code>	Reset the current session (alias for <code>/new</code>)	Just type <code>/reset</code>
<code>/compact</code>	Compact session context to save Tokens	<code>/compact</code>
<code>/fast [on/off]</code>	Toggle fast mode (disable thought chain output)	<code>/fast on</code>
<code>/status</code>	View current running status and execution info	Just type <code>/status</code>
<code>/help</code>	Show brief help information	Just type <code>/help</code>
<code>/commands</code>	View complete directory of all available commands	Just type <code>/commands</code>
<code>/think [level]</code>	Set the output level of thought chain	<code>/think off</code>

Note: Slash commands must be sent as **standalone messages** (i.e., only the command itself in the dialogue box), and cannot be mixed with regular chat text.

6. Common Errors and Solutions

6.1 Cannot Open Web Page

Phenomenon: The browser shows unable to access or connection timeout after entering the address.

Possible Causes and Solutions:

- **Gateway not running** — Make sure OpenClaw Gateway is started, execute `openclaw gateway status` to check status
- **Network unreachable** — Confirm computer and robot are on the same LAN, use `ping robot IP` to test connectivity
- **Port not open** — Confirm the access address is `robot IP:18789`, check if port number is correct
- **Firewall blocking** — Check if the robot firewall has allowed port 18789

6.2 Token Verification Failed

Phenomenon: After entering the token, the prompt shows authentication failed and cannot connect.

Possible Causes and Solutions:

- **Incorrect token entered** — Make sure what you entered in the token field is `yahboom` (note case sensitivity)

- **Token configuration modified** — Check if the value of `gateway.controlui.authToken` in `openclaw.json` matches what you entered

6.3 No Response or Model Loading Failed

Phenomenon: Successfully entered the Web interface, but OpenClaw doesn't reply after sending a message.

Possible Causes and Solutions:

- **Model not properly configured** — Execute `openclaw models list` and `openclaw models status` in terminal to check if the model is configured and available
- **API-KEY not set or expired** — Refer to the API-KEY configuration section to reconfigure
- **Model switch abnormal** — Try reselecting the model using the `/model` command in the dialogue box
- **Gateway connection disconnected** — Restart the gateway: `openclaw gateway restart`

6.4 Allowed Address Configuration Not Taking Effect

Phenomenon: Filled in allowedOrigins but still cannot access.

Possible Causes and Solutions:

- **Gateway not restarted** — After modifying the configuration file, you must execute `openclaw gateway restart` to take effect
- **IP address filled incorrectly** — Use `ip a` or `ifconfig` to confirm the actual IP address of the robot
- **Configuration item location incorrect** — Confirm `allowedOrigins` is under the `gateway.controlui` node, not somewhere else