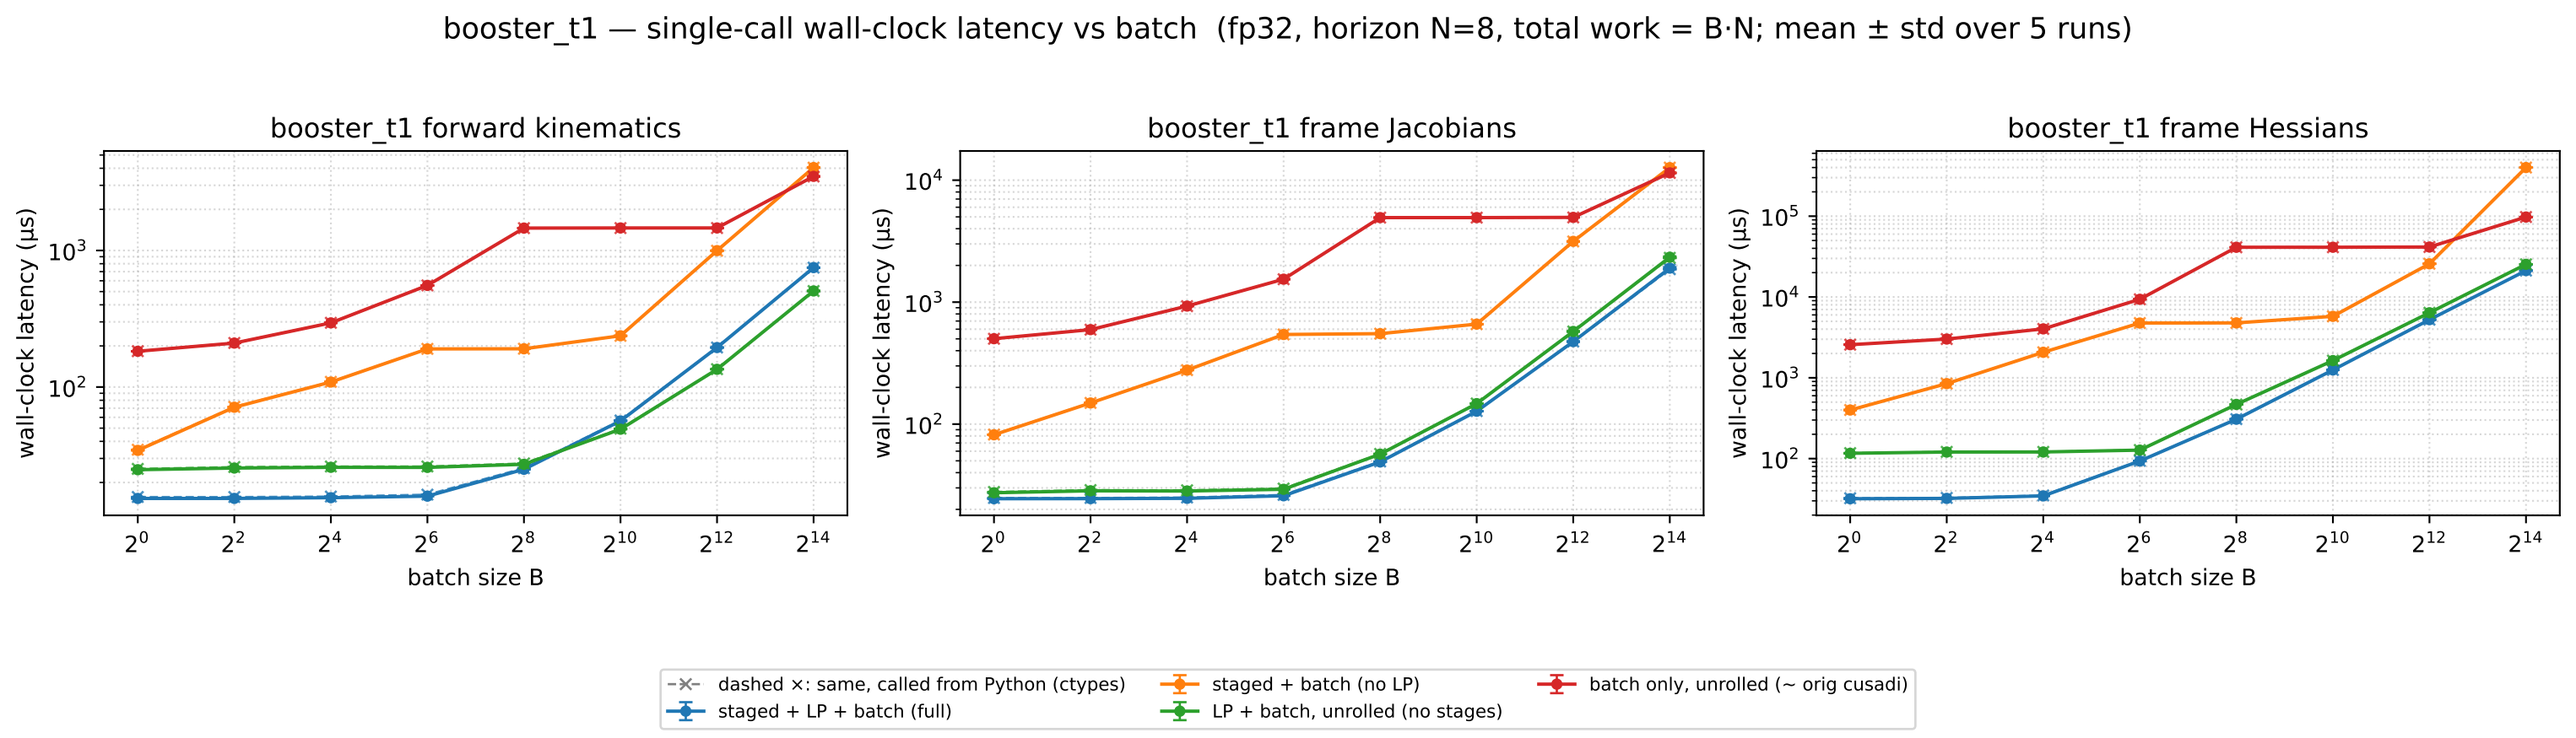
booster_t1 — single-call wall-clock latency vs batch (fp32, horizon N=8, total work = B·N; mean ± std over 5 runs)
booster_t1 forward kinematics
booster_t1 frame Jacobians
booster_t1 frame Hessians
wall-clock latency (µs)
batch size B
dashed ×: same, called from Python (ctypes)
staged + LP + batch (full)
staged + batch (no LP)
LP + batch, unrolled (no stages)
batch only, unrolled (~ orig cusadi)