

AmpliTube **TONEX** Modeler

USER MANUAL



IK MULTIMEDIA

Table of Content


TONEX Modeler	3
Welcome.....	3
Start a New Capture	6
Select Instrument and Tone Model type	6
Audio Setup and Rig Connections.....	8
Amp and Cab	8
Complex Rig	9
Stomp	11
Amp	12
Stomp and Amp	13
Stomp and Amp from Speaker Out/Power Out.....	15
Check.....	16
Capture.....	19
Save	21
Training a Capture	21
Compare.....	24
Review - Metadata.....	24
Retrain.....	26
Export / Import / Archive	26
License Agreement	27

TONEX Modeler


The MODELER app is used to capture rigs and create TONE MODELS for use in the TONEX ecosystem.

Welcome

The welcome pages give you an introduction to capturing TONE MODELS.

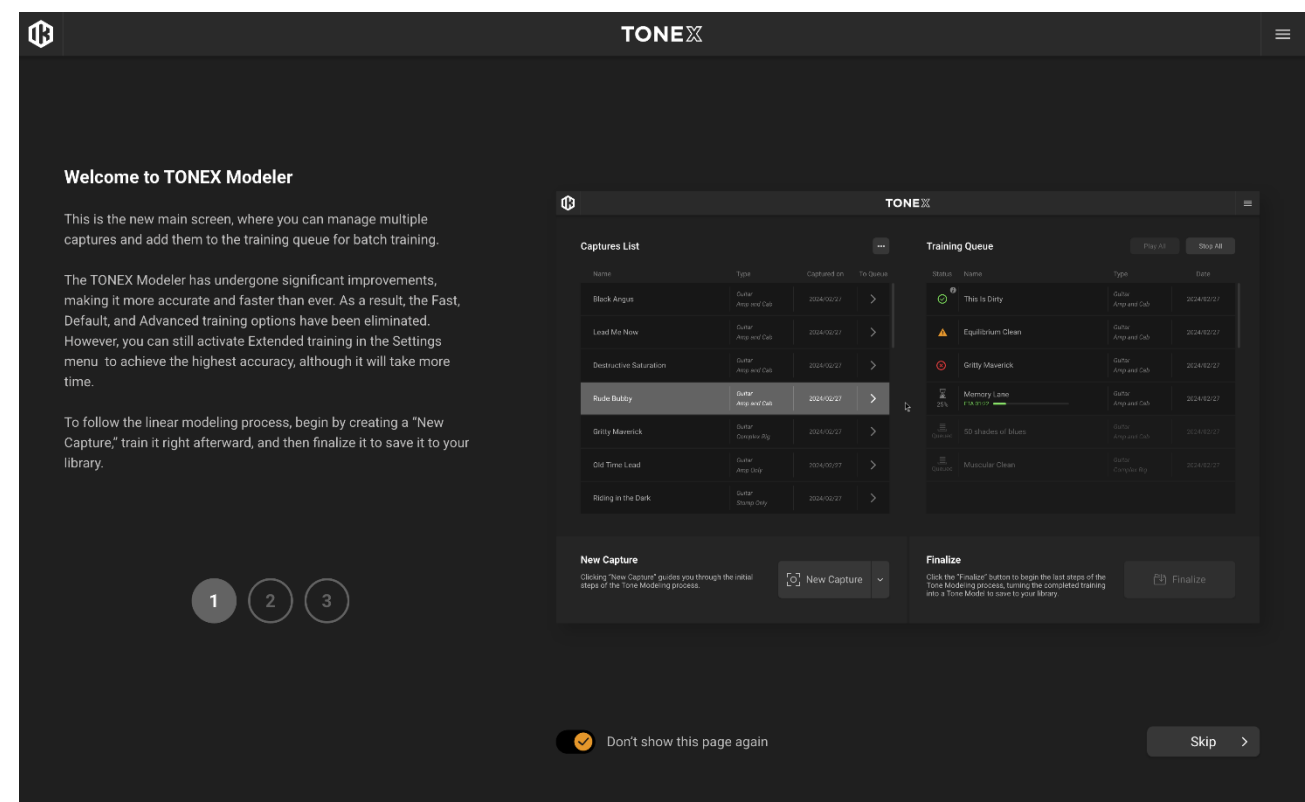

AmpliTube **TONEX** Modeler

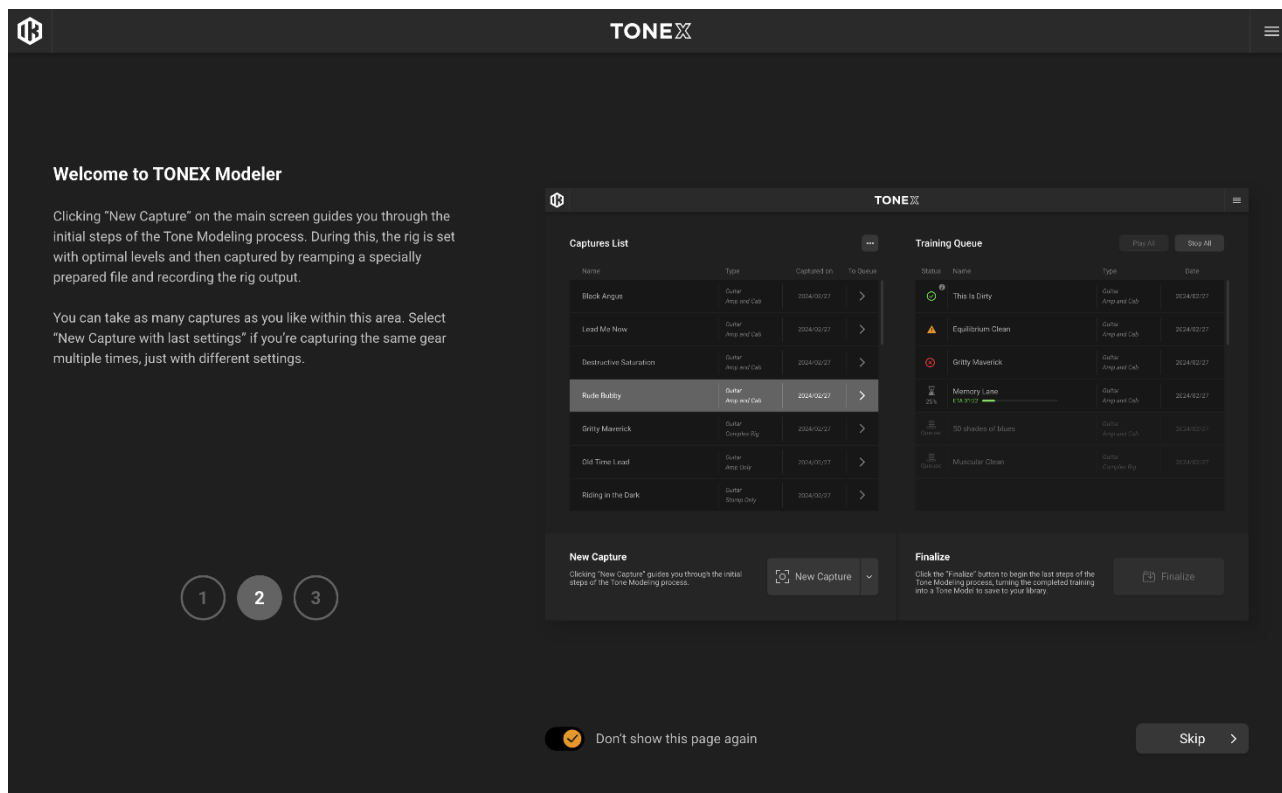

AmpliTube **TONEX** Modeler



TONEX

Welcome to TONEX Modeler

After the training is finished, click the "Finalize" button on the main screen to begin the last steps of the Tone Modeling process, turning the completed training into a Tone Model to save to your library.



TONEX

Captures List

Name	Type	Captured on	No. Capture
Black Angus	Butter Amp. and Cab.	2024/02/27	>
Lead Me Now	Butter Amp. and Cab.	2024/02/27	>
Destructive Saturation	Butter Amp. and Cab.	2024/02/27	>
Rude Buddy	Butter Amp. and Cab.	2024/02/27	>
Gritty Maverick	Butter Computer Rig	2024/02/27	>
Old Time Lead	Butter Amp. Only	2024/02/27	>
Riding in the Dark	Butter Drum Only	2024/02/27	>

Training Queue

Play All

Stop All

Status	Name	Type	Date
	This is Dirty	Butter Amp. and Cab.	2024/02/27
	Equilibrium Clean	Butter Amp. and Cab.	2024/02/27
	Gritty Maverick	Butter Amp. and Cab.	2024/02/27
	Memory Lane	Butter Amp. and Cab.	2024/02/27
	50 shades of Blues	Butter Amp. and Cab.	2024/02/27
	Muscular Clean	Butter Computer Rig	2024/02/27

1

2

3

New Capture

Clicking "New Capture" guides you through the initial steps of the Tone Modeling process.



New Capture

Finalize

Click the "Finalize" button to begin the last steps of the Tone Modeling process, turning the completed training into a Tone Model to save to your library.



Finalize



Don't show this page again

Skip

>


Start a New Capture

Main View


The Modeler's new main view features 2 sections:

1. Capture List
2. Training Queue

The Capture List lets you rename, delete, archive captures or send them one by one to the training queue. For each capture you can see the user-chosen name, capture date and type.

Here you can start a New Capture by clicking the button  at the bottom of the window.


A “New Capture” button at the bottom lets you begin the Capture process which will add new elements to the list as a result. Also, the “New Capture with last settings” comes handy when capturing the same gear with different settings or just the same type of gear.

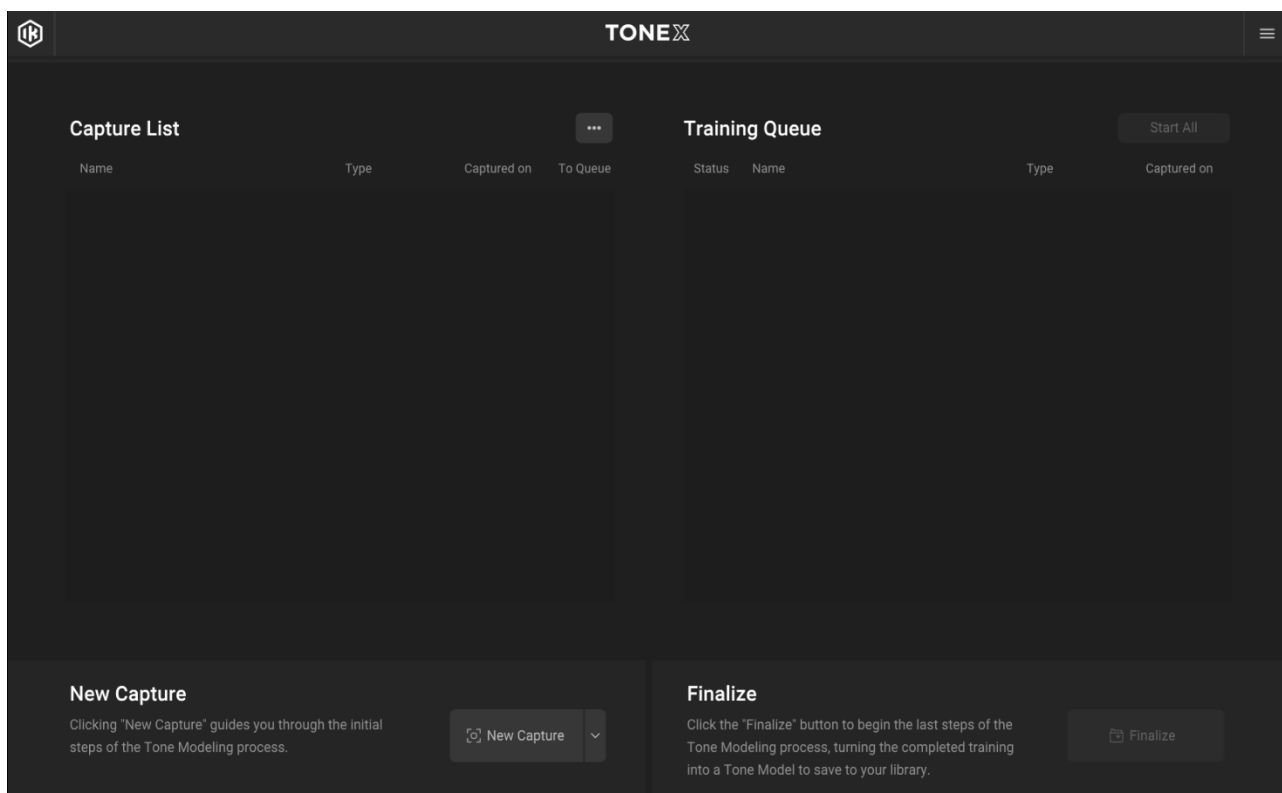


Select Instrument and Tone Model type

In this selection page, you choose if you want to capture a Guitar TONE MODEL or a Bass TONE MODEL by selecting one of the two icons

AmpliTube TONEX Modeler

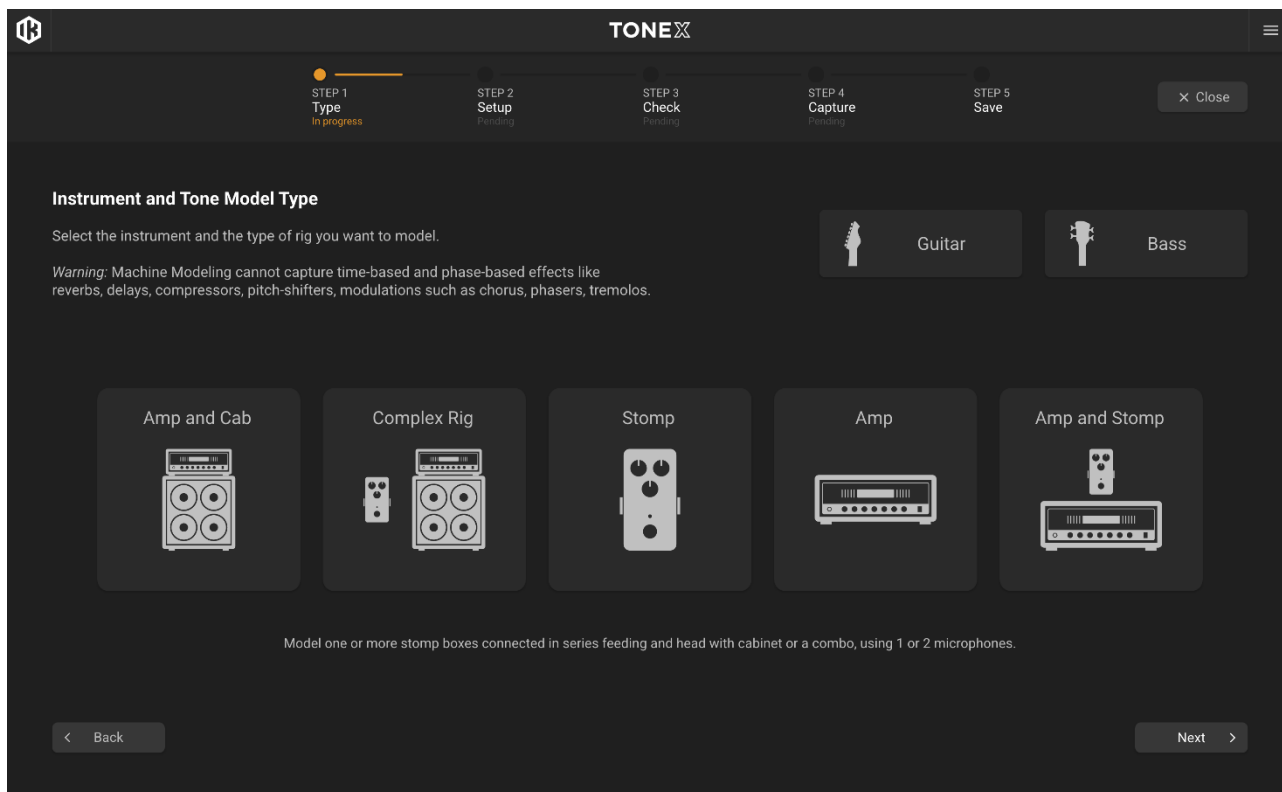

On this page you select also the type of rig you are going to capture.

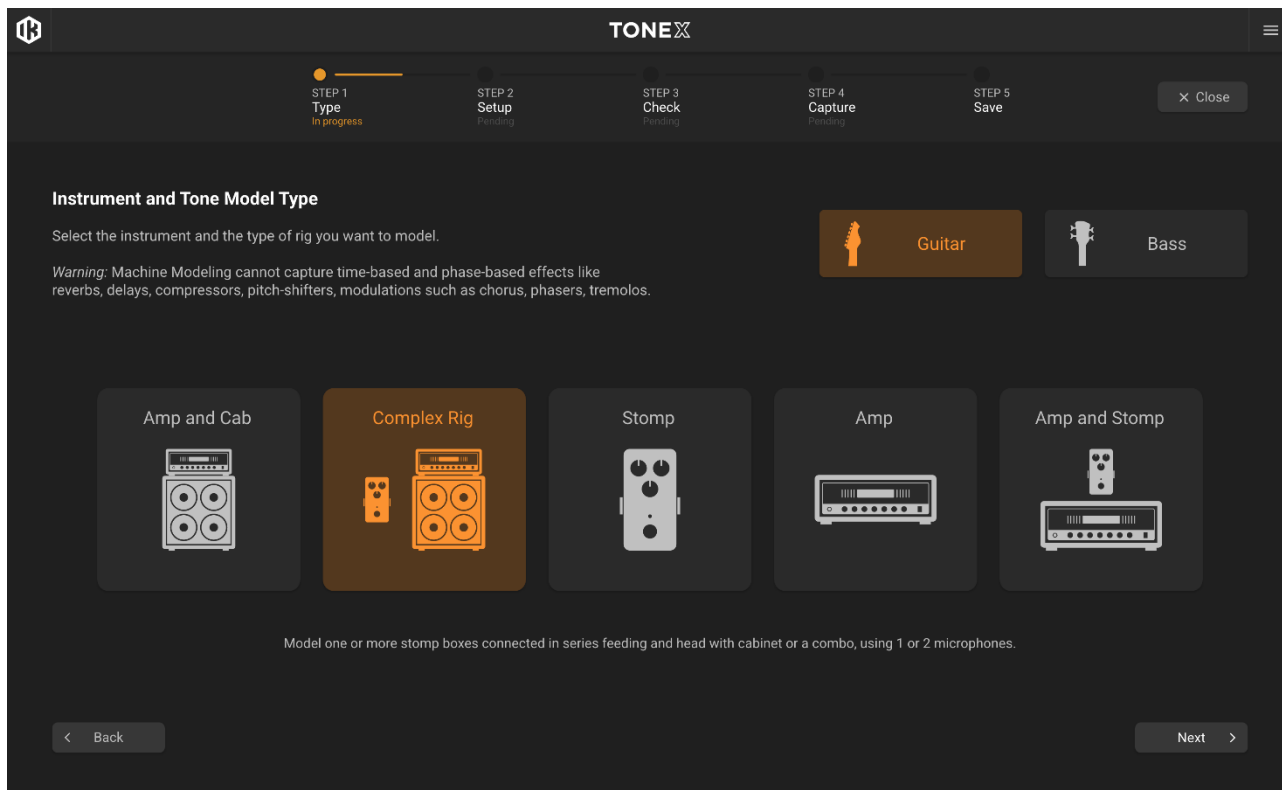

AmpliTube **TONEX** Modeler

Remember that TONEX can't capture time-based and phase-based effects like reverbs, delays, compressors, pitch-shifters, and modulation such as chorus, phasers and tremolos.

Also some vintage fuzzes and overdrives that have a parallel path inside can't be modeled.

The type of rig can be one of the following:

- **Amp and Cab:** model an amp head and a cabinet, or a combo using 1 or 2 microphones.
- **Complex Rig:** model one or more stomp boxes connected in series feeding an amp head with cabinet or a combo, using 1 or 2 microphones.
- **Stomp:** model one or more stomp boxes connected in series.
- **Amp:** model an amp (or the amp section of a combo) by using a line out or an attenuated power out.
- **Stomp and Amp:** model one or more stomp boxes connected in series feeding an amp head (or the amp section of a combo) by using a line out or an attenuated power out.

Audio Setup and Rig Connections


Amp and Cab

To capture an Amp and Cab, do as follows:

1. In the application select the Amp and Cab option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your Amp.
If you have the **TONEX Capture**, connect the to amp output to your Amp.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your Amp.
5. Connect your Amp to a Cabinet (if it's not a combo) and place up to two microphones to capture the desired sound.
Use one microphone if your audio interface has two inputs, use up to two microphones if your audio interface has three inputs or more.
Connect the microphone(s) to your audio interface. We call this **RETURN FROM RIG**.
6. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
7. In the application select the correct audio interface and the correct inputs and outputs.
Remember: on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
8. Select the desired Buffer Size and press NEXT.

AmpliTube TONEX Modeler

Depending on the input/output configuration of your interface your screen may look different.

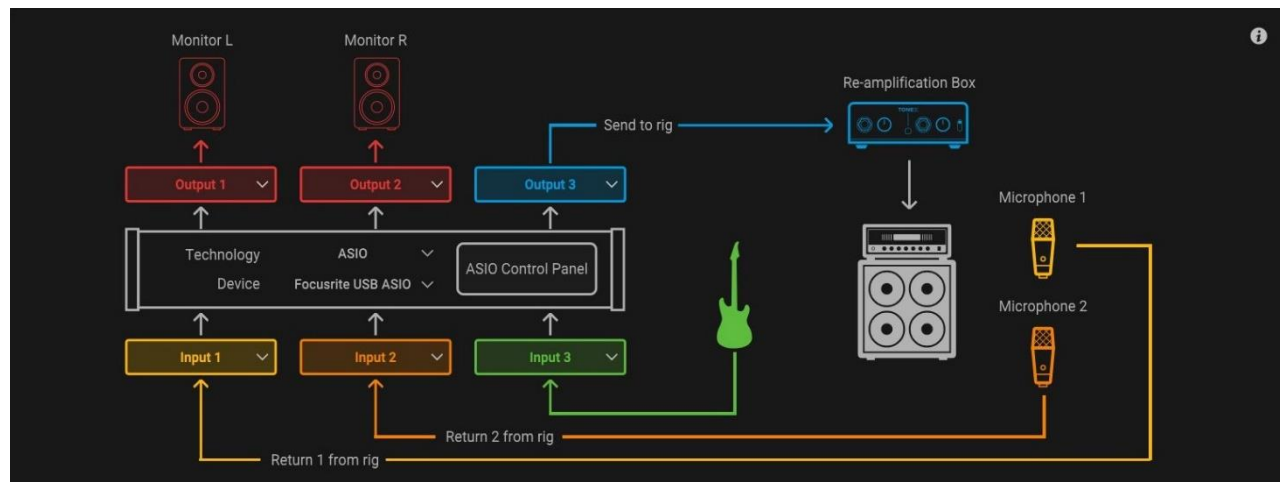

If your interface has only two outputs (usually assigned to monitoring) you can use only one of the two to capture a TONE MODEL as the [Send to rig](#).

In this case it is very important not to tweak the output volume of your interface since it affects the Send to rig signal gain.

Complex Rig

A Complex Rig is a combination of pedals, an amplifier and a cabinet.

N.B.

TONEX can only capture pedals like equalizers, boosts, saturators, preamps, overdrives, distortions and fuzzes. It cannot capture time-based or phase-based effects such as compressor, delay, reverb, chorus, flanger, phaser and so on...

Also some vintage fuzzes and overdrives that have a parallel path inside can't be modeled.


To capture a Complex Rig do as follows:

1. In the application select the Complex Rig option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your pedalboard.
If you have the **TONEX Capture**, connect it to the amp output to your pedalboard.

AmpliTube **TONEX** Modeler

If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your pedalboard.

5. Connect your pedalboard to your Amp.
6. Connect your Amp to a Cabinet (if it's not a combo) and place up to two microphones to capture the desired sound.
Use one microphone if your audio interface has two inputs, use up to two microphones if your audio interface has three inputs or more.
Connect the microphone(s) to your audio interface. We call this **RETURN FROM RIG**.
7. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
8. In the application select the correct audio interface and the correct inputs and outputs.
Remember: on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
9. Select the desired Buffer Size and press NEXT.

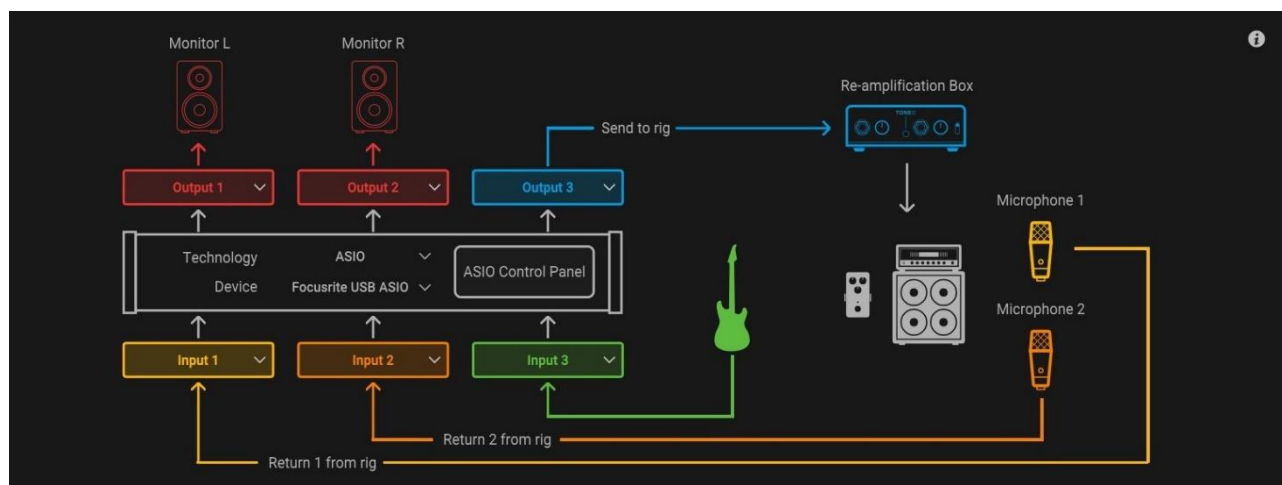

Stomp


N.B.

TONEX can only capture pedals like equalizers, boosts, saturators, preamps, overdrives, distortions and fuzzes. It cannot capture time-based or phase-based effects such as compressor, delay, reverb, chorus, flanger, phaser and so on...

Also some vintage fuzzes and overdrives that have a parallel path inside can't be modeled.

To capture a Stomp, do as follows:

1. In the application select the Stomp option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your pedalboard.
If you have the **TONEX Capture**, connect the to amp output to your pedalboard.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect it to the reamp out of the interface to your pedalboard.
5. Connect the output of your pedalboard to an instrument input of your audio interface. We call this **RETURN FROM RIG**.
6. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
7. In the application select the correct audio interface and the correct inputs and outputs.
Remember: on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
8. Select the desired Buffer Size and press NEXT.

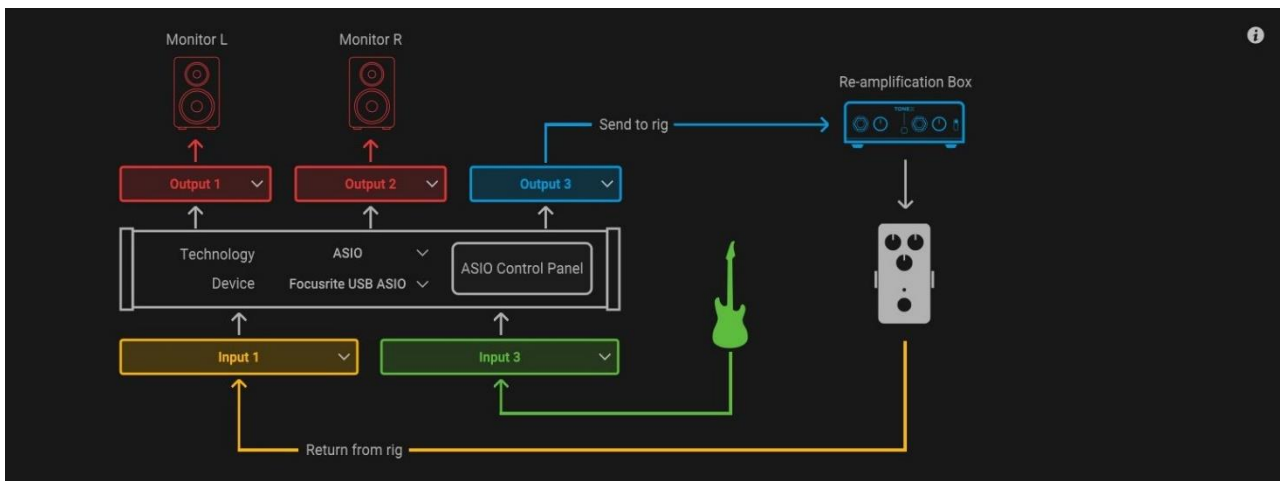

Amp

Amp from PREAMP OUT/LINE OUT

To capture an Amp from the Preamp Out/Line Out do as follows:

1. In the application select the Amp option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your amp.
If you have the **TONEX Capture**, connect the to amp output to your amp.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your amp.
5. Connect your Amp to a Cabinet (if it's not a combo) or a load box with the correct impedance.
6. Connect the PREAMP OUT/LINE OUT of your amplifier to the FROM AMP input of the TONEX Capture (or similar device) and use the dedicated switch to select LINE OUT.
We call this **RETURN FROM RIG**.
7. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
8. In the application select the correct audio interface and the correct inputs and outputs.
Remember: in the **AXE I/O** the reamp out is Output 5 and in the **AXE I/O Solo** the reamp out is Output 3.
9. Select the desired Buffer Size and press NEXT.

Amp from SPEAKER OUT/POWER OUT


To capture an Amp from the Speaker Out/Power Out do as follows:

1. In the application select the Amp option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your amp.
If you have the **TONEX Capture**, connect the to amp output to your amp.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your amp.
5. Connect the SPEAKER OUT/POWER OUT of your amplifier to the TONEX Capture FROM AMP input and use the dedicated switch to select POWER OUT.
6. Connect the TO CABINET output of the TONEX Capture (or similar device) to a cabinet or a load box with the correct impedance.

AmpliTube TONEX Modeler

7. Connect the LINE OUT of the TONEX Capture (or similar device) to a line input of your audio interface. We call this **RETURN FROM RIG**.
8. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
9. In the application select the correct audio interface and the correct inputs and outputs.
Remember: on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
10. Select the desired Buffer Size and press NEXT.

Depending on the input/output configuration of your interface your screen may look different.

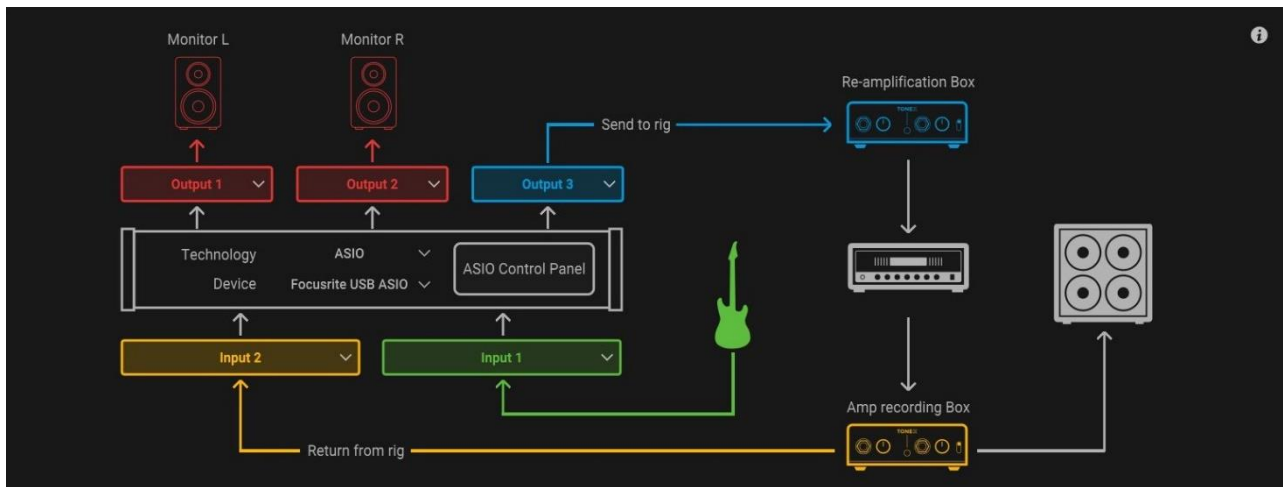

If your interface has only two outputs (usually assigned to monitoring) you can use only one of the two to capture a TONE MODEL as the **Send to rig**.

In this case it is very important to not tweak the output volume of your interface since it affects the Send to rig signal gain.

Stomp and Amp

N.B.

TONEX can only capture pedals like equalizers, boosts, saturators, preamps, overdrives, distortions and fuzzes. It cannot capture time/based or phase-based effects such as compressor, delay, reverb, chorus, flanger, phaser and so on...

Also some vintage fuzzes and overdrives that have a parallel path inside can't be modeled.

Stomp and Amp from Preamp Out/Line Out

To capture a Stomp and an Amp from the Preamp Out/Line Out do as follows:

1. In the application select the Stomp and Amp option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface.
We call this **INSTRUMENT INPUT**.

AmpliTube **TONEX** Modeler

3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your pedalboard.
If you have the **TONEX Capture**, connect the to amp output to your pedalboard.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your pedalboard.
5. Connect your pedalboard to your Amp.
6. Connect your Amp to a Cabinet (if it's not a combo) or a load box with the correct impedance.
7. Connect the PREAMP OUT/LINE OUT of your amplifier to the FROM AMP input of the TONEX Capture (or similar device) and use the dedicated switch to select LINE OUT.
8. Connect the LINE OUT of the TONEX Capture to a line input of your audio interface.
We call this **RETURN FROM RIG**.
9. If you have more than two outputs, you can connect your speakers to monitor the results. We call these **MONITOR L** and **MONITOR R**.
10. In the application select the correct audio interface and the correct inputs and outputs.
Remember: on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
11. Select the desired Buffer Size and press NEXT.


AmpliTube TONEX Modeler

Stomp and Amp from Speaker Out/Power Out

To capture a Stomp and Amp from the Speaker Out/Power Out do as follows:

1. In the application select the Stomp and Amp option and press NEXT.
2. Connect your guitar or bass to an instrument input of your audio interface. We call this **INSTRUMENT INPUT**.
3. Connect a line output of your audio interface to a reamplification box.
If you have **TONEX Capture**, you can use it as your reamplification box connecting the line output of your audio interface to the line input of the TONEX Capture.
If you have an **AXE I/O** or an **AXE I/O Solo**, you can use the reamp out without the need of an external reamplification box.
We call this **SEND TO RIG**.
4. Connect the instrument output of the reamplification box to your amp.
If you have the **TONEX Capture**, connect the to amp output to your amp.
If you have an **AXE I/O** or an **AXE I/O Solo**, connect the reamp out of the interface to your amp.
5. Connect the SPEAKER OUT/POWER OUT of your amplifier to the TONEX Capture (or similar device) FROM AMP input and use the dedicated switch to select POWER OUT.
6. Connect the TO CABINET output of the TONEX Capture (or similar device) to a cabinet or a load box with the correct impedance.
7. Connect the LINE OUT of the TONEX Capture (or similar device) to a line input of your audio interface. We call this **RETURN FROM RIG**.
8. If you have more than two outputs, you can connect your speakers to monitor the results.
We call these **MONITOR L** and **MONITOR R**.
9. In the application select the correct audio interface and the correct inputs and outputs. **Remember:** on the **AXE I/O** the reamp out is Output 5 and on the **AXE I/O Solo** the reamp out is Output 3.
10. Select the desired Buffer Size and press NEXT.

Depending on the input/output configuration of your interface your screen may look different.

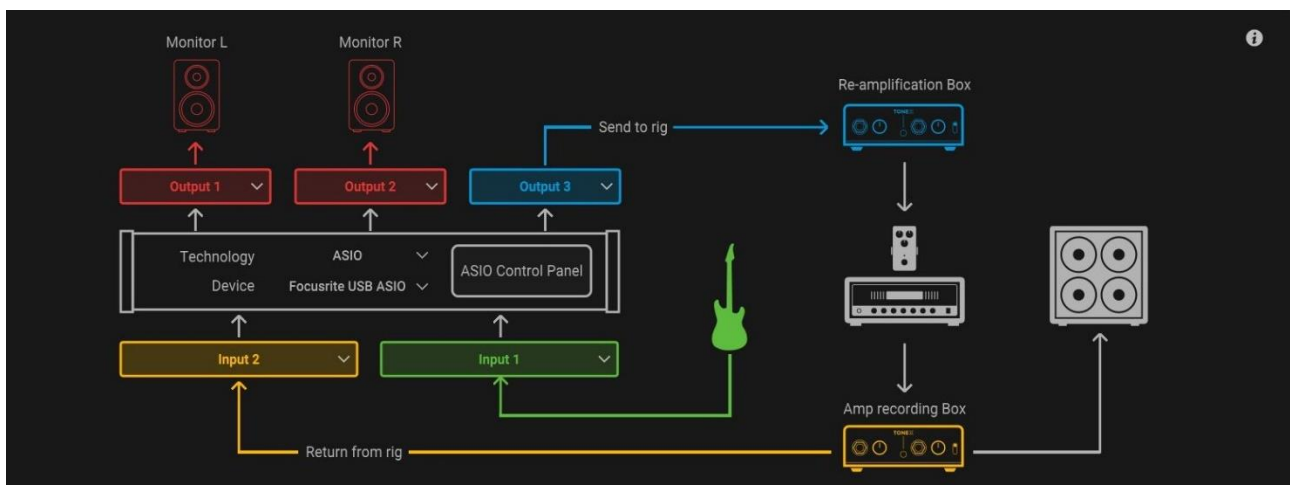


If your interface has only two outputs (usually assigned to monitoring) you can use only one of the two to capture a TONE MODEL as the **Send to rig**.

In this case it is very important to not tweak the output volume of your interface since it affects the Send to rig signal gain.

Check

Set your audio device's input gain so that TONEX meter is starting to go into the red, then back off just a touch.

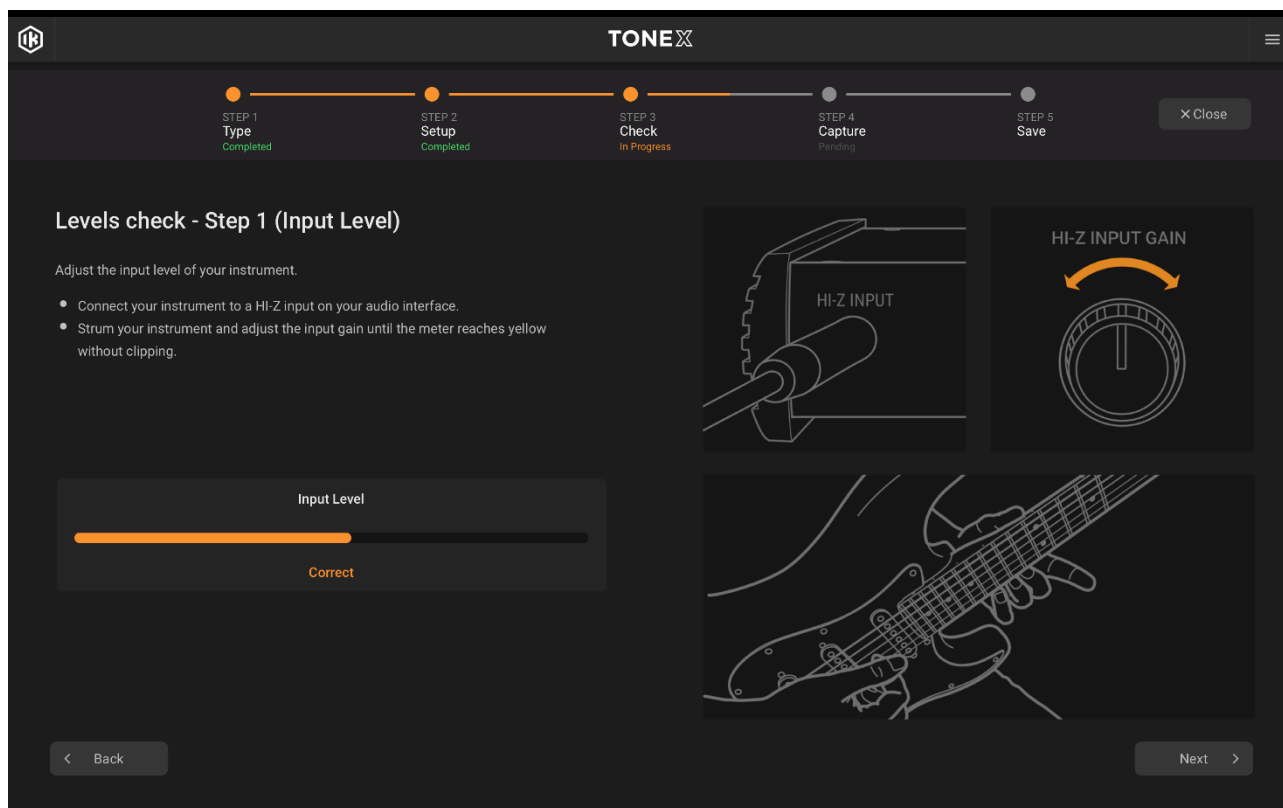

When you find the correct gain press NEXT.


Send to rig check

Adjust your Send to rig volume (or the attenuation on your reamp box/TONEX Capture) to get the desired tone.

We strongly suggest having the volume sent to your amplifier/pedalboard by your interface to be the same as the volume sent by your guitar/bass to your amplifier/pedalboard when connected directly.

To check this, you can disconnect your instrument and connect it directly to your amplifier to see if the volumes match.

AmpliTube TONEX Modeler

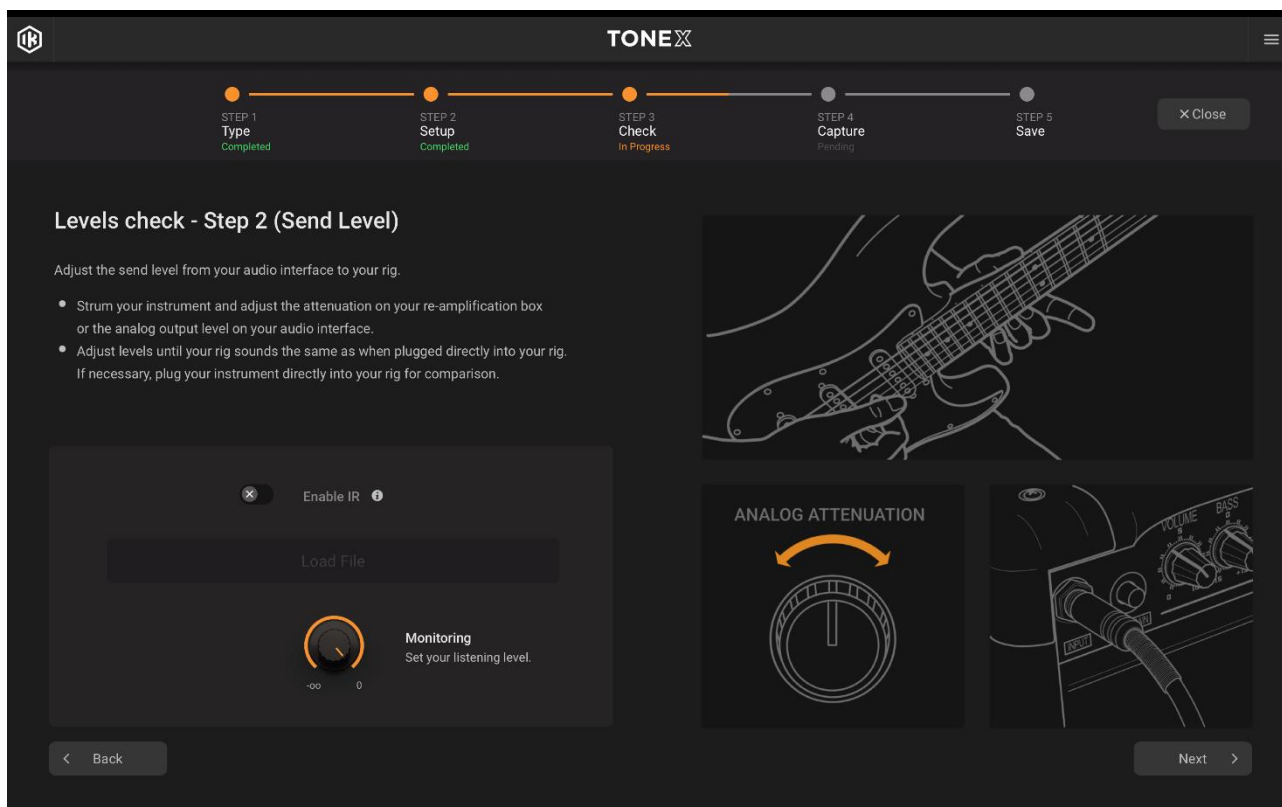

When you find the correct gain press NEXT.

Return from rig check

Adjusts the microphone preamp gain to get the optimal level shown in the Mic 1 Input Level meter (1).

If you have a 2-input interface, you can still connect two microphones to model Amp + Cab or Complex Rig Tone Models by unplugging your instrument and using the same input to plug the second microphone in.


The Enable Mic 2 section (2) lets you enable the second microphone and monitor its level to adjust its preamp gain like you did for the first microphone.

To set the desired blend between the two microphones use the mic blend knob (3).

You can use either your instrument or our guitar and bass demos available in this step (4).

To adjust the monitoring volume, use the Monitoring knob available (5).

AmpliTube TONEX Modeler

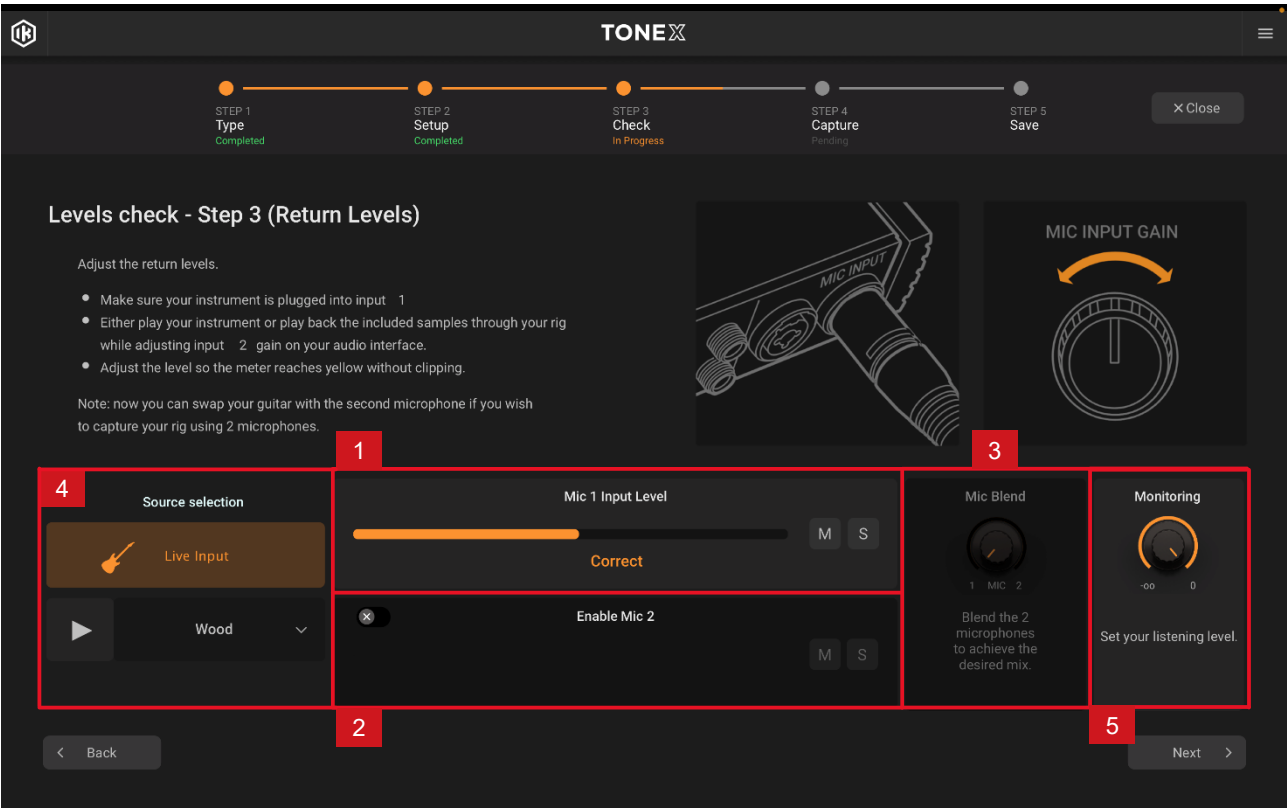

When you find the correct gain press NEXT.

AmpliTube TONEX Modeler

Capture

Press the capture button to start capturing your rig.

Do not move any knobs or faders during this step and make sure that your instrument is muted to avoid any audio pollution.


If you need to adjust the output volume of the Capturing use the included Monitoring knob.

The screenshot shows the TONEX Modeler interface during the 'Capture' step. At the top, a progress bar indicates five steps: STEP 1 Type (Completed), STEP 2 Setup (Completed), STEP 3 Check (Completed), STEP 4 Capture (In Progress), and STEP 5 Save. Below the progress bar, the 'Capture' section on the left provides instructions: 'Capture your rig and adjust the listening level.', 'Click Capture to begin the Tone Modeling process.', 'TONEX will send a specially prepared audio file to your rig and will record the processed sound.', 'While capturing, you must not tweak the input gains on your audio interface or the settings on your rig.', and 'Adjust the monitoring level.' Below these instructions is a 'Capturing process' window showing a 16% progress bar and a 'STOP' button. To the right of the progress bar is a 'Monitoring' knob labeled 'Set your listening level.' On the right side of the interface, a note states: 'Some gear details are required before saving. You can add them while the capture is in progress.' Below this note are input fields for 'Capture Name' (filled with 'Rock Lead'), 'Keywords' (placeholder: 'Enter keywords here (optional)'), and 'Description' (placeholder: 'Enter description here (optional)'). Below these fields are sections for 'AMP' and 'CAB' settings. The 'AMP' section includes 'Stomp Based On' (filled with 'Scream Stomp'), 'Amp Based On' (filled with 'Tweed'), 'Ch' (filled with 'jump'), 'Character' (filled with 'Drive'), and 'Comment' (placeholder: 'Enter comment here (optional)'). The 'CAB' section includes 'Cab Based On' (filled with 'Slanted Cab'), 'Cab Config' (filled with '4x12'), 'Mic 1' (placeholder: 'Enter mic name here (optional)'), and 'Mic 2' (placeholder: 'Enter mic name here (optional)'). At the bottom right is a 'Save' button.

In this page you can assign all the meta data you want to make your TONE MODEL easily searchable and recognizable both on your device and on ToneNET, you can also select the skin for your Tone Model.

This section is different for each TONE MODEL type.


AmpliTube TONEX Modeler

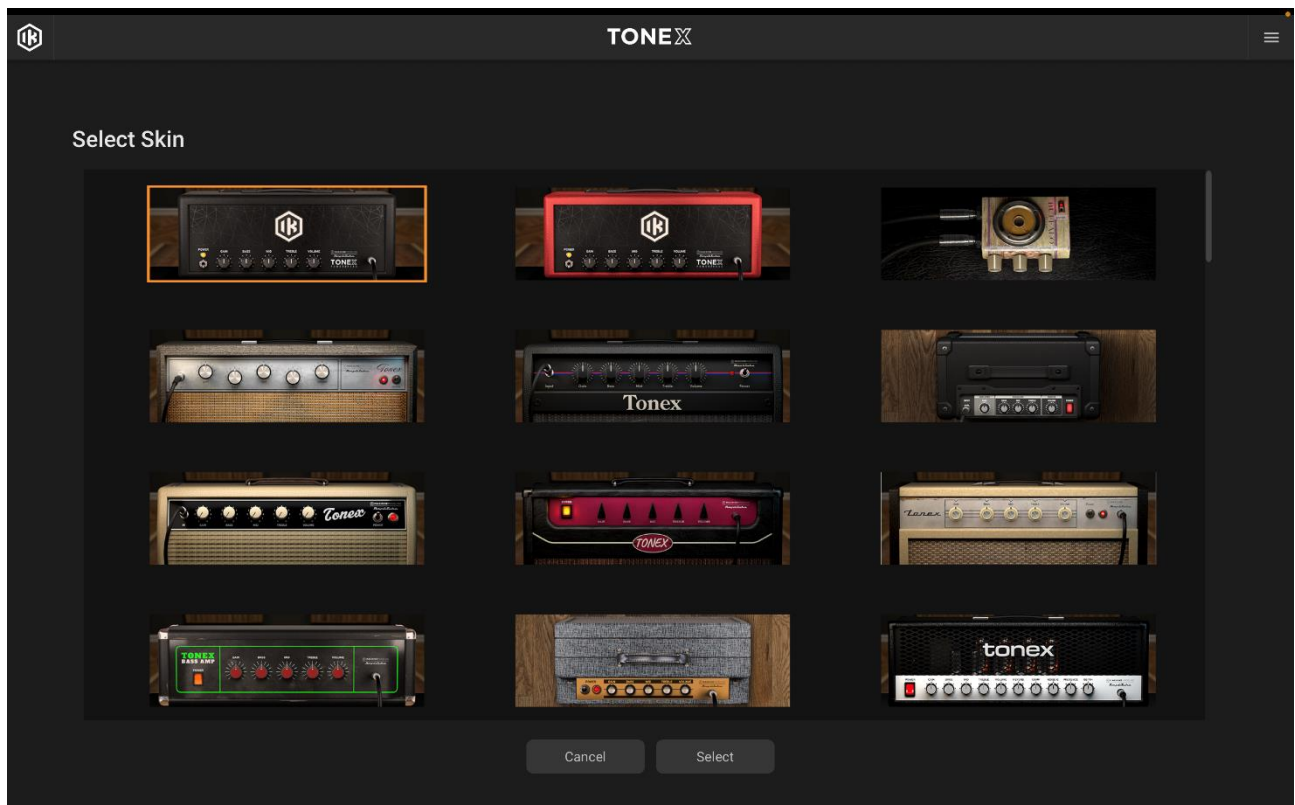

Once the Capturing is done press SAVE.

AmpliTube TONEX Modeler

Save

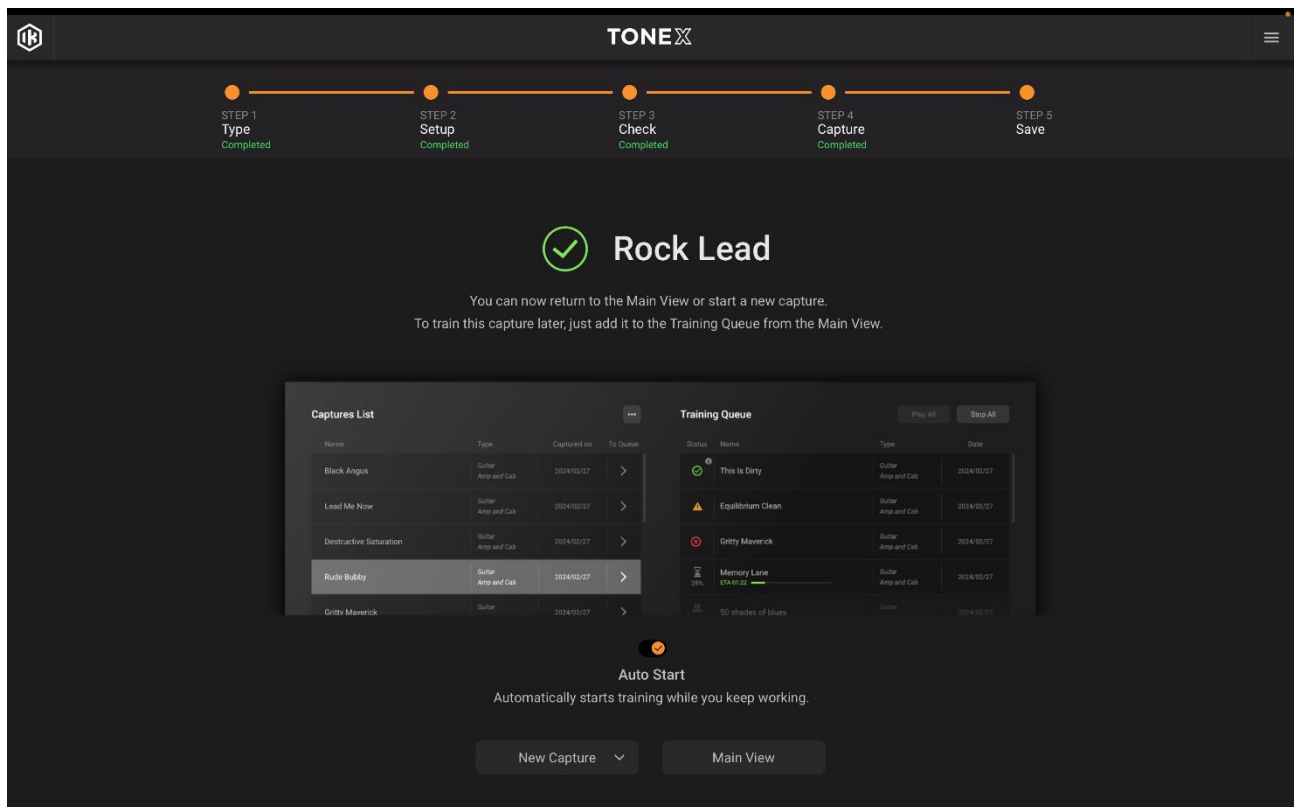


This final step provides you with these paths:

- New capture (from the start).
- New capture with last settings (thus landing directly at the Capture steps, with the same metadata already conveniently inputted).
- Go to the main view ("Training Auto-start" option available).

Training a Capture

From this page you will be able to train your captures.

AmpliTube TONEX Modeler

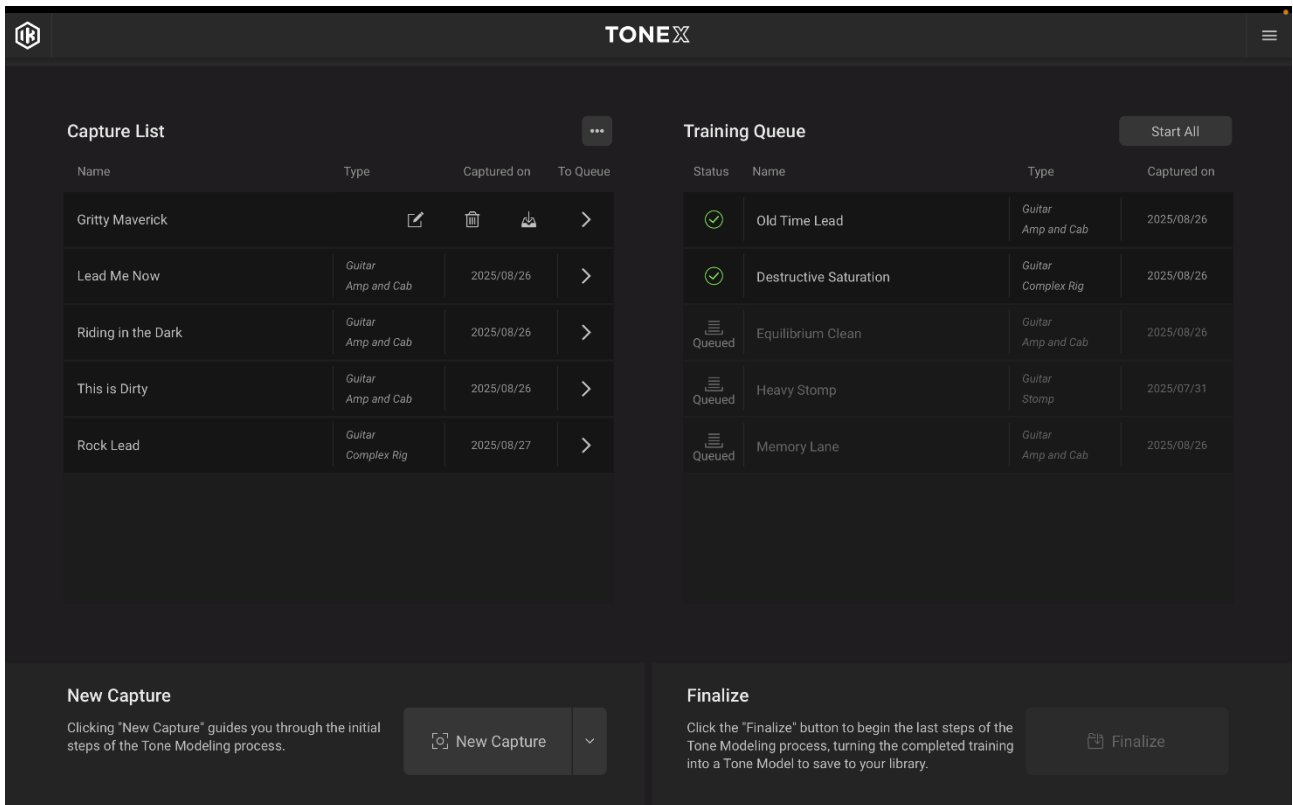

In the Capture List you can RENAME , DELETE , ARCHIVE  or add TO QUEUE .

RENAME: Allows you to edit the meta data saved inside the capture.


DELETE: Allows you to delete the selected capture.

ARCHIVE: Allows you to archive the selected capture for a future training.

TO QUEUE: Adds the selected capture to the Training Queue.

To train one or more of the captures select the capture from the Capture List, click  to add the capture to the Capture List.

Once you added all the captures you want to train, you can start the training by clicking on



In the Training List you will be able to check the progress of the trainings and the established remaining time.

AmpliTube TONEX Modeler

TONEX

Capture List

Name	Type	Captured on	To Queue
Gritty Maverick	Guitar Amp	2025/08/21	>
Lead Me Now	Guitar Amp and Cab	2025/08/26	>
Riding in the Dark	Guitar Amp and Cab	2025/08/26	>
This is Dirty	Guitar Amp and Cab	2025/08/26	>
Heavy Stomp	Guitar Stomp	2025/07/31	>

Training Queue

Stop All

Status	Name	Type	Captured on
✓	Old Time Lead	Guitar Amp and Cab	2025/08/26
50 % ETA 00:00	Destructive Saturation	Guitar Complex Rig	2025/08/26
Queued	Memory Lane	Guitar Amp and Cab	2025/08/26
Queued	Equilibrium Clean	Guitar Amp and Cab	2025/08/26

New Capture

Clicking "New Capture" guides you through the initial steps of the Tone Modeling process.

New Capture

Finalize

Click the "Finalize" button to begin the last steps of the Tone Modeling process, turning the completed training into a Tone Model to save to your library.

Finalize

Once the trainings are completed, you will be able to create and save the actual Tone Model.

Select one of the completed trainings in the Training Queue, then click on

Finalize

 to proceed.

In this page you can adjust the routing settings for the review of the Tone Model, then click NEXT.

TONEX

STEP 1
Review - Audio Setup
In Progress

STEP 2
Compare
Pending

STEP 3
Review - Metadata
Pending

STEP 4
Finalize

Close

Audio Setup and Rig Connections

Before testing your new Tone Model, review your audio settings first. Check that your monitors and instrument are connected according to the schematic below. With your live rig connected, you'll be able to compare it against your Tone Model.

Buffer size 64

Monitor L

Monitor R

Re-amplification Box

Microphone 1

Out 1

Out 2

Out 5

Input Device AXE IO

Output Device AXE IO

In 2

In 1

Send to rig

Return from rig

Skip

Next


AmpliTube TONEX Modeler

Compare

From this page you can toggle between the Real Rig and the TONE MODEL by selecting the corresponding icon.

You can choose to demo it using your instrument or using one of our instrument audio demos.

The news here is you can load an IR in order to test the cab-less Tone Models or compare them to cab-less rigs in a practical way.

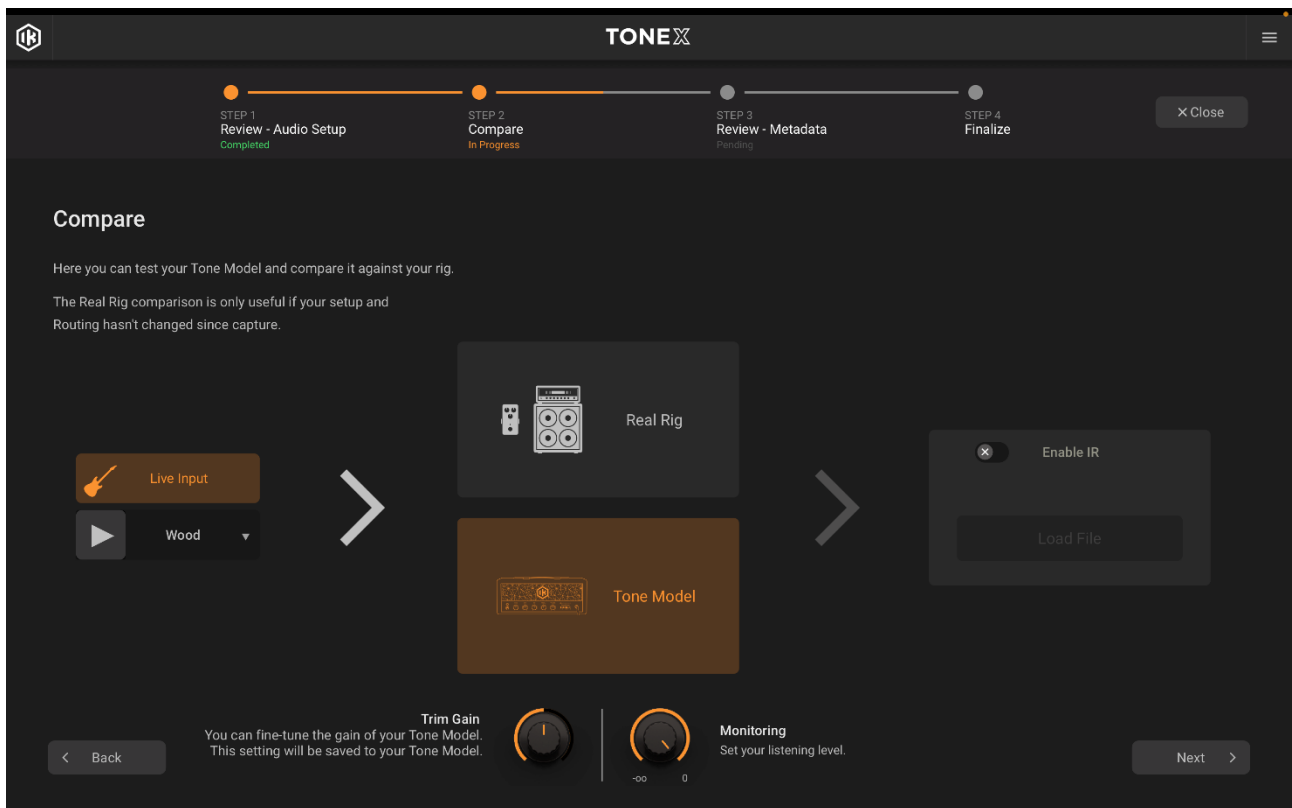

Click NEXT to go to the Tone Model review.

Review - Metadata

Here you can review or edit the previously entered metadata info and chosen skin. Finalize (Save to library).

AmpliTube TONEX Modeler

TONEX

STEP 1 Review - Audio Setup **Completed** | STEP 2 Compare **Completed** | STEP 3 Review - Metadata **In Progress** | STEP 4 Finalize

Review

TONE MODEL INFO



Tone Model Name: Destructive Saturation

Keywords:

Description:

STOMP AND AMP

Stomp Based On: Gold Horse | Amp Based On: Slow Dan

Ch: | Character: Hi-Gain | Comment:

CABINET

Cab Based On: Slanted Cab | Cab Config: 4x12

Mic 1: SM57 | Mic 2:

Outboard: | Comment:

< Back | Finalize >

This final step provides you with these paths:

- Load the Tone Model in TONEX (and launch it if it's closed).
- Open TONEX Editor.
- Go to the main view

TONEX

STEP 1 Review - Audio Setup **Completed** | STEP 2 Compare **Completed** | STEP 3 Review - Metadata **Completed** | STEP 4 Finalize

Destructive Saturation




Success! Your Tone Model is ready.

Open TONEX to play your Tone Model, TONEX Editor to load it onto your pedal, or select Main View to continue capturing

TONEX | TONEX Editor | Main View

Retrain

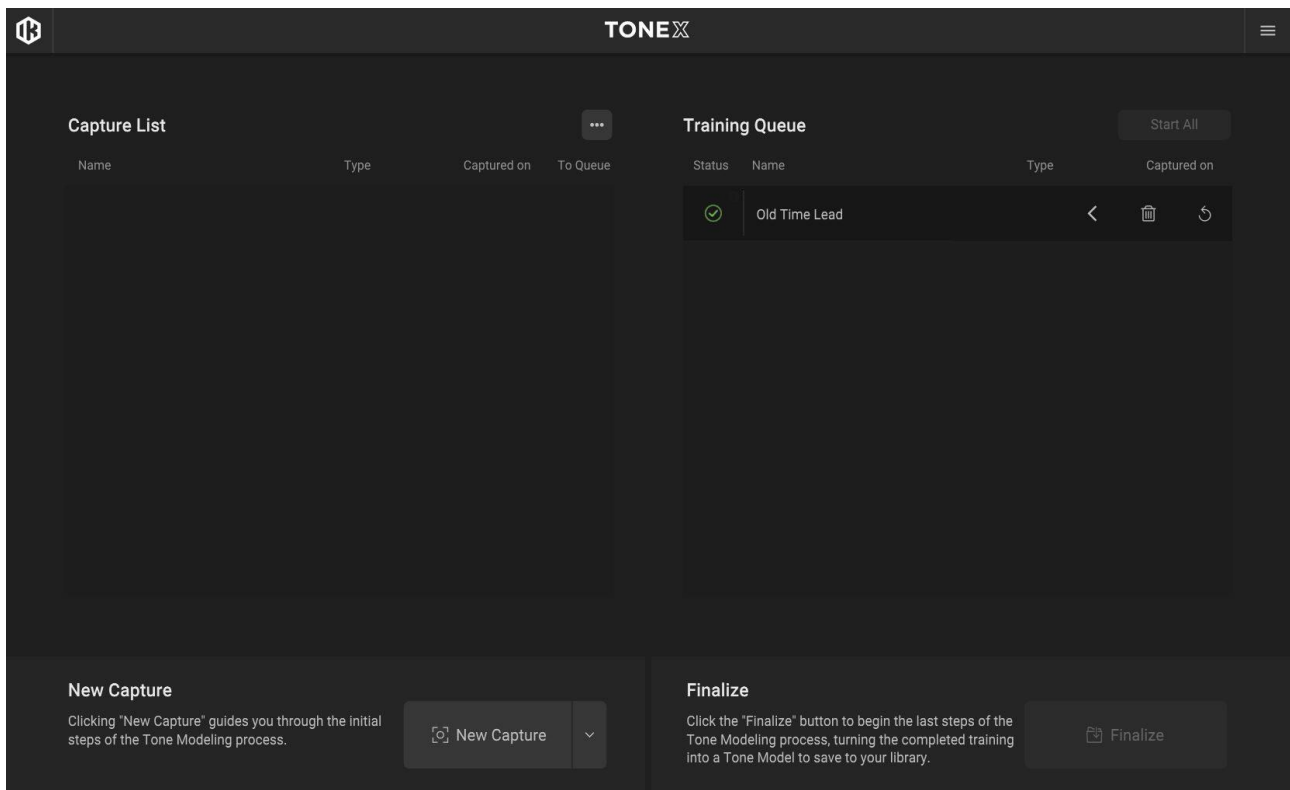

Once a Tone Model training has completed, you can retrain the same capture by clicking the



arrow.

This action reuses the original capture and launches the training process again without creating a new capture, preserving the inserted metadata and settings.

When you click on the retrain button, the training process restarts from the beginning and produces a new Tone Model based on the same capture. This can be useful either to obtain a result that more closely matches the recorded rig or simply to generate an alternate version of the same Tone Model.

After completing a retrain you can finalize the resulting Tone Model and follow the standard Finalize procedure to review the audio settings, verify or update metadata, and then save the Tone Models for use in the TONEX Ecosystem.

Export / Import / Archive

Captures are now saved as WAV files on the computer disk, each one in its separate folder together with relevant data.

This allows you to easily export captures from one computer to another: think about spending a day doing captures in a studio environment, then taking them home on a pen drive to import them on a gaming computer with a Nvidia GPU to process them in batch during the night.

Captures trained successfully are archived in a separate folder on the hard disk as well, so you can always find them and move them back to the main Captures folder, should you want to re-train them. Or you can just delete them from disk when you don't need them anymore.

License Agreement

IMPORTANT:

BEFORE INSTALLING THE SOFTWARE, PLEASE READ CAREFULLY THE FOLLOWING END USER LICENCE AGREEMENT ('END USER LICENCE AGREEMENT' HEREINAFTER NAMED ONLY 'EULA').

USE OF THE SOFTWARE, IS CONDITIONED ON THE USER'S ACCEPTANCE OF THE TERMS AND CONDITIONS, WITHOUT EXCEPTION, OF THIS EULA.

THE SOFTWARE INSTALLATION PROGRAM REQUIRES IN ADVANCE THE USER'S ACCEPTANCE OF THE TERMS AND CONDITIONS OF THIS EULA BY SELECTING THE "I ACCEPT THE AGREEMENT" OPTION.

BY INSTALLING AND OTHERWISE USING THE SOFTWARE, YOU ACCEPT THESE LICENCE TERMS AND CONDITIONS AND HEREBY DECLARE THAT YOU WILL ABIDE BY THE CONDITIONS, OBLIGATIONS, LIMITATIONS, ALSO RELATING TO THIRD PARTIES, NONE EXCLUDED, CONTAINED IN THIS EULA.

IF YOU DO NOT ACCEPT THE TERMS AND CONDITIONS OF THIS EULA BY SELECTING THE "I DO NOT ACCEPT THE AGREEMENT" OPTION, YOU MAY NOT USE THE SOFTWARE.

NON-ACCEPTANCE IS EQUIVALENT TO EXERCISING THE RIGHT OF WITHDRAWAL UNDER THE TERMS OF THIS CONTRACT.

END-USER LICENCE AGREEMENT - (EULA)

The present End-User License Agreement ("End-User License Agreement", hereinafter EULA) constitutes a legal agreement between the User (hereinafter Licensee) and IK Multimedia Production S.r.l. - Via dell'Industria, 46 - 41122 Modena, Italy - Phone: +39 059 285496 - Fax: +39 059 2861671 - CF/PI: IT02359550361 (hereinafter Licensor/producer), aimed at the use of the Software (hereinafter also the Product).

IK Multimedia Production S.r.l. (Licensor/producer): is the sole owner, without limitation, of the intellectual property and copyright and the consequent rights of exploitation, including economic exploitation, of the Software. All rights are reserved exclusively to the Licensor and its partners, distributors or suppliers, who have been expressly authorized to cede such rights.

The User (Licensee): is the natural person, consumer or professional or organization that uses the Product under the conditions contained in this license agreement.

The Software (Product): includes all of its contents, also of third parties of which Licensor has in turn obtained a license to use in order to be included in the Software and thus by way of example but not limited to: information, executable programs, components, data in textual or digital format, images, films, audio, CD-ROM(s), DVD(s) sources and all that Licensor has made and will make available to the User such as any updates of functionality and bug fixes (defined as updates) and provided free of charge, if available, by Licensor.

The conditions of use of the license are set out in the following articles and supersede any previous agreement with the User.

Art. 1 - Subject matter of the license

1. IK Multimedia Production S.r.l. (or its authorized distributors and vendors) grant the User a license for use:

- Personal;
- Non-exclusive;
- Non-transferable (even in part or by sublicensing it free of charge, subject to the provisions of Article 9 below);
- Non-marketable (does not grant the user rights of economic exploitation);
- Without Territorial Restriction (Worldwide)

of the Product, resulting in the right to install and use the Software on your computer or digital electronic device (hereinafter also referred to as Devices) in accordance with the types of operating systems compatible with the Software for which you have acquired a license to use, as specifically set out in the user manual documentation included with the Software.

2. The User is informed and agrees that some content included in the Product may belong to third parties and may be protected by copyright or other intellectual property rights of third parties.

Art. 2 - How to acquire the installation program

1. In order to be able to use the Product, the User must run an installation program on his or her Devices that copies the application and, in general, the audio content.

2. The User may acquire the installer using one of the following methods, as example but not limited to:

- a) by purchasing the Product online on the IK Multimedia website (<https://www.ikmultimedia.com/products>) or from third-party as resellers authorized by the Licensor;
- b) by purchasing a physical medium from an authorized retailer in the shop (by delivery of universal serial bus support in the form of USB);
- c) as part of a third-party Software that also includes the Product by virtue of a commercial agreement between Licensor and the company holding the copyright;
- d) downloading it free of charge from the Licensor's user area (<https://www.ikmultimedia.com/userarea>), either because it is included as a free gift with the purchase of an IK Multimedia hardware product, or because it is made available free of charge by the Licensor to

AmpliTube TONEX Modeler

partners or artists: in this case, these are NFR (Not for resale) licenses that, although they have all the features of ordinary user licenses, do not allow the accumulation of loyalty points and do not give the User discounts for the purchase of new versions (upgrades or crossgrades);

e) made available by the Licensor (or authorized third parties) for promotional or demonstration purposes, aimed at enabling the potential purchaser/User to try out the Product: these are in this case licenses not intended for sale and not transferable DEMO (demonstration use license) for a limited period (see Art. 3 Duration).

3. Irrespective of the manner of acquisition of the installation program and type of license for use, the User accepts these EULA as a binding agreement between the parties.

4. The Licensor, for the entire duration of the license grant, reserves the right to modify, update, replace this EULA or any part thereof, without exception.

5. The User shall be obliged to verify and accept (or not accept) the new terms and conditions, considering that only the acceptance of this EULA permits the use of the Product.

Art. 3 - Duration of the license

1. The duration of the utilization license depends on the type of license chosen by the User, namely:

a) 30-year license: Thirty-year license: through the purchase of the 30-year user license grant, the User, with a lump sum payment is entitled to use the Product pursuant to Article 1 above for the entire mentioned period. The same term shall apply to the Product that is licensed for NFR use.

Any further temporal extension of the utilization license shall in any case be expressly agreed upon with the licensor.

b) Periodic Subscription License: through the purchase of the periodic subscription license the User, with deferred or lump sum payment, is entitled to use the Product pursuant to Article 1, as written above, for the limited period of time as specifically selected in the subscription profile purchased by the User, which, depending on the case, may be of monthly or annual duration (or in any case referring to the different period specifically provided for in the periodic subscription plans that will be eventually updated by the Licensor).

Use of the Product with a periodic subscription license requires the computer on which it is authorized to be connected to the Internet and able to communicate with the IK Multimedia servers, in order to perform an authorization check to confirm that the subscription is still active. User may use the Product offline for up to 3 days before another authorization check is required. If the Product is unable to communicate with IK Multimedia servers for a period of more than 3 days, the functionality of the Product will be revoked or limited until communication with the server is re-established.

c) Demo License: granted free of charge for a limited trial period of ten (10) days for demonstration and promotional purposes only. After this period, the Licensor reserves the right to limit and/or revoke all or part of the use and functionality of the Product.

2. The rights of use of the license shall start on the day following the day on which the purchase is completed or the Product is made available to the User, this being understood it means the day on which Licensor or its authorized distributors have made the installation program available to the User in the manner and on the terms set out in Art. 2, regardless of the actual installation of the Software by the User (hereinafter the Effective Date).

Art. 4 - User profile registration and authorization

1. Regardless of the type of license purchased or granted, with the exception of the "DEMO License", the User is informed and accepts that the operation of the Product is conditional on the completion of the registration and authorization procedure by the Licensor (or its authorized distributors and vendors).

2. The registration and authorization procedure must be carried out by the User by accessing the Licensor's website (<https://www.ikmultimedia.com/userarea/>) and is described in the Software within the documentation under User Manual.

3. The User, under his or her own civil and criminal legal responsibility, certifies that the data entered when registering the user profile (digital identity) are consistent with the User's data (real identity).

4. The User's identification data collected by the Licensor shall be used for the purpose of executing the agreement and shall be processed for the purposes and in the manner described in detail in the section "Information on the processing of personal data" available on the Licensor's website (<https://www.ikmultimedia.com/legal/index.php?R=privacy&PSEL=privacy>).

5. IK Multimedia Production S.r.l. reserves the right, at its sole discretion, to deny the activation of the user profile in the following non-exhaustive cases:

- incomplete or conflicting personal information;
- insertion of manifestly inconsistent data;
- suspicion concerning the minor age of the User;
- violations by the User, including past violations, of the Licensor's EULA.

Art. 5 - Installation limits

1. The granting of a license for use of the Product confers an individual right of use associated with the registered user profile, for the general rule can be summarized as follows: "Each User corresponds to one license for use", which corresponds to a personal serial number of the User.

2. The Product, as well as its previous versions for the same operating system, may be installed on a maximum number of three (3)

AmpliTube TONEX Modeler

Devices provided that

- the Devices are owned by or otherwise in the material and legal possession of the Licensee;
- the Product is not used simultaneously on more than one Device by different end users;
- the User, before assigning or otherwise transferring to third parties rights, for any reason whatsoever, to the Devices in which the Product is installed, must ensure that he/she has uninstalled each of its components, in order not to unlawfully assign to third parties the resulting rights of use.

3. The User is entitled to store or install a copy of the Product in a storage device such as a network server, which is only used to install and/or to activate the Product in further Devices on an internal network, however, in such cases, the User is obliged to purchase a multiple license for each end user of the Product by the shared storage device.

4. Violation of the aforementioned limitations implemented in any manner entitles the Licensor to terminate the user license agreement and, in any case, to demand payment of the amount corresponding to the effective number of end-user according to the "one User one license" rule.

Art. 6 - Special conditions of the periodical subscription

1. If the User has opted for the purchase of the license through a periodic subscription, for a limited period, the duration of which depends on the choice made by the User at the time of purchase, the User's rights to the license for use of the Product shall cease immediately and without deferment on the expiry date of the subscription period.

2. The User is specifically informed that upon expiration of the subscription period, the User does not retain any right to use the Software, including the latest version released prior to expiration and that the Licensor does not make any archiving of the content developed by the User through its use, so the User is solely responsible for saving and archiving the content on its Devices prior to the date of termination of the subscription period.

3. The periodic subscription shall be for the duration specified in the subscription profile and shall be automatically renewed on expiry of the subscription for an equal period.

4. The periodic subscription renews on the same day as the calendar date of the original purchase. If the subscription begins on a date that is not within the renewal month, the period ends on the last day of the following month, and restores the original date the next time that date occurs. For example, if a monthly subscription starts on January 30, the next renewal date will be February 28 (or February 29 on a leap year), then March 30.

5. If the User does not wish to renew the subscription, the User shall have the burden of giving express notice of termination to the Licensor through an ad hoc procedure entirely online available at the following address: <https://www.ikmultimedia.com/userarea>, respecting the notice period of 24 hours prior to the periodic renewal, depending on the duration of the subscription.

6. The User, when purchasing the periodical subscription, may choose between several secure payment methods: e.g. bank account (direct debit); credit/debit card or through dedicated third-party services.

7. Where the payment method chosen by the User provides for service and/or management and/or intermediation by third parties, the User shall abide by the terms and conditions set forth therein, excluding any liability on the part of the Licensor in concluding and managing the contractual relationship with the third parties.

8. Payment of the periodic fee will be charged to the User by the due date of the invoice issued, in the manner chosen by the User at the time of purchasing the subscription license.

9. The User undertakes, without delay, to amend and update in his User area on the Licensor's website any changes made, without exception, that alter the data and payment method declared at the time of purchase.

10. Should the User fail to pay the periodical fees on time, the Licensor shall be entitled to suspend the User's profile as a precautionary measure.

11. After three (3) days have elapsed without the User having regularized his debt position, the Licensor shall be unilaterally entitled to terminate the license agreement without further notice, without prejudice to the compulsory recovery of the debt.

Art. 7 - Music Content Library (Sound Library) Special License Conditions

1. The Product may contain a 'library of musical content', sounds or audio samples (sounds and samples) that are created by musicians and experts, or sound professionals.

2. Licensor makes the "music content library" available to the User for commercial and non-commercial purposes for music audio production, public performances, broadcasting and similar uses, as a component of the Product, by virtue of a lawful and binding agreement with the copyright holders.

3. The User is hereby informed and agrees that the redistribution of the Product and, in particular, the "music content library" and its derivatives, is strictly prohibited in any form whatsoever, including but not limited to: resampling, mixing, filtering, processing, isolating or incorporating it into any software or hardware.

4. The sounds/audio samples contained in the Product, may not be modified and resold as new audio samples within new sound libraries or "on a standalone basis" meaning "single sample not included in a library" of any kind or nature.

5. The User is informed and accepts, that the particular license conditions of the "music content library" expressed herein constitute an integral and substantial part of this EULA.

AmpliTube TONEX Modeler

Art. 8 - Express prohibitions of use addressed to the User

1. The User is not authorized, directly or indirectly, to:

- a) sell, rent, lease, license or sublicense, distribute, market, otherwise exploit the Product or any of its components, for commercial purposes or free of charge;
- b) redesign, decompile, disassemble, adapt, reproduce the Product, in whole or in part;
- c) create, use, and/or distribute computer programs such as "crack," "keygen," or other "cheat" or "hack" programs or Software applications for this Product;
- d) remove, alter, disable or circumvent any copyright or trademark indications or other commercial information about the origin of the Product;
- e) transfer to third parties and/or export the license for any reason whatsoever (without prejudice to Section 9 below);
- f) use the program in violation of copyrights and/or intellectual property rights reserved by national and international laws and regulations for third parties;
- g) use the Program in violation of civil, criminal and administrative rules and regulations, including those of the User's place of business or residence;
- h) use the Program causing contractual or non-contractual damage to third parties;
- i) violate the license conditions of the "music content library" referred to in Article 7 above.

2. Any breach of the aforementioned prohibitions committed by the User shall entitle the Licensor to terminate the user license agreement immediately and without delay for breach, without any obligation to refund the consideration.

3. In any case the User shall be held liable and shall indemnify the Licensor against all claims, proceedings and disputes for which the Licensor is held liable as a result of negligence, omissions, violations, offences howsoever committed, which are caused by the User's willful and/or culpable act in using the Product.

Art. 9 - License of use allowing transfer to third parties

1. Given the general prohibition against transferring the license of use to third parties either for consideration or free of charge, Licensor by virtue of an express purchase option may grant Licensee the purchase of a "transferable license of use" by accessing Licensor's website directly: <https://www.ikmultimedia.com/products/index.php?R=SHOPSEARCH&Q=Credit>.

2. Each "transferable use license" purchased can be used to transfer the license of only one Product and only once.

3. In such a case, the User shall only transfer and/or make the Product available to third parties under the following conditions:

- a) the Product shall be transferred as original with all media and licenses and everything thereon;
- b) the User who transfers the license of use to another User shall not retain any copy of the Product;
- c) if the Product is part of a software set (bundle), it may not be transferred separately and/or altered in any way;
- d) if the Product is part of an IK Multimedia software and hardware package, only the hardware may be transferred and the license to use it may be termed NFR under the agreement.

4. The Licensor reserves the right, at its sole discretion, to:

- a) delete or erase the user serial number required for registration if the same has been fraudulently or illegally acquired;
- b) prohibit the transfer of the serial number required for registration before the expiry of ninety (90) days from the purchase order for the serial number referring to the "transferable user license".

Art. 10 - User devices and generated content

1. The Product is installed on Devices owned or otherwise in the availability of the User, who is the solely responsible for the functionality, update, security protection and functionality of the Devices.

2. The Product may only be installed on the operating systems for which it was designed and described in the Software within the documentation under the heading User Manual.

3. The User is solely responsible for the use, storage, preservation of content generated by him/her, particularly where the generation of content causes harm or infringes on the rights of third parties.

4. In any case, the User shall be held liable and shall hold Licensor harmless from any claim, petition, litigation for which Licensor is held liable as a result of negligence, omissions, violations, offenses however configured that are determined by the willful and/or negligent act of the User in the generation of content.

Art. 11 - Warranties and limitation of the Licensor's liability

1. Licensor warrants to the User that the digital or physical media on which the Product is recorded contain the copy of the Software purchased or made available to the User with all its components, accessories and documentation as described in the user manual as well as being free of defects and, in any case, suitable for the intended use.

2. The Licensor shall, within a period of ninety (90) days from the Effective Date as defined in Article 3.2 above, warrant the conformity of the Product with the following exclusions in the words "does not warrant":

- a) that the operations of the Program can be carried out without interruption or that any defects can be corrected;
- b) that the Product is considered by the User to be unsuitable for the User's personal needs in view of the fact that the Software is not developed "tailor-made" but is intended for mass use;
- c) any defects and faults resulting from improper or deviating from normal use attributable to the User or the User's Device;
- d) any damages resulting from the loss of content developed by the User, the storage of which the Product does not guarantee in any

AmpliTube TONEX Modeler

way;

e) that the Product functions on the User's Device(s) or that the functionality of the Product remains unaffected by updates made by the User to its hardware, operating system or third-party software in use by the User.

In any case, the user manual is the only legally binding document for the Licensor and, consequently, any verbal agreements, presentations, advertising material, e-mail exchanges, etc. between the User and distributors, salesmen, agents, and any other personnel who have intermediated the purchase of the Product shall be irrelevant.

3. Any verification of the efficiency of the Product shall be carried out using exclusively the control procedures prepared by the Licensor.

4. In order to make a warranty claim under the terms described above, the User is responsible for contacting IK Multimedia via the appropriate section of the website "contact us" <https://www.ikmultimedia.com/contact-us/>.

5. The Licensor and its distributors and partners within a reasonable period of time, in any case not exceeding fifteen (15) days, shall follow up the warranty claim by repairing or replacing the Product or refunding the purchase price, if incurred by the User, within a reasonable period of time based on the complexity and/or onerousness of the warranty claim.

6. With the exception of the above clauses, the Licensor assumes no other obligation and makes no other warranties beyond those set forth herein and shall in no event be liable for any damages whatsoever related to or resulting from any defects in quality, suitability, use, failure to use or usability of the Product.

7. The User shall forfeit any and all warranties if the User modifies, integrates or otherwise intervenes in the Software, or uses the Product in a manner not in accordance with the instructions or on processors other than those permitted or otherwise violates the User's obligations under this EULA.

8. The Licensor shall not be liable for any damages, direct and/or indirect, contractual or non-contractual, which may occur as a result of the use of the Product or which may be connected to it, such as, but not limited to, any loss of profit, loss, interruption of business, loss of information and/or data, any defects and/or damages in the processor and/or the Devices on which the Product is installed and/or in the contents processed by the User, and/or defects and/or damages resulting from the use of such Devices which remain at the exclusive risk of the User.

9. In any case, any claims for damages by the User shall in no event exceed the amount of the purchase price of the license fee, insofar as incurred by the User.

Art. 12 - User Support Service updates and new versions

1. For the entire duration as defined in Article 3 above, the User may obtain technical assistance from Licensor by accessing the section of the website <https://www.ikmultimedia.com/contact-us/>.

2. The Product is provided "as it is" and "as available" on the Effective Date, without Licensor being obliged to provide "updates" and/or "new versions of the Software".

3. The User agrees to independently download such "updates" from his/her user area - if available - always using the latest version of the IK Multimedia Product.

4. The Licensor may modify the Product at its sole discretion for any reason and at any time, in particular it may add, subtract, replace functionalities, update, correct the Product either for technical reasons or to perform maintenance and/or configuration operations in order to improve and/or optimize the Product.

5. The Licensor may at its discretion release a new version of the Program "upgrade" or "crossgrade", so marked or otherwise identified by IK Multimedia (new version of the Product made available to the User at a discounted price). Such version can be used by the User only and exclusively if the User is a legitimate licensee of a previous version of the Product, except for NFR versions as indicated in the article. 2.2.

6. The Product marked or otherwise identified by Licensor as an "upgrade" or "crossgrade" replaces, swaps, increases the Product purchased or made available on the Effective Date.

7. The User may only use the Product resulting from the update and/or new versions (upgrade or crossgrade) in accordance with the terms of this EULA.

8. If the Product is an upgrade or crossgrade of a component of a software program package (bundle), it may only be used and transferred as part of the package and may not be separated by use on more than one device.

Art. 13 - Unilateral withdrawal by the User

1. Non-acceptance of this EULA shall be tantamount to exercising the User's unilateral right of withdrawal from the license agreement.

2. The User is also entitled to unilaterally terminate the license agreement if for technical reasons there are incompatibility problems with the Product, which do not permit its installation provided they

- a) are not attributable to the User;
- b) exist on the Effective Date;
- c) cannot be resolved by the Licensor's technical support.

3. The User undertakes without delay and in any event within a period of three (3) days from the Effective Date to return to the Licensor (or its distributors or otherwise authorized sellers from whom it purchased or otherwise obtained the license to use the Product) all physical media in its possession.

AmpliTube TONEX Modeler

4. The Licensor or other authorized parties, having verified the integrity of the medium, shall cancel the user's serial number and refund the full amount paid for the purchase directly to the user within a period of 30 days from the date of return.

Art. 14 - Intellectual Property of Software

1. The Software and all consequent rights are reserved by IK Multimedia Production S.r.l.
2. The Software and its use is subject to national and international laws protecting copyright and intellectual property.
3. The User does not acquire any ownership rights to the Software except for the limited rights of use as set out in this EULA.
4. IK Multimedia Production S.r.l. reserves all actions and claims for damages against the User or third parties who infringe the Licensor's rights.

Art. 15 - Validity of the EULA - Severance

1. If a court of competent jurisdiction or a competent authority determines that any provision of this EULA is invalid, illegal, or unenforceable, such provision or part thereof shall be deemed unenforceable.
2. In such cases, all other provisions of this EULA or parts thereof not affected by invalidity shall nevertheless remain valid and enforceable between the Parties.

Art. 16 - Applicable law

1. Should the Product have been purchased in Italy, the interpretation, execution and settlement of disputes shall be governed by Italian law and jurisdiction shall be attributed exclusively to the Court of Modena, without prejudice to the jurisdiction of the Court of the Consumer, where the User is a natural person acting for purposes that are unrelated to the entrepreneurial, commercial, handicraft or professional activity carried out.
2. If the Software was purchased in any other country, this agreement shall be governed by the laws in force in that country.

Last updated on September 20, 2023.

AmpliTube TONEX Modeler

IK Multimedia Production Srl

Via dell'Industria, 46,
41122 Modena
Italy

IK Multimedia US, LLC

590 Sawgrass Corporate Pkwy
Sunrise, FL 33325
USA

www.ikmultimedia.com

TONEX®, AI Machine Modeling™, AmpliTube®, ToneNET™, VIR™ are trademarks or registered trademark

property of IK Multimedia Production Srl. All rights reserved.

Mac, the Mac logo, the Audio Units logo, iPhone®, iPod touch®, iPad® are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Windows and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. VST is a trademark of Steinberg Media Technologies GmbH. AAX, Avid, the Avid logo, Pro Tools, and RTAS are trademarks or registered trademarks of Avid Technology, Inc. in the U.S. and other countries. All other product names and images, trademarks and artists names are the property of their respective owners, which are in no way associated or affiliated with IK Multimedia. Product names are used solely for the purpose of identifying the specific products that were studied during IK Multimedia's sound model development and for describing certain types of tones produced with IK Multimedia's digital modeling technology. Use of these names does not imply any cooperation or endorsement.

IK Multimedia disclaims any ownership over content uploaded by users to ToneNET, including but not limited to Tone Models, Presets, and any text or symbols that users upload with their content. IK Multimedia does not endorse or represent any users of ToneNET, and any names, trademarks, or tradenames that users may upload with their content on ToneNET should not be construed as an endorsement, association, or affiliation with IK Multimedia. Users represent and warrant that they own or are licensed to use all intellectual property, including copyrights and trademarks, in any content that they upload. IK Multimedia disclaims that any content uploaded by users is non-infringing. Please see the ToneNET Terms of Use with ways that you can notify us if you believe content on ToneNET infringes your rights.

All specifications are subject to change without further notice.

Document Version: 1.11.0

Latest Update: 2026/04/08

© 2022-2025 IK Multimedia. All rights reserved.



IK MULTIMEDIA